





Quick Start Guide

For the full user guide, please go to www.turtlebeach.com/products/X12



Watch Turtle Beach product training videos at: Youtube.com/TurtleBeachVideos



Product support and warranty information:


TurtleBeach.com/support




Package Contents





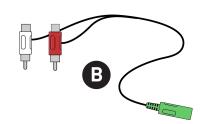

RCA Splitter Cable

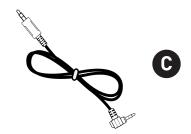

Xbox 360® Talkback Cable*




User Guide




Turtle Beach Sticker

^{*} For best Xbox LIVE chat performance, use with official Microsoft Xbox 360 products.

Headset/Amplifier Controls

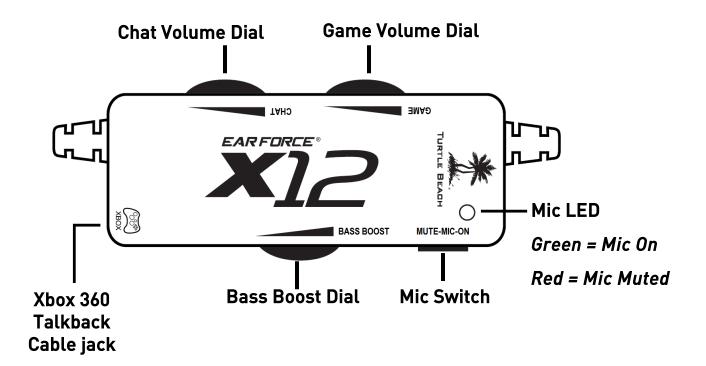


Xbox 360 Setup - HDMI

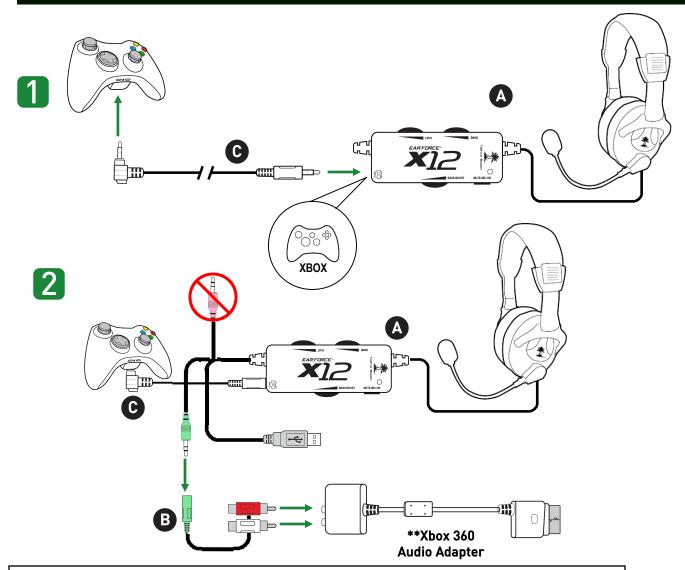


^{*} An **Xbox 360 Audio Adapter** (available on TurtleBeach.com) is required only if your TV does not have red/white AUDIO OUT RCA jacks, and if you are using an HDMI cable to connect your game console to your TV.

NOTE: AUDIO IN jacks will not send sound out to your headset; you need AUDIO OUT.


Xbox 360 Setup - HDMI (Continued)

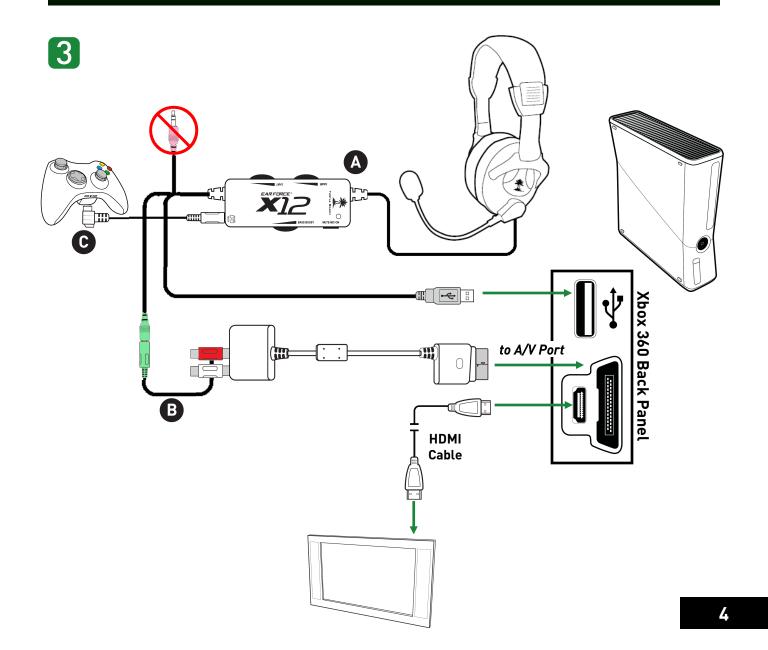


Xbox 360 Setup – HDMI Alternate

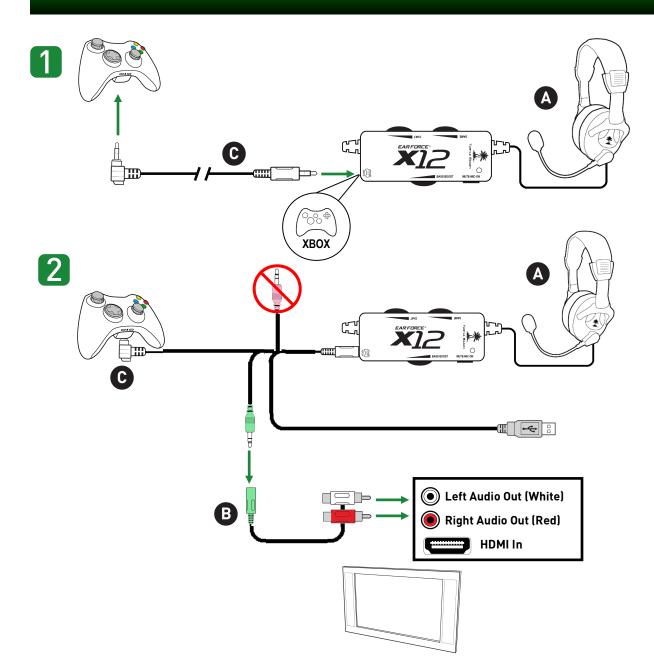


Xbox 360 Setup - HDMI Alternate (Continued)

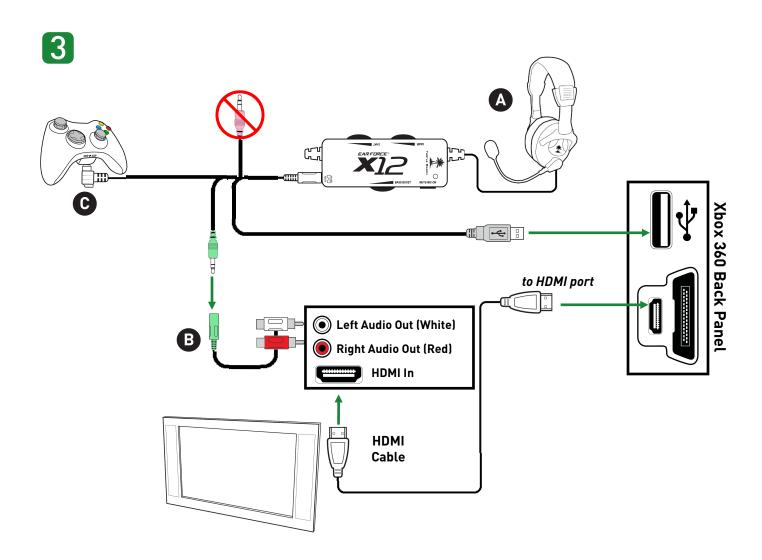

Xbox 360 Setup - RCA

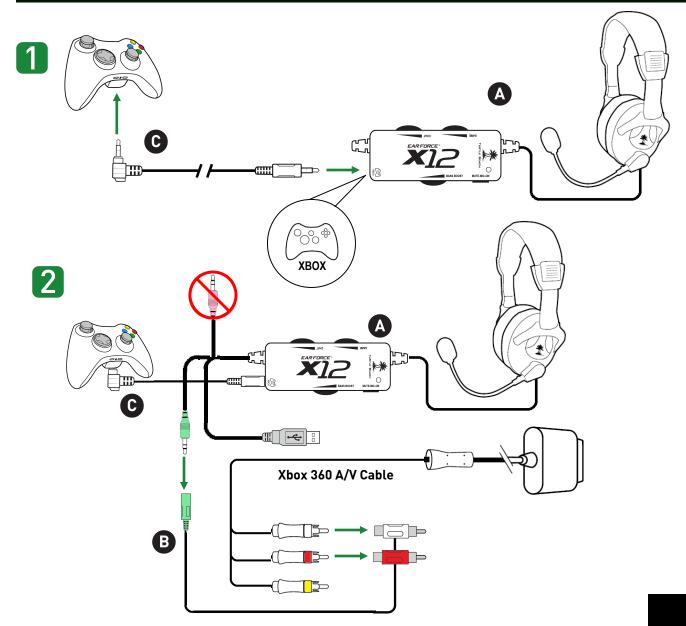


Xbox 360 Setup - RCA (Continued)

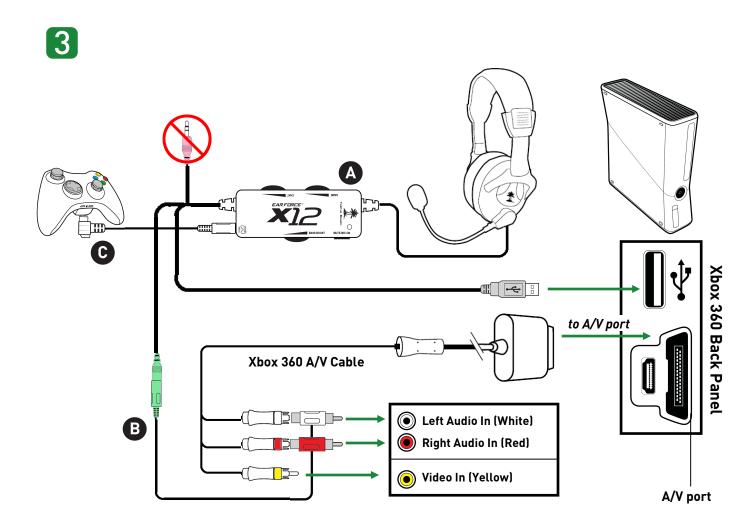


Xbox 360 Chat Configuration

- Press the silver Xbox Guide button on your Xbox 360 controller. Go to Settings > Preferences > Voice.
- Set Voice Volume to "10"
- Set Game Volume to "10"
- Set Voice Output to "Play Through Headset"

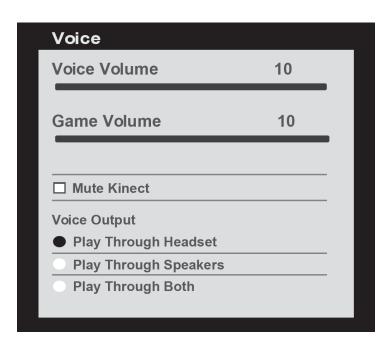

PC Connections

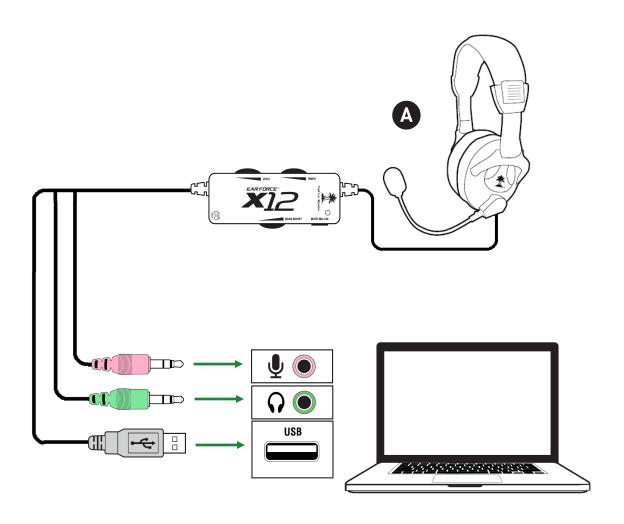

PC Setup

Right-click the Speaker icon in your task bar and select "Playback devices".



Click the "Recording" tab, then right-click "Microphone" and select "Set as Default Device".

If you speak into the mic, you should see the green bars on the right move.

Click the "OK" button at the bottom of the window to exit.

Right-click "SPEAKERS" and select "Set as Default Device".

