

USER MANUAL

M/N: BDSW-ADP-100



Subwoofer unit



Subwoofer adapter unit

FCC Notice:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for Compliance could void user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

This Class B digital apparatus complies with Canadian ICES-003.

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately, as it may damage the furniture. Use a soft, clean cloth and blot the spill gently. Avoid rubbing.

Always use protective pads under hot dishes and plates, Heat can cause chemical changes that may create spotting within the furniture.

If the supply cord is damaged it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

Only a qualified service person should repair this product.

Do not use outdoors.

 
Do not insert or allow foreign objects to enter the system as this may cause an electric shock, fire, or damage to the appliance.

Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

KEY FUNCTIONS

- 1、SUB WOOFER IN PUT
- 2、PAIR BUTTON
- 3、DC JACK
- 4、VOLUME CONTROL

- 5、PAIR INDICATOR(MAIN UNIT)
- 6、POWER
- 7、PAIR BUTTON(DONGLE)
- 8、PAIR INDICATOR(DONGLE)

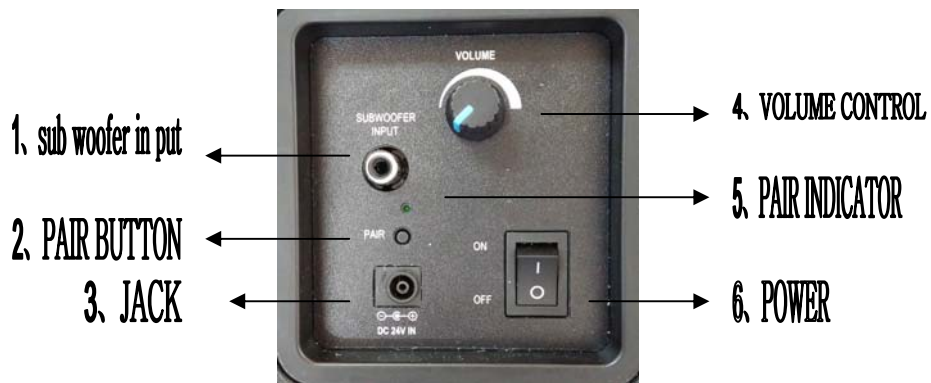

Subwoofer unit



 
Subwoofer adapter unit

1/ Plug the Dongle into the USB port of the Bello digital model 3810,4810....




2/ For the Main unit (Sub-Woofer)

Connect one end of the AC Power to the back of the Main unit and the other end to an AC wall outlet.

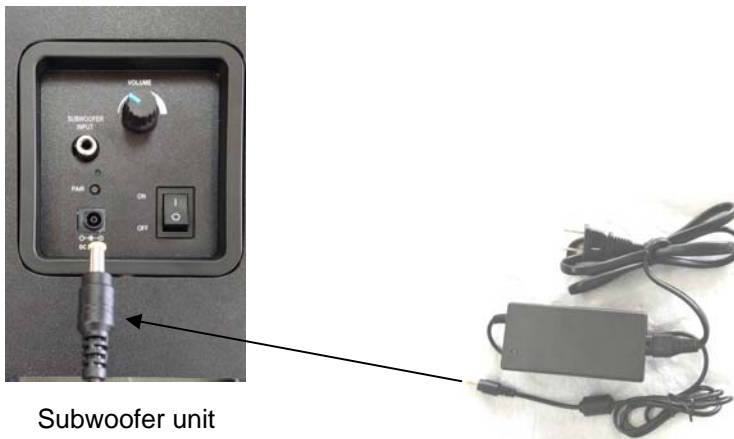

Subwoofer unit

 3/ Press the Power button on the back panel of the Main unit to ON.

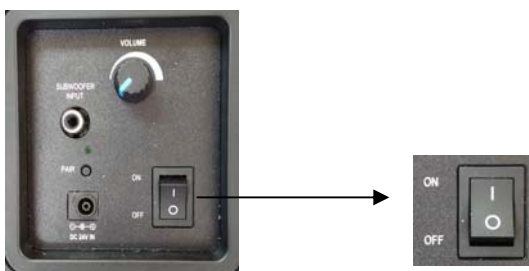

Subwoofer unit

 
4/ The Product will automatic PAIR.

5/ If there is a need to connect again, the user may be PAIR the product by your own.

a/ Press and Hold the PAIR button 3 seconds on the Dongle. The Green indicator will begin blinking.

b/ Press and Hold the PAIR button 3 seconds on the back panel of the Main unit. The Green indicator will begin blinking.

c/ The Product will link up again.

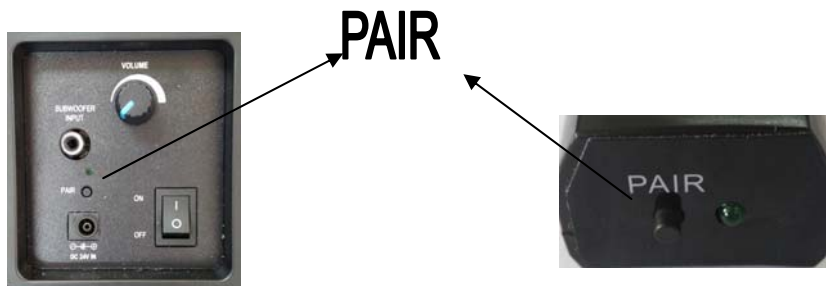

Subwoofer unit

Subwoofer adapter unit