



The Bling Box Speaker will dazzle the life into any gathering with its retro style and feel-good vibes! This sparkling boombox has Bluetooth compatibility, FM radio, AUX connection and plenty of ports for stored music. Use its antenna to reach your favorite programmable radio stations and its wireless remote control to adjust the volume or song at any time. Just charge it up and you're ready to add both music and glam to your parties, videos, and even photo shoots!

**FEATURES:**

- 1. Retro look & feel with striking rainbow rhinestones
- 2. Rechargeable, Portable & Lightweight Design
- 3. MicroSD card slot, AUX & USB ports
- 4. Carrying handle for easy transport!

**WHAT'S INCLUDED**

- 1. Bling Box
- 2. Remote
- 3. Micro-USB Charging Cable
- 4. AUX Cable
- 5. User Guide

**CHARGING**

- NOTE: This speaker can be used while charging.
- To charge your speaker, connect one end of the Micro-USB cable to the speaker and the other end into a USB power source.
  - The LED indicator light will light up while charging and will turn off once fully charged.
  - If charging while in use, the battery indicator will flash.
  - To turn the speaker on, slide the power switch to ON. To turn the speaker off, slide the power switch to OFF.



Button	USB/MicroSD	FM
	On/Off	
	Bluetooth / USB / MicroSD / AUX / FM	
	Mute	
	Pause/Play	Search and Save Channel
	Previous Song	Previous Channel
	Next Song	Next Channel
	Natural/Pop/Jazz/Rock/Bass/Classical/Country	/
	Volume Decrease	
	Volume Increase	
	Repeat Mode	/
	USB/MicroSD	/

**BLUETOOTH CONNECTION**

- The Bling Box will automatically start in Bluetooth mode when powered ON.
- Activate the Bluetooth function on your device and search for available devices.
- Select "Bling Box" from your device's Bluetooth list and follow the prompts to finish the pairing process.
- After successfully pairing, a tone will alert that your device has been paired.
- Once paired, open your favorite music app, hit play, and enjoy!
- Use the dial to adjust the volume on the front of your speaker or via the wireless remote.
- Press the play/pause button on the speaker to play or pause music.
- Use the left and right arrows on the front of the speaker to rewind or fast forward songs.

NOTE: After successful pairing, devices will remember each other. Therefore, no pairing will be needed next time.

**FM MODE**

- NOTE: Pull up the antenna for better reception while listening to radio.
- To switch to FM mode, press the MODE button or use wireless remote to change from Bluetooth mode to FM mode.
  - The FM frequency range is 87.5 MHz -108.0 MHz.
  - Press and hold the "Scan" button for 5 seconds, the Bling Box will scan and save all available stations.
  - Press "<" or ">" to scroll through the saved stations.
  - Press and hold "<" or ">" to manually scan the next or previous available stations.

**AUX MODE**

- When connecting a device via the AUX port, the speaker will automatically enter AUX Mode.
- Plug one end of the 3.5mm audio cable into the speaker AUX port and the other end into a 3.5mm compatible media device.
- Use the dial to adjust the volume on the front of your speaker or via the wireless remote.
- You cannot control the music using the speaker controls. To adjust the music, use the controls on your device.

**HOW TO PLAY MUSIC USING USB OR MICROSD CARDS.**

- When the speaker detects a USB/MicroSD card, it will automatically enter the correct mode.
- Simply load your USB/MicroSD card with your favorite music, insert it in the USB or MicroSD card slot, and the music will start playing.
- Press the play/pause button on the speaker or via wireless remote to play or pause music.
- Use the left and right arrows to change songs. Use the dial to adjust the volume on the front of your speaker or via the wireless remote.

**IMPORTANT SAFEGUARDS**

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source, direct sunlight, humidity, water, or any other liquid.
- Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it is wet or damp to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of reach of children.

**CUSTOMER SUPPORT**

If you have any questions about using the Bling Box, we are here to help. Call or email us and an experienced customer support representative will be happy to assist you: **1-855-GO-TZUMI** or **support@tzumi.com**

**SPECIFICATIONS**

- Power: 10W
- FM Frequency Range: 87.5-108MHZ
- Power Input: 5V/1A
- Charging Time: Up to 2 hours
- Play Time: Up to 3 hours
- Built-in Rechargeable Battery: 3.7V / 1200mAh
- Micro SD Card/USB Drive: Supports up to 32GB/MP3 audio format
- Size: 12.6 x 4.6 x 7.5 in. (320 x 117 x 190mm)
- Weight: 2.9 lbs.

Glam Nation Bling Box Item No. 8738. Distributed by tzumi® Inc. NY, NY, 10016. ©Copyright 2022 Tzumi Inc. All Rights Reserved. Made In China. Glam Nation Bling Box is a registered trademark of Tzumi Inc. All other trademarks and trade names are property of their respective owners. Subject to change without prior notice.



## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.