

<b>SECTION</b>	<b>PAGE</b>
<b>CHAPTER 1 INTRODUCTION</b>	
1.1 Manual Overview.....	1-1
1.2 Assembly Designation Numbers .....	1-1
1.3 Safety.....	1-1
1.4 Maintenance .....	1-2
1.5 Material Return Procedure .....	1-2
1.6 Limited One-Year Warranty for Axcera Products .....	1-3
<b>CHAPTER 2 SYSTEM DESCRIPTION &amp; REMOTE CONTROL CONNECTIONS</b>	
2.1 System Overview .....	2-1
2.1.1 Receiver Tray.....	2-2
2.1.2 IF Processor Module.....	2-3
2.1.3 LO/Upconverter Module.....	2-5
2.1.4 Control & Monitoring/Power Supply Module.....	2-7
2.1.5 Power Amplifier Module.....	2-8
2.1.6 RF Output Assemblies .....	2-9
2.2 Control and Status.....	2-9
2.2.1 Front Panel LCD Display Screen.....	2-10
2.3 System Operation.....	2-10
2.3.1 Principles of Operation .....	2-11
2.4 Customer Remote Connections.....	2-12
<b>CHAPTER 3 SITE CONSIDERATIONS, INSTALLATION AND SETUP PROCEDURES</b>	
3.1 Site Considerations.....	3-1
3.2 Unpacking the Chassis w/Modules and Receiver Tray .....	3-4
3.3 Installing the Chassis w/Modules and Receiver Tray .....	3-4
3.4 AC Input .....	3-6
3.5 Setup and Operation.....	3-6
3.5.1 Input Connections .....	3-7
3.5.2 Front Panel Screens for the Exciter/Amplifier Chassis Assembly .....	3-9
<b>CHAPTER 4 CIRCUIT DESCRIPTIONS</b>	
4.1 Receiver Tray.....	4-1
4.1.1 50-Ohm Filter .....	4-1
4.1.2 Dual Stage Amplifier Assembly.....	4-1
4.1.3 Channel Filter .....	4-1
4.1.4 Downconverter Amplifier Assembly .....	4-2
4.1.5 Channel Oscillator Assemby .....	4-2
4.1.6 x8, x2, x4 Multiplier Board.....	4-2
4.1.7 L.O. Filter .....	4-2
4.1.8 IF Filter/ALC Board .....	4-2
4.1.9 SAW Board (Optional).....	4-2
4.1.10 IF Amplifier Board (Optional).....	4-3
4.1.11 IF Filter/Limiter Board (Optional) .....	4-3
4.1.12 IF PLL Board (Optional) .....	4-3
4.1.13 IF Carrier Oven Oscillator (Optional) .....	4-3

**TABLE OF CONTENTS - (Continued)**

<b>SECTION</b>	.....	<b>PAGE</b>
4.1.14 +/- 12V Power Supply Board.....	4-4	
4.2 IF Processor Module.....	4-4	
4.2.1 IF Processor Board .....	4-4	
4.3 LO/Upconverter Module.....	4-10	
4.3.1 UHF Generator Board.....	4-10	
4.3.2 UHF Filters.....	4-11	
4.3.3 LO/Upconverter Board .....	4-11	
4.4 Control Monitoring/Power Supply Module.....	4-15	
4.4.1 Power Protection Board .....	4-16	
4.4.2 Control Board .....	4-16	
4.4.3 Switch Board .....	4-19	
4.4.4 Switching Power Supply Assembly .....	4-19	
4.5 Power Amplifier Module Assembly.....	4-19	
4.5.1 1-Watt Amplifier Module Assembly.....	4-19	
4.5.2 1-Watt UHF Amplifier Board .....	4-19	
4.5.3 40 Watt UHF Amplifier Assembly .....	4-20	
4.5.4 UHF Module Assembly, RF Module Pallet.....	4-20	
4.5.5 Coupler Board Assembly.....	4-21	
4.5.6 Amplifier Control Board .....	4-21	

**CHAPTER 5 DETAILED ALIGNMENT PROCEDURES**

Module Replacement.....	5-1
Initial Test Setup.....	5-1
5.1 UHF/VHF Receiver Tray .....	5-2
5.1.1 UHF Filter .....	5-2
5.1.2 Dual Stage Amplifier Board .....	5-2
5.1.3 UHF Filter .....	5-2
5.1.4 Channel Oscillator Assembly .....	5-2
5.1.5 x8, x4, x2 Multiplier Board.....	5-3
5.1.6 UHF Filter .....	5-4
5.1.7 Downconverter Amplifier Board .....	5-4
5.1.8 IF Filter/ALC Board .....	5-4
5.1.9 SAW Filter Board (Optional) .....	5-4
5.1.10 +/- 12V Power Supply.....	5-4
5.1.11 IF Carrier Oscillator Board (Optional).....	5-4
5.1.12 IF Filter/Limiter Board .....	5-4
5.1.13 IF PLL Board (Optional) .....	5-4
5.1.14 IF Amplifier Board, High Gain (Optional).....	5-5
5.2 Pioneer Series Exciter/Amplifier Chassis Assembly .....	5-6
5.2.1 Linearity Correction Adjustment .....	5-6
5.2.2 Frequency Response Delay Equalization Adjustment .....	5-7
5.2.3 Calibration of Output Power and Reflected Power.....	5-7
5.3 Alignment Procedure for the Band-pass Filter Assembly .....	5-8

**APPENDICES**

- APPENDIX A SYSTEM SPECIFICATIONS
- APPENDIX B SAMPLE LOG SHEET
- APPENDIX C DRAWINGS AND PARTS LISTS

**LIST OF FIGURES**

<b>FIGURE</b>		<b>PAGE</b>
3-1	1 kW Minimum Ventilation Configuration .....	3-4
3-2	Tray Slide Cabinet Mounting Diagram.....	3-5
3-3	Front and Rear View Reconnection Drawing .....	3-6
3-4	Rear View of Pioneer Series UHF Translator .....	3-7
5-1	Typical Red Field Spectrum.....	5-7

## LIST OF TABLES

<b>TABLE</b>		<b>PAGE</b>
2-1	10-100W Pioneer Series Translator Assemblies and Tray .....	2-1
2-5	Receiver Samples .....	2-2
2-6	IF Processor Front Panel Switch.....	2-4
2-7	IF Processor Front Panel Status Indicators .....	2-4
2-8	IF Processor Front Panel Control Adjustments .....	2-4
2-9	IF Processor Front Panel Sample .....	2-4
2-10	LO/Upconverter Front Panel Switch.....	2-6
2-11	LO/Upconverter Front Panel Status Indicators .....	2-6
2-12	LO/Upconverter Front Panel Control Adjustments .....	2-6
2-13	LO/Upconverter Front Panel Samples .....	2-6
2-14	Controller/Power Supply Front Panel Display .....	2-7
2-15	Controller/Power Supply Front Panel Status Indicators .....	2-7
2-16	Controller/Power Supply Front Panel Control Adjustments.....	2-7
2-17	Power Amplifier Front Panel Status Indicators .....	2-9
2-18	Power Amplifier Front Panel Control Adjustments.....	2-9
2-19	Power Amplifier Front Panel Sample.....	2-9
2-22	VHF Television Frequencies.....	2-11
2-23	UHF Television Frequencies.....	2-11
2-25	Pioneer Chassis Customer Remote Connections .....	2-13
3-1	Rear Chassis Connections for Receiver Tray .....	3-7
3-2	Rear Chassis Connections for Pioneer Series Translators (exciter) .....	3-7
3-3	Menu 01 Splash Screen #1 .....	3-9
3-4	Menu 02 Splash Screen #2 .....	3-9
3-5	Menu 10 Main Screen.....	3-9
3-6	Menu 11 Error List Screen .....	3-10
3-7	Menu 12 Translator Device Data Access Screen .....	3-10
3-8	Menu 13 Translator Configuration Access Screen .....	3-10
3-9	Menu 20 Error List Display Screen .....	3-10
3-10	Menu 30 Translator Device Details Screen .....	3-10
3-11	Translator Device Parameters .....	3-12
3-12	Menu 40 Translator Set Up: Power Raise/Lower Screen .....	3-13
3-13	Menu 40-1 Translator Set Up: Xltr. Model Select Screen .....	3-13
3-14	Menu 40-2 Translator Set Up: Frequency Select Screen.....	3-13
3-15	Menu 40-3 Translator Set Up: Frequency Table Select Screen .....	3-13
3-16	Menu 40-4 Translator Set Up: IF Frequency Screen .....	3-14
3-17	Menu 40-5 Translator Set Up: Custom Frequency Select Screen .....	3-14
3-18	Menu 40-6 Translator Set Up: Serial Address Screen.....	3-14
3-19	Menu 40-7 Translator Set Up: Xltr. Visual Power Cal. Screen.....	3-14
3-20	Menu 40-8 Translator Set Up: Xltr. Aural Power Cal. Screen.....	3-15
3-21	Menu 40-9 Translator Set Up: Xltr. Rfltd. Power Cal. Screen .....	3-15
3-22	Menu 40-10 Translator Set Up: Fwd. Power Fault Thresh. Screen .....	3-15
3-23	Menu 40-11 Translator Set Up: Rflt. Power Fault Thresh. Screen .....	3-15
3-23	Menu 40-12 Translator Set Up: Remote Commands Control.....	3-16