

## F27 FM Transmitter User Manual




SKU: F27

### Welcome

Thank you for purchasing this product. To ensure optimum performance and safety, please read these instructions carefully before operating the product. It is strongly recommended you keep the manual for future reference.  
For German, French language user manual, please download from our website: [www.tecknet.co.uk](http://www.tecknet.co.uk). Sorry for the inconvenience.

### Product Layout Descriptions :

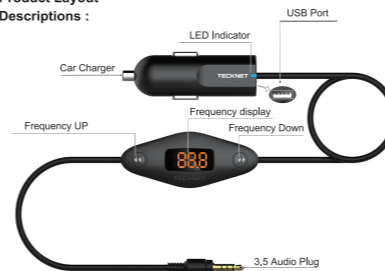

--EN1--

### Frequency

Band	FM Frequency
Quality	Hi-Fi Stereo
Range	88.1~107.9 MHz
Interval	0.1MHz
Stability	10ppm (-10 C ~+ 55 C)
Clutter & Harmonic	≤-60dB
Effective Range	About 5m
Car Charger Input Power:	12V/24V
Car Charger USB Port Output Power:	5V 1A

### Audio

Stereo Separation	40dB
Frequency Response	20Hz~16KHz
Audio Distortion	≤0.1% (F=75KHz, f=1KHz)
SNR:	≥45dB (1KHz 100%)

### Physical

Measurement	57 x 44.5 x 12(mm)
Weight	30g

--EN2--

### Compatibility

iPod, iPhone, iPad, mobile phone, MP3 and MP4 players, and all digital music players with 3.5mm audio jack.

### Operating Guide Transmitting Music

1. Insert the car charger into the car's cigarette lighter.
2. Tune your FM radio to a frequency at which you hear nothing but static. An ideal choice would be one with static on either neighbouring frequency.
3. Turn on the F27 FM Transmitter by short pressing the Power Switch Button once.
4. Tune the F27 FM Transmitter to the same frequency as your FM radio by short press the ◀ and ▶ buttons.
5. Plug the F27 FM Transmitter into your player's dock connector and begin playing music. Now the music will be played through your FM radio speakers.
6. Set the volume to a comfortable listening level by adjusting either the volume controls on your music player or your FM radio.
7. To stop playing music, simply stop playing music from your music player.

--EN3--

### Power Off

The F27 FM Transmitter is equipped with intelligent power switch function, hence you do not need to switch off the FM Transmitter manually. After disconnecting the F27 FM Transmitter from your music player, the LED will remain on for 1 minute and extinguish automatically.

### Troubleshooting

If you encounter a problem please check the following aspects:

1. Working environment  
The product will normally perform better outside the house than inside, where other electronic products could cause FM frequency interference, e.g. wireless baby monitor, wireless mouse, etc.
2. Working distance  
Theoretically, the product can work up to 5 metres from the radio antenna. However, for optimum performance it is recommended that the product be used within 2 metres of the radio antenna.
3. FM Radio  
- Ensure it is on. - Check it is tuned to an open, unused frequency.  
- Make sure the volume is correctly adjusted.

--EN4--

4. iPod or iPhone  
- Is the Hold Switch on? - Have you pressed Play?
5. F27 FM Transmitter  
- Ensure it is properly connected to your iPod or iPhone.  
- Confirm that it is tuned to the same frequency as the radio.  
- Is the Power Switch off?
6. Problem's still not solved?  
No problem. Please do not hesitate to contact us via email: [sale@tecknetonline.co.uk](mailto:sale@tecknetonline.co.uk) with an explanation of the problem and your Order ID, and we will endeavour to reply with a solution within 24 hours.

PO BOX 122  
Liverpool  
L9 7WQ  
[www.tecknet.co.uk](http://www.tecknet.co.uk)

SHENZHEN UNICHAIN TECHNOLOGY CO.,LTD  
Address:5/F, Block17, Lishan Industrial Park, Nanshan District, Shenzhen, China

--EN5--