

EVANT®




Contents

Chapter 1 Quick Start.....	- 2 -
1.1 Appearance Introduction.....	- 2 -
1.2 Attachment.....	- 3 -
1.3 SIM & SD card Installation.....	- 4 -
1.4 Charging.....	- 5 -
1.5 Turning On/Off.....	- 6 -
Chapter 2 Basic Operation.....	- 7 -
2.1 Home Screen.....	- 7 -
2.2 Volumes.....	- 9 -
Chapter 3 E-mail.....	- 9 -
3.1 Google Account.....	- 9 -
3.2 Gmail.....	- 10 -
3.3 E-mail.....	- 11 -
Chapter 4 Network and Browser.....	- 13 -
4.1 Mobile Networks.....	- 13 -
4.2 Browser.....	- 13 -
Chapter 5 BT.....	- 14 -
5.1 Using BT.....	- 14 -
Chapter 6 Multimedia.....	- 14 -
6.1 Camera.....	- 14 -
6.2 Photo Options.....	- 15 -
6.3 Camcorder.....	- 19 -
6.4 Sound Recorder.....	- 21 -
Chapter 7 USB & Micro SD card.....	- 21 -
7.1 USB connection.....	- 21 -
7.2 Micro SD card.....	- 22 -

Chapter 1 Quick Start

1.1 Appearance Introduction

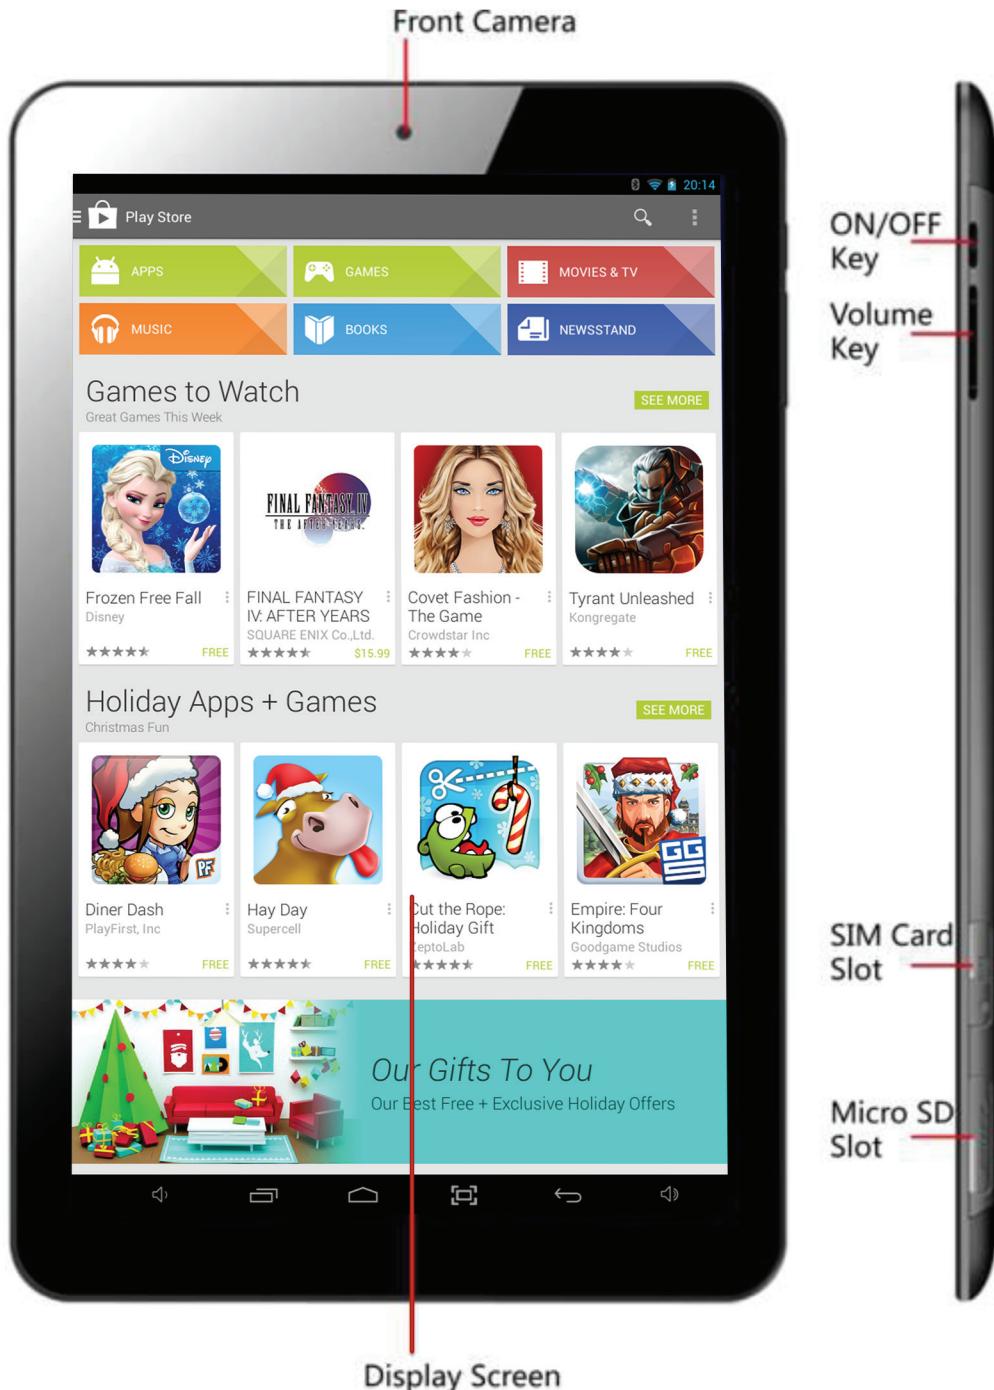



1.2 Attachment

Your packing box comprises the following attachments


- Tablet
- USB cable
- Charger

1.3 SIM & SD card Installation

SIM

·SIM card Installation

Locate the SIM card slot,insert the SIM as picture below:

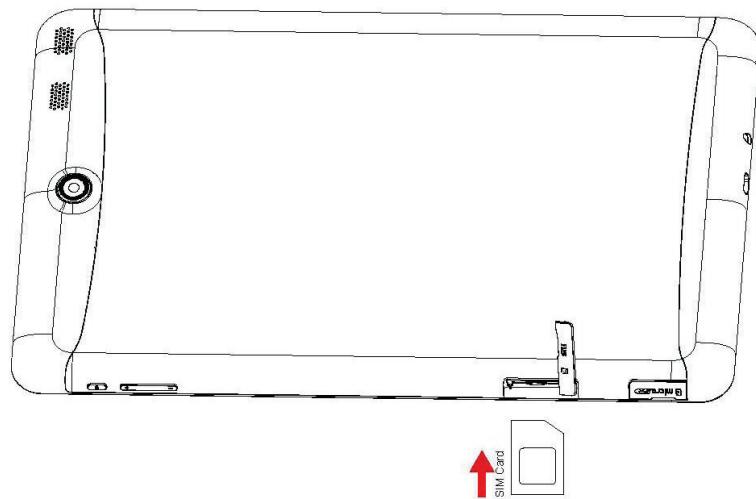

·SIM card Removal


To remove the SIM card, please turn off the tablet first ,or else the SIM card can become damaged.

Micro SD card

Micro SD cards are used to store photos, music, video and other data.

·Micro SD card Installation

Locate the Micro SD card slot, insert the Micro SD card as picture below:

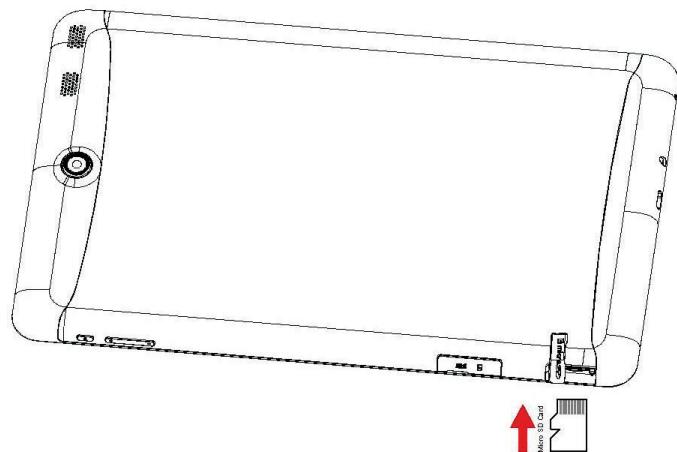

·Micro SD card Removal

1. Please make sure to disconnect the SD card from the tablet.

Click  >  Settings>Storage>Unmount SD card

2. Open the Micro SD card protection cover.
3. Use your fingertips to push the Micro SD card, the Micro SD card will then eject from the slot.


1.4 Charging

Charging

When the battery is charging, the  icon appears in the status bar.

When the battery is fully charged, the  icon appears in the status bar.

Connect the charger to the tablet using the USB/charger cable. The cable plugs into the USB/charger port at the bottom:

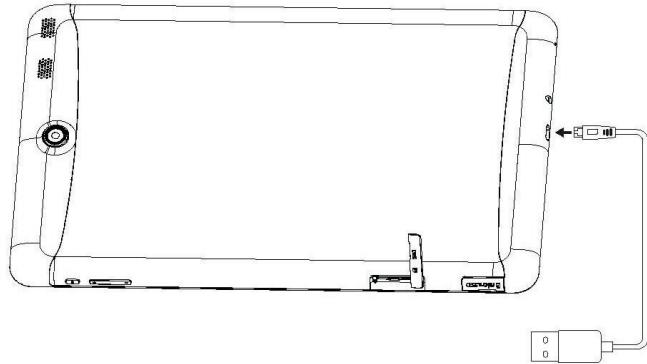


1.5 Turning On/Off

Turning On

Press and hold power key  to turn on the tablet, it will take about 30 seconds to completely boot-up.

Turning Off

Press and hold power key , and a menu will appear.

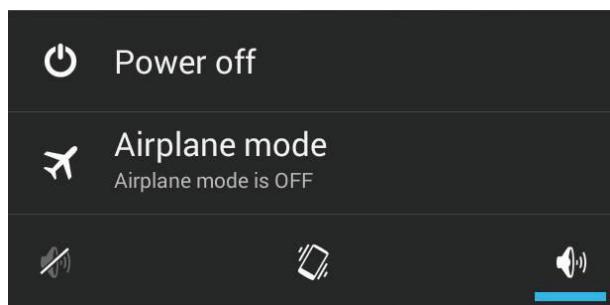


Choose Power off and select OK when it appears.

Standby

1. The tablet will automatically enter sleep mode after 10 seconds of inactivity by default. Screen timeout time can be changed.
2. Wake up the tablet from standby mode by pressing .

Chapter 2 Basic Operation

2.1 Home Screen

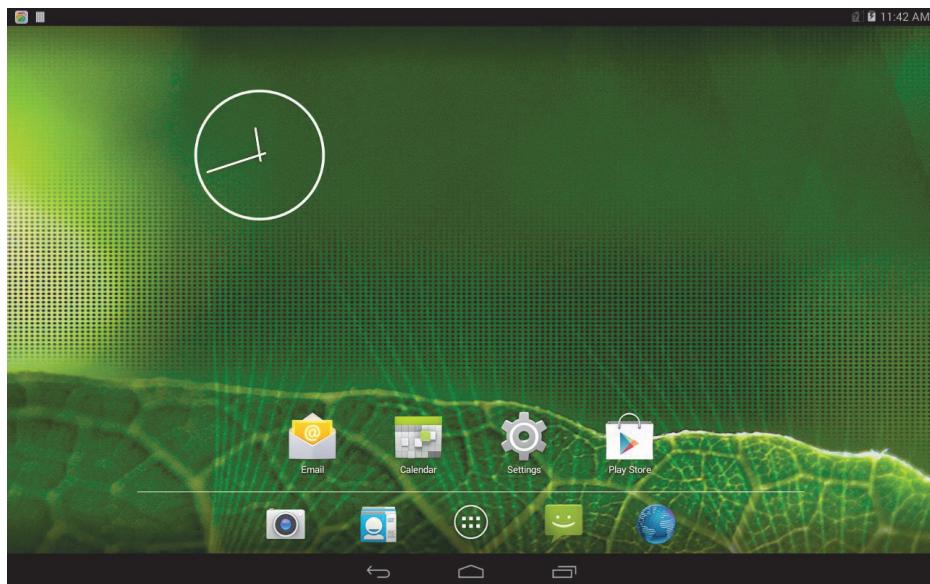

You can switch between the various home screens by swiping left and right

The main key

- **Menu** : Opens the application drawer.
- **Google Search** : Use this to quickly access the Google search services.
- **The home key** : Go to the home screen.
- **Back key** : Return to the previous screen.
- **Task Switch key** : Opens all recently used applications. Applications can also be closed by swiping to the right on the application you want to close.

Status Bar

Status bar will display various important status information. Swipe up from the bottom of the status menu to close the status bar.

Icon	Explain	Icon	Explain
	SIM card not detected		Signal strength
	On 3G Network		On GSM Network

	On Network	EDGE		Airplane mode
	Charging			Low power
	Full power			Silent mode
	Vibration mode			Alarm set
	GPS on			
	USB is connected			

Shortcuts

To customize different home screen, you can add and reposition various app shortcuts.

Click  to open the application drawer.long press and drag the APP you wish to add to the home screen.You can always reposition the various app shortcuts home screen by long pressing and dragging.

Widgets

You can add a clock, music player and calendar widgets on the main screen.

Click  to open the application drawer,then choose




long press any widget to drag it to the screen of your choosing.

Wallpapers

There are two methods for changing the wallpaper of your tablet

1.Touch and hold an empty area on the home screen.

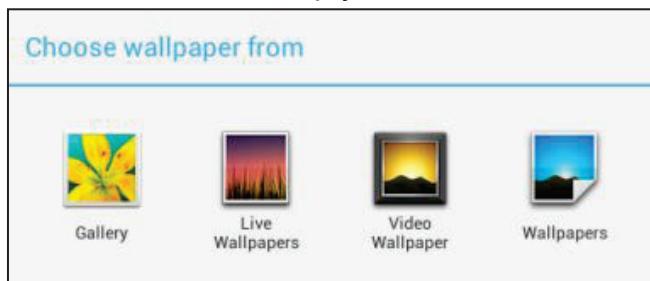

Choose "Gallery" to use your own pictures as wallpapers.

Choose "Live Wallpapers" to select the system live wallpapers as wallpapers.

Choose “Wallpapers” to select the system pictures as wallpapers.

2. Click  >  Settings>Display>Wallpaper

2.2 Volumes

- Media volume: Set the volume for music, video, games and other media.
- Ringtone volume: Set Ringtone and notification volume.
- Alarms volume: Set the alarm volume.
- Call volume: Set the volume of calls.

Chapter 3 E-mail


3.1 Google Account

A Google Account will sync your device with various Google services, Google Apps, and the Play Store.

Steps: Click  >  Setting>Accounts&sync>ADD ACCOUNT>Google

Enter your user name and password, then click “Sign in”. After logging in, all E-mail, contacts and calendar in your Google account will be synchronized to the tablet.

Note: If you do not have a Google account, click “NEW” to create.

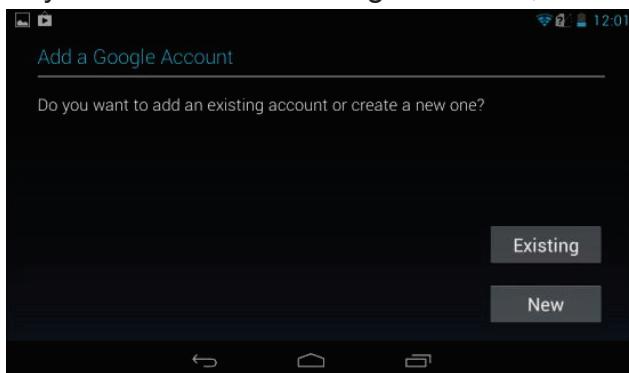

Regain your Google account's password

If you have forgotten your Google account's password, you can perform the following steps to obtain the password:


1. On the computer, open a browser and go to:
<http://google.com/accounts>
2. On the right side of the web page, click “Can't access your account? ”.
3. Select “I don't know my password”.
4. Then follow the steps to reset your password.

Set data synchronization


You can set a Google account to synchronize various data with your tablet.

Steps:

1. Click  >  Setting > Accounts.

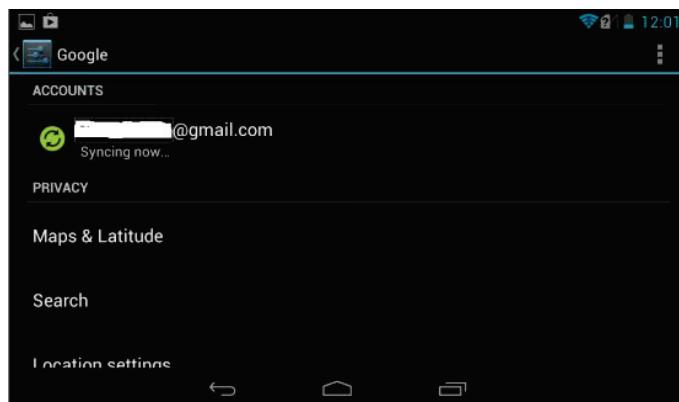

2. Click the account you want to synchronize and choose the services you want to sync.

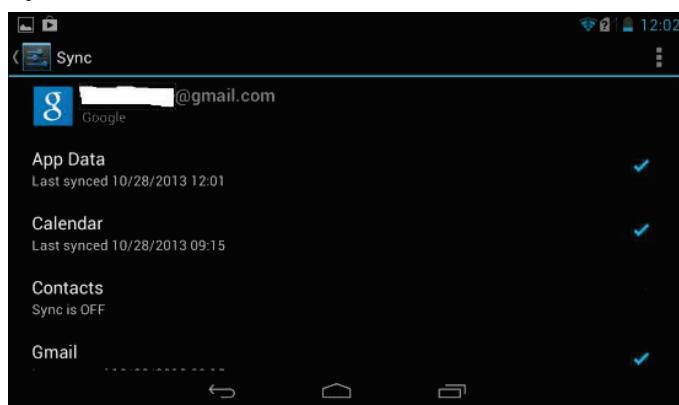


3.2 Gmail

Write a new email

Steps: 1. Click  >  Gmail.

2. Click , then select "Compose".

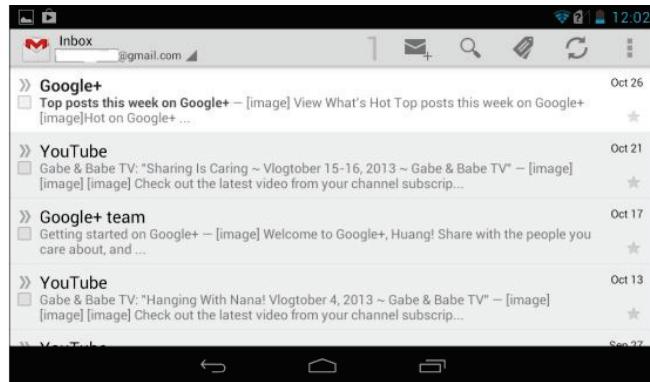

Enter the recipient's e-mail address and message content, and then press  to Send the mail.

3.3 E-mail

You can use email to send or receive e-mail messages.


Note: 1. You must set up your e-mail at first, and then send or receive e-mail.
 2. An internet connection must be present to send and receive emails. You can consult your specific setup parameters with your network service provider.

E-mail account settings

Steps: Click  >  E-mail.

Account setup:

1. Enter the e-mail address and password, and then click “Next”.

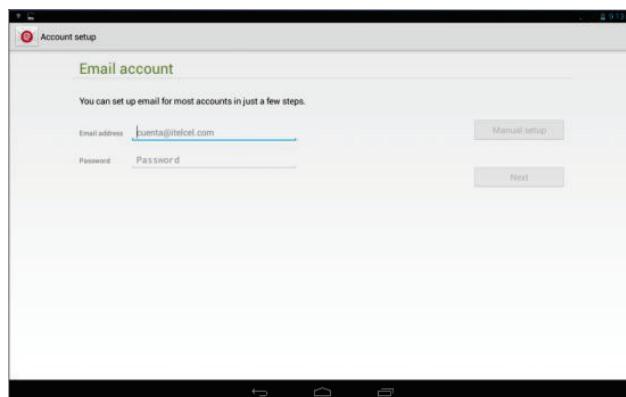

2. Select the type of the Email account: POP3/IMAP/Exchange. If you do not know the configuration parameters, you can consult the e-mail service provider.

3. You can set the frequency of mail checks. After setting, click Next.
 4. Create name and signature, for your account.

You can also set multiple email addresses:

1. After Set the initial e-mail address, Click , select "Settings" option to enter the account settings page.
2. Click the "Add Account" to add other email accounts.

Write and send messages

Steps: Click  >  E-mail.

1. Click  to editor the e-mail message.
2. Enter the E-mail address of the recipient.
3. Enter a subject.
4. Write the message content.
5. Click  to send the E-mail.

View and save e-mail

Receiving e-mail messages stored in the network service provider's mail server before downloading to the device.

- Select the e-mail to read in the Inbox.
- Click the attachment icon can view e-mail attachments.
- Click Save to download attachments, attachments are usually stored in your SD card.

Reply e-mail

- In the Inbox, select the mail you want to reply, click  to reply.

Chapter 4 Network and Browser

4.1 Mobile Networks

Your device is capable of accessing mobile networks. You will need a SIM card of the network you are trying to connect to in order to use mobile data.

Check your network connection

1. Click  >  Settings
2. WIRELESS & NETWORKS >More>Mobile networks.
3. Click “Access Point Names (APN)” to check your network connection.

4.2 Browser

Use the browser allows you to access Web pages and Web-based applications.

Steps: Click  >  Browser.

- You can click on the tab bar to open pages.
- Click  to close the tab.
- Click  to create a new tab.
- Click  to refresh the page.
- Click  to go back or forward and view previous pages.
- Click  to add a bookmark of the current page.
- Click  to search or enter the URL.
- Click  to view all of your bookmarks, history, saved pages.
- Click  to do more actions.

View the links in the page

You can click the link in the page to open it.

Tap and hold the link in a webpage can choose to open the link in a new tab or bookmark it. You can also enter the URL you want to access directly in the address bar.

Zoom pages

You can zoom in by double tapping the area to be zoomed into on the page.

You can also pinch to zoom in and out.

Chapter 5 BT

5.1 Using BT

On / off the BT

Steps: Click  >  Settings>BT

Click switch to turn on or off BT.

Connecting a new device

1. Confirm the device you want to pair with is turned on and visible.
2. After turn on BT,choose “SEARCH FOR DEVICES”.
3. Select the device in the list to connect.
4. Enter the PIN (eg 0000),then press the “Pair”to connect the device.

When BT is turned on, Icon will be displayed in the status bar.

Note : BT device connection methods may be different.This manual is for reference only.

Disconnect the BT and device

Choose the device you want to disconnect in the list of the devices and choose “Unpair”to disconnect.

Chapter 6 Multimedia

6.1 Camera

Steps: Click  >  Camera


· Screen display framing the landscape of the region.



· To switch between camera and camcorder.



· shutter button.

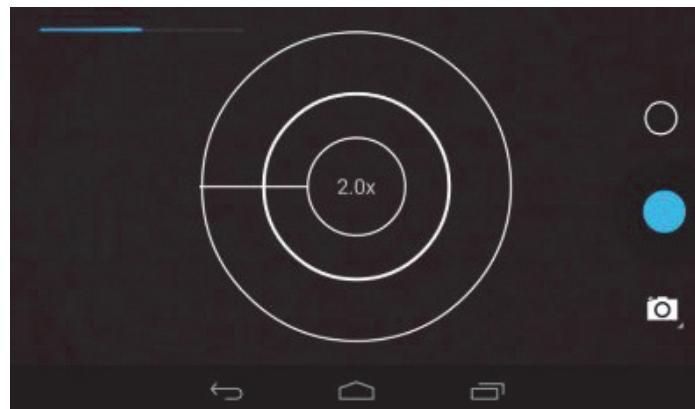

- Zoom in and out via pinch.
- To switch between front camera and rear camera.
- Set camera options.



Note: Please install the SD card before you take a picture.
Touch the thumbnail of the photo to open the media library and view pictures.

6.2 Photo Options

Click can enter the set interface.

Anti Banding	50 Hz
Select ISO	Auto
Exposure	0
White balance	Auto
Redeye Reduction	Disable
AE-Bracket	<input type="checkbox"/>
Countdown timer	Off

Scene mode	Auto
Store location	<input checked="" type="checkbox"/>
Picture size	2M pixels
Select Picture Format	Jpeg
Picture quality	Super fine
ZSL	<input type="checkbox"/>
Storage Position	Phone

Color effect	None
Face Detection	<input checked="" type="checkbox"/>
Touch AF/AEC	<input checked="" type="checkbox"/>
Selectable Zone Auto...	Auto
Saturation	Level 5(D...
Contrast	Level 6(D...
Sharpness	Level 2(D...




Aw White balance.

White balance	
Auto	
Incandescent	
Daylight	
Fluorescent	
Cloudy	

·  Exposure.




·  Camera settings.

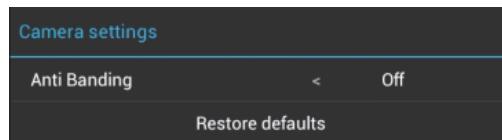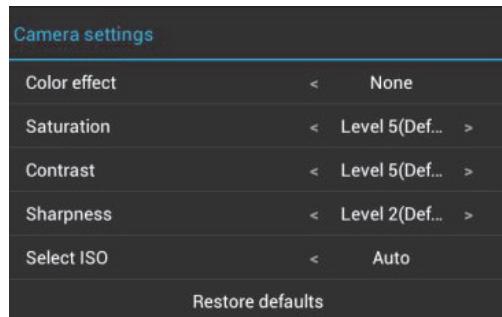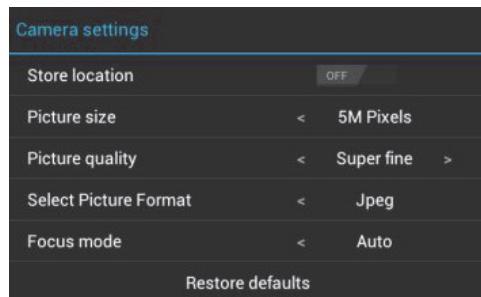

View image

Steps: Click  >  Gallery.


Click the picture you want to see. You can also swipe the screen left or right to view the next or previous picture.

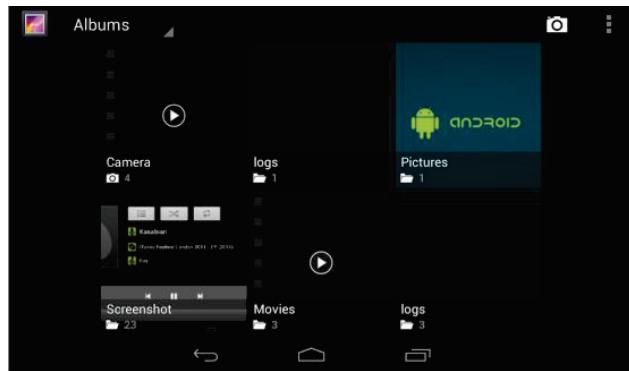

Slide show

To do a slide show.

Click the picture to enter the picture browsing interface, click  in the pop-up menu, select "Slideshow".

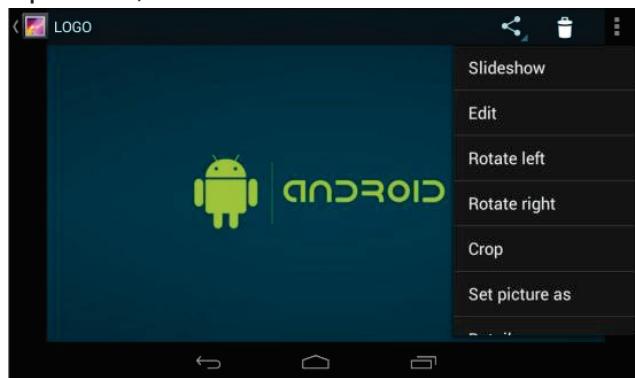

Share pictures

1. Click the picture you want to share , enter the picture browsing interface,then click .
2. Choose method for sharing: BT, E-mail,etc.

Edit photos

Enter the picture browsing interface,then click , select "Edit" to enter the photo editing interface.



6.3 Camcorder

Steps: Click  >Camera.



to switch between camera and camcorder.



to start/stop recording video.




to switch between front camera and rear camera.



to set camera options.

Note: Please install Micro SD card before you record video.

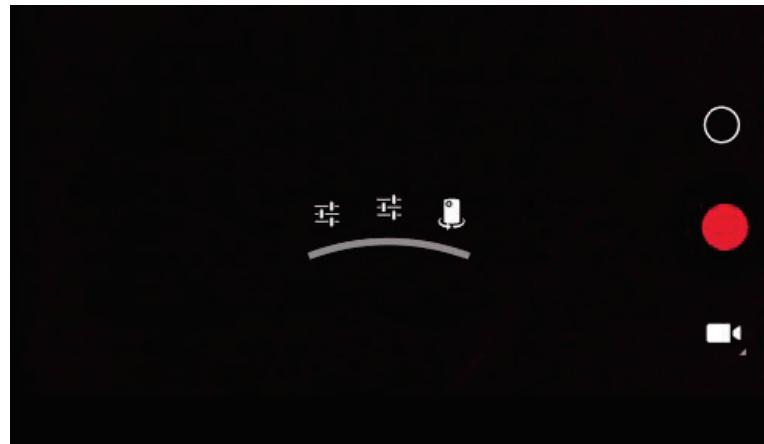


Video options


Click  to enter the settings interface.




 White balance.

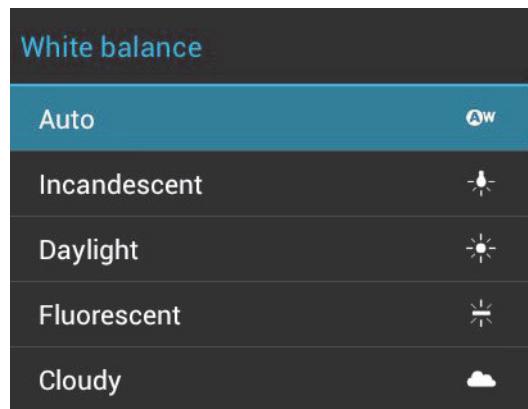

⌚ Time lapse interval.

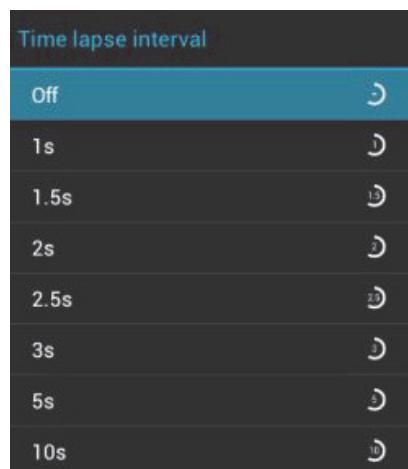

✓ Video quality.

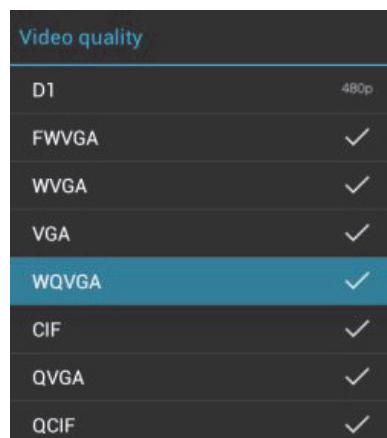

☰ Camera settings.



Manage video

· **Play video.**

Steps: Click >Videos.

Choose the video you want to play in the list.

· **Share videos.**

1. When you view the video, click .
2. Choose ways of sharing: BT, E-mail.

6.4 Sound Recorder

Steps: Click > Sound recorder.



Record button.



stop recording.



After the recording is completed, you can press the button to play the audio you just recorded.

Chapter 7 USB & Micro SD card


7.1 USB connection

You can use the USB data cable to connect the tablet to the computer, in order to transfer pictures, videos, music and more between the tablet and computer.

1. Use the USB data cable to connect the tablet to a USB port on your computer.

2. The USB connection icon will appear on the status bar.

3. Choose the "USB connection" option, choose the way connect the tablet to the computer.

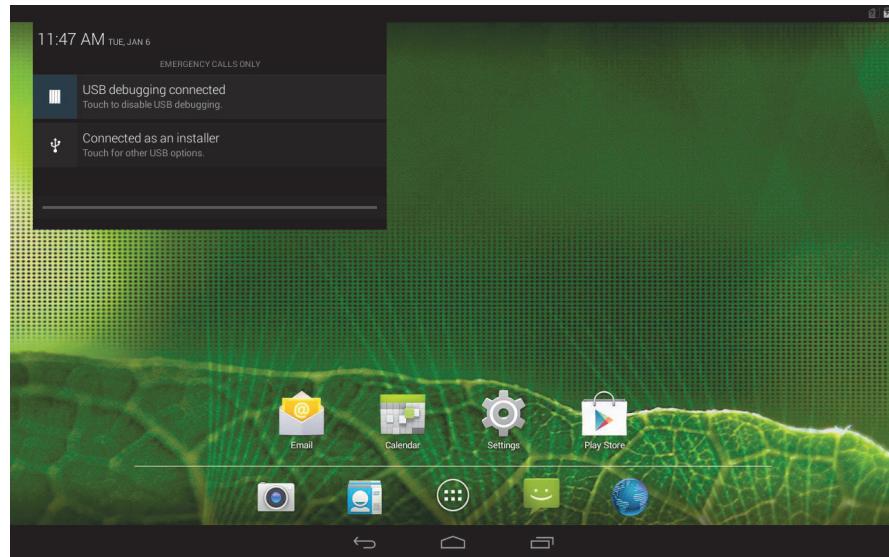

7.2 Micro SD card

Click  >  Settings>Storage can view the memory card usage information.

Click  >  Settings>Storage>Unmount SD card to make sure the Micro card disconnected before removing the memory card.

WARNING:

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body