


Learn Mode Pendant Panic Sensor Installation Instructions

Product summary

The Learn Mode™ Pendant Panic Sensor (60-452) is a supervised, wireless device designed to be used throughout the installation site. The sensor can be worn around the neck with a removable cord (included) or on the user's belt with an optional leather belt holster.

Figure 1: Learn Mode Pendant Panic Sensor

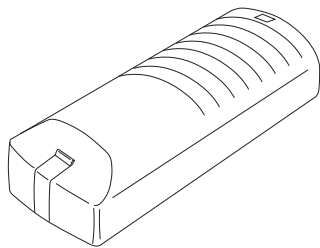

How it works

The sensor contains a transmitter and a "PUSH" activation button. No switches or external wiring is required. An alarm is activated by pressing the "PUSH" button, located on the end of the sensor.

The sensor transmits a supervisory signal every 64 minutes. When the sensor battery voltage is low, a low battery (trouble) report is sent to the panel. The sensor has an estimated battery life of one year.

Programming and installation guidelines

- Try to keep sensors within 100 ft. of the panel. The 100 foot distance recommendation is given as a starting guide line. The actual sensor range is determined during testing.
- Do not expose the sensor to excessive moisture or high humidity.
- To allow users to take the sensor off-site without the panel reporting a supervisory or failure condition, program the sensor into an unsupervised sensor group.

Programming

The following steps describe the general guidelines for programming (learning) the sensor into panel memory. Refer to the specific panel documentation for complete programming details.

1. Set the panel to program mode.
2. Proceed to LEARN SENSORS menu.
3. Select the appropriate sensor group number (00 through 07).
4. Select sensor number assignment.
5. When prompted by the panel to trip the sensor activate the sensor by pressing the "PUSH" button on the pendant.
6. Exit program mode.

Testing

The following steps describe the general guidelines for performing a dealer sensor test. Refer to the specific panel documentation for complete testing details.

1. Use the panel touchpad to enter the dealer sensor test mode.
2. Press the "PUSH" button on the sensor to activate it.
3. Listen for the appropriate siren response as described in the panel documentation.
4. Test the sensor from several locations within the premises to check for consistent response.

Specifications

Compatibility	All Interlogix Learn Mode Panels and Receivers
Power source	One 3.6 VDC (Saft LS3) Lithium Battery
Temperature range	10 to 120 °F
Dimensions	3.75 x 1.50 x 1.00 in. (L x W x D)

Regulatory information

Manufacturer	UTC Fire & Security Americas Corporation, Inc. 1275 Red Fox Rd., Arden Hills, MN 55112-6943, USA
FCC compliance	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Changes or modifications not expressly approved by Interlogix can void the user's authority to operate the equipment.</p> <p>FCC ID: B4Z-556M-PPANIC</p>
IC compliance	<p>IC: 1175C-556PPANIC</p> <p>This Class B digital apparatus complies with Canadian ICES-003.</p> <p>Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.</p> <p>Le fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil peut ne pas provoquer d'interférences et (2) cet appareil doit accepter toutes interférences, y compris les interférences pouvant provoquer un fonctionnement non désiré de l'appareil.</p>

Contact information

For contact information, see www.utcfireandsecurity.com or www.interlogix.com.

For technical support, toll-free: 888.437.3287 in the US including Alaska, Hawaii, Puerto Rico, and Canada. Outside the toll-free area, contact your dealer.

Copyright © 2014 Interlogix, a UTC Fire & Security Company.
All rights reserved.