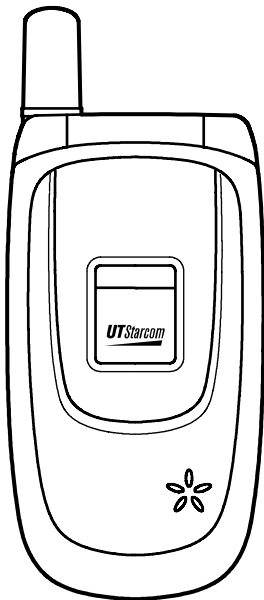 


UTStarcom

UT611

USER GUIDE



Trademark Statement: “UTStarcom’, ‘iPAS’, and the UTStarcom logo are trademarks of UTStarcom, Inc.”

Copyright Statement: “©UTStarcom, Inc. 2005. All rights reserved. No part of this publication may be reproduced in any form or by any means without the prior written permission of UTStarcom, Inc.”

Warranty Language: “The contents of this manual, whether in whole or in part, do not constitute any express or implied warranty with respect to any products of UTStarcom, Inc., or its subsidiaries.”

Table of Contents

SAFETY PRECAUTIONS	1
1. GETTING STARTED	7
1.1 PACKAGE CONTENTS.....	7
1.2 PHONE SPECIFICATIONS	8
1.3 HANDSET DESCRIPTION.....	9
1.4 DISPLAY INDICATOR	11
1.5 CHARGE THE BATTERY	12
1.6 REPLACE THE BATTERY AND INSTALL PIM CARD	13
1.7 CONVENTIONS IN THIS GUIDE.....	14
1.8 ACCESS MENU/LIST OPTIONS	15
1.9 INTRODUCTION TO THE PIM CARD	15
2. BASIC OPERATIONS	17
2.1 SWITCH THE PHONE ON/OFF	17
2.2 MAKE A CALL.....	17
2.3 USE SPEED DIAL	18
2.4 MAKE AN IP CALL	18
2.5 ANSWER OR REJECT A CALL	19
2.6 HOLD A CALL.....	19
2.7 CALL WAITING.....	19
2.8 THREE WAY CALLING.....	20
2.9 ACCESS PHONE BOOK DURING A CALL	21
2.10 ADJUST EARPIECE VOLUME DURING A CALL	21
2.11 STORE A PHONE NUMBER	21
2.12 CALL LOG SHORTCUT	22
2.13 CUSTOM FUNCTIONS SHORTCUT.....	22
2.14 CURRENT PROFILE SHORTCUT.....	23
2.15 VIBRATION SHORTCUT	23
3. PHONE BOOK (NAMES)	24
3.1 SEARCH.....	24

3.1.1 Quick Search	25
3.1.2 Edit	25
3.1.3 Delete Entry	26
3.1.4 Copy to PIM (Copy to Phone)	26
3.2 ADD ENTRIES	26
3.3 DELETE ENTRY	27
3.3.1 Delete One by One	28
3.3.2 Delete All	28
3.4 GROUP INFO	28
3.4.1 Browse.....	28
3.4.2 Ring Tone.....	29
3.5 SPEED DIALING	29
3.6 MEMORY SETTING	30
3.7 CURRENT MEMORY	30
3.8 COPY PHONE NUMBER	30
4. MENU	32
4.1 SMS.....	32
4.1.1 Edit Message	32
4.1.2 Inbox.....	33
4.1.3 Outbox	36
4.1.4 Draft.....	37
4.1.5 PIM Box	38
4.1.6 Clear	38
4.1.7 Memory.....	39
4.1.8 Store Address	39
4.1.9 Security.....	39
4.2 CALL LOG	41
4.2.1 Missed Log	41
4.2.2 Received Log.....	42
4.2.3 Dialed Log	42
4.2.4 Delete Log	43
4.2.5 Duration	43
4.3 PROFILES.....	44
4.3.1 Standard	44
4.3.2 Meeting.....	46

4.3.3 Outdoor.....	46
4.3.4 User Define.....	46
4.4 SETTINGS	48
4.4.1 Own Number.....	48
4.4.2 Scheme	48
4.4.3 Date/Time	49
4.4.4 Alarm	50
4.4.5 Answer Mode.....	52
4.4.6 Language.....	52
4.4.7 Display.....	53
4.4.8 IP Setting	54
4.4.9 Set Security	55
4.4.10 Input Method.....	56
4.4.11 Call Forwarding.....	57
4.4.12 Pin Setting	59
4.5 TOOLS	61
4.5.1 Calculator	61
4.5.2 Calendar.....	62
4.6 GAME	63
4.6.1 Black-white Chess	63
4.6.2 Whammy	64
4.6.3 BJK.....	65
5. DATA FUNCTION	67
6. INPUT METHOD.....	68
6.1 SWITCH INPUT METHOD.....	68
6.2 PINYIN AND SIM STROKE	68
6.3 ENGLISH	68
6.4 LETTER.....	70
6.5 DIGIT	71
6.6 INPUT METHODS IN SMS	71
7. TROUBLESHOOTING.....	73

SAFETY PRECAUTIONS

FCC RF Exposure Compliance

This PCS phone has been tested and complies with the Federal Communications Commission (FCC) RF exposure limits for General Population/Uncontrolled exposure environment. In addition, it complies with the following Standards and Guidelines:

- FCC 96-326, Guidelines for Evaluating the Environmental Effects of Radio-Frequency Radiation
- FCC OET Bulletin 65 Edition 01-01 (2001) Supplement C, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields
- ANSI/IEEE C95.1-1992, IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz
- ANSI/IEEE C95.3-1992, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields - RF and Microwave



Note: *For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and when the back of the phone faces your body*



Use of other accessories may not ensure compliance with FCC RF exposure guidelines




The antenna used for this transmitter must not be co-located or must not operate in conjunction with any other antenna




*Max. SAR Level(s) Evaluated: Head: 0.0652 W/kg (1g average)
Body: 0.395 W/Kg (1g average)*

Handling the Phone, Battery and Charger




DANGER

 Compulsory	Only use the battery and charger specified for the phone. Failure to do so can result in damage to the phone, electric shock or fire.
---	---

CAUTION




 Prohibited	Do not store or operate the phone or charger in hot, damp, or dusty areas, which can damage electrical and mechanical components. Avoid prolonged exposure to temperatures below 5°C or in excess of 35°C.
---	--

DANGER





 Prohibited	Do not drop, shake or throw the phone or charger. Rough handling can damage internal circuit boards and the battery pack.
 Prohibited	Do not use the phone in the vicinity of volatile gases. Leave the area before using the phone. Failure to leave the area can result in the risk of fire or an explosion.
 Disassembly prohibited	Do not disassemble or modify the phone, charger, or battery. Incorrect modifications, reassembly, or tampering may result in malfunction or personal injury.

Handling the Phone

DANGER







 Prohibited	Do not use the phone while operating a vehicle.
 Compulsory	Observe local regulations for specialized areas (hospital, aircraft, etc) when using the phone.
 Compulsory	<p>This phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This phone generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this phone does cause harmful interference to radio or television reception, which can be determined by turning the phone off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna - Increase the separation between the phone and receiver - Connect the phone into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help

 **CAUTION**



 Compulsory	Changes or modifications not expressly approved by UTStarcom, Inc. could void the user's authority to operate the phone.
 Prohibited	Keep all storage media (magnetic cards, floppy disks, credit cards, etc.) away from the phone. Close encounters or contact can erase or damage the storage media.
 Prohibited	Keep all sharp metal objects (pins, nails, hairpins etc.) away from the phone handset. The handset earpiece contains a strong magnet that can attract and hold metal objects. Remove any objects from the handset earpiece before using, to avoid personal injury.
 Compulsory	In case of emergency, key in the emergency number (911 for example in US), then press the Talk key and let the operator know your specific location. Don't hang up until you are told to do so.

Handling the Battery

DANGER





 Prohibited	Do not dispose of the battery pack in a fire. It may explode. Check with local waste management codes for disposal instructions.
 Prohibited	Do not force the battery pack into the phone. Improper installation can cause malfunctions or damage the battery pack. This may result in fire or personal injury.
 Prohibited	Use caution in handling batteries in order not to short the battery on conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
 Disassembly prohibited	If the battery becomes too hot while recharging, it should be removed immediately from the charger.
 Compulsory	When clothes or skin are exposed to battery leakage, rinse with clean water at once to prevent skin irritation.
 Compulsory	Do not use a cracked, leaking or odor-emitting battery pack near an open flame or high temperatures.

CAUTION




 Compulsory	If a fully discharged battery is stored for a long period of time, it may not be possible to recharge the battery.
 Prohibited	Observe local waste management codes for proper battery disposal instructions.

Handling the Charger

DANGER

 Compulsory	Only use a power source that provides the appropriate voltage (AC100~240 V) for the charger. An unsuitable power source can result in damage to the charger, electric shock or fire.
 Compulsory	Do not use the charger if the power supply cord or plug is damaged or frayed (exposed or broken wires, etc). This can result in the risk of fire or electric shock.
 Prohibited	Do not short circuit the charger connector jack. This may result in fire or electric shock.
 Remove power plug	Immediately unplug the charger from the wall outlet in the event that liquid is spilled into the unit to prevent fire or electric shock.

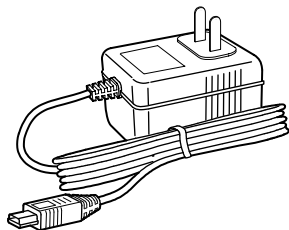 
CAUTION

 Compulsory	Always unplug the charger from the wall outlet before cleaning to avoid the risk of electric shock.
 Prohibited	Do not place heavy objects on the cord to avoid damage.
 Compulsory	Always grip the power plug when removing the charger from the wall outlet. Do not pull on the power supply cord to avoid damage and the risk of electric shock.

1. GETTING STARTED

1.1 Package Contents

Please check the package contents by comparing them with the following list. If you find anything missing or if the documentation set is incomplete, contact your local phone dealer immediately



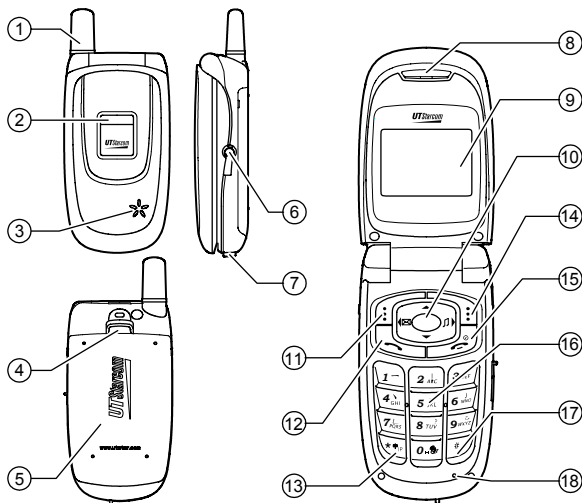 
- Model UT611 phone (with one battery)
- Charger (one)
- User guide (one)
- Instructions for post-sale support
- Certificate of quality

1.2 Phone Specifications

Dimensions	About 82×43×22.5 (L×W×H) mm
Weight	About 75g
Transmission Voltage	About 10mW
Battery	DC 3.6V 520mAh Li-ion battery
Charger	Input: 220V AC 50Hz 55mA Output: 5.2V DC 160mA
Charger Model	L516205A
Charger Weight	About 220g
Charging Time	About 6~8 hours
Standby Time	50~200 hours
Continuous Talk Time in Lab Environment	About 7 Hours

- Standby time refers to the state in which the phone is on continuously without being used for calls or moved to different service areas
- The standby time depends on the network conditions, phone usage and surrounding area. The phone consumes more battery power under the following conditions
 - In areas with weak signals, with high or low temperatures, or when used outside the service coverage area
 - When the phone frequently searches for network signal due to location changes
 - When you talk on the phone for long periods of time
 - When features such as SMS and game are being used for long time
 - Alarm, Backlight or Vibration function is turned on
 - Ring or earpiece volume is set to maximum

1.3 Handset Description



1. Fixed antenna

2. LED:

The LED will flash when the phone receives an incoming call. When the battery is being charged, the LED will light in red. When the battery is fully charged, the LED will turn off.

3. Speaker

4. Battery Button

5. Battery

6. Earpiece

Getting Started

7. Charging Socket

8. Earpiece

9. LCD

10.  Navigation Key:

This key is used to scroll up and down through menu lists, communication history or phone book recording. It also can be used to move the cursor.

11.  Left Soft Key:

This key is used to perform the function indicated on the screen above.

12.  Talk Key:

This key is used to make or receive a call. It can also be used to access outgoing call logs in standby mode.

13.  IP Key/Switch Key:


This key is used to make IP calls or to change the text input method.

14.  Right Soft Key:

This key is used to perform the function indicated on the screen above.

15.  Power Key:

This key is used to switch the phone on and off, to end a call, or to return to standby mode.

16.  Number Keypad:

These keys are used to enter numbers and characters.

17.  # Key:

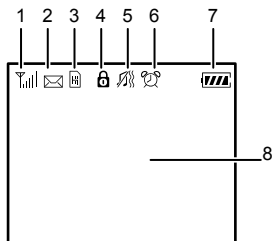 
This key is used to key in “#” or pause symbol “P” (by pressing and holding the key).

18. Microphone





Note: This is only a brief introduction to the keypad functions. Please refer to the contents of this user guide for detailed descriptions and operations.


1.4 Display Indicator



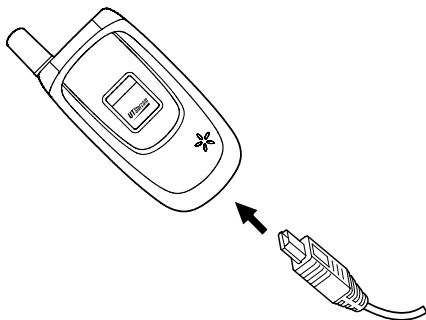 
1. Shows the current signal strength. The higher the bar, the stronger the signal.
2. Indicates an unread short message. It will flash when the message box (Inbox) is full.
3. Indicates the PIM card has been inserted in the phone.
4. Indicates the Toll Lock function is active.
5. Means the Ring Mode is set to **Only Vibrate**.
 Means the Ring Mode is set to **Only Ring**.
 Means the Ring Mode is set to **Ring and Vibrate** or **Ring after Vibrate**.
 Means the Ring Mode is set to **Silent**.

6.  Indicates the Alarm function is active.
7.  Indicates the battery charge level. The higher the bar, the greater the battery power.
8. Content Display Area: Shows the phone numbers, short messages, characters, or animations.

1.5 Charge the Battery

When the battery power is nearly exhausted, the battery indicator  will flash continuously, and the phone will generate a low battery alarm sound (if the ring mode is not set to "Mute"). Those remind you that the battery is running low and the phone will be switched off automatically. To charge the battery, follow the steps below:

1. Connect the charger to a 220V AC wall outlet.
2. Connect the lead from the charger to the charging socket of the phone. If the phone is in off state, the text "**Charging...**" is displayed on the LCD screen, and at the same time the battery indicator bar keeps scrolling on the LCD.




3. Charging is complete when the battery indicator bar stops scrolling. The text "**Fully Charged!**" is also displayed on the LCD screen if the phone is in off state.

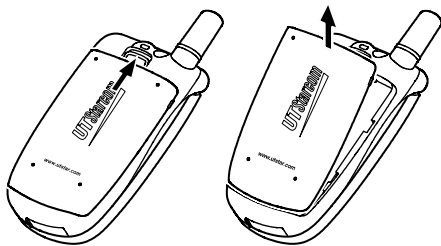 
- The charging time is about 5~7 hours. And the exact time might vary.
- To charge a new battery for the first time, the suggested charging time should be 6~8 hours.
- When the battery is being charged, it is normal that your charger and phone become warm to the touch
- If the phone is turned on while charging, you can still make and receive calls as usual. But this will consume battery power, thus extending the charging time.

1.6 Replace the Battery and Install PIM Card

Since battery power is easily consumed. When you find the battery power diminishes quickly after full charging, please replace your battery. After replacing the battery, you will need to reset the date and time.

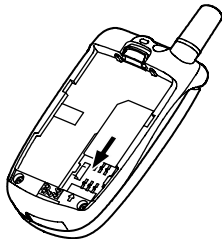 
1. In standby time, press and hold  to switch off the phone (otherwise, some user settings will be lost).
2. Remove the battery

Press and release the battery button and then lift the battery out of the phone.



3. Insert the PIM card

Insert the SIM card into the SIM card slot. Ensure that the golden contact area on the card is facing downwards




4. Install the new battery







Install the new battery as illustrated until it locks into place.



1.7 Conventions in this Guide

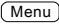
- In this guide, “press the key” means to release the key right after you press it. “press and hold the key” means to press the key for over 2 seconds before releasing it






-  Press the “Up”, “Down”, “Left”, and “Right” directions on the Navigation key to execute operations such as browsing, selecting, adjusting and setup. Key directions are shown as follows:




					
Up	Down	Up or Down	Left	Right	Left or Right

1.8 Access Menu/List Options

A variety of options are available for the menus and lists, such as **Menu**, **Names**.

For example, to access  → **Settings** → **Alarm**, follow the steps below:

- In standby mode, press the left soft key  (**Menu**).
- Press  to select **Settings**, and then press the left soft key  (**Ok**).
- Press  to highlight **Alarm**, and then press the left soft key  (**Ok**).

 **Note:** To return to the previous menu level, press the right soft key  (**Exit**). To return to standby mode without changing the menu settings, press .

1.9 Introduction to the PIM card

- In order to improve the phone's adaptability, and to protect your personal information, this phone chooses to insert PIM card. Every PIM card has its' own number. The card can store phone numbers and


Getting Started


received short messages. These information can be kept in the card even you change the phone.

- Keep PIM card out of reach of children.
- The PM card and its contacts can easily be damaged by scratches or bending. Be careful when handling, inserting or removing the card.
- Before installing the PIM card, switch off the phone and remove the battery

2. BASIC OPERATIONS

2.1 Switch the Phone On/Off

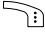

Press and hold the power key . The phone will display the power-on/off animation and sound the power-on/off music (if the Keypad volume is not mute)


If the Phone lock function is active, after switching on the phone, it will remind you to input the security code. Enter the security code and press the left soft key  (**Ok**). If the PIM card has been inserted in the phone, and the PIN Code protection is on, input the correct PIN code, then the phone is turned to standby mode. (Refer to page 59 Pin Setting).


The phone needs time to read the PIM card information. If the PIM card is inserted to the phone, please wait for a while after switching on the phone. Then the phone's mode is turned to standby.

2.2 Make a Call



1. Key in the phone number.

If one inputs the wrong number, press  (**Clear**) to clear the last input number. Or press and hold the right soft key  (**Clear**) to clear all the input numbers. Then the phone is in standby mode.

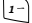

2. Press  to call the number. "**Connecting...**" will be displayed.


Press the right soft key  (**Clear**) to cancel the call attempt. A time display of **00:00:00** will appear.


3. When the call is connected, the calling timer is displayed.

4. To end the call, press the right soft key  (**Hang up**) or the  key, or close the flip cover. The corresponding call duration will be displayed after disconnecting the call.

2.3 Use Speed Dial



If you have assigned a phone number to one of the speed dial keys  ~ , you can quickly call that phone number (refer to “Speed Dial”)


In standby mode, press and hold the corresponding speed dial key to automatically display the phone number. Then press the  to call the number.



If you have configured the IP Phone function, you can press and hold  to call the number in IP mode. (See also in section Make an IP Call).

2.4 Make an IP Call








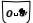

This function requires network support. If the IP Phone function has been correctly configured, you can dial a phone number in IP mode in one of the following two ways:

- Enter the phone number. Then press and hold  to dial the number. **IP Call** will be displayed.
- Press and hold . After successfully connecting to the IP network, begin to dial by following the network instructions.

 **Note:** When you are making an IP call, only the IP access number and the text **IP Call** are displayed.



 Prior to using this function, the IP access number, account number (accounts) and password must be correctly pre-configured (see page 54 “IP Setting ” for details). Otherwise, **IP Not Set** will be briefly displayed after you press and hold .

2.5 Answer or Reject a Call

- When there is an incoming call, press the left soft key  (**Answer**) or  to answer the call. Press the right soft key  (**Hang-up**) or  to end the call.
- When there is an incoming call, to reject the call, press the right soft key  (**hang-up**), or  close the flip cover (when there is no earpiece). If the right soft key  is pressed to reject the Incoming call, the call duration **00:00:00** will be displayed
- When there is an incoming call, you may press  to stop the Vibration alert or ring without picking up the call.
- When there are missed calls or rejected calls, the number of missed calls will be displayed, for example **Missed Log 3**. In this case, press the left soft key  (**View**) to check the phone number of missed calls.

2.6 Hold a Call

You can place an ongoing call temporarily on hold.

1. During a call, press the left soft key  (**Hold**). “**Holding...**” will be displayed to let the caller wait and the caller can hear the keep-calling sound. Now the “**keep calling**” is displayed.
2. To take the call off hold, press the left soft key  (**Talk**).







2.7 Call Waiting

Call Waiting requires network support. The function varies depending on the network conditions. Contact your local service provider for assistance.

If Unconditional call forwarding or call forwarding on busy function is active, the call waiting function will be inactive.



Basic Operations

While you have a call in progress, if there is an incoming call from a third party, the earpiece will sound a waiting tone. The following operations are available:









- Press , and then press  to reject the incoming third party call
- Press , and then press  to end the current call and answer the incoming third party call
- Press , and then press  to hold the current call and answer the incoming third party call

2.8 Three Way Calling


Three Way Calling requires network support. The function may vary depending on network conditions. Contact your local service provider for assistance.


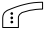

While on a call with user B, if you need to connect user C, press  to put B on hold. After hearing the dial tone, key in user C's number and speak to C when connected. If you fail to connect to C, press  to continue the call with B.

During the call with C, the following operations are available:







- Press , and then press  to end the call with C and resume the call with B
- Press , and then press  to hold the call with C and resume the call with B
- Press , and then press  to initiate the Three Party Calling function
- Press , and then press  to hold the call with B and resume the call with C

2.9 Access Phone Book During a Call

While on a call, press  to access the phone book entry list.


- After entering the phone book, when you press  to access the phone numbers one by one in the phone book, and the phone book entry will be highlighted. Press the left soft key  (**Details**) to check the details (name, phone number and group) for the highlighted entry.
- If there are no entries in the phone book, when you press , the error tone will sound




2.10 Adjust Earpiece Volume During a Call

1. During a call, press  to access the earpiece volume adjusting screen.
2. There are six volume levels from low to high (0-5). Press  to increase or  to decrease the volume.
If the volume is at the highest level, the volume level will not change when  is pressed. Similarly, if the volume is at the lowest level, the volume level will not change when  is pressed.
3. After completing the volume adjust, press the right soft key  (**Exit**) or wait for two seconds to return to the call timer mode. The phone will save the adjusted volume level.

2.11 Store a Phone Number







In standby mode, new entries can be added to the phonebook.



1. Enter the desired phone number and press the left soft key  (**Save**).


2. Enter the name according to the prompts and press the left soft key  (Ok).
3. Select the group for this phone number and press the left soft key  (Ok) to complete this operation.
4. The phone number and name of the newly added record cannot be identical to those of an existing record. Otherwise, the text **Exists** will be displayed after you enter the name and press the left soft key  (Ok).

2.12 Call Log Shortcut


In standby mode, you can quickly view the three call logs: outgoing call log (Dialed Log), received call log (Received Log) and missed call log (Missed Log).



- Press  to display the latest outgoing call. Press  to scroll through other outgoing call records
- Press  to display the latest received call. Press  to scroll through other received call records
- Press  to display the latest missed call. Press  to scroll through other missed call records

After the intended record is highlighted, you can press  to call the number. If the IP Phone function is pre-configured, you can press and hold  to call the number in IP mode.

To perform other operations for the highlighted record, press the left soft key  (Option). (Refer to Page 41 Call Log for more details)




2.13 Custom Functions Shortcut

1. In standby mode, press  to access the custom functions menu.



2. Press  to highlight the desired option: **Edit Message** (1), **Inbox** (2), **Game** (3), **Scheme** (4), **Calculator** (5), or **Calendar** (6). And then press the left soft key  (**Ok**) to access the option.


You can also access an option by pressing its corresponding number key.

2.14 Current Profile Shortcut

In standby mode, press  to access the menu of the current profile. Press  to highlight the desired option. And then press the left soft key  (**Ok**) to access the option.

2.15 Vibration Shortcut

In standby mode, press and hold  to set the ring mode for incoming calls, short messages, or alarms to vibration, and set the keypad tone and folder tone to “Off”.  will be displayed.





- Press and hold  again to resume ring mode, keypad tone and folder tone in the current profile
- For detailed operations, see page 45 Ring Mode

3. PHONE BOOK (NAMES)

You can store the frequent used phone numbers and names in the memory of the phone (phone book). UT611's phone book can store up to 200 entries. Each entry may contain a name, a phone number and group information.

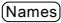
If the PIM card has been inserted in the phone, the card can store the phone book too. Each entry may contain a name and the phone number (the number of phone book entries is decided by the PIM capacity).


You can enter the phone book in either of the following two ways:


- In standby mode, press the right soft key  (**Names**)
- In standby mode, press the left soft key  (**Menu**). Then press  to scroll to **Phone book** and press the left soft key  (**Ok**)


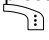


From the phone book menu, you can select from the following options:

3.1 Search

 → **Search**



After accessing this option, the prompt **Name** will be displayed. Key in the name that you want to search, or the first character(s) of the name (also refer to page 68 Input Method). And then press the left soft key  (**Ok**). The phone will search through the records in the phone book, and if found, highlight the matched name.



-  means the searched record is stored in the PIM card.
- If no names match the entered characters, the entry most similar to the searched character(s) will be highlighted. If no characters are entered, the phone will highlight the first entry in the phone book.

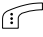
- You can press  to scroll through other names, or press the right soft key  (**Exit**) to return to standby mode.
- If no records are stored in the phone book, **No Record** will be displayed.
- If a matched name is highlighted, you can press  to call the corresponding phone number, or press and hold  to call the number in IP mode (if the IP Phone function is pre-configured)

3.1.1 Quick Search

You can press number keys  ~  to quick search names from the phone book entry list. A quick search operates as follows:

- When the key is pressed once, all names that start with the first character of the key will be displayed. And one of the records will be highlighted.
- Press  ~  once to display the first corresponding letter. Press twice to display the second corresponding letter and so on.
- When the key is pressed, if there is no corresponding letter in the book of that key, the phone will display the letters in order, and highlight the corresponding name of the most similar letter of that key and so on.

When an entry (name) is highlighted, press the left soft key  (**Details**) to see the detailed information: name, phone number and associated group category. You can press  to browse through the text.

When the entry details are displayed, you can press the left soft key  (**Option**) to select from the following options:

3.1.2 Edit

Modify names, numbers and group categories by following the screen prompts.



3.1.3 Delete Entry



After this option is selected, the text “**Delete?**” will be displayed.

3.1.4 Copy to PIM (Copy to Phone)

This function does not work if PIM card has not been inserted in the phone.

If the record is stored in the phone, you can use this option to copy the record to PIM card. If the record is already stored in the PIM card, “**Copy to Phone**” is displayed. The record is then copied to the phone.

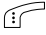

Press  to select “**Keep Initial Record**”(The former record is still kept after copying) or “**Delete Initial Record**”(The former record is deleted after copying). Then press  (OK). The new record will be displayed



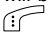



If you need to copy the record from PIM card to the phone's phone book, press  to select desired group information. Then press  (OK).

3.2 Add Entries

 → **Add Entry**

Select this option to add new entries into the phone book. The address of the new entry is decided by the selected current memory (refer to page 30 Current Memory).

1. Key in the name, and press the left soft key  (Ok). You can input a maximum of 12 English or 6 Chinese characters.
2. Enter the phone number (24 digits maximum), and press the left soft key  (Ok). The phone number cannot be left blank. Otherwise **Number Error** will be displayed.

3. Press  to highlight the desired group category: **Family**, **Friend**, **Colleague**, **Classmate**, **VIP**, **Partner**, **Others**, or **Blacklist**. Press the left soft key  (**Ok**) to complete the operation.
- If the new entry is stored in the PIM card, do not assign the entry any group category, just do it after step 2.
 - If the name is not filled in, the phone will use the first 12 digits from the phone number as the name.
 - The phone number and name of the newly added record cannot be identical to any of those existing records. Otherwise, the text **Exists** will be displayed after you enter the name and press the left soft key  (**Ok**)
 - The phone will automatically reject any incoming caller whose number is on the **Blacklist**. No response will be displayed. (Caller ID service needs to be activated)
 - No more entries can be added if the phone book memory and PIM card are both full. When **Add Entry** is selected, “**Memory Full**” is displayed.
 - In standby mode, you can add a new entry by entering the phone number and pressing the left soft key  (**Save**). Then, enter the name and press the left soft key  (**Ok**). After assigning the entry group category and press the left soft key  (**Ok**) to complete the operation

3.3 Delete Entry




 → **Delete Entry**

You can select from the following options to delete entries one by one or all at once.

3.3.1 Delete One by One

Names → **Delete Entry** → **One by one**


When you access this option, the phone book entry list will be displayed.

Press  to highlight the to be deleted entry. Then press the left soft key  (**Delete**). When "**Delete?**" is displayed, press the left soft key  (**Ok**) to complete the deletion.

3.3.2 Delete All

Names → **Delete Entry** → **All**

When you access this option, the prompt **Enter Code** will be displayed.

Enter the security code, and press the left soft key  (**Ok**). If the code is correct, all the phone book entries will be deleted. Otherwise **Code Error** will be displayed.

Delete All PIM

Delete all the phone book from the PIM card (Refer to Page 28 Delete All)



3.4 Group Info

Names → **Group Info**

After accessing this option, select **Family**, **Friend**, **Colleague**, **Classmate**, **VIP**, **Partner**, **Others**, or **Blacklist**. Then, you can select one of the following options:



3.4.1 Browse

When you access this option, the list of entries in the selected group category will be displayed.

Press the left soft key  (**Details**) to view the highlighted entry. Press the left soft key  (**Option**), and select **Edit**, **Delete Entry** or **Copy to**

PIM.**3.4.2 Ring Tone**

Select this option to specify a ring tone for that group category.



Press  to highlight and sample the ring tone option. Then press the left soft key  (**Ok**) to complete your selection.

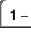

Blacklist only has a **Browse** function since the phone will automatically reject any call from this group. So, it is not necessary to set a ring tone for the **Blacklist** group.




There is no desired group information in the phone book of PIM card. You could not see the record(s) of PIM card when you browse each desired group.


3.5 Speed Dialing

Names → **Speed Dial**

For convenience, select this option to assign a phone number in the phone book to one of the speed dial keys  ~  while dialing.

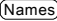
After you access this option, the setting status for the speed dial key #1 () will be displayed. Press  to browse the speed dial key settings.

- If no phone number is assigned to the key, **Unset** will be displayed. Press the left soft key  (**Set**). The phone book entry list will be displayed. You can input your desired phone number. Or press the left soft key  (**search**) to get the information you need (If there are no entries in the phone book, **No Record** will be displayed). Press the left soft key  (**Ok**) to assign the number to the key.
- If a phone number has been assigned to the key, the corresponding name and group category will be displayed. To change or cancel the

setting for this key, press the left soft key  (**Option**), and then select **Edit** or **Cancel**.

- If the record for a speed dial key is modified in the phone book, the speed dial key wouldn't change its setting.

3.6 Memory Setting



 → **Memory**


You can set the current memory, or browse the stored record stored in the phone and PIM card.

3.7 Current Memory



From this option, you can select the address of newly added record.

If PIM card is first selected, the newly added information will be automatically stored in the PIM card. If the PIM card is full, the newly added information will be automatically stored in the phone. If the phone is first selected, the newly added information will be automatically stored in the phone. If the phone is full, the newly added information will be automatically stored in PIM card.

Press  to select memory machine. Press  to complete the operation.

If there is no PIM card in your phone, when you select "**PIM first**" and press , "**PIM Unavailable**" will be displayed.

Memory Capacity

From this option, you can check the current memory size of the phone or PIM card. Press  to select "**Phone**" or "**PIM**", and then press  to browse.


3.8 Copy phone number

 - **Copy Phone Number**




All the phone numbers in the PIM card can be copied to the phone. And all the phone numbers of the phone can be copied to the PIM card. Press



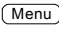
(Option), and then press  (OK) to copy, “Coping” is displayed.

- If there is no enough memory to finish the copy, the phone will promote you to copy part of the phone numbers or not at all.
- When the phone is coping, if the name and numbers are the same between those in phone and PIM card, the phone will automatically skip and count them already in. But the phone will not tell the user.
- When copying is on progress, any incoming call will be automatically rejected. After finishing coping, you will get reminded about the incoming call(s).
- When copying is on progress,, if it is time to ring the bell, the ring will be canceled.
- For some uncommon conditions, for example, the PIM card is loosen, the copying will stop and “Please Insert PIM” will be displayed. Now only hold and press  to turn off the phone. Other keys will not work.
- When you make copy from PIM card to the phone, you need to select one desired group first, and then make all the records in the PIM card to this group. You can reselect the group information by modifying the record one by one.

4. MENU

In standby mode, press the left soft key  (**Menu**) to access the menu. Press  to select the desired submenu and press the left soft key  (**Ok**) to access the submenu

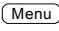
4.1 SMS



 Menu → SMS


Select this submenu to read, edit, save and send short messages.

The Short Message Service (SMS) requires network support. Please consult your local service provider for assistance.

4.1.1 Edit Message







 Menu → SMS → Edit Message

After you access this option, the last edited message will be displayed. You can modify or delete it by pressing and holding the right soft key  (**Clear**) and re-entering a new message (up to 58 Chinese or 116 English characters). Then, press the left soft key  (**Option**), and select **Send** or **Save**.

- The message cannot be empty. Otherwise **Empty** will be displayed when you press the left soft key  (**Option**)






Send

After selecting this option, you can send the message in the following two ways:

- Key in the receiver's phone number, and press the left soft key  (**Send**) or the  key to send the message
- Press the left soft key  (**Search**) to access the phone book entry list. Highlight the desired entry and press the left soft key  (**Ok**). The corresponding phone number will be displayed. Press the left soft key  (**Send**) or the  key to send the message.


Send by Group

From this option, you can send short messages to multiple persons (at most 5).

Press  to select receiver's code. Then press left soft key  (**OK**), and get the number list. For how to input numbers (Refer to Page 32 Send). After inputting one number, press  (**OK**). Then go back to number list. Continue pressing  to select receiver's code. After inputting all the numbers, press  to send.



Save

After you access this option, the message will be saved in Draft.









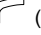
- Draft can store a maximum of 10 messages. If it is full, when you select "**Save**" to store a newly edited message, "**Update?**" Will be displayed. You can press the left soft key  (**Ok**) to overwrite the oldest message.

4.1.2 Inbox

 → **SMS** → **Inbox**

When a new message is received, the message tone will sound. And the  indicator will be displayed. After a new message is received in standby mode, press the left soft key  (**View**) to access the Inbox message

list.

- The Inbox can store up to 100 messages. When the Inbox has 99 messages, the incoming 100th message will make the  indicator flashing. If the Inbox is full, when a new message is received, the phone will replace the oldest unprotected message with the newly received message. To avoid losing important messages in the Inbox, periodically erase some existing messages.
- When **Inbox** is highlighted, the number of unread messages will be displayed in the right upper corner of the screen. For example, **New5**. Press the left soft key  (**Ok**) to access the message list, which shows the message senders' phone numbers or names (if stored in the phone book). There is an icon in front of each message:  indicates the message has not yet been read;  indicates the message has been read,  indicates the message has been protected.
- Press  to scroll to the intended message, and then press the left soft key  (**Ok**). Press  to view the message contents, the sender and received time. Press the left soft key  (**Option**) to select from the following options:


Reply

Select this option to reply the message. The steps to reply to a message are similar to those in Edit Message..

Forward



After accessing this option, you can edit and forward the message.

Delete

When you access this option, "**Delete?**" will be displayed. Press the left soft key  (**Ok**) to complete the deletion.

If the message is to be protected, "**Protect Message**" will be displayed. Unprotect the message first, and then delete the message.




Call Back

After you access this option, the sender's phone number will be displayed. Press the right soft key  (**Clear**) and number keys to change the number, and then press the left soft key  (**Ok**) to call the number.

Set protection



After you access this option, you can set message to be protected in order to avoid deleting some important messages.

Up to 50 messages can be protected in your phone.

After the message is protected,  is displayed when you browse the short message list. After reading the protected message, press the left soft key  "**Cancel Protection**", then press the left soft key  (**OK**) to cancel the protection for this message.

When the memory of the phone and PIM card are both full, if a new short message is coming, the oldest unprotected message will be replaced. If the protected messages do not cancel the protection, the messages could not be deleted.



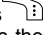


Get Number

After accessing this option, you can get the phone number (5 ~24 numbers) from the short message. The first three numbers of the message content are displayed. Press  and then press  (**store**) to store the number to the phone book.

Save Number

Select this option to edit the sender's phone number and store it to the phone book.

After accessing this option, edit the phone number and press the left soft





key  (**Ok**). Follow the prompts to key in the name and press the left soft key  (**Ok**). The number of the sender is displayed. Press  (**Clear**), and key numbers to change the phone number. Then press the left soft key  (**OK**) to highlight the desired group category and press the left soft key  (**Ok**) to complete the operation.

4.1.3 Outbox

 → **SMS** → **Outbox**

The latest 100 messages you have sent are stored in the Outbox.

When **Outbox** is selected, the sent message list will be displayed (if there are no message in the Outbox, **No Record** will be displayed). The list shows the receivers' phone number(s) or name(s) (if stored in the phone book). Messages are listed chronologically; the most recently sent message will be highlighted at the top of the list.

Press  to reach the desired message and press the left soft key  (**Ok**) to read the message. And press  to view the message contents, the receiver and the sending time. Press the left soft key  (**Option**) to select from the following options:

Delete

When you access this option, "**Delete?**" will be displayed. If the message is protected, "**Message protected**" is displayed. Canceled the protection first, and then complete the deletion.

Forward

After accessing this option, you can edit and forward the message. The steps to forward a message are the same as those for "Edit Message".

Set Protection (Cancel protection)

After accessing this option, you can set protection to the message in order

to avoid deleting some important message. The steps to set and cancel protection for a message are the same as those for “Edit Message”.

4.1.4 Draft

 →SMS→Draft

Up to 10 edited messages can be stored in Draft.


When you access the **Draft** option, the draft message list will be displayed (if there are no message in Draft, **No Record** will be displayed). Press



to highlight the desired draft message and press the left soft key



(**Ok**) to read it.

While reading the message, you can press the left soft key  (**Option**) and select from the following options:

Edit

Select this option to edit the draft message. See “Edit Message” for details.

Send

Select this option to send the draft message. See “Send” under the (Edit Message) option for details.


After the message has been sent, it will be deleted from the Draft.

Send By Group

Select this option to send the draft messages. See page 33 “Send by Group” under the (Edit Message) option for details.

After the message has been sent, it will be deleted from the Draft automatically.

Delete

When you access this option, “Delete?” will be displayed. Press the left soft key  (Ok) to complete the deletion.






4.1.5 PIM Box

 →SMS→PIM Box

If selecting the address of message (refer to page 39 Memory), please select the PIM card first. And then all the received messages will be stored in the PIM card. If the PIM card is full, the newly coming message will be stored in the phone book.

The number of stored messages in PIM card is decided by the PIM card's capacity.


If there is no PIM card in your phone, “PIM unused” is displayed when you try to use this function.

After accessing PIM card, press  to browse, read and delete messages.  indicates the message has not been read.  indicates the message has already been read.  indicates the messages have already been sent.  indicates the messages have not to been sent.

4.1.6 Clear

 →SMS→Clear

After accessing the **Clear** option, you can perform the following functions:

Clear Inbox, Clear Outbox, Clear Draft, Clear PIM, or Clear All. Follow the promotes and key in the security code. And press the left soft key  (OK) to complete the deletion. If the messages are set to protection, the phone will reminder you that by reminding you “**Are you going to delete all the messages**”.



4.1.7 Memory

Menu → SMS → Memory

Select this option to view the Inbox/Outbox/Draft capacity, including the number of stored messages and the capacity.

4.1.8 Store Address

Menu → SMS → Store Address

After accessing this option, you can select the address for incoming messages. Press  to select, and press the left soft key  (OK).

If you select “**Phone first**”, the new messages will automatically be stored in the phone. If the phone is full, the coming messages will be stored in the PIM card. If the phone and PIM card are both full, the oldest unprotected message of the phone will be deleted automatically.

If selecting the PIM card first, the new message will be automatically stored in the PIM card. If the PIM card is full, the coming message will be stored in the phone automatically. If the phone and PIM card are both full, the oldest unprotected message of the phone will be deleted automatically.

To avoid deleting important news, when the phone and PIM card are both full, please clear them immediately.




If there is no PIM card in the phone, you could not use the option “**PIM First**”. And “**PIM Unused**” is displayed.


4.1.9 Security

Menu → SMS → Security

After accessing this option, you can set security code to your Inbox, Outbox and PIM card to avoid other people reading your messages.

You should input your correct security code of your phone (Refer to page

55 "Set Security"). Press the left soft key  (**OK**) to select the box (you can select the Inbox, Outbox or PIM card), press the left soft key  (**OK**). Then select the "ON"/"OFF" for the security box, press the left soft key  (**OK**) to complete the operation.

When you access the security box, you need to input the correct phone security code first, then press  (**OK**) and browse the message lists.

4.2 Call Log

Menu → Call Log


Your phone will record recent missed, received and dialed calls as well as their call durations.

In standby mode, you can press ,  or  to quickly access the Missed Log, Received Log or Dialed Log.



4.2.1 Missed Log


This option enables you to view the last 20 missed calls.

After you access this option, the phone will display the information of the most recent missed call **Missed 1** including the caller's phone number or name and group category (if the number is stored in the phone book).

Press  to view other missed calls.


This function only works in networks that support Caller ID service. Otherwise **No Caller ID** will be displayed in the missed log. If the caller's phone is set to block the caller's number, **No Caller ID** will also be displayed.



When viewing a log, you can dial the caller's phone number by pressing . If the IP Phone function is pre-configured, you can press and hold  to call the number in IP mode.

When a call log is displayed, press the left soft key  (**Option**). The following options will be available:

Edit Number

After you access this option, the caller's phone number will be displayed. You can edit the phone number, and then save or dial the edited number:

After accessing this option, edit the number first (Press  to dial the

number), press the left soft key  (**OK**), key in the name, then select the desired group category to save. When you save the number, the phone number and name cannot be identical to any of the existing phone book entries. Otherwise, the text **Exists** will be displayed after you enter the name and press the left soft key  (**Ok**).


If the PIM card has been inserted in the phone, you can save the record to the PIM card. The storing address is decided by current memory capacity. If the record is stored in the PIM card, you do not need to assign it one group.

If **No Caller ID** is shown in the log, when you select **Edit**, **Number Error** will be displayed.

Time

Select this option to view the time the call came in.

Delete

When you access this option, “**Delete?**” will be displayed. Press the left soft key  (**Ok**) to complete the deletion.



4.2.2 Received Log


The option and operation are similar with “Missed Log”. Only one option “Duration” is added. Select this option to view the duration of the received call.

4.2.3 Dialed Log

This option enables you to view the latest 20 dialed calls.



If you dialed one number several times, the phone will display the information of the most recent call.

When viewing a log, press  to call the dialed phone number. If the IP Phone function is pre-configured, you can press and hold  to call the

number in IP mode. Press  (**option**), you can select to edit number, call time, to delete recording, duration. Please refer to Received Log.



4.2.4 Delete Log

This option enables you to delete all missed calls, received calls, dialed calls, or to delete all call logs.

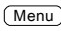
- If you select **Missed Log**, **Received Log** or **Dialed Log**, the text “Delete?” will be displayed. Press the left soft key  (**Ok**) to complete the deletion.
- If **Delete All** is selected, follow the prompts to enter the security code and press the left soft key  (**Ok**) to delete all the call logs. If the security code is incorrect, **Code Error** will be displayed.

4.2.5 Duration

This option enables you to view the approximate duration of received calls, dialed calls, or the duration of all calls.

To clear the timer, press the left soft key  (**Reset**). The text “Reset?” will be displayed. Press the left soft key  (**Ok**) to complete the operation.

4.3 Profiles

 → Profiles

This submenu enables you to customize the phone alert settings, such as ring volume, ring mode, and ring tone.

When you access this submenu, the profile list will be displayed. The current profile will be highlighted. You can customize each profile, and activate the one that suits your environment. The phone will utilize all the current profile's settings.

Standard is the factory-preset profile.

4.3.1 Standard


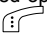
 → Profiles → Standard

Enable

Select this option to activate the selected profile.

Set

This option enables you to change the selected profile's settings.

When you press  to browse the options, the setting of the highlighted option will be displayed in the adjacent bubble. Press the left soft key  (**Ok**) to access the highlighted option.


Ring Volume

Select this option to adjust the ring volume for incoming calls, new messages and the alarm clock.

There are five volume levels. Press  to adjust and press the left soft key  (**Ok**) to complete the operation.



Ring Mode

This function enables you to define how the phone will notify you of incoming calls, new messages and the alarm clock. The available options include: **Ring**, **Vibration**, **Vibration And Ring**, **Ring After Vibration** and **Mute**.

If the Ring Mode is set to **Vibration**, **Vibration And Ring**, **Ring After Vibration**, when one of these profiles is used,  is displayed.

- For the short message's ring mode, if the ring mode is set to **"Mute"**, the alarm tone will be deactivated. Other options will activate the alarm tone (**Vibration or Ring**).
- If the Ring Mode is set to **"Mute"**, the alarm tone will be deactivated. Other options will activate the alarm tone.
- If the Ring Mode is set to **Vibration** or **Mute**, the low battery alarm function will be deactivated. Other options will activate the low battery warning function

Ring Tone

This option enables you to select a special electronic ring tone or melody for incoming calls. Press  to scroll through the ring tones and listen to a sample for each tone. After highlighting the desired ring tone, press the left soft key  (**Ok**) to complete the operation.

Message Tone

Select this option to specify the incoming message alert tone.

Alarm Tone

This option enables you to select an alarm tone for the alarm clock.

Keypad Tone

Select this option to set the tone the phone sounds when you press the

phone's keys. Four options are available: **Standard KeyTone**, **Key Music**, **Key Voice** and **Off**.

Alert Tone

If this function is activated, a warning tone will sound when the phone is outside of the service area range or a network handover occurs during a call. Select **ON/OFF** to activate/deactivate this function.

Folder Tone

If this function is activated, a tone will sound when the flip cover is opened or closed. Three options are available: **Standard Folder cover Tone**, **Folder Music**, and **off**.

Whisper Mode

This function enables you to lower your speaking voice in an environment unsuitable for normal conversation without reducing the quality of phone call for the other party.

4.3.2 Meeting

Menu → Profiles → Meeting

This profile is suitable for meeting environment. You can preset this option to meet your needs by following the same steps specified in "Standard".

4.3.3 Outdoor

Menu → Profiles → Outdoors

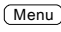
This profile is suitable for outdoor environment. You can preset this option to meet your needs by following the same steps specified in "Standard".

4.3.4 User Define

Menu → Profiles → User Define

This profile can be tailored for other environment. You can preset this option to meet your needs by following the same steps specified in "Standard".

4.4 Settings

 → Settings

From this submenu, you can perform various phone settings.

4.4.1 Own Number

 → Settings → Own Number

Select this option to view the phone's number. You can edit or change the phone number.

4.4.2 Scheme



 → Settings → Scheme

When this option is highlighted, the current setting will be displayed in the adjacent bubble. After accessing this option, you can select from the following:

Static Picture

The standby display will become static after you set this option.

After this option is selected, its current setting will be highlighted. To customize text and display it in standby mode, select "**None** (No standby mode) or select and display a picture in standby mode, select from the options **Photograph1~Photograph24**.

- If one of the options **Photograph1~Photograph24** is selected, the corresponding picture will be displayed. You can press  to browse other pictures. When the desired picture is displayed, press the left soft key  (**Ok**) to complete the operation.

Every Hour

The standby display will change every hour in a 24-hour cycle after you

set this option. When this option is accessed, the following will be available:

Default


The standby display will change every hour in the default picture sequence.

User Edit

This option enables you to specify the picture or text for each hour (**Picture1~Picture24**).

Select from the options **Picture1~Picture24**, and then edit text or select a picture by following the same operations specified in “Static Picture”. Default pictures will remain for unedited options.

Change Preview

Select this option to preview the current setting for **Every Hour**. You can press the left soft key  (**Replay**) to re-preview the pictures or text.

Every 3 Hours

The standby display will change every three hours in a 24-hour cycle after you set this option. Follow the same operations specified in “Every Hour”.


Every Day


The standby display will change every day in a 7-day cycle after you set this option. Follow the same operations specified in “Every Hour”.

4.4.3 Date/Time

 → **Settings** → **Date/Time**


This option enables you to set the phone's date and time. When you highlight this option, the current date and time will be displayed in the adjacent bubble.

After accessing the option, enter a date from 2000-01-01 to 2049-12-31. And then enter the time in 24-hour format. Press the left soft key  (OK) to complete the operation.

- When you key in the date or time, you can press  to move the cursor and modify the number.
- The cursor will advance if the number entered is valid. Otherwise, the phone will sound an error tone (if the Keypad Tone is not set to "Off")

4.4.4 Alarm

 → **Settings** → **Alarm**

This function enables you to set the alarm for a specified time. Once activated, the alarm indicator  will be displayed.

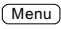
- When the preset alarm time expires, the phone will sound the alarm. An alarm icon and the current time will be displayed. The alarm will sound for 30 seconds unless you dismiss it.
- To dismiss the alarm and return to standby mode, press any key or close the flip cover. Flipping open the phone will not stop the alarm.
- If the alarm time expires during a call, the alarm will not sound.
- The alarm still works when the phone is turned off.


When you highlight one of the following options, its current setting will be displayed in the adjacent bubble. You can set the alarm function by observing the following operations:



On/Off

After accessing this option, select **ON/ OFF** to activate/deactivate the alarm function.

Set Time

 → **Settings** → **Alarm** → **Set Time**

Select this option to set the alarm time. Enter the time in 24-hour format, and then press the left soft key  (Ok) to complete the operation.


- When you key in the time, you can press  or  to move the cursor and modify the number
- The cursor will advance if the number entered is valid. Otherwise, the phone will sound an error tone (if the Keypad Tone is not set to "Off")

Repeat Type

This option enables you to set the alarm period.

Once

The alarm sounds only once. The setting will only be valid for 24 hours after the alarm function has been activated and the alarm time has been set.

After the alarm stops, the alarm function will be deactivated. The  indicator will disappear.

Everyday

The alarm sounds every day at the preset time.

Mon. ~ Fri.

The alarm sounds at the preset time on weekdays.

Mon. ~ Sat.

The alarm sounds at the preset time from Monday to Saturday.

Every Sat.

The alarm sounds at the preset time every Saturday.

Every Sun.

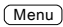
The alarm sounds at the preset time every Sunday.

Snooze

If this function is activated, the alarm will repeat 3 times at 5-minute intervals after the original alarm time expires.



You can select **ON/OFF** to activate/deactivate this function.

4.4.5 Answer Mode




 → **Settings** → **Answer Mode**

This option enables you to select how to answer an incoming call.



Flip Key

- Flip open the phone to answer an incoming call.
- If the flip cover is open when there is an incoming call, press the left soft key  (**Answer**) or the  key to answer the call.

Any Key

Press any key to answer an incoming call except for the right soft key , the  key and the  key.

Talk Key

Press the left soft key  (**Answer**) or the  key to answer an incoming call.

4.4.6 Language

 → **Settings** → **Language**

This option enables you to select the phone's text display language. When you highlight this option, the current language setting will be displayed in the adjacent bubble.

You can select **Simplified Chinese** or **English**.

If you select **English**, the phone will set the default inputting method to English (while the inputting method is “ON”, and refer to “Inputting settings”).

If you select **Simplified Chinese**, the phone will set the default inputting method to simply PINYIN. If the corresponding inputting method is “OFF”, the defaulted inputting method will be the next available inputting method.

4.4.7 Display

Menu → **Settings** → **Display**

You may set the display for the LCD screen as follows:

Backlight

Menu → **Settings** → **Display** → **Backlight**

When you highlight this option, its current setting will be displayed in the adjacent bubble.

If the Backlight is not set to **OFF**, the LCD screen and keypad will light when you press keys or the phone receives a call or message.

The following options are available:

OFF

Select this option to deactivate the backlight.

Battery Saving




In this mode, the backlight will last for 5 seconds after the last keystroke.

Normal

In this mode, the backlight will last for 15 seconds after the last keystroke.


Contrast

Select this option to adjust the LCD's contrast.






There are six contrast levels. Press  to increase or  to decrease the contrast. The screen display will reflect the contrast setting. After reaching the desired contrast level, press the left soft key  (**Ok**) to complete the operation.


4.4.8 IP Setting

 → **Settings** → **IP Phone**

This option enables you to configure the IP Phone function. After you set this function, you can make an IP call by pressing and holding  (see "Make an IP Call"). This function requires network support.



After accessing this option, observe the following steps;

1. Enter the IP access number (**Access No.**) and the language code, for example, "17908P1P". Press the left soft key  (**Ok**).
 - According to different response time from the network server, you can enter one or more pause symbols "P"s (each "P" means a pause for approximate 1.5 seconds) by pressing and holding  to coincide with the server's response time. A maximum of 14 digits (including "P"s) can be entered.
2. Enter the IP account number (**Accounts**), and then press the left soft key  (**Ok**).
 - According to the network requirements, if a "#" is required for the account number, you can simply press . You can also press and hold  to input the pause symbol "P". A maximum of 24 digits (including "P"s and "#s") can be entered.

3. Enter the password (**Password**) and press the left soft key  (**Ok**) to complete the IP Phone setting.

- Your input keystrokes will be encrypted and displayed with “*”. A maximum of 10 digits (including “P”s, “#”s and “*”s) can be entered.




Note: To cancel the IP Phone setting, follow the following steps. In each step, press and hold the right soft key  (**Clear**) to erase the input digits, and then press the left soft key  (**Ok**).

4.4.9 Set Security

 → **Settings** → **Set Security**


This option enables you to set the security level to protect your phone.

After accessing this option, you will be prompted to enter the security code. Key in the security code and press the left soft key  (**Ok**). If correct, the following options will be available (otherwise **Code Error** will be displayed):

Long Distance Lock

This function enables you to protect against someone using your phone to make a long distance phone call without permission. When this option is highlighted, its current setting will be displayed in the adjacent bubble.

After accessing this option, select **ON** or **OFF** to activate or deactivate.




- If this function is activated, the  indicator will be displayed. When you try to make a long distance call, **Long Distance Locked** will be displayed

PowerOn Code

If this function is active, the security code will need to be entered each time you switch on the phone. When this option is highlighted, its current setting will be displayed in the adjacent bubble.


Change Code

Select this option to change the security code. Observe the following steps:

1. When **New Code** is displayed, enter a new security code (0~6 digits long, using numbers 0~9). And then press the left soft key  (**Ok**). **Confirm Code** will be displayed.
2. Enter the new security code again and press the left soft key  (**Ok**) to complete the operation.
 - The security code is “888888” by default.
 - If the new security code entered in step 2 is different from that entered in step 1, when you press the left soft key  (**Ok**), **Not Matched** will be displayed
 - To avoid any inconvenience, please remember the new security code.

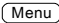
Reset All

Select this option to restore your phone's default settings.





When you access this option, “**Reset All?**” will be displayed. Press the left soft key  (**Ok**) to complete the operation.

This operation will not delete the phone book entries, short message records, or call logs. It cannot change the phone's date and time either.

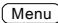
4.4.10 Input Method

 → **Settings** → **Input Method**

In addition to digital input method, the phone supports four kinds of input methods including PinYin, Sim Stroke, English, Letter and Number. You can choose to activate/deactivate these five methods. Consequently, on the character input interface (such as writing messages and inputting phone book entry names), you can switch between the activated input methods and digital input method.

After you access this option, press  to highlight the intended input method option. The current setting will be displayed in the adjacent bubble. Press the left soft key  (**Ok**) to access this input method option, and then press  select **ON** or **OFF** to activate or deactivate, press  (**Ok**) to complete this operation.

4.4.11 Call Forwarding

 → **Settings** → **Call Forwarding**

Through this option, you can set the phone to forward incoming calls to the specified phone number.

This function requires network support.


After accessing this option, the following will be available:

Unconditional

 → **Settings** → **Call Forwarding** → **Unconditional**

This function enables you to have all incoming calls forwarded to the specified phone number. The service provider has preset the access number to activate/deactivate this function. You can perform activation/deactivation directly.

Register

When you access this option, enter the forwarding number (15 digits maximum) at the phone prompt. And press the left soft key  (**Ok**). The phone will automatically make calling connections with the network and will display the outgoing number.

When the connection is successful, the phone will prompt you to listen to the instruction. Listen carefully to determine whether Unconditional call forwarding has been successfully activated and follow the voice prompts.

- The forwarding number cannot be left blank. Otherwise **Number Error** will be displayed
- If the service provider presets the activating access number “*57*”, the outgoing number displayed during the calling connection is comprised of “*57 forwarding number #” This outgoing call will not be recorded in the Dialed Log.

Cancel

After you select this option, the phone will initiate a call to the network and display the outgoing number. When the connection is successful, the phone will prompt you to listen to the instruction. Listen carefully to determine whether Unconditional call forwarding has been successfully deactivated and follow the voice prompts.

- The outgoing number displayed during the calling connection is the deactivating access number preset by the service provider (for example “#57#”). This outgoing call will not be recorded in the Dialed Log

No answer

If you activate this function, when there is an incoming call that remains unanswered for a period of time, the call will be forwarded to the specified phone number. See “Unconditional” for details.

Busy

If you activate this function, when another call comes in during a call, the incoming call will be forwarded to the specified phone number. See “Unconditional” for details.

Unreachable

If you activate this function, when the phone is switched off or outside of the service area range, incoming calls will be forwarded to the specified phone number. See “Unconditional” for details.

4.4.12 Pin Setting

Menu

-Setting-Pin Setting

Please insert the PIM card first before you do this operation.

In order to protect PIM card and avoid losing your personal information, you need to set Pin code for your phone:

Protect Pin Code

If you set your Pin Code active and the PIM card has been inserted in your phone, you need to input the correct Pin Code when you set your phone on (Change your PIN code). Then the phone is in standby time

Press  to select Pin On and Off, press the left soft key  (OK)






*The local service providers might have different rules for the PIM. If you could not turn off **Protect Pin Code** function, please contact your local service provider.*

Change Pin Code


When you set **Protect Pin Code** off, you could not change Pin Code. Please turn on the **Protect Pin Code** first, then change the pin Code.

Please ask the initial Pin Code when you buy the PIM card.

After you access this option, "Please Insert Pin Code" is displayed, enter the initial Pin Code. Press the left soft key  (OK). Then enter new Pin Code, and press the left soft key  (OK) again. Then repeat the Pin Code to confirm, press the left soft key  (OK) to complete this operation.

Please remember your Pin Code. When you turn on the phone or change your Pin Code, the PIM card is locked if you continually enter wrong Pin code three times. After 2 seconds, "Please Input PUK" is displayed. Please contact your local service provider and get **PUK** Code, and enter right **PUK** code to unlock the PIM.

Menu

If you continually enter wrong PUK code ten times, the PIM card will be damaged and other keys will not work either. You need hold and press  to turn off the phone. Please contact your local service provider immediately.

4.5 Tools













Menu → Tools

From this submenu, you can use the Calculator or view the Calendar.

4.5.1 Calculator

Menu → Tools → Calculator

This function enables you to add, subtract, multiply and divide.

- The screen will initially display the number "0". Enter the first number to be calculated.
 - To enter a minus sign, press  (only the first number can be made negative); to enter a decimal point, press 
- Press , , , , to enter the plus, minus, multiplication or division signs respectively.
- Enter the second number.
 - To enter "0", press  and  "0.0" will be displayed
- Press  to display the calculation result.
 - To conduct further calculations from this result, repeat steps 2~4
- When starting a new calculation, if the result from the last calculation is not "0", press the right soft key  (**Clear**) to initialize.
 - To delete the character you just entered, press the right soft key  (**Clear**); to erase all entered characters, press and hold the right soft key  (**Clear**)
 - A maximum of 9 digits (including minus sign and decimal point) can be entered at one time




- If the formula violates mathematical principles (for example, 5/0), **Error** will be displayed
- If the absolute value of the calculation result exceeds 999,999,999, **Overflow** will be displayed

4.5.2 Calendar


Menu → Tools → Calendar

This function enables you to view the calendar (solar or lunar) from January 1, 1900 to December 31, 2049. You can select from the following options:

Browse Date

- When you access this option, the solar calendar will be displayed with the current date highlighted.
- Press  to highlight the desired date. Press the left soft key  (**Lunar**) to view the lunar year, month and day for the highlighted date
- To return to the solar calendar display, press the right soft key  (**Exit**)

Select Date

When you access this option, you can enter a date, and then press the left soft key  (**Lunar**) to view the lunar year, month and day for the date.

4.6 Game





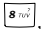

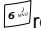
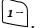





Menu → Game

There are 3 games available: Black-white Chess, Whammy, and BJK.

4.6.1 Black-white Chess

Menu → Game → Black-white Chess


The object of the game is to capture the rival's pieces by surrounding them horizontally, vertically or diagonally. The player with the most pieces at the end wins.

To move upwards, downwards, leftwards or rightwards, press , ,  or press (, , ,  respectively). To move diagonally, press , , ,  respectively. To place a piece, press the left soft key  or .

After you access this option, the following will be available:

Start Game

The piece with a dot in the middle is the latest piece placed by your rival (phone).

To quit the game, press the right soft key 

Set Level

Select **Easy** or **Difficult** to set the play level of the game.


Set First

Select **Player First** or **Player Second** to determine who goes first with black pieces.

Set Chess Manual



From **Chess Manual 1 ~ Chess Manual 10**, select one as the beginning array.

Game Rule

Select this option to view the rules of the game. Press  to scroll through the rules.


4.6.2 Whammy




 → **Game** → **Whammy**

Press key  ~  to hit the rat in the corresponding positions. The game is limited to 1 minute. Every time a rat is hit, one point is won. If your score breaks the record, it will be saved as the top score.

After you access this option, the following will be available:

Start Game

After accessing this option, press the left soft key  to start the game. The number displayed next to “S:” is the current score; the number below “T:” is the remaining time (in seconds).

- While playing the game, you may press the left soft key  to pause. To continue the game, press the left soft key  again
- To quit the game, press the right soft key 


Set Speed

Select **Slow**, **Medium** or **Fast** for the game speed.

Game Score

This option enables you to view the top scores based on the different speeds. If a speed that has not been selected, "-----" will be displayed.

Game Rule

Select this option to view the rules of the game. Press  to scroll through the rules.

4.6.3 BJK

 → **Game** → **BJK**

The player with cards valued closer to 21 wins. If your value exceeds 21, you lose.








After you access this option, the following will be available:

Start Game

From this option, you can select **Restart** or **Continue**.


Restart

Select this option to start a new game.

After accessing this option, press the left key  (**OK**), the desired chips are displayed, press  to move the cursor to the desired chips, and press the left soft key  to start the game. Press , , ,  to hit, stand, insure or double.

- The number behind **BANKER** refers to the holding of the banker; the number behind **PLAYER** refers to the holdings of the player; the number in the lower right corner refers to the player's bet. The value of the player's current cards is displayed above the player's bet

Menu

- To quit the game, press the right soft key  when the phone prompts you to chip in
- When the game starts, the player's current score is displayed on the player's bet.


Continue

If you exited the last game before it was over (i.e. each side's holdings did not equal 0), this option will be displayed. You can select this option to continue an unfinished game.

Game Score

This option enables you to view the records, including **Last Score** (your amount of holdings gained).

Game Rule

Select this function to view the rules of the game. Press  to scroll through the rules.

5. DATA FUNCTION


You can use 64K/32K internet access function or transfer data by connecting the phone to the computer via the DC 200 data cable.

Refer to *DC 200 Data Cable User Guide* for details.

6. INPUT METHOD

This phone supports five input methods, including PinYin, Sim Stroke, English, Letter and Digit in order to provide easy input for letters and digits in text editing mode. In addition, when editing short messages, you can choose to input punctuations, Emojis, common phrases, symbols or animations.

6.1 Switch Input Method

When you enter text-editing mode, the last active input method is displayed. Press  to switch between the input methods (see “Input Method” under the **Settings** submenu for details) and digit input method. The current input method indicator will be displayed at the lower left side of the screen; these include:


Input Method	Indicator
PinYin	eZiEN
Sim Stroke	eZiEN
English	eZiEN
Letter	A
Digit	1
















6.2 PinYin and Sim Stroke




These two input methods are only used for inputting Chinese characters.

6.3 English

The phone supports intelligent English input and word association, which greatly speed up the input process.



Switch the input method to English;  will be displayed at the lower left corner of the screen.

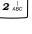
- To enter letters, press  ~  one time for the letters labeled on the respective key; a word matching the input letters will be displayed automatically.
 - When you enter the first letter of any English word, “*” will be displayed (except  and ). As you input letters, the phone will automatically associate the matched English words
 - If the letter input does not correspond with any English word in the phone’s dictionary, the key press will have no response
 - Press the right soft key  (**Clear**) repeatedly to delete letters from right to left
- Select a word and change upper/lower case: If the word displayed is not desired, press  to scroll through other word alternatives. Press  to switch between upper and lower cases; press once to capitalize the initial letter; press twice to capitalize all letters; press three times to return letters to lower case.
- Enter the selected word: Press the left soft key  (**Ok**) or  to confirm the selected word and to remove the underline; or press  to confirm the word and to add a space.
 - When no word is underlined, press  to enter a space; press  to switch input methods; press  to move the cursor; press the right soft key  (**Clear**) to delete the character to the left of the cursor; press and hold the right soft key  (**Clear**) to delete all characters

4. Enter symbols: When no word is underlined, press  to display the symbol list. Press  to highlight the intended symbol. Press the left soft key  to enter this symbol.





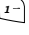



6.4 Letter





Switch to Letter input method; **A** will be displayed at the lower left corner of the screen.

1. Press  ~  to enter the corresponding letter labeled on the respective key. To input a letter, press the corresponding key repeatedly until the letter appears.


For example: if you press  repeatedly, the following letters appear in turn:




a → b → c → A → B → C
↑

- The letter just entered will be underlined. When the letter is underlined, press  to switch between upper and lower cases.
2. After you have entered the intended letter, press any other key on the keypad to input the next letter. If the next letter and current letter share the same key, press the left soft key  (**Ok**) or  to remove the underline, and then enter the next letter; or simply wait for one second to input again. Press  to confirm the current letter input and enter a space.
3. Enter symbols and spaces: After the underline disappears, press  to display the symbol list. Press  to highlight the intended symbol, and then press the left soft key  to enter this symbol. Press  to enter a space.

4. When no letter is underlined, press  to move the cursor; Press the right soft key  (**Clear**) to delete the character to the left of the cursor; press and hold the right soft key  (**Clear**) to delete all characters; press  to switch input methods.

6.5 Digit



Switch to digit input method;  will be displayed in the lower left corner of the screen.





To enter digits, press the corresponding number keys  ~ . Press  to switch input methods.

6.6 Input Methods in SMS

In addition to the above input methods, when editing short messages, you can choose to input punctuation marks, Emojis, common phrases, symbols or animations.


When editing a short message, press  to display the following options: **Punctuation, Emoji, Common Phrases, Symbols and Animation.**

If **Punctuation, Emoji, Symbols** or **Animation** is selected, press  to highlight the intended punctuation, Emoji, symbol or animation, and then press the left soft key  (**Ok**) to input.

If **Common Phrases** is selected, press  to highlight the desired phrase category and press the left soft key  (**Ok**). Press  to highlight the intended phrase and press the left soft key  (**Ok**) to input.




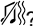

- After selecting **Common Phrases**, select the most common phrases, and then select the intended phrases to input.

Input Method

- Only one animation can be inserted into a short message and it will be displayed at the beginning of the message. You cannot delete an animation by pressing the right soft key  (**Clear**). To delete an animation, access the **Animation** option and select **no**

7. TROUBLESHOOTING

When using this phone, if you run into malfunctions, please refer to the following troubleshooting techniques before requesting help:

Symptom	Diagnosis	Solution
The phone cannot be switched on.	Have you pressed  and held it for more than 2 seconds?	Press and hold  for more than 2 seconds.
	Is the battery low?	Charge the battery.
	Is the battery connection correct?	Connect the battery connection
Cannot make calls.	Is the phone outside of service area range? Is there sufficient signal strength?	Move to an area with stronger signal.
	Is the phone number correct?	Enter the correct number to make the call.
No ring.	Is the ring mode of the current profile set to "Vibration" or "Mute"?	Select different ring mode or different profile.
	Have you pressed and held  in standby mode, displaying  ?	In standby mode, press and hold  again.
Strong interference noise during call; or call interrupted.	Is there an obstacle nearby that is preventing signals from passing?	Move to another area.
	Are you using the phone while moving at high speed?	Slow down or stop moving during call.

Troubleshooting

Symptom	Diagnosis	Solution
The battery cannot be charged. (The battery indicator bar does not scroll.)	Is the charger properly connected to the phone?	Connect the charger and phone correctly.
	Is the charger connected to a 100~240V AC wall outlet?	Connect the charger to a 100~240V AC wall outlet correctly.
When the phone is powered "Please insert PIM" is displayed	Do you insert SIM, UIM or other card that does not match your phone?	Please power off your phone and take the card out and turn on the phone .

If the malfunction symptoms are not listed in the above table, or the corresponding solution is invalid, please contact your local UTStarcom Customer Service Center.

For Technical Support and Assistance please visit the UTStarcom website at:

<http://www.utstar.com>

Select "Support" and be directed to the Toll Free number of the UTStarcom International Professional Service Regional Center that serves your area.

Or you can call the UTStarcom North America Professional Service organization at 1-(866) 663-3266.



UTStarcom, Inc. USA

1275 Harbor Bay Parkway Alameda, CA 94502, USA

Tel: 510-864-8800

Fax: 510-864-8802

<http://www.utstar.com>