

Proprietary Statement

UTStarcom Inc. has prepared this manual for use by customers, UTStarcom personnel, and licensees. The information contained herein is the property of UTStarcom Inc. and shall neither be reproduced in whole nor in part without prior written approval from UTStarcom Inc.

UTStarcom reserves the right to make changes without notice to the specifications and materials contained herein, and shall not be responsible for any damages caused by reliance on the material as presented, including, but not limited to, typographical, arithmetic, and listing errors.

Trademarks

All trademarks and service marks used in this document belong to their respective owners.

Warranty and Return Policy

Refer to the terms and conditions of the contract for warranty and return policy details.

Customer Service

Refer to the terms and conditions of the contract for customer service policy details, or call the local UTStarcom Facility. UTStarcom's Facilities are listed below:

U.S. Facilities and Operations

UTStarcom, Inc.

1275 Harbor Bay Rd.
Alameda, CA 94502, USA
Tel. 510 864 8800
Fax 510 864 8802

UTStarcom New Jersey R&D Center

33 Wood Avenue South 8th floor
Iselin, NJ 08830
Tel. 732 767 5200
Fax 732 548 1099

China Facilities and Operations

UTStarcom (China) Ltd.

4th Floor A&B, Beijing FuHua Tower
No. 8 Chao Yang Men Bei Da Jie,
Dong Cheng District, Beijing, 100027
P.R. China
Tel 86-10-6554-2030
Fax 86-10- 6554-2058

Zhejiang Unitel Telecommunications Equipment Ltd

3/4F Building 3 Yile Industrial Park
129 Wenyi Rd.
Hangzhou, 310012, P.R. China
Tel. 86-571-886-2314
Fax 86-571-886-2349

UTStarcom, Shanghai Office

Guang Dong UTStarcom Co. Ltd.

245 Tianping Rd. Jinguo Garden 803
Shanghai, 200030, P.R. China
Tel. 86-21-6433-6223
Fax 86-21-6433-6226

UST Guangdong Subsidiary

352 Tianhe Road, 21F
Guangdong, 510620, P.R. China
Tel. 86-20-8758-4025
Fax 86-20-89753-7411

UTStarcom (Hangzhou) Ltd.

118 Moganshan Rd. 2nd floor
Hangzhou, 310005, P.R. China
Tel. 86-571-880-0350
or 86-571-880-0369
Fax 86-571-805-6499

4 Yunshan Road East, North River Yunshan
Industry Zone
Huizhou, Guangdong 516001, P.R. China
Tel. 86-752-280-8868
or 86-752-280-8818
Fax 86-20-280-8838

Nantian UTStarcom Inc.

43 Tianmushan Rd.
Hangzhou, 310007, P.R. China
Tel. 86-571-2314
Fax 86-571-797-5149

International Facilities and Operations

UTStarcom, Singapore Office

ACTEL Communications
141 Middle Road #06-02
GSM Building, Singapore 188976
Tel. 65-334-6602
Fax 65-334-6606

UTStarcom, Thailand Office

For You Infosys Co., Ltd
47/15 Soi Lardprao 122
Bangkapi Bangkok 10310
Tel. 66-2-539-7140
or 66-2-934-0179 ext 80
Fax 66-2-539-7431

UTStarcom, India Office

W.S. Telesystems Limited
Dr. Brownamma Towers
11 Floor, 70/1, Mission Road
Bangalore - 560 027, India
Tel. 91-80-227-4444
Fax 91-80-222-5268

WARNING! FCC RF EXPOSURE COMPLIANCE

This PCS base station has been tested and complies with the Federal Communications Commission (FCC) RF exposure limits for General Population/Uncontrolled exposure environment. In addition, it complies with the following Standards and Guidelines:

- FCC 96-326, Guidelines for Evaluating the Environmental Effects of Radio-Frequency Radiation.
- FCC OET Bulletin 65 Edition 01-01 (2001) Supplement C, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- ANSI/IEEE C95.1-1992, IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- ANSI/IEEE C95.3-1992, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields - RF and Microwave.

Antenna Installation Requirement:

The antenna must be installed and located on a roof top site, pole, or building structure away from users and bystanders. It must be mounted in a manner to ensure that a minimum separation distance of 20cm is normally maintained between all users and bystanders.

Important Safety Instructions

- Read and follow all warning notices and instructions marked on the product or included in this document.
- This product is intended to be used with a three-wire grounding type plug - a plug that has a grounding pin. This is a safety feature. Equipment grounding is vital to ensure safe operation. Do not defeat the purpose of the grounding type plug by modifying the plug or using an adapter.

Prior to installation, use an outlet tester or voltmeter to check AC receptacle for the presence of earth ground. If the receptacle is not properly grounded, the installation must not continue until a qualified electrician can determine another method of grounding the equipment.

- Do not allow anything to rest on the power or line cords and do not located the product where the power or line cords could be stepped on.
- This product must be serviced only by a qualified service technician.
- Special cables, which may be required by the regulatory inspection authority for the installation site, are the responsibility of the customer.

- When installed in the final configuration, the product must comply with the applicable safety standards and regulatory requirements of the country in which it is installed. If necessary, consult with the appropriate regulatory agencies and inspection authorities to ensure compliance.
- A rare phenomenon can create a voltage potential between the earth grounds of two or more locations. If products installed in separate locations are interconnected, the voltage potential may cause a hazardous condition. Consult a qualified electrical consultant to determine whether this phenomenon exists and, if necessary, implement corrective action prior to interconnecting the products.
- Install this product in a location protected from humidity, dust, and extreme heat. This will ensure that internal parts are not damaged. If liquids are spilled on the product, contact a qualified service technician.
- Use this product only with UTStarcom approved or recommended adapters and batteries.
- Do not attempt to remove the cover. Contact a qualified service technician for servicing the product.

CONTENTS

| | |
|--|-------------|
| 1. INTRODUCTION TO THIS MANUAL | 1-1 |
| 1.1 ORGANIZATION | 1-1 |
| 2. GENERAL DESCRIPTION | 2-3 |
| 2.1 OUTGOING CALLS | 2-4 |
| 2.2 INCOMING CALL | 2-5 |
| 2.3 AUTHENTICATION | 2-6 |
| 2.4 HOOKING SIGNAL TRANSMISSION | 2-7 |
| 3. SYSTEM CONSTRUCTION..... | 3-9 |
| 4. INSTALLATION INSTRUCTIONS..... | 4-11 |
| 4.1 BEFORE BEGINNING | 4-11 |
| 4.1.1 Plan FSU Configuration | 4-12 |
| 4.1.2 Antenna Orientation | 4-12 |
| 4.1.3 Antenna Type Determination Guidelines | 4-13 |
| 4.1.4 Main Unit Site Selection | 4-13 |
| 4.1.5 Installation Accessories, Standard and Special Tools | 4-14 |
| 4.2 FSU CONFIGURATION INSTRUCTIONS | 4-15 |
| 4.3 COAXIAL CABLE INSTALLATION..... | 4-18 |
| 4.4 ANTENNA INSTALLATION | 4-20 |
| 4.5 MAIN UNIT INSTALLATION | 4-24 |
| 4.6 ANTENNA ORIENTATION ADJUSTMENT | 4-31 |
| 5. ACRONYM AND ABBREVIATION LIST | 5-33 |
| APPENDIX A : SPECIFICATIONS | A-1 |

FIGURES

| | |
|--|------|
| FIGURE 2-1 : OVERVIEW OF FSU IN AIRSTAR-WLL SYSTEM | 2-2 |
| FIGURE 2-2 : OUTGOING CALL | 2-3 |
| FIGURE 2-3 : INCOMING CALLS | 2-4 |
| FIGURE 2-4 : AUTHENTICATION | 2-6 |
| FIGURE 3-1 : FSU - MAIN UNIT | 3-7 |
| FIGURE 4-1 : FSU INSTALLATION FLOW CHART | 4-9 |
| FIGURE 4-2 : FSUJ MENU | 4-14 |
| FIGURE 4-3 : WLLSO SETUP SCREEN WITHOUT CONFIGURATION DATA | 4-15 |
| FIGURE 4-4 : WLLSO SETUP SCREEN WITH CONFIGURATION DATA | 4-16 |
| FIGURE 4-5 : STRIPPED COAXIAL CABLE | 4-17 |
| FIGURE 4-6 : FSU ANTENNA AND ACCESSORIES | 4-18 |
| FIGURE 4-7 : ANTENNA BRACKET ASSEMBLY | 4-19 |
| FIGURE 4-8 : ANTENNA MOUNTED ON POLE | 4-20 |
| FIGURE 4-9 : EATH CABLE CONNECTION | 4-21 |
| FIGURE 4-10 : COAXIAL CABLE CONNECTION TO ANTENNA | 4-22 |
| FIGURE 4-11 : FSU AND ACCESSORIES | 4-23 |
| FIGURE 4-12 : ANTENNA CABLE CONNECTION | 4-24 |
| FIGURE 4-13 : TELEPHONE CORD CONNECTION | 4-25 |
| FIGURE 4-14 : BACKUP BATTERY UNIT CONNECTION | 4-26 |
| FIGURE 4-15 : AC/DC ADAPTER CONNECTION | 4-27 |
| FIGURE 4-16 : AC OUTLET CONNECTION | 4-28 |
| FIGURE 4-17 : WALL MOUNTING | 4-29 |
| FIGURE 4-18 : FIXED SUBSCRIBER UNIT CONFIGURATION | 4-30 |

TABLES

TABLE 4-1 : ANTENNA TYPE DETERMINATION GUIDELINES4-11
TABLE A-1 : FSU SPECIFICATIONSA-3