




Waterproof Standard: IPX-8: withstands submersion to 10ft (3.05m)
File Formats: MP3, WMA, M4A, AAC
USB jack: USB 2.0; compatible with USB 1.1
Operating System: Android 5.1
Dimensions: 1.9x1.8x0.6 in (49x46x16 mm)
Working temperature: 32°-104° F (0°-40° C)
Weight: 1.3 oz (37 g)
Battery: built-in rechargeable Li, 400 mAh
Music Playback: up to 6 hours

COMPACT • RELIABLE
100% WATERPROOF

PLAYER PARTS AND CONTROLS

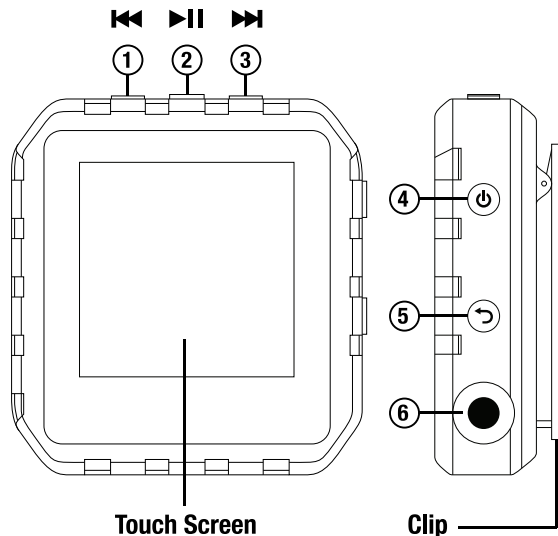

BUTTON FUNCTIONS

- ① **Previous Track:** Press once
Volume Down: Hold until chime, then press repeatedly
- ② **Play/Pause:** Press once to toggle
- ③ **Next Track:** Press once
Volume Up: Hold until chime, then press repeatedly
- ④ **Back:** Press once
Home: Hold
- ⑤ **Turn On:** Hold until screen activates
Turn Off: Hold for ~8 seconds. Logo will appear as device powers down.
Screen On/Off: Press once. (Screen turns off automatically after a set amount of time.)
- ⑥ **Charge/Sync:** Plug in USB cable
Listen: Plug in headphones

BLUETOOTH PAIRING

Make sure that your Bluetooth device is discoverable. In the Delphin, go to **Settings > Connect > Bluetooth** and look for your device under **Available Devices**.

Touch the name of your device to begin pairing. Agree to any pairing requests that appear on your device or on the Delphin. When paired successfully, your device will be listed under **Paired Devices**.

USING THE TOUCHSCREEN

Swipe down from the top of the screen to see the time, date, battery level, and Bluetooth and WiFi connection status.

6:16 PM
Wednesday, August 30

Touch the person icon on the far right right to change basic settings, or swipe down a second time to see your notifications.

LOADING MUSIC

Use **Get Apps** to download apps (such as Audible®, Spotify®, etc.), or load your music via the syncing cable for use in the **Music** app. Watch this video to learn how:



underwateraudio.com/delphin-load-music

NOTE ON BLUETOOTH AND WIFI:

WiFi will not function when the Delphin is submerged. Audio files, playlists, and offline radio stations must be downloaded to player (e.g. with Spotify Premium® account) prior to swimming. (Note: WiFi function has been disabled). Pair waterproof Bluetooth headphones with the Delphin before entering water. Delphin must remain close to the headphones (e.g. clipped to goggles) for Bluetooth to function while submerged.

All trademarks are the property of their respective owners.

CHARGING

Make sure the headphone jack is clean and dry. Fully insert the included black USB charge/sync cable into the jack. Plug the USB into a computer's USB port or a wall charger. Disconnect and turn off Delphin when fully charged (~75 minutes). **Use only the included charge/sync cable.**

CORRECT DISPOSAL OF PLAYER

Do not throw this item away with other household waste!



To safely dispose of your device, please use your community's waste collection and recycling systems. You may take the product back to the store, where the retailer will recycle it in accordance with environmental safety regulations. **Please responsibly recycle this MP3 player to promote the sustainable reuse of material resources!**

DISCLAIMER

This product's software, user manual, and technical parameters may change without notice. This manual is a general description of the product. The manufacturer and distributor do not assume responsibility for any errors in this user's manual.

Except where prohibited by law, in no event will Underwater Audio be liable to you for any indirect, consequential, exemplary, incidental or punitive damages, including lost profits, even if Underwater Audio has been advised of the possibility of such damages.

If, notwithstanding the other provisions of these Terms of Use, Underwater Audio is found to be liable to you for any damage or loss which arises out of or is in any way connected with your use of the product, Underwater Audio's liability shall in no event exceed the total cost of the product. Some jurisdictions do not allow limitations of liability, so the foregoing limitation may not apply to you.

WARRANTY

The Delphin has a 1-year warranty that covers manufacturer's defects. The warranty does not cover lost or stolen items.

TROUBLESHOOTING

For troubleshooting information, please visit underwateraudio.com/delphin-troubleshooting

Need help? Please contact us!

Email: help@underwateraudio.com

Toll-Free: 877-849-0750 8AM-5PM PST



Manufactured in China

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.