


Waterproof Standard: IPX-8: withstands submersion to 10ft (3.05m)
Bluetooth Standard: 4.2
File Formats: MP3, WMA, WAV
USB jack: USB 2.0; compatible with USI
Compatibility: works on Mac and PC
Dimensions: 2.2x0.9x0.9 in (58x22x22 mm)
Working temperature: 32–122° F (0–50° C)
Weight: 0.9 oz (25 g)
Battery: built-in rechargeable polymer Lithium battery, 180mAh
Music Playback: up to 10 hours

Player Parts and Controls

 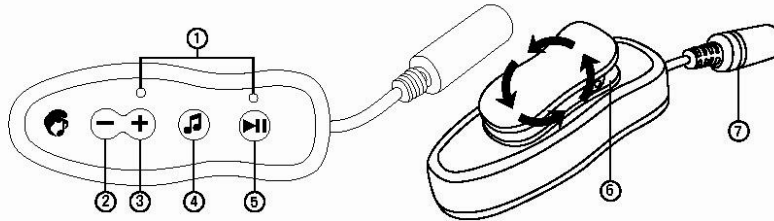


- ① **LED Light Indicators**
- ② **Previous Track:** press once
Volume Down: press and hold
- ③ **Next Track:** press once
Volume Up: press and hold
- ④ **Change Mode:** press once to toggle between Bluetooth and Memory modes

- ⑤ **On:** hold 2 seconds, music will autoplay
Pair: see **Wireless Pairing** section
Play/Pause: press once to toggle
Off: hold 2 seconds, red LED will flash
- ⑥ **Rotating Clip:** Clip rotates 360° to allow easy attachment to clothing, etc.
- ⑦ **Charge/Sync:** plug in USB cable
Listen: plug in headphones

5. In the left sidebar, right-click the folder named "Removable Disk" and select "Eject" from the menu.
6. Wait until the computer confirms a safe ejection before you unplug the USB cable.
7. Player turns off by itself when unplugged.

Transferring Files: on a Mac®

1. Run "Finder®" (from the Dock).
2. Using the included USB cable, connect UKU to a USB port on your computer.
3. Open the new "Untitled" folder that appears under "Devices" in the left sidebar.
4. Copy files to the "Untitled" folder in the order in which you want them to play.
5. Click "Eject" () next to "Untitled" in the left sidebar.
6. Wait until the "NO NAME" folder has disappeared before unplugging UKU.
7. Player turns off by itself when unplugged.

All rights reserved.
Windows is a trademark of Microsoft Corporation.
Mac is a trademark of Apple Inc.

Warranty

Your UKU has a 1-year warranty that covers manufacturer's defects. The warranty does not cover lost or stolen items.

Troubleshooting

For troubleshooting information, please visit underwateraudio.com/UKU-troubleshooting

Need help? Please contact us!

help@underwateraudio.com
Toll-Free: 877-849-0750 8AM-5PM PST

Manufactured in China



Wireless Pairing

Pair your device with UKU before entering water. UKU must remain close to the device (e.g. clipped to goggles) for wireless to work underwater. Enable Bluetooth® wireless technology on the device you want to pair with UKU (usually in Settings). With UKU turned OFF, hold down the **▶||** button for 5 seconds until both LEDs blink and you hear "Enter Pairing." Choose **B296** from your device's list of available devices. Agree to any pairing requests that appear on your device. You will hear "Connection successful" upon finishing pairing UKU.

Transferring Files: on a PC

1. Run "Windows® Explorer" (from the Task Bar or Start Menu).
2. Using the included USB cable, connect UKU to a USB port on your computer.
3. Open the new "Removable Disk" folder under "This PC" in the left sidebar.
4. Copy files to the "Removable Disk" folder in the order in which you want them to play.

Disclaimer

This product's software, user manual, and technical parameters may change without notice. This manual is a general description of the product. The manufacturer and distributor do not assume responsibility for any errors in this user's manual.


Except where prohibited by law, in no event will Underwater Audio be liable to you for any indirect, consequential, exemplary, incidental or punitive damages, including lost profits, even if Underwater Audio has been advised of the possibility of such damages.

If, notwithstanding the other provisions of these Terms of Use, Underwater Audio is found to be liable to you for any damage or loss which arises out of or is in any way connected with your use of the product, Underwater Audio's liability shall in no event exceed the total cost of the product. Some jurisdictions do not allow limitations of liability, so the foregoing limitation may not apply to you.

Charging

Make sure the headphone jack is clean and dry. FULLY insert the included black USB charge/sync cable into the jack. Plug the USB end into a computer's USB port or a wall charger. Disconnect and turn off UKU when fully charged (~75 minutes). **Use only the included charge/sync cable.**

Correct disposal of player

Do not throw this item away with other household waste! 

To safely dispose of your device, please use your community's waste collection and recycling systems. You may take the product back to the store, where the retailer will recycle it in accordance with environmental safety regulations. **Please responsibly recycle this MP3 player to promote the sustainable reuse of material resources!**

FCC Warning This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **Note 1:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.