

2


Hardware Installation

The following diagrams provide you a basic installation for your PC54G (MS-6825), which is suitable for most desktop PCs. For more information about the PCI slot, please refer to the user's manual of your mainboard.

Step 1. Remove the computer cover. Locate the available PCI slot on your mainboard.


NOTE: Turn off your system and disconnect the power cable before installing the PC54G (MS-6825).

PCI slot

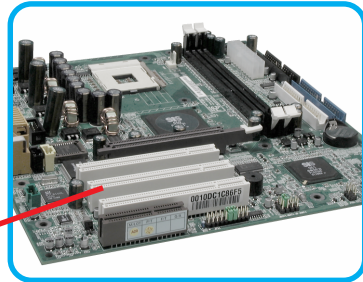

Step 2. Put the PC54G (MS-6825) directly over the PCI slot and press it into the slot firmly.

Do not hold the PC54G (MS-6825) on the golden finger while installing; doing this may cause interference or damage.

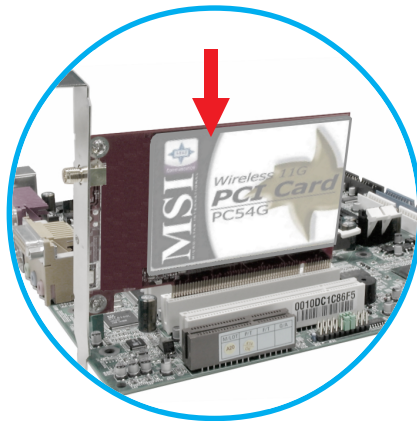


Step 3. Replace the computer cover after securing the PC54G (MS-6825) with a bracket screw.

Step 4. Connect the external antenna to the connector on the PC54G's (MS-6825) bracket.



Connecting the external antenna

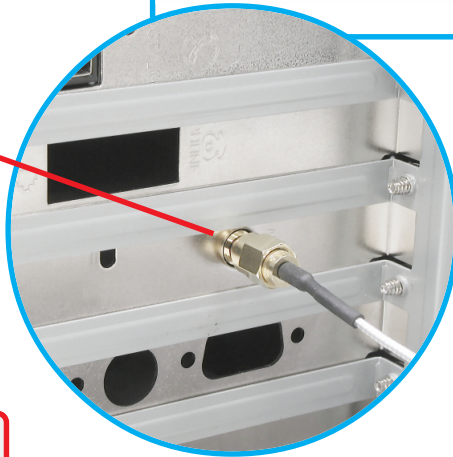

If you are not skilled at installing the PCI adapter, please ask the vendor or an experienced technician for help.