

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock and/or injury, always follow these basic safety precautions when using your cordless telephone equipment.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The opening should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
9. Do not overload wall outlets and extension cords. This can increase the risk of fire or electric shock.
10. Never push objects of any kind through slots in the product. They could touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not take this product apart. When service or repair work is required on this product, take it to a qualified service representative. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is used.
12. Unplug this product from the wall outlet and consult a qualified service representative in any of the following situations:
 - A. When the power supply cord is frayed or damaged.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.

Safety Instructions

- E. If the product has been dropped or the case has been damaged.
- F. If the product exhibits a distinct change in performance.
- 13. Do not use the telephone to report a gas leak in the vicinity of the leak.
- 14. Never install telephone wiring during a lightning storm.
- 15. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 16. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- 17. Use caution when installing or modifying telephone lines.

SAVE THESE INSTRUCTIONS

Battery Cautionary Instructions

CAUTION:

To reduce the risk of fire or personal injury, read and follow these instructions:

1. Use only the following type and size of battery pack:

Cordless Telephone Battery Pack
3.6V, 600mAh

Ni-MH Battery Pack:

2. Do not dispose of the battery pack in a fire. It may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery pack to prevent shorting the battery with conductive materials such as rings, bracelets and keys. The battery pack or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the battery pack and battery charger.

ATTENTION:

The product that you have purchased contains a rechargeable battery pack. The battery pack is recyclable. At the end of its useful life, under various States and local laws, it may be illegal to dispose of this battery pack into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

HEADSET Controls

1. **In Use/Batt Low LED Indicator:** Lights up when the HEADSET is in TALK mode. Blinks when battery power is low.
2. **TALK Button:** Press to answer an incoming call or to place a call. Press to end a call.
3. **Memo Button:** Press to store phone numbers in memory or to call a number you have previously stored.
4. **Flash Button:** Press to answer an incoming call if you have Call Waiting.
5. **Ringer ON/OFF Switch:** Set switch to OFF position to disengage the ringer on the HEADSET.
6. **Charge Contacts:** For charging the battery pack inside the HEADSET. We recommend cleaning periodically with a damp cloth.
7. **HEADSET ANTENNA**
8. **Volume Control (HI, LOW) Switch:** Select the volume level (HI, LOW).
9. **Channel Select Button (CH):** Press to change the operating channel when you hear interference.
10. **Pause Button:** Press to insert a pause while dialing. (You will need the **PAUSE** button to dial numbers which use an alternative long distance access code.)
11. **Tone Button:** Press to temporarily change the dialing mode from Pulse to Tone for Rotary Service Users. (Press once before entering numbers to access the answering system or electronic banking services, etc.)
12. **Redial Button:** Press to redial the last number you dialed.

IMPORTANT

In order to get maximum life from the HANDSET battery pack, be sure to charge the HANDSET for 12 hours before initial use.

BASE UNIT Controls

1. Telephone Line Connection Jack
2. Tone/Pulse Select Switch
3. Power-In Connection Jack
4. Antenna: Raise or reposition for best reception.
5. In Use/Charge LED Indicator: Lights up to indicate the unit is ON or when the HEADSET is placed on the BASE UNIT for charging. It flashes to indicate the page function is in use.
6. PAGE Button: Press to page the HEADSET.
7. Charge Terminals: For charging the HEADSET battery pack. For best performance, clean periodically with a damp cloth only.

IMPORTANT

Locating your BASE UNIT near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

Getting Started

Connecting Your Phone

This section is a reference guide to the basic functions and operations of your cordless telephone. For more detailed descriptions of the operations and features of this telephone, refer to the Contents on page 1.

1. Carefully remove your cordless telephone from its shipping carton. If there is any visible damage, do not attempt to operate this equipment. Return it to the place of purchase.
2. Check to be sure you have all items that come with this cordless telephone system. You should have a HEADSET, BASE UNIT, AC ADAPTOR, MOUNTING BRACKET, TELEPHONE LINE CORD, SHORT TELEPHONE LINE CORD and Owner's Manual.
3. Insert the small plug on the end of the AC adaptor into the POWER-IN connection jack at the back of the BASE UNIT.
4. Plug the AC adaptor into a 120V AC wall outlet.
⚠ USE ONLY WITH CLASS 2 POWER SOURCE 9V DC, 300mA.
5. Insert one plug of the TELEPHONE LINE CORD into the house TELEPHONE JACK and the other end into the telephone line jack at the back of the BASE UNIT. (If you have an older 4-prong telephone jack, you will need an RJ-11C TELEPHONE JACK ADAPTOR. This adaptor is available at the same place you purchased your telephone.)
6. Raise or reposition the antenna on the BASE UNIT for best reception.
7. We recommend not placing this unit next to appliances. Doing so may cause interference.
8. TONE/PULSE Select Switch:
 - A. If your home is equipped with a Tone dialing system, set the TONE/PULSE select switch to the TONE position.
 - B. If you have a rotary dialing system, set the TONE/PULSE select switch to PULSE position.
 - C. If you are unsure which system you have, set the TONE/PULSE select switch to the TONE position. Press the **(TALK)** button on the HEADSET to get a dial tone, and press any key on the keypad except the zero. If the dial tone continues, it means that you do not have Touchtone dialing service. Press the **(TALK)** button on the HEADSET to hang up. Set the TONE/PULSE select switch to the PULSE mode and then try again.
9. Before initial use, charge the HEADSET for 12 hours.

Basic Operation

Preparing for Use

Before you can use your cordless telephone, you must charge the HEADSET for 12 hours. Failure to do so will require recharging of the battery pack more often.

1. Place the HEADSET on the BASE UNIT for 12 hours.
2. After 12 hours, remove the HEADSET from the BASE UNIT.
3. Raise or reposition the BASE UNIT antenna for best reception.

Before you can use your cordless telephone, you must charge the HEADSET for 12 hours. Failure to do so will require more frequent charging of the battery pack. See page for more information on the battery pack.

IMPORTANT

The AC ADAPTOR must always be plugged into an electrical outlet.

Receiving Calls

Receiving Calls with the HEADSET on the BASE UNIT

1. When the phone rings, lift the HEADSET. The IN USE LED indicator will light up. (NOTE: The HEADSET RINGER SWITCH must be in the "ON" position for ringer to operate.)
2. Start your conversation.
3. To end your conversation, either press the **(TALK)** button or place the HEADSET on the BASE UNIT. If you place the HEADSET on the BASE UNIT charge cradle, you activate the automatic STANDBY feature.

Receiving Calls with the HEADSET off the BASE UNIT

1. When the phone rings, press the **(TALK)** button. The IN USE LED indicator will light up.
2. Start your conversation.
3. To end your conversation, either press the **(TALK)** button or place the HEADSET on the BASE UNIT. If you place the HEADSET on the BASE UNIT charge cradle, you activate the automatic STANDBY feature.

(NOTE: The BASE UNIT has no ringer and does not ring when receiving an incoming call.)

NOTE:

Once the HEADSET is fully charged, it is operable for approximately 4 hours of continuous talk use and approximately 5 days when the HEADSET is left off the BASE UNIT in STANDBY mode depending on the frequency of use.

Placing Calls

Placing Calls

1. Press the **TALK** button. The IN USE LED indicator will light up.
2. Listen for a dial tone.
3. Dial the phone number.
4. When you have finished with your call, press the **TALK** button again. The IN USE LED indicator will turn off.

HEADSET Redial Feature

1. If you get a busy tone, press the **TALK** button to hang up.
2. Later, press the **TALK** button again.
3. Listen for a dial tone.
4. Press the **REDIAL** button. This will automatically redial the last telephone number you called.

Note:

If you are far away from the BASE UNIT, the HEADSET emit beep sounds to warn you that the background noise level is too high for proper communication between the HEADSET and the BASE UNIT. When you hear this sound, you should move closer to the BASE UNIT to reduce the noise level. Otherwise, the call will automatically cut off.

IMPORTANT

When you hear interference, press the CH button to change the operating channel

Storing Numbers

1. Be sure the BASE UNIT IN USE LED indicator is off and the HEADSET is in STANDBY mode.
2. Press the **(MEMO)** button.
3. Dial the number you want to store.
4. Press the **(MEMO)** button again.
5. Dial the index number (0-9) where you want to store that number. You will hear one confirmation beep.
6. Write the name of the person you will be calling with that number next to the corresponding index number on the telephone number card.
7. Repeat steps 1 through 6 for other telephone numbers.

EXAMPLE : To store the number 703-1968 under the index number 1 on the keypad:

- | | |
|---|---|
| 1 - Press the (MEMO) button. | 4 - Press 1 on the keypad. |
| 2 - Dial 703-1968. | 5 - You have stored 703-1968 under key 1 on the keypad. |
| 3 - Press the (MEMO) button again. | |

A total of 10 telephone numbers can be programmed in memory.

IMPORTANT: The maximum number of digits that can be stored for any phone number is 16 in pulse or tone mode. The maximum number of digits for mixed (tone and pulse in combination) dialing is 15. If you are using a switchboard system to access an outside line (such as an 8 or 9), press the **(PAUSE)** button to store a pause.

Recalling Stored Numbers from Memory

1. Press the **(TALK)** button.
2. Press the **(MEMO)** button.
3. Press the index number for the number you have stored. The stored number will be dialed automatically.

EXAMPLE: To recall number 703-1968 stored under key 1 on the keypad:

- Press the **(TALK)** button.
- Press the **(MEMO)** button.
- Dial 1.

IMPORTANT

**To obtain the best reception, be sure to
raise or reposition the BASE UNIT antenna.**

Security System

Your cordless telephone uses a digital coding security system to prevent unauthorized use of your telephone line by another nearby cordless telephone. The system has its own identifying signal created by microcomputers in both the BASE UNIT and HEADSET.

Security Code

This telephone has an internal security code with 65,536 possible combinations.

Multi-Channel Access

Your cordless telephone lets you select a channel from the 40 frequencies available to transmit signals between the BASE UNIT and HEADSET. When you notice interference from other cordless telephones, change to another channel by pressing the **(CH)** button on the HEADSET.

Recharging the Battery Pack

Recharging the Battery Pack

The nickel metal hydride (Ni-MH) battery pack in the HEADSET can be recharged many times using the built-in charger in the BASE UNIT.

When the BATTERY LOW LED indicator starts to blink, a "beep" sound will be heard every 12 seconds. This indicates that the battery pack needs to be recharged.

Charge the battery pack at least once every 90 days of nonuse to avoid battery failure. When the battery pack can no longer be charged, replacement of the battery pack will be necessary.

The battery pack used in your telephone may develop a condition known as "MEMORY". Once subjected to a regular short discharging routine, the battery assumes the discharging pattern it was subjected to. This is known as a "MEMORY" condition which causes rapid discharging thereby shortening the battery pack charge span. If you believe your battery pack has developed a memory condition, do not charge the HEADSET until the BATTERY LOW LED indicator comes on. When it does come on, charge the HEADSET fully for 12 hours.

IMPORTANT

In order to get maximum life from the HEADSET battery pack, be sure to charge the HEADSET for 12 hours before initial use.

Changing the Battery Pack

The battery pack provides power for the HEADSET of your cordless telephone.

To Replace the Battery Pack:

1. Remove the HEADSET battery compartment cover by sliding it down.
2. Pull out the battery connector and remove the battery pack.
3. Plug the new battery pack into the battery connector.
4. Slide the HEADSET battery compartment cover firmly into place in its closed position.
5. Before use, charge the new battery pack for 12 hours.

ATTENTION:

The product that you have purchased contains a rechargeable battery pack. The battery pack is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery pack into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Problem Solving Section

For your assistance, we have listed below a few common problems.

Phone does not work, check the following:

1. BASE UNIT is plugged into power source.
2. HEADSET is charged.
3. TONE/PULSE switch is in the right position.
4. TELEPHONE LINE CORD is plugged into the telephone jack.

Range of phone limited, check the following:

1. ANTENNA on BASE UNIT is raised.
2. BASE UNIT is centrally located in your residence.
3. BASE UNIT is not located near appliances.

No dial tone, check the following:

1. Telephone plug is connected to the telephone line.
2. BASE UNIT is plugged into power source.

Received signal flutters or fades, check the following:

1. Battery pack in HEADSET is fully charged.
2. HEADSET is not too far from the BASE UNIT.
3. ANTENNA on BASE UNIT is raised.

Interference on reception, check the following:

1. Noise may be picked up from electrical products in the home or electrical storms. Generally, this noise is a minor annoyance and should not be interpreted as a defect in your system. (See Technical Information on page 23).
2. Choose an alternate channel using the **SCAN** button on the HEADSET.

Excess static, check the following:

1. Check to see that the ANTENNA is not touching another metal object.
Raise the ANTENNA.

If after pressing the TALK button, you receive three beeps and no dial tone, check the following:

1. BASE UNIT is plugged into power source.

NOTE: If no telephones in the house are working, disconnect one set at a time to verify that none of the phones are causing the problem. If you still have a problem after doing this and your telephone still does not work, please contact your local phone company.

IMPORTANT

**When you hear interference,
press the CH button to change
the operating channel.**

Technical Information

This cordless telephone uses radio frequencies to allow mobility. There are certain difficulties in using radio frequencies with a cordless telephone. While these are normal, the following could affect the operation of your system.

Noise

Electrical pulse noise is present in most homes at one time or another. This noise is most intense during electrical storms. Certain kinds of electrical equipment such as light dimmers, fluorescent bulbs, motors, and fans also generate noise pulses. Because radio frequencies are susceptible to these noise pulses, you may occasionally hear them in your HEADSET. Generally they are minor annoyance and should not be interpreted as a defect in your system.

Range

Because radio frequency is used, the location of the BASE UNIT can affect the operating range. Try several locations in your home or office and pick the one that gives you the clearest signal to the HEADSET.

Interference

Electronic circuits activate a relay to connect the cordless telephone to your telephone line. These electronic circuits operate in the radio frequency spectrum. While several protection circuits are used to prevent unwanted signals, there may be periods when these unwanted signals enter the BASE UNIT. You may hear clicks or hear the relay activate while you are not using the HEADSET. If the interference occurs frequently, it can be minimized or eliminated by lowering the height of your base antenna or by relocating the BASE UNIT. You can check for interference before selecting the final BASE UNIT location by plugging in the phone.

NOTICE:

This cordless telephone uses radio communication between the HEADSET and the BASE UNIT and may not ensure privacy of communication. Other devices, including other cordless telephone, may interfere with the operation of this cordless telephone or cause noise during operation. Units not containing coded access may be accessed by other radio communication systems. Cordless telephones must not cause interference to any licensed radio service.

Federal Communications Commission Requirements

This equipment complies with Part 68 of FCC Rules. A label on the BASE UNIT of this equipment contains, among other information, the FCC Registration Number and the Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The REN is also useful in determining the quantity of devices that you may connect to your telephone line and still allow these devices to ring when your telephone number is called. In most areas, but not all, the sum of the REN's for all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you should contact your local telephone company.

If your equipment should cause harm to the telephone network, the telephone company may temporarily disconnect your service. If possible, they will notify you in advance that temporary discontinuance of service may be required. However, when advance written notice is not possible, the telephone company may temporarily discontinue service without notice if such action is necessary under the circumstances. The telephone company may make changes in its communication facilities, equipment, operations, or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations of the Federal Communications Commission. **Do not attempt to repair or modify this equipment.**

Warning: Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment.

Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's. To minimize or prevent such interference, the base of the cordless telephone should not be placed on or near a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

This equipment should not be used on coin telephone lines. Connection to party line service is subject to state tariffs. If trouble is experienced, disconnect this equipment from the telephone line to determine if it is causing the malfunction. If the equipment is determined to be malfunctioning, its use should be disconnected until the problem has been corrected.

IMPORTANT

In order to get maximum life from the HANDSET battery pack, be sure to charge the HANDSET for 12 hours before initial use.

FCC Requirements

Federal Communications Commission Requirements (continued)

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures.

1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.