

Alphanumeric Pager AP-91

USER

CONTENTS


(1) Features	1
1-1 Front Side	1
Key Functions Table	1
1-2 Back Side	2
(2) Icons Description	3
2-1 Icons Location	3
2-2 Icons Explanation	4
(3) Function Setting	5
3-1 Power On/Off	5

CONTENTS





3-9 Hour Alarm On/Off	12
3-10 Reminder On/Off	12
3-11 Stop Watch	13
3-12 Game	13
(4)Messages	14
4-1 Read messages	14
4-2 Messages setting	15
4-2-1 Lock On	15
4-2-2 Delete	15
4-2-3 MSG Alarm On/Off	16
4-2-4 Move to PF(Personal File)	16

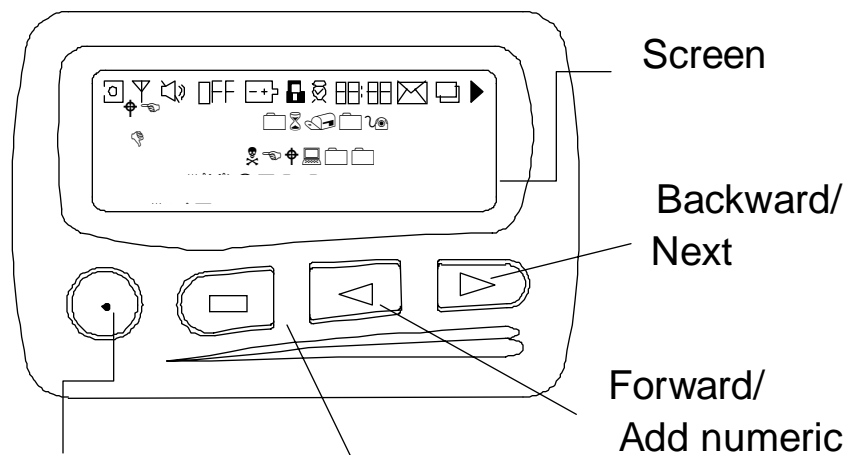(1) Features


1-1.FRONT SIDE



Key Functions Table
 Each key has different function in each

KEY	FUNCTION	OPTION	SETTING
€	read function no no	enter cancel backward forward	confirm cancel Change next
Remark:	€	Stand for Stand for - 1 - Stand for Stand for	   

1-2. BACK SIDE

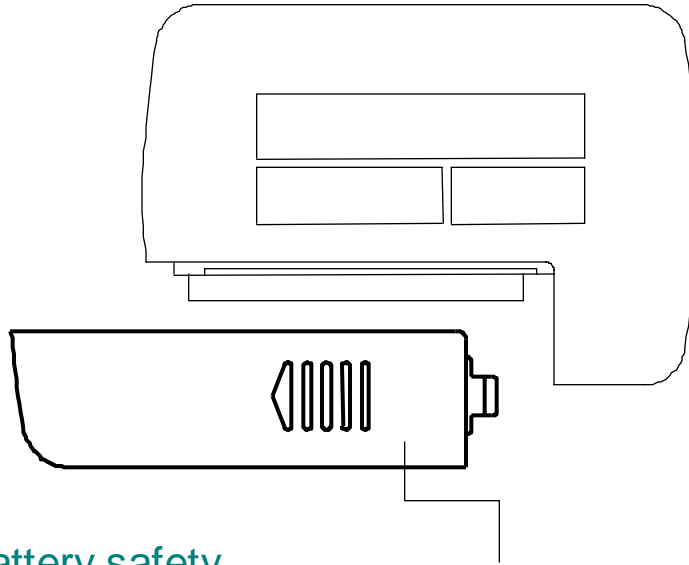

;Battery safety


Battery Door

1. Use 3A 1.5V,alkaline battery.
2. Move the door away, replace a new battery in battery.
3. Power off pager before changing.
4. Ensure the polarity of the battery is correct.


 
 



- 2 -

(2)Icon description

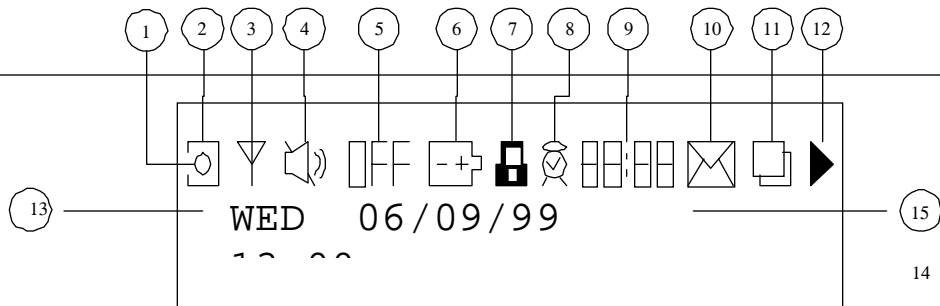2-1. Icon Location



2-2. Icons Explanation

1.  Power on.
 2.  Auto on.
 Auto off.
 3.  Out of range.
 4.  Vibrate mode.
 Beep or melody mode.
- No icon means no alert
5. **OFF** : power off
 6. Low Battery
 7. Message(s) locked.

- 3 -

8. message(s) alarm.

Maximum: 3 messages

9. Time of next alarm or count down.

press any key to stop alert.

10. Unread message.

11. Duplicate message.

12. Continuing message (Next Page)


13. Week: SUN MON TUE WEN





THR FRI SAT

14. Date: MM/DD/YY

15. Time: Hour/Minute

(3) Functions Setting


Press  to enter/select function menu.

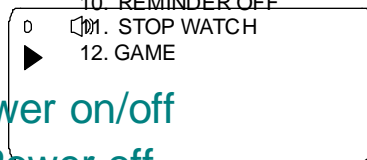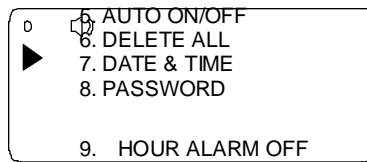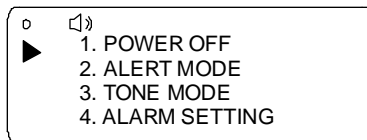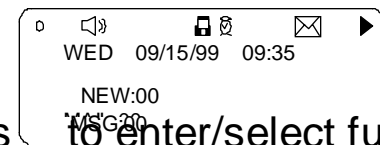


3-1. Power on/off

3-1-1. Power off


Press  to select power off

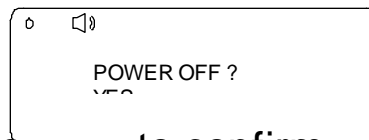

Press  to confirm

3-1-2. Power on: Press  for 2 seconds


3-2. Alert Mode

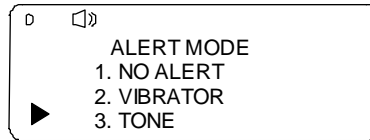

Press **or** to select a mode


Press **€** to enter

3-3. Tone Mode

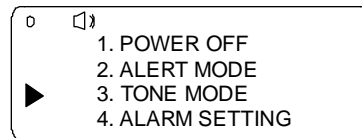

Press **or** to select TONE MODE;

 
Press **€** to enter

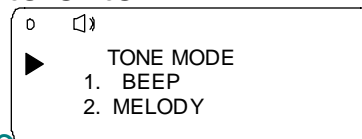

3-3-1. Beep

Press **or** to select BEEP;

 Press **€** to confirm

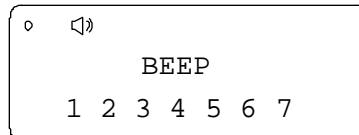

Press **or** to select one;

 
Press **€** to confirm

- 6 -

3-3-2. Melody

Press **or** to select MELODY;

Press **€** to enter

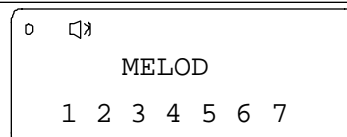


Press **or** to select one;

3-4. Alarm Setting

Press **or** to select ALARM SETTING;

 
Press **€** to enter

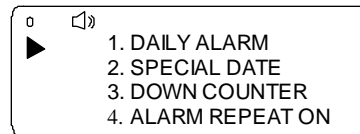

3-4-1. Daily Alarm

Press **or** to select DAILY ALARM;

 Press **€** to enter

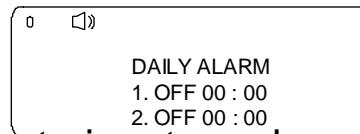

Press to input number;

Press to move;

 
Press **€** to confirm

Maximun:2 alarms

3-4-2 Special Date

Press to select SPECIAL DATE;

Press **€** to enter

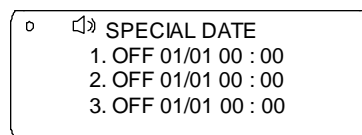


Press to input number

Press to move,press **€** to confirm

4-3 Down Counter

Press to select DOWN COUNTER;

 Press **€** to enter

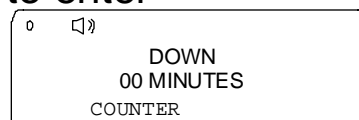


Press **0** to input number;

Maximum:60 minutes.

3-4-4 Alarm Repeat On

Press **0** to select on/off;

 Press **€** to confirm

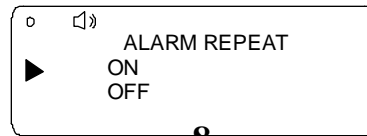


.Alarm repeats every 5 minutes and continuing for 30 minutes.

3-5. Auto on/off

Press **or** to select DAILY ALARM;

 Press **€** to enter

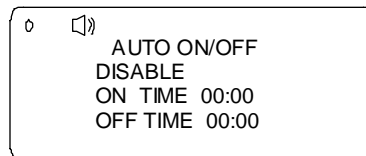

Press **0** to input number;

 
Press **0** to move;

Press **€** to confirm

3-6.Delete All

Press **or** to select DELETE ALL;

Press **€** to enter

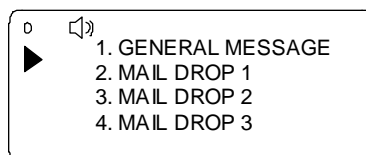

Press **or** to select;

 
Press **€** to confirm

;The locked messages have to be
unlocked before delete.

3-7. Date & Time

Press **or** to select DATE & TIME;

Press **€** to enter

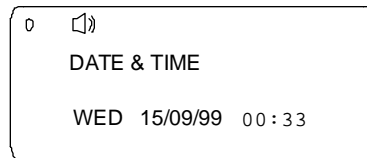

Press to move;


Press to input date & hour;

Press **€** to enter

3-8. Password


Press **or** to select PASSWORD;

Press **€** to enter

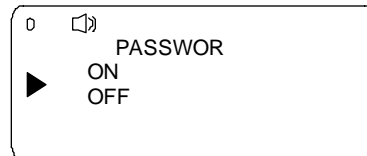


Press to select on/off Press **€** to confirm

 3-8-1. Setting Password

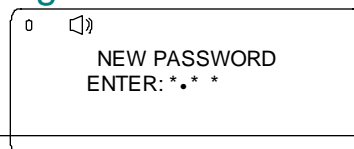

 Press keys total 4 times to set up password

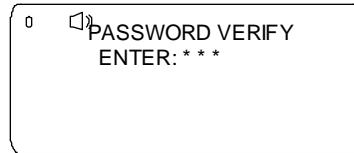

Input again to verify.
;The fourth * is not displayed


3-8-2. Changing Password

- ① Press **or** to select PASSWORD:
- ② Press **€** to enter
- ③ Enter the former password,
- ④ Press to select on;
- ⑤ Enter new password and enter again to verify.


- 11 -

3-8-3 Cancel Password

- ① Press **or** to select PASSWORD:
 - ② Press **€** to enter
 - ③ Enter the former password,
 - ④ Press to select on;
- 3-9. Hour Alarm On/Off
- ⑤ Press **€** to confirm
- Press **or** to select HOUR ALARM ON/OFF;
Press **€** to enter

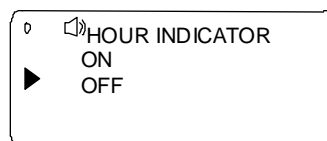


Press **→** to select on;
Press **↵** to confirm
3-10. REMINDER ON/OFF
Press **or** to select REMINDER ON/OFF;
Press **↵** to enter

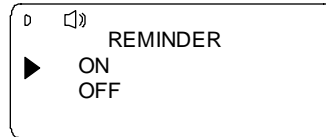

- 12 -


Press **→** to select on;
Press **↵** to confirm
;Reminder ON alerts for un-read
messages every 3 minutes and
3-11 Stop Watch
continue for 10 times.

 Press **or** to select STOP WATCH;
Press **↵** to enter

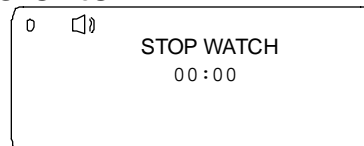

Press **or** to start;
Press **or** again to stop
Press **↵** to back start.
12. GAME

 Press **or** to select GAME;
Press **↵** to enter


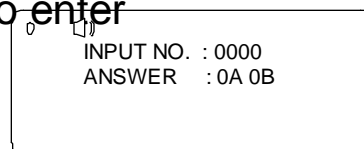


Press **→** to move;
Press **→** to input number;
Press **↵** to check result.

(4) MESSAGES

4-1. Read Message

  Press **€** to enter MESSAGE menu;

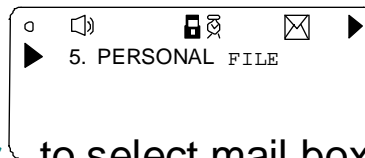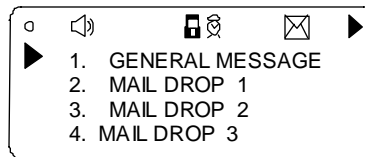


Press **or** to select mail boxes
(Mail boxes includes: general message, mail drop and Personal file);

Press **€** to enter


Press **or** to select message;

 Press **€** to read

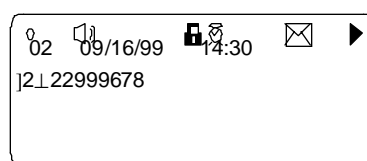

4-2. Message Setting

 Press **or** to enter function menu.

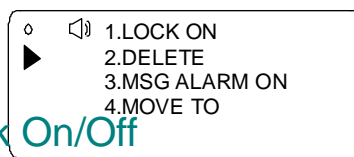

4-2-1. Lock On/Off

Press **or** to select LOCK ON;
Press **€** to confirm

4-2-2. Delete

Press **or** to select DELETE;
Press **€** to enter;
Press **or** to select YES/NO;
Press **€** to confirm

*PS.


Delete Mail Drop Message:
Message will be deleted automatically
After capacity is full
Maximum capacity: 4 messages

4-2-3. MSG Alarm On/Off

Press **or** to select MSG ALARM ON;
Press **€** to enter




Press **or** to select on/off and input number;
Press **or** to move;
Press **€** to enter

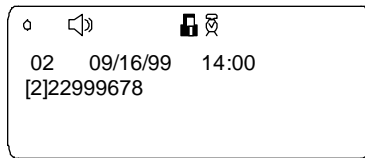

4-2-4. Move to PF

Press **or** to select Move To PF;

 Press **€** to enter

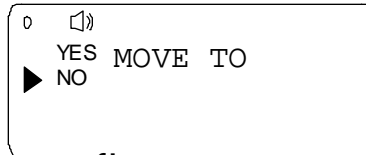

Press **€** to confirm

- 16 -

NOTE: THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
OPERATION.

NOTICE: THE CHANGES OR MODIFICATIONS NOT EXPRESSLY
APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD
VOID THE USER'S AUTHORITY TO OPERATION THE EQUIPMENT.