

**Uniden®**

**BC246T  
OWNER'S  
MANUAL**

**OWNER'S MANUAL**

---

---

## Precautions

---

---

Before you use this scanner, please read and observe the following.

### IMPORTANT!

This scanning radio has been manufactured so that it will not tune to the radio frequencies assigned by the FCC for cellular telephone usage. The Electronic Communications Privacy Act of 1986, as amended, makes it a federal crime to intentionally intercept cellular or cordless telephone transmissions or to market this radio when altered to receive them. The installation, possession, or use of this scanning radio in a motor vehicle may be prohibited, regulated, or require a permit in certain states, cities, and/or local jurisdictions. Your local law enforcement officials should be able to provide you with information regarding the laws in your community.

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by this Operating Guide, could void your authority to operate this product.

### EARPHONE WARNING!

Be sure to use only a monaural earphone with this scanner. You can also use an optional 32W stereo headset. Use of an incorrect earphone or stereo headset might be potentially hazardous to your hearing. The output of the phone jack is monaural, but you will hear it in both headphones of a stereo headset.

Set the volume to a comfortable audio level coming from the speaker before plugging in the monaural earphone or a stereo headset of the proper impedance (32W). Otherwise, you might experience some discomfort or possible hearing damage if the volume suddenly becomes too loud because of the volume control or squelch control setting. This might be particularly true of the type of earphone that is placed in the ear canal.

Precautions

---

---

**WARNING!**

Uniden **does not** represent this unit to be waterproof. To reduce the risk of fire or electrical shock, **do not** expose this unit to rain or moisture.

*Motorola®*, *SMARTNET®*, *PL®*, *Private Line®*, and *PRIVACY PLUS®* are registered trademarks of *Motorola, Inc.*

*LTR®* is a registered trademark of *E.F. Johnson Co.*

*EDACS®* is a registered trademark of *M/A-COM Private Radio Systems, Inc.*

*Uniden®* and *Bearcat®* are registered trademarks of *Uniden America Corporation.*

*TrunkTracker™*, *Trunk Tracking™*, and *Close Call™* are proprietary trademarks of *Uniden America Corporation.*

*Other trademarks used throughout this manual are the property of their respective holders.*

## Precautions

---

---

## Contents

---

---

Introduction .....	9
Feature Highlights .....	11
About This Manual .....	15
Understanding Scanning .....	17
Understanding the Scanner's Memory .....	17
What is Scanning? .....	17
What is Searching? .....	18
What is CTCSS/DCS? .....	18
Conventional Scanning .....	20
What is Trunk Tracking? .....	21
Trunked Scanning .....	22
Types of Trunking Systems .....	23
Where To Get More Information .....	26
Using a Computer to Control Your BC246T .....	27
Included With Your Scanner .....	28
Setting Up Your Scanner .....	28
Using Internal Batteries .....	29
Using Rechargeable Batteries .....	31
Using AC Power .....	32
Connecting the Antenna .....	32
Connecting an Earphone/Headphone .....	33
Connecting an Extension Speaker .....	33
Attaching the Belt Clip .....	33
Installing the Demo Software .....	34
A Look At The Keypad .....	35
A Look At The Display .....	38
Basic Operation .....	39
Turning On The Scanner and Setting the Squelch .....	39
Using Menu .....	39
Using Func .....	39
Using the Scroll Control .....	40
Using the Menu .....	41
Programming Radio Systems .....	43
Programming Conventional Systems .....	43
Editing an Existing System Name .....	44
Entering a New System Name .....	45
Setting the System Quick Key .....	45
Setting System Lockout .....	45
Setting the System Hold Time .....	45
Setting the Channel Delay Time .....	46
Setting Data Skip .....	46
Deleting a System .....	46
Copying a System .....	46
Entering/Editing Conventional Channel Groups .....	46
Editing an Existing Group Name .....	47
Setting a Group Quick Key .....	48
Setting Group Lockout .....	48
Deleting a Group .....	48
Entering/Editing Conventional Channels .....	48
Editing the Channel Name .....	49
Setting Channel Priority .....	49
Setting Channel Alert .....	49
Deleting a Channel .....	50
Copying a Channel .....	50

Contents

---



---

Programming Motorola Systems .....	50
Editing a System Name .....	52
Setting the System Quick Key .....	52
Setting System Lockout .....	52
Setting the System Hold Time .....	52
Setting the Channel Delay Time .....	52
Setting ID Scan/Search Mode .....	53
Editing the Fleet Map .....	53
Setting the Motorola Status Bit .....	53
Setting the End Code .....	53
Setting I-Call .....	53
Setting Emergency Alert .....	54
Setting Control Channel-Only Mode .....	54
Reviewing Locked-Out Talk Groups .....	54
Clearing All Locked-Out Talk Groups .....	54
Setting the Attenuator .....	54
Deleting a System .....	54
Copying a System .....	54
Setting System Frequencies .....	55
Entering/Editing Motorola Channel Groups .....	55
Editing a Group Name .....	56
Setting a Group Quick Key .....	56
Setting Group Lockout .....	56
Deleting a Group .....	57
Entering/Editing Motorola Channels .....	57
Editing the Channel Name .....	58
Setting Channel Alert .....	58
Setting Channel Lockout .....	58
Deleting a Channel .....	58
Copying a Channel .....	58
Programming EDACS Systems .....	59
Editing a System Name.....	60
Setting the System Quick Key.....	61
Setting System Lockout .....	61
Setting the System Hold Time.....	61
Setting the Channel Delay Time .....	61
Setting ID Scan/Search Mode.....	61
Setting I-Call.....	61
Setting Emergency Alert .....	61
Setting the EDACS ID Format.....	61
Reviewing Locked-Out Talk Groups .....	62
Clearing All Locked-Out Talk Groups.....	62
Setting the Attenuator .....	62
Deleting a System.....	62
Copying a System.....	62
Setting System Frequencies .....	62
Entering/Editing EDACS Channel Groups .....	63
Editing a Group Name.....	63
Setting a Group Quick Key.....	63
Setting Group Lockout .....	63
Deleting a Group .....	63
Copying a Group .....	63
Editing the Channel Name .....	65
Setting Channel Alert .....	65
Setting Channel Lockout.....	65

## Contents

---



---

Deleting a Channel .....	65
Copying a Channel .....	65
Programming LTR Systems .....	66
Editing a System Name .....	67
Setting the System Quick Key .....	67
Setting System Lockout .....	67
Setting the System Hold Time .....	67
Setting the Channel Delay Time .....	68
Setting ID Scan/Search Mode .....	68
Reviewing Locked-Out Talk Groups .....	68
Clearing All Locked-Out Talk Groups .....	68
Setting the Attenuator .....	68
Deleting a System .....	68
Copying a System .....	68
Setting System Frequencies .....	69
Entering/Editing LTR Channel Groups .....	69
Editing a Group Name .....	70
Setting a Group Quick Key .....	70
Setting Group Lockout .....	70
Deleting a Group .....	70
Copying a Group .....	70
Entering/Editing LTR Channels .....	70
Editing the Channel Name .....	71
Setting Channel Alert .....	71
Setting Channel Lockout .....	71
Deleting a Channel .....	72
Copying a Channel .....	72
Using the Backlight .....	72
Displaying System Information .....	72
Adjusting the Key Beep .....	73
Locking/Unlocking the Keypad .....	73
Turning Power Save On or Off .....	73
Using the Close Call Feature .....	75
Turning Pager Screen On or Off .....	78
Turning Repeater Find On or Off .....	79
Using Weather Alert (SAME) .....	80
Care and Maintenance .....	82
Troubleshooting .....	84
Specifications .....	89
Optional Accessories .....	92
Appendix .....	93
Preset Fleet Maps .....	93
User Defined Fleet Maps .....	95
Quick Start to Programming Your Scanner .....	97
Getting Started .....	97
Conventional Scanning Worksheet Instructions .....	100
Motorola Trunking Worksheet Instructions .....	101
LTR Trunking Worksheet Instructions .....	103
EDACS Trunking Worksheet Instructions .....	104
Conventional Scanning Worksheet .....	105
Motorola Trunking Worksheet .....	106
EDACS Trunking Worksheet .....	108
LTR Trunking Worksheet .....	109
Preprogrammed Systems .....	111
One-Year Limited Warranty .....	123

## Contents

---

---

## The FCC Wants You to Know

---

---

This scanner has been tested and found to comply with the limits for a scanning receiver, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This scanner generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this scanner does cause harmful interference to radio or television reception, which can be determined by turning the scanner on and off, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the scanner and the receiver

This device complies with Part 15 of the *FCC Rules*.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

### Scanning Legally

Your scanner covers frequencies used by many different groups, including police and fire departments, ambulance services, government agencies, private companies, amateur radio services, military operations, pager services, and wireline (telephone and telegraph) service providers. It is legal to listen to almost every transmission your scanner can receive. However, there are some transmissions that you should never intentionally listen to. These include:

- Telephone conversations (cellular, cordless, or other private means of telephone signal transmission)
- Pager transmissions
- Any scrambled or encrypted transmissions

The FCC Wants You to Know

---

---

According to the Electronic Communications Privacy Act (ECPA), you are subject to fines and possible imprisonment for intentionally listening to, using, or divulging the contents of such a conversation unless you have the consent of a party to the conversation (unless such activity is otherwise illegal). This scanner has been designed to prevent the reception of cellular telephone transmissions and the decoding of scrambled transmissions. This is done to comply with the legal requirement that scanners be manufactured so they are not easy to modify to pick up these transmissions. Do not open your scanner's case to make any modifications that could allow it to pick up transmissions that are illegal to monitor. Modifying or tampering with your scanner's internal components or using it in a way other than as described in this manual could invalidate your warranty and void your FCC authorization to operate it.

In some areas, mobile use of this scanner is unlawful or requires a permit. Check the laws in your area. It is also illegal in many areas (and a bad idea everywhere) to interfere with the duties of public safety officials by traveling to the scene of an incident without authorization.



---

---

## Introduction

---

---

Your BC246T scanner is a state-of-the-art scanner radio with TrunkTracking™ and automatic scanning capabilities. You can store frequencies such as police, fire/emergency, marine, air, amateur, and other communications into the scanner. You can carry it with you wherever you go, use it at home as a base unit, or install it in your vehicle as a mobile unit.

You can use the scanner's rotary tuner to quickly select channels and frequencies, and you can automatically program channels in an available bank using the AutoStore feature.

Use your scanner to monitor:

- 800 MHz trunked public safety systems
- Police and fire departments (including rescue and paramedics)
- NOAA weather transmissions
- Business/Industrial radio
- Utilities
- Marine and amateur (ham radio) bands
- Air band

This table lists the frequency ranges, default frequency step, default mode (AM, FM, or Narrowband FM), and type of transmissions you can hear for each range.

<b>Frequency Range (MHz)</b>	<b>Step (kHz)</b>	<b>Mode</b>	<b>Transmission</b>
25.0-26.960	5	AM	Citizens Band/ Business Band
26.965-27.405	5	AM	Citizens Band Class D
27.410-27.995	5	AM	Business Band
28.0-29.690	10	FM	10 Meter Amateur Band
29.7-49.990	10	FM	VHF Low Band

Introduction

50.0-54.0	10	FM	6 Meter Amateur Band
108.0- 136.9750	25	AM	Aircraft Band
137.0- 143.995	5	FM	Military Band
144.0- 147.995	5	FM	2 Meter Amateur Band
148.0- 161.995	5	FM	VHF High Band
162.0-174.0	12.5	FM	Federal Government
216.0- 224.9950	5	FM	1.25 Meter Amateur Band
400.0- 405.9875	12.5	NFM	Unknown
406.0- 419.9875	12.5	NFM	Federal Land Mobile
420.0- 449.9875	12.5	NFM	70cm Amateur Band
450.0- 469.9875	12.5	NFM	UHF Standard Band
470.0-512.0	12.5	NFM	UHF TV Band
806.0- 823.9875	12.5	NFM	Public Service "800" Band
849.0125- 868.9875	12.5	NFM	Public Service "800" Band
894.0125- 956.0000	12.5	NFM	Public Service "800" Band
1240.0000- 1300.0000	12.5	NFM	25 cm Amateur Band

## Introduction

---

---

## Feature Highlights

---

---

### General

**Close Call RF Capture Technology** - you can set the scanner so it detects and provides information about nearby radio transmissions. See “Using the Close Call Feature” on Page 75 for more information.

**Dynamically Allocated Channel Memory** - your scanner’s memory is organized so that it more closely matches how radio systems actually work, making it easier to program and use your scanner and determine how much memory you have used and how much you have left.

**Preprogrammed Systems** - your scanner is preprogrammed with over 400 channels covering police, fire, and ambulance operations in the 25 most populated counties in the US. A complete list of the scanner’s preprogrammed systems is in “Preprogrammed Systems” on Page 112.

**Quick Keys** – You can set the scanner so you can select systems and groups by pressing a single key. This makes it easy to listen to or quickly lock out those systems or groups you don’t want to scan. You can program up to 10 Quick Keys.

**Pager Screen** – You can set the scanner so it ignores hits generated by common pager frequencies while using the Close Call feature.

**Ten Service Searches** - frequencies are preset in separate public safety, news, amateur radio, marine, railroad, air, CB radio, FRS/GMRS, racing, and special banks, to make it easy to find specific transmissions.

**Lockout** – You can lock out any system, group, frequency, or channel while scanning. If you lock out a system or group, any channels belonging to that system or group are also locked out.

You can lock out up to 200 frequencies. The scanner skips locked-out frequencies while using the Close Call feature or while searching.

## Feature Highlights

---

---

**CTCSS and DCS Squelch Modes** – prevent interference from stations not using the mode you select.

**Dropout Delay** – You can set whether the scanner pauses at the end of a transmission to wait for a reply. You can set the delay time for each system you scan, and while searching and using the Close Call feature.

**Attenuator** – You can set the scanner's attenuator to reduce the input strength of strong signals received by the scanner.

**Repeater Reverse** – You can set the scanner so it switches to the input frequency on a conventional repeater system or trunked system.

**Channel Alert** – You can set the scanner so it alerts you when there is activity on any channel you specify.

**Memory Check** – Lets you see at a glance how much total memory is left.

**Frequency Step** – Lets you select a frequency step (5, 6.25, 7.5, 10, 12.5, 15, 25, 50 or 100 kHz) for manual mode and chain search mode. The scanner's auto step feature lets you set the scanner so it automatically chooses the correct step.

**Quick Recall** – Lets you quickly select a specific channel by choosing the system, group, and channel.

**Scan/Search Delay** – You can set the scanner so it remains on a frequency up to 5 seconds after the last transmission to wait for a possible reply.

**Text Tagging** – You can name each system, group, channel, talk group ID, custom search range, and SAME group, using up to 16 characters per name.

**Unique Data Skip** – Allows your scanner to skip unwanted data transmissions and reduces birdies.

**Duplicate Frequency Alert** – Alerts you if you try to enter a duplicate name or frequency already stored in the scanner.

## Feature Highlights

---

---

**Memory Backup** – If power is lost or disconnected, the scanner retains the frequencies you programmed in its memory.

### **Trunk Tracking**

**Trunk Tracker™ Operation** – Follows conversations on analog Motorola, EDACS, EDACS SCAT, and LTR trunked radio systems. The scanner can scan both conventional and trunked systems at the same time.

**Control Channel Only Scanning and Searching** – If the scanner is set to scan Motorola trunking frequencies, you can set it so it scans using only control channel data. You do not have to program voice channel frequencies into memory in this mode.

During custom search, you can also set the scanner so it stops only on the control channel for a system type you select.

### **Bands**

**21 Bands** – Includes 21 bands, with Aircraft and 800 MHz.

**25 MHz-1300 MHz** – Your scanner covers an extensive frequency range so you can monitor most of the transmissions in your area.

**Note:** The scanner's frequency coverage is not continuous and does not include the cellular telephone band.

### **Weather**

**Weather Search** – Lets your scanner receive your local NOAA weather transmission.

**SAME Weather Alert** – Lets your scanner alert you when a SAME weather alert is transmitted on a NOAA weather channel. The scanner also displays the transmitted SAME code. This helps you quickly find out about severe weather in your area and lets you avoid false alarms.

## **Feature Highlights**

---

---

## Search

**Code Search** – Lets you quickly search for the CTCSS/DCS code used during a transmission.

**Quick Search** – Lets you quickly search starting with the current frequency in a conventional system, and search for trunked ID's in a trunked system.

**Subaudible Tone Search** – Lets the scanner search for CTCSS or DCS tones. You can identify up to 50 CTCSS tones and 104 DCS tones.

## Auto Store

**Frequency AutoStore** – Automatically stores all active frequencies within a system you select.

**Talk Group ID AutoStore** – Automatically stores all new talk group ID's into a system you select.

## Priority

**Priority Scan** – Priority channels let you keep track of activity on your most important channel(s) while monitoring other channels for transmissions.

**Priority Plus** – You can set the scanner so it scans only the priority channels you set

## Backlight and Power

**LCD Back Light** – Makes the display easy to see in dim light. You can adjust the back light so it turns on when you press a key, when squelch breaks during a transmission, or manually.

**Low Battery Alert** – The scanner alerts you if the batteries need to be recharged or replaced.

**Battery Save** – You can set the scanner so it stops scanning if there are no transmissions. This helps save battery power.

## Feature Highlights

---

---

## Key Controls

**Key Lock** – You can deactivate the scanner's keys to help prevent accidentally changing the scanner's programming.

## PC Control and Cloning

**PC Control** – You can transfer programming data to and from your scanner and your personal computer, and control the scanner using a computer. This helps you find frequencies listed on the Internet and load them into the scanner.


**Clone Mode** – You can clone all programmed data, including the contents of the scanner's memory, menu settings, and other parameters from one BC-246T scanner to another BC-246T scanner.

## About This Manual

The screen displays used in this manual are representations of what might appear when you use your scanner. Since what you see depends on the frequencies and user ID's for your area and the settings you select, you might notice some differences between what is in this manual and what appears on your scanner.

## *How the Scanner's Controls Are Represented in This Manual*

To help you navigate the scanner's menus, the steps shown in this manual show the displays you see and the keys you press or control you operate to get a desired result.

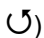This example shows you how to use the scanner's menu to edit an existing system name. It shows you the key to press (**MENU**) to select a menu option and the option you see (Program System) when you press **MENU**. It also instructs you to turn the rotary control (shown as )

## Feature Highlights

---

---

to view a series of choices then select one choice (Edit Name).

**MENU** → Program System →

**E** Select System or New System →

**U** → System name you want to edit → **E**

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

**U** → Edit Name → **E** → System Name

To get the most from this manual, review the contents to become familiar with the basic functions available. If you are new to scanning or trunk tracking, be sure to read “Understanding Scanning” on Page 17 for a quick background on the technology behind the hobby. The first thing you’ll need to do is install batteries in the scanner. Then you need to connect the included antenna to the scanner. See “Setting Up Your Scanner” on Page 28 if you need any help doing this.

### ***Entering Text***

To enter a letter, turn the scroll control until the character you want appears, To enter a number, press a number key. To enter a decimal point, press **•**.

To move the cursor to the left, repeatedly press **</4** while holding down **Func**. To move the cursor to the right, repeatedly press **6/>** while holding down **Func**.

To clear a character, press **•**. To clear all characters, press **•** 3 times.

## **Feature Highlights**



---

---

## Understanding Scanning

---

---

This section provides you with background on how scanning works. You don't really need to know all of this to use your scanner, but some background knowledge will help you get the most from your BC246T.

### Understanding the Scanner's Memory

Your scanner's memory is organized in an architecture called *Dynamic Allocated Channel* memory. This type of memory is organized differently and more efficiently than the bank/channel architecture used by traditional scanners. Dynamic Allocated design matches how radio systems actually work much more closely, making it easier to program and use your scanner and determine how much memory you have used and how much you have left.

Instead of being organized into separate banks and channels, your scanner's memory is contained in a *pool*. You simply use as much memory as you need in the pool to store as many frequencies, talk group ID's, and alpha tags as you need. No memory space is wasted, and you can tell at a glance how much memory you have used and how much remains.

With a traditional scanner, when you program it to track a trunked system, you must first program the frequencies. Since you can only program one trunking system per bank in a traditional scanner, if there were (for example) 30 frequencies, the remaining 70 or so channels in the bank are not used and therefore wasted. Also, since some trunked systems might have hundreds of talk groups, you would have had to enter those types of systems into multiple banks in order to monitor and track all the ID's.

### What is Scanning?

Unlike standard AM or FM radio stations, most two-way communications do not transmit continuously. Your BC246T scans programmed channels until it finds an active frequency, then stops on that frequency and remains on that channel as long as the transmission

## Understanding Scanning

---

---

continues. When the transmission ends, the scanning cycle resumes until the scanner receives another transmission.

## **What is Searching?**

The BC246T can search each of its 21 bands and up to 10 bands together to find active frequencies. This is different from scanning because you are searching for frequencies that have not been programmed into the scanner. When you select frequency bands to search, the scanner searches for any active frequency within the lower and upper limits you specify. When the scanner finds an active frequency, it stops on that frequency as long as the transmission lasts. If you think the frequency is interesting, you can program it into one of the banks. If not, you can continue to search.

## **What is CTCSS/DCS?**

Your scanner can monitor systems using a Continuous Tone Control Squelch (CTCSS) and Digital Coded Squelch (DCS) system, which allow squelch to open only when the tone you have programmed with a specific frequency is received along with a transmission.

CTCSS and DCS are subaudible tone signaling systems sometimes referred to as PL (Motorola's trademarked term for Private Line). CTCSS and DCS are used only for FM signals and are usually associated with both amateur and commercial two-way repeaters. These systems make use of a special subaudible tone that accompanies a transmitted signal.

CTCSS and DCS are used for many purposes. In many cases, CTCSS and DCS are used to restrict access to a commercial repeater, so that only those units, which transmit the correct tone along with their signal can "talk to the repeater."

CTCSS and DCS are also used in areas that receive interference where there are several stations with output frequencies close to each other. When this occurs, you

## **Understanding Scanning**

---



---

might hear multiple communications at the same time. The stations might even interfere with each other to the point where it is impossible to clearly receive any of the stations. A scanner equipped with CTCSS and DCS (like your scanner) can code each received frequency with a specific CTCSS or DCS frequency. Then, when you receive multiple signals, you only hear the transmission with the CTCSS or DCS tone you programmed. If you do not receive the correct tone with a signal, the scanner's squelch remains closed and you hear nothing.

Local frequency allocation groups set cooperative standards to establish the CTCSS and DCS tone for each transmitter (or repeater).

You can search for the following CTCSS frequencies and DCS codes.

**CTCSS Frequencies (Hz)**

67.0	69.3	71.9	74.4	77.0	79.7
82.5	85.4	88.5	91.5	94.8	97.4
100.0	103.5	107.2	110.9	114.8	118.8
123.0	127.3	131.8	136.5	141.3	146.2
151.4	156.7	159.8	162.2	165.5	167.9
171.3	173.8	177.3	179.9	183.5	186.2
189.9	192.8	196.6	199.5	203.5	206.5
210.7	218.1	225.7	229.1	233.6	241.8
		250.3	254.1		

**DCS Codes (Octal)**

023	025	026	031	032	036	043	047
051	053	054	065	071	072	073	074
114	115	116	122	125	131	132	134
143	145	152	155	156	162	165	172
174	205	212	223	225	226	243	244
245	246	251	252	255	261	263	265
266	271	274	306	311	315	325	331

**Understanding Scanning**

---



---

332	343	346	351	356	364	365	371
411	412	413	423	431	432	445	446
452	454	455	462	464	465	466	503
506	516	523	526	532	546	565	606
612	624	627	631	632	654	662	664
703	712	723	731	732	734	743	754

## Conventional Scanning

Conventional scanning is a relatively simple concept. Each group of users in a conventional system is assigned a single frequency (for simplex systems) or two frequencies (for repeater systems). Any time one of them transmits, their transmission always goes out on the same frequency. Up until the late 1980's this was the primary way that radio systems operated.

Even today, there are many 2-way radio users who operate using a conventional system:

- Aircraft
- Amateur radio
- FRS/GMRS users
- Broadcast AM/FM/TV stations
- Many business radio users

When you want to store a conventional system, all you need to know is the frequencies they operate on. When you are scanning a conventional system, the scanner stops very briefly on each channel to see if there is activity. If there isn't, the scanner quickly moves to the next channel. If there is, then the scanner pauses on the transmission until it is over.

### ***Simplex Operation***

Simplex systems use a single frequency for both transmit and receive. Most radios using this type of operation are limited to line-of-sight operation. This type of radio is frequently used at construction job sites, and with inexpen-

## Understanding Scanning

---

---

sive consumer radios such as GMRS/FRS radios. The range is typically 1-8 miles, depending upon the terrain and many other factors.

### ***Repeater Operation***

Repeater systems use two frequencies: one transmits from the radio to a central repeater; the other transmits from the repeater to other radios in the system. With a repeater-based system, the repeater is located on top of a tall building or on a radio tower that provides great visibility to the area of operation. When a user transmits (on an input frequency), the signal is picked up by the repeater and retransmitted (on an output frequency). The user's radios always listen for activity on the output frequency and transmit on the input frequency. Since the repeater is located very high, there is a very large line of sight.

Typical repeater systems provide coverage out to about a 25-mile radius from the repeater location.

### **What is Trunk Tracking?**

Your BC246T is designed to track the following types of trunking systems.

- Motorola Type I, Type II, Type III, hybrid, SMARTNET, and PRIVACYPLUS analog trunking systems, which are extensively used in 800 MHz communication systems.
- LTR trunking systems
- EDACS SCAT trunking systems
- EDACS trunking systems

When tracking these types of systems, you might want to remember these important points:

- Your scanner can track more than one trunking system at a time and scan conventional and trunked systems at the same time.
- The frequencies for many of the 800 MHz public safety systems are listed in the *National Public Safety*

## **Understanding Scanning**

---

---

*Trunked System Frequency Guide* included with your BC246T scanner.

Conventional scanning is a simple concept. You enter a frequency used by someone you want to monitor into your scanner's memory. For example, the police in your area might transmit on 460.500 MHz, the fire department on 154.445 MHz, the highway department on 37.900 MHz, etc. So when your scanner stops on a frequency, you usually know who it is, and more importantly, you can stop on a channel and listen to an entire conversation. This type of scanning is easy and fun.

However, as the demand for public communications has increased, many public radio users do not have enough frequencies to meet their needs, creating a serious problem. Trunking radio systems help solve this problem.

## **Trunked Scanning**

While conventional scanning worked great while there were only a few groups wanting to use the frequencies, with the advent of smaller, lower-cost radios more and more agencies and businesses wanted to take advantage of the utility of 2-way radio. As a result, the bands that were used most became full, so new users were not able to take advantage of the technology as quickly as they wanted.

Trunking solved this frequency shortage by allowing multiple groups to use the same set of frequencies in a very efficient way. While each type of trunking system operates a little differently (see the next few sections), they all work on the same basic premise: even in a system with a lot of users, only a few users are ever transmitting at any one time.

Instead of being assigned a frequency, as with conventional systems, each group is assigned a talk group ID. A central computer controls the frequency each group operates on...and this frequency selection is made each time a user transmits. So, while on a conventional

## **Understanding Scanning**

---

---

system queries, replies, and follow-ups are all on a single frequency, they could each be on completely different frequencies on a trunked system. This semi-random frequency assignment made monitoring such a system impossible prior to Uniden's invention of the Trunktracking scanner.

Not only does your BC246T scan channels like a conventional scanner, it actually follows the users of a trunked radio system. Once you know a talk group's ID, you won't miss any of the action.

If you are a new scanner enthusiast, you might want to read the first part of this manual and use your scanner in conventional mode before you begin trunk tracking. Understanding scanning fundamentals and terminology will make trunk tracking much easier. If you are already an experienced scanner operator, you might want to go to "Programming Trunked Systems" on Page 42 now.

## **Types of Trunking Systems**

Trunking systems divide a few frequencies among many different users, but the way that each system does this is slightly different. This section describes some of the technical data behind Motorola, EDACS, and LTR trunked radio systems.

### ***Motorola Trunking***

While there are different types of Motorola trunking systems, they all use the same basic trunking method. The system consists of one control channel plus one or more voice channels (typically 10, 20, or 30 total channels). When a user presses Push To Talk (PTT) to transmit, their radio first sends their talk group information to the control channel. The computer then assigns that talk group to a specific voice channel and transmits that data over the control channel. All radios in that talk group switch over to the assigned voice channel and the user can begin speaking. This all typically takes place in about a second...the person transmitting hears a beep from their

## **Understanding Scanning**

---

---

radio when the channel is assigned and then it is OK to start talking.

The systems in use are:

Motorola Type I – the radios send the radio ID, the fleet and subfleet talk group ID to the control channel each time they transmit. To program a Type I system, you need to know the system's *fleet map*. The most common fleet maps are included at the back of this manual. You can also find fleet map resources on the web.

Motorola Type II – the radios only send the radio ID and radio channel code to the control channel. The central computer keeps a database of radio ID's and which talk group is assigned to which channel code for each radio, so with this system the user's radio sends only about  $\frac{1}{3}$  the data as a Type I system with each transmission. Type II systems do not use Fleet-subfleet talk groups; instead they use a 5-digit ID for each talk group.

Type Ili Hybrid — these systems support a mix of both Type I and Type II users. Like Type I systems, you must know the system's fleet map to ensure proper tracking.

### ***EDACS Trunking***

EDACS trunking works in much the same way as Motorola trunking with a couple of major differences. In an EDACS system, each frequency used by the system is assigned a Logical Channel Number (LCN) so that less data needs to be transmitted by the control channel. Also, talk groups are assigned in an Agency-Fleet-Subfleet (AFS) hierarchy. Also, there is one variation of EDACS called SCAT that your BC246T can monitor.

Logical Channel Numbers – each frequency used by the system is assigned an LCN. This information is programmed into each user radio. When a user presses PTT, their radio sends their AFS information to the control channel. The computer then assigns that talk group to a channel and sends the LCN so that all other radios in that talk group will switch to the correct channel. To program an EDACS system in your scanner, you will need to know

## **Understanding Scanning**



---

---

both the frequencies used by the system and the LCN for each frequency.

Agency-Fleet-Subfleet – talk group ID's for EDACS systems are assigned in a way that makes it easy to see at a glance the affiliation of the user. Each radio is assigned a 2-digit agency identifier from 00 – 15. For example, 01 might be used by the police, 02 by ambulance service, 03 by the fire department, and so on. Each agency is then subdivided up to 16 times to provide fleet identification, and then 8 more times to identify subfleets.

For example, the complete AFS for the Police Department West District's dispatch channel might be 01-062. 01 identifies the agency as the police department, 06 identifies the fleet as the West district, and 2 identifies the subfleet as the dispatch channel. While these assignments are somewhat arbitrary and vary from system to system, there are many resources on the web for finding the assignments for most systems. Because of the logical hierarchy of the AFS system, your BC246T lets you assign wildcard ID's that let you, for example, use only one ID memory to identify all units in either an agency or a fleet.

EDACS SCAT – EDACS SCAT (Single Channel Autonomous Trunking) systems operate on a single channel and alternate control data with analog voice traffic. While your BC246T cannot track ID's in this system, it can eliminate the control data so that all you hear is the voice transmissions when you monitor this type of system.

### ***LTR Trunking***

LTR (Logic Trunked Radio) systems are trunking systems used primarily by business or private communications service providers, such as taxicabs, delivery trucks, and repair services. These systems encode all control information as digital subaudible data that accompanies each transmission, so there is no separate control channel. Users on an LTR system are assigned to specific talk groups, which are identified by the radio as six digit numbers.

## **Understanding Scanning**

---

---

These numbers are in the form AHHUUU, where:

A = Area code (0 or 1)

H = Home repeater (01 through 20)

U = User ID (000 through 254)

When the scanner receives a transmission on a channel set to the LTR mode, it first decodes the LTR data included with the transmission. In the ID search mode, the scanner stops on the transmission and displays the talk group ID on the display. In the ID scan mode, the scanner only stops on the transmission if the LTR data matches a talk group ID that you have stored in the bank's talk group ID list and have not locked out. LTR systems are frequently programmed so that each radio has a unique user ID.

## **Where To Get More Information**

By itself, this manual really only provides part of what you need to know to have fun scanning – how to program and use the scanner. The two included conventional and trunking frequency guides will give you a good head start on the other part of what you need to know – what frequencies have interesting content.

### ***Information On The Internet***

The Internet is a great source for current frequencies and information about scanning. Many web sites have lists of frequencies for your area. You can use a search engine to find and use them.

Make a list of the agencies you want to listen to, then look up the frequencies and systems used by those agencies. Here are a few useful sites:

- <http://www.scannermaster.com> \* - frequency resources and home of Police Call.

You can also call them at 1 800 SCANNER (hours are from 10:00 a.m. to 5:00 p.m. Eastern Time Monday through Friday).

## **Understanding Scanning**

- 
- 
- <http://www.radioreference.com> \* - the Internet's premier source for user-supported radio system information.
  - <http://www.bearcat1.com> - frequency information from National Communications.
  - [svartifoss2.fcc.gov/reports/index.cfm](http://svartifoss2.fcc.gov/reports/index.cfm) \* - conventional frequency information on file with the US Government
- \* - This web site is not affiliated with Uniden Corporation.

To purchase another copy of the conventional or trunking frequency guide, contact your local dealer or:

Uniden Parts Department  
(800) 554-3988  
(Hours are from 8:00 a.m. to 5:00 p.m. Central Time Monday through Friday.)

For more information about Uniden and our other products, visit <http://www.uniden.com>.

## **Using a Computer to Control Your BC246T**

You can operate your scanner using software and a personal computer and cable (not included). Demo and full-featured software are available at <http://www.uniden.com>.

---

---


## Included With Your Scanner

---

---



Scanner

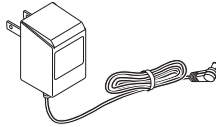

AC Adapter




Wrist Strap



Batteries



Belt Clip

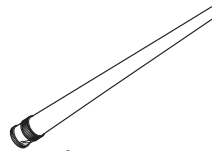


Antenna



Frequency Guide



Owners Manual

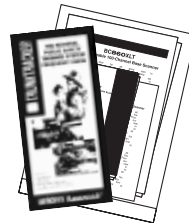

National Public Safety  
Trunked System  
Frequency Guide

If any of these items are missing or damaged, immediately contact your place of purchase or Uniden Customer Service at: (800) 297-1023, 8:00 a.m. to 5:00 p.m., Central, Monday through Friday.

Included With Your Scanner

---

---

## Setting Up Your Scanner


---

---

These guidelines will help you install and use your new scanner:

- If your scanner receives interference or electrical noise, move the scanner or its antenna away from the source.
- To improve the scanner's reception, use an optional external antenna designed for multi-band coverage. (You can purchase this type of antenna at a local electronics store). If the optional antenna has no cable, use 50-70 ohm coaxial cable for lead-in. A mating plug might be necessary for the optional antennas.
- Use an optional mono earphone or mono headset with proper impedance for private listening. Read the precautions on the inside front cover of this Owners Manual.
- Do not use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the scanner in direct sunlight or near heating elements or vents.

### Using Internal Batteries

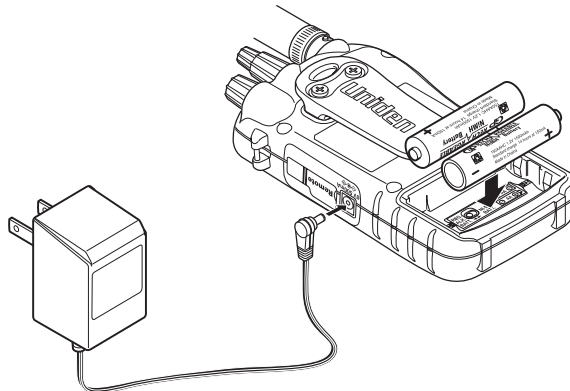

You can power your scanner using two alkaline, lithium, or rechargeable (Ni-Cd or Ni-MH) AA batteries.


### Setting Up Your Scanner

---


---

Before installing batteries, set the switch in the battery compartment to match the type of batteries you will use. Select **ALKALINE** for non-rechargeable battery types and **RECHARGEABLE** for rechargeable battery types, including Ni-Cd and Ni-MH. See also “Using Rechargeable Batteries” on Page 31 when you use rechargeable batteries.

1. Remove the battery cover and set the battery switch.

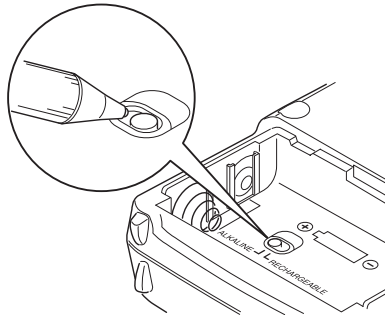

2. Install 2 AA batteries, matching the polarity symbols (+ -).

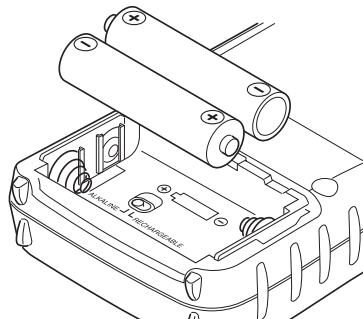

**WARNING!**


Set **ALKALINE/RECHARGEABLE** to **RECHARGEABLE** for use only with nickel cadmium (Ni-Cd) or nickel metal hydride (Ni-MH) rechargeable batteries. Never attempt to recharge non-rechargeable batteries. Non-rechargeable batteries can get hot or burst if you try to recharge them.

**Setting Up Your Scanner**

---

---

3. Replace the cover.

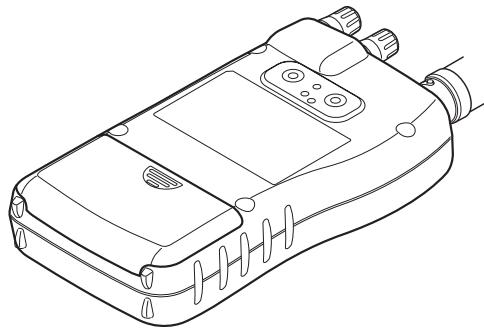

When **BATT** flashes and the scanner beeps every 15 seconds, replace both batteries.

## Using Rechargeable Batteries

You can also use two rechargeable batteries to power your scanner. Before you use Ni-Cd or Ni-MH batteries, you must charge them.

The scanner has a built-in circuit that lets you recharge Ni-Cd or Ni-MH batteries while they are in the scanner. To charge the batteries, set **ALKALINE/RECHARGEABLE** inside the battery compartment to **RECHARGEABLE**, install the batteries in the scanner, and connect the supplied AC adapter to the scanner's DC 6V jack (see "Using AC Power" on Page 32).

### **WARNING!**

Do not connect the AC adapter to the scanner if non-rechargeable batteries (such as alkaline batteries) are installed in the scanner and **ALKALINE/RECHARGEABLE** is set to **RECHARGEABLE**, or if you are unsure of the switch's position. Non-rechargeable batteries will get hot and can even burst if you try to recharge them.

---

---

Before you use Ni-Cd or Ni-MH batteries for the first time, charge them for 14 hours to bring them to a full charge.

Discharged batteries take about 14 hours to fully recharge.

## Using AC Power

You can power the scanner using the supplied 6V, 300 mA AC adapter.

To use the scanner on AC power, plug the AC adapter into a standard AC outlet.

If rechargeable batteries are installed and **ALKALINE/RECHARGEABLE** is set to **RECHARGEABLE**, the adapter powers the scanner and recharges the installed batteries at the same time.

## Connecting the Antenna

To attach the supplied flexible antenna to the connector on the top of your scanner, align the slots around the antenna's connector with the tabs on the scanner's BNC connector. Then slide the antenna's connector down over the scanner's connector and rotate the antenna connector's outer ring clockwise until it locks into place.

### *Connecting an Optional Antenna*

The scanner's BNC connector makes it easy to connect a variety of optional antennas, including an external mobile antenna or outdoor base station antenna.

Note: Always use 50-ohm, RG-58, or RG-8, coaxial cable to connect an outdoor antenna. If the antenna is over 50 feet from the scanner, use RG-8 low-loss dielectric coaxial cable. You can get a BNC adapter at your local electronics store.



---

---

## Connecting an Earphone/Headphone

For private listening, you can plug a 1/8-inch (3.5 mm) mini-plug earphone or mono headphones (not supplied) into the headphone jack on top of your scanner. This automatically disconnects the internal speaker.

## Connecting an Extension Speaker

In a noisy area, an optional amplified extension speaker, positioned in the right place, might provide more comfortable listening. Plug the speaker cable's 1/8-inch (3.5-mm) mini-plug into your scanner's jack.

### **WARNING!**

If you connect an external speaker to the scanner's headphone jack, never connect the audio output line to a power supply and ground. This might damage the scanner.

## Attaching the Belt Clip

To make your scanner easier to carry when you are on the go, use the supplied belt clip. Use a Phillips screwdriver and the supplied screws to attach the clip to the scanner.

---

---

## Installing the Demo Software

You can operate your scanner using a personal computer and the free demo software available at <http://www.uniden.com>.

If you have installed the software and it is running, select **Help** by right clicking anywhere on the opening screen. A selection popup appears. Move the cursor to **Help**. **BC246TSS Help** appears. Then click on **BC246TSS Help**.

Download the software, then double-click on the install package to begin installation. The BC246T SS Install program installs the software. You must install the software to use the scanner with your computer.

After you install the BC246T SS Install program, start it by double clicking on the desktop icon or by selecting it in the Start Programs list.


You can upgrade the included software to a full version by purchasing a registration key at <http://www.uniden.com>.

---



---

## A Look At The Keypad

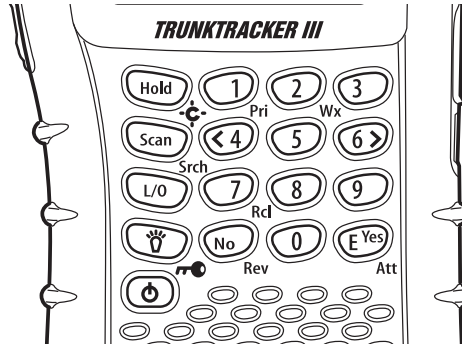

Your scanner's keys have various functions labeled on the key tops and below the keys.






To select the function labeled on a key, simply press the key. To select the function labeled below a key, hold down **Func** on the left side of the scanner then press the key.

**F** appears on the display.

If your scanner's keys seem confusing at first, the following information should help you understand each key's function.

Key Name	Description
<b>Hold/</b> ←	<p><b>Hold</b> – Holds the scan or the frequency search. Press and hold <b>Hold</b> to increment channels continuously.</p> <p><b>Func +</b> ← – Switches between the Close Call feature modes (see “Setting the Close Call Mode” on Page 76).</p>
Scan/Srch	<p><b>Scan</b> – Scans the stored channels.</p> <p><b>Func + Scan</b> – Starts and resumes chain search and resumes scanning.</p>

## Setting Up Your Scanner

Key Name	Description
L/O	<p><b>L/O</b> – Lets you lock out a selected channel or skip a specified frequency.</p> <p><b>Func + L/O</b> – Locks and unlocks a selected system in Scan or Scan Hold mode and reviews search lockout frequencies in Search or Search Hold mode.</p>
 / 	<p> – Turns the display backlight on or off.</p> <p><b>Func + </b> – Locks and unlocks the keypad.</p>
	<p>Press and hold for more than 2 seconds to turn the scanner on or off. Press quickly to cancel a prompt.</p>
1-9, 0	<p><b>1-9, 0</b> – Enters a frequency, enters Quick Key numbers, and selects a custom search range in Custom Search mode.</p> <p><b>Func + 1-9, 0</b> – Selects groups by Quick Key in scan mode.</p>
1/Pri	<p><b>1</b> – Enters a 1.</p> <p><b>Func + Pri</b> – Selects the priority mode.</p>
2/Wx	<p><b>2</b> – Enters a 2.</p> <p><b>Func + WX</b> – Selects the weather function in the menu.</p>
3	<p><b>3</b> – Enters a 3.</p>

## Setting Up Your Scanner


Key Name	Description
</4	<b>4</b> – Enters a 4.  <b>Func + &lt;</b> – Moves the active character to the left while editing data.
5	<b>5</b> – Enters a 5.
6/>	<b>6</b> – Enters a 6.  <b>Func + &gt;</b> – Moves the active character to the right while editing data.
7/Rcl	<b>7</b> – Enters a 7.  <b>Func + Rcl</b> – Displays a series of prompts to quickly select a specific channel.
8	<b>8</b> – Enters an 8.
9	Enters a 9.
No/•/Rev	<b>No</b> – Enters a decimal point or dash in a frequency or talk group ID, enters an “i” for I-Call input, and cancels the current operation.  <b>Func + Rev</b> – Monitors the currently-tuned frequency’s reverse frequency.
0	<b>0</b> – Enters a 0.
E/Yes/Att	<b>E</b> – Press to select input and menu items, to quickly edit a channel in Scan Hold Mode, and store a frequency into memory in Scan Hold mode.  <b>Func + Att</b> – Turns the scanner’s attenuator on or off.

## Setting Up Your Scanner

---

---

## A Look At The Display

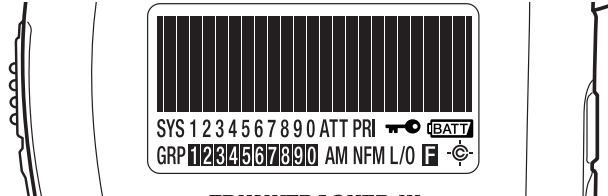



The display has indicators that show the scanner's current operating status. The display information helps you understand how your scanner operates. The dark area shown above the icons in this illustration is the text display area. Information about the currently tuned frequency appears here.

**SYS** - shows the currently activated system, appears with numbers (0-9). The currently active system indicator flashes.

**ATT** - appears when the attenuation feature is turned on (see "Setting the Attenuator" on Page 54).

**PRI** - appears when the priority feature is turned on (see "Setting Channel Priority" on Page 49).

 - appears when you lock the keypad (see "Locking/Unlocking the Keypad" on Page 74).


 - alerts you when the battery power gets low.

**GRP** - shows the currently activated group, appears with numbers (**0-9**). The currently active group indicator flashes.

**AM/FM/NFM** - appears to show the type of transmission.

**L/O** - appears when you manually select a channel you locked out or a skip frequency.

**F** - appears when you hold down **Func** to select a function.

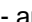 - appears when the scanner is set to a Close Call feature mode (see "Using the Close Call Feature" on Page 75).

## Setting Up Your Scanner

---

---


## Basic Operation

---


---

### Turning On The Scanner and Setting the Squelch

**Note:** Make sure the scanner's antenna is connected before you turn it on.


1. Turn **Sq1** fully counterclockwise.
2. Press and hold  for about 2 seconds to turn the scanner on, then turn **Vol** clockwise until you hear a hissing sound.
3. Turn **Sq1** clockwise until the hissing stops.
4. Press **Scan**.

### Using Menu

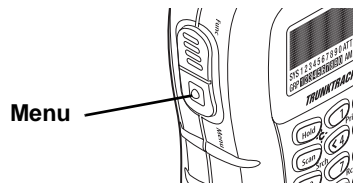

Press **MENU** on the left side of the scanner to enter the menu. See "Using the Menu" on Page 41 for more information about the scanner's menu options.

### Using Func

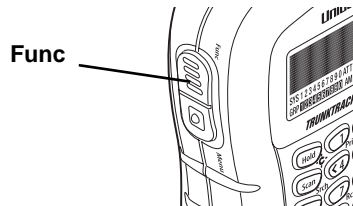


To select the function labeled below a key on the front of the scanner, hold down **Func** then press the key. To hold on a system while scanning or temporarily stop on a channel while searching, press **Func**. To select a system in Scan or Scan Hold mode, hold down **Func** and rotate the scroll control.

Basic Operation

---

---

## Using the Scroll Control

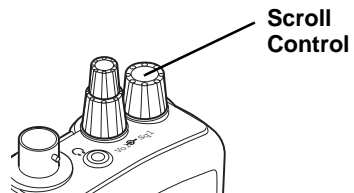

Turn the scroll control on top of the scanner to select a channel or frequency in Hold mode, select menu items in Menu mode, and to select a character while editing a name.



## Using the Menu

The scanner's menu lets you select options that let you set up and use the scanner.

To use the menu, press **[MENU]** on the left side of the scanner. In most cases, the current menu position appears on the upper line of the menu. Menu items and a place to input information appear on the lower line of the menu. To select a menu item, turn the scroll control on top of the scanner clockwise or counterclockwise. When the menu item you want to select appears, press **[E]** or press the scroll control down to select it. To back up a level or return to the previous level, press **[MENU]**. To exit the menu mode, press **Scan**.

This table shows the available menu options and where you can find more information about how to use them.

Menu Item	Lets You ...	See ...
-- M E N U -- Program System	Set up your scanner's scan options.	"Programming Radio Systems" on Page 43.
-- M E N U -- Srch/CloCall Opt	Set up your scanner's Close Call option.	"Using the Close Call Feature" on Page 75.
-- M E N U -- Search for ...	Set up the scanner's search option.	.
-- M E N U -- Close Call	Set up the scanner's Close Call operation.	"Setting the Close Call Mode" on Page 76.

### Using the Menu

<b>Menu Item</b>	<b>Lets You ...</b>	<b>See ...</b>
-- M E N U -- Set Priority	Set up priority options.	"Setting Channel Priority" on Page 49.
-- M E N U -- WX Operation	Set up weather options.	"Using Weather Alert (SAME)" on Page 80.
-- M E N U -- Set Backlight	Set up backlight options.	"Using the Backlight" on Page 73.
-- M E N U -- Adjust Key Beep	Set up key beep options.	"Adjusting the Key Beep" on Page 74.
-- M E N U -- Set Battery Save	Set up battery save options.	"Turning Power Save On or Off" on Page 74.
-- M E N U -- See Scanner Info	View information about your scanner.	"Displaying System Information" on Page 74.
-- M E N U -- Xfer Information	Transfer information between it and your personal computer.	"Using a Computer to Control Your BC246T" on Page 27.

## Using the Menu

---

---

## Programming Radio Systems

---

---

Your BC246T comes preprogrammed with the major analog systems used in the 25 most populous counties in the US. However, to get the most enjoyment from your scanner (especially if you do not live near one of these counties), you must customize the programming for your area.

To edit an existing system, use the menu to navigate to the system setting you want to change. This section assumes you are programming a new system.

Programming radio systems is completed in two major steps. Don't skip either step!

1. Plan the system.
2. Program the system into your scanner according to the plan you prepared in Step 1.

To make planning easier, planning worksheets are included in the back of this manual for each system type. Copy the worksheets (or download this manual from the Uniden America Corporation website and print extra sheets), then use them to plan out how you will program the scanner.

**Important!** Before you start programming your radio, make sure the batteries are fresh or fully charged. Losing power while programming the radio might damage the radio's memory.

### Programming Conventional Systems

**MENU** → Program Systems → **E** ↻  
New System → **E** → Conventional →  
**E** → Confirm? → **E**

The scanner creates an empty conventional system, with a default name of System nn C.  
nn increments as you add new systems.  
C indicates that this is a conventional system.

## Programming Radio Systems

---

---

Next, refer to the appropriate section to set system-wide options:

- Edit the system name (see “Editing an Existing System Name” on Page 44)
- Enter a new system name (see “Entering a New System Name” on Page 45)
- Set the system Quick Key (see “Setting the System Quick Key” on Page 45)
- Set the system lockout (see “Setting System Lockout” on Page 45)
- Set the system hold time (see “Setting the System Hold Time” on Page 45)
- Set the channel delay time (see “Setting the Channel Delay Time” on Page 46)
- Set data skip (see “Setting Data Skip” on Page 46)
- Deleting a system (see “Deleting a System” on Page 46)
- Copying a system (see “Delete System g g Confirm Delete? Yes=E / No=. g E or No=.” on Page 46)
- Entering/editing conventional channel groups (see “Entering/Editing Conventional Channel Groups” on Page 46)

### ***Editing an Existing System Name***

↻ → System name you want to edit → [E]

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

↻ → Edit Name → [E] → System Name

Edit the system name (see “Entering Text” on Page 16),

Note: If you enter a duplicate system name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

---

---

## **Entering a New System Name**

↻ → *New System* → [E] →

Select Sys Type

Conventional

MOT

EDCS

LT

Conventional → [E] → Confirm?

[E] (to confirm) → Edit Name → [E] →

[No/Rev] (to stop here)

Enter the new system name (see “Entering Text” on  
Page 16) → [E]

Set QUICK KEY

SET DATA SKIP

SET DELAY TIME

SET Hold Time

Set Lockout

## **Setting the System Quick Key**

Set Quick Key → ↻ → 0-9 → [E] →

## **Setting System Lockout**

Set Lockout → ↻

Lockout

Unlocked

→ [E]

## **Setting the System Hold Time**

Set Hold Time → ↻ → 0-255 → [E] →

---

---

### ***Setting the Channel Delay Time***

Set Delay Time → ⤴

1 sec

2 sec

3 sec

4 sec

5 sec

OFF

→

### ***Setting Data Skip***

Set Data Skip → ⤴

On

Off

→

### ***Deleting a System***

Delete System →

→ Confirm Delete? Yes=E / No=. → E or No=.

### ***Copying a System***

New Sys Name? →

Enter the system name (see “Entering Text” on Page 16)

→

### ***Entering/Editing Conventional Channel Groups***

To enter channels in a conventional system, first set up a channel group (or groups) to hold the channels. Then, enter the channel and channel parameters in the group(s).

---

---

## Setting Up a Channel Group

↻ → *Edit Group* → [E] →

↻ → *New Group* → [E]

The scanner creates a group with a default name of "Group nn". nn increments by one for each new group you create within a system.

Next, refer to the appropriate section to set group-wide options:

- Edit the Group Name (see "Editing an Existing Group Name" on Page 47)
- Setting the Group Quick Key (see "Setting a Group Quick Key" on Page 48)
- Setting the Group Lockout (see "Setting Group Lockout" on Page 48)
- Deleting a Group (see "Deleting a Group" on Page 48)
- Entering/Editing Channels (see "Entering/Editing Conventional Channels" on Page 48)

### ***Editing an Existing Group Name***

↻ → Group name you want to edit → [E]

Edit Name

Set Quick Key

Edit Channel

Delete Group

Set Lockout

↻ → Edit Name → [E] → Group Name

Edit the group name (see "Entering Text" on Page 16).

Note: If you enter a duplicate group name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

---

---

### **Setting a Group Quick Key**

Set Quick Key → ⏪ → 0-9 → [E] →

### **Setting Group Lockout**

Set Lockout → ⏪

Lockout

Unlocked

→ [E]

### **Deleting a Group**

Delete GROUP →

[E] → Confirm Delete? Yes=E / No=. → E or No=. [E]

### **Entering/Editing Conventional Channels**

⏪ → Edit Channel → [E] →

⏪ → New Channel → [E] → InputFrequency

Enter the frequency for the channel, then press E.

Then, refer to the appropriate section to change a channel setting:

- Editing the Channel Name (see “Editing the Channel Name” on Page 49)
- Setting Channel Priority (“Setting Channel Priority” on Page 49)
- Setting Channel Alert (see “Setting Channel Alert” on Page 49)
- Deleting a Channel (see “Deleting a Channel” on Page 50)
- Copying a Channel (“Copying a Channel” on Page 50)

To program another channel within the same group, press [MENU], then repeat the above.



---

---

To create another channel group and enter more channels, press **[MENU]** twice, then proceed from “Setting Up a Channel Group” on Page 47.

### ***Editing the Channel Name***

↻ → Channel name you want to edit → **[E]**

Edit Name

Set Quick Key

Edit Channel

Delete Group

Set Lockout

↻ → Edit Name → **[E]** → Channel Name

Edit the channel name (see “Entering Text” on Page 16).

Note: If you enter a duplicate channel name, the scanner beeps and Name Exists appears. To keep the name, press **[E]**. Otherwise, press **[No/Rev]**.

### ***Setting Channel Priority***

Set Priority → ↻

On

Off

→ **[E]**

### ***Setting Channel Alert***

Set ALERT → ↻

On

Off

→ **[E]**

---

---

### ***Deleting a Channel***

Delete CHANNEL →

→ Confirm Delete? Yes= / No= →  or No=

### ***Copying a Channel***

New CHANNEL Name? →

Enter the channel name (see “Entering Text” on Page 16)

→

## **Programming Motorola Systems**

MENU → Program System →  ↻

New System →  → MOT →

→ Confirm? →

Next, rotate the scroll knob to select the type of Motorola System you will program, then press E.

- 800MHz Standard - Use for 800 MHz systems that use the standard band plan
- 800MHz Splitter - Use for 800 MHz systems that use the splitter band plan (typically near international borders)
- 900MHz Band - Use for 900 MHz systems
- VHF Band - Use for VHF systems
- UHF Band - Use for UHF systems

The scanner creates an empty Motorola system, with a default name of System nn M.

nn increments as you add new systems.

M indicates that this is a Motorola system.

Next, refer to the appropriate section to set system-wide options. For most settings, you can accept the default. However, for the items in bold, you must enter information in order for your scanner to scan the system.

- Edit the System Name (see “Editing a System Name” on Page 52)

## **Programming Radio Systems**

- 
- 
- Set the System Quick Key (see “Setting the System Quick Key” on Page 52)
  - Set the System Lockout (see “Setting System Lock-out” on Page 52)
  - Set the System Hold Time (see “Setting the System Hold Time” on Page 52)
  - Set the Channel Delay Time (see “Setting the Channel Delay Time” on Page 52)
  - Set ID Scan/Search Mode (see “Setting ID Scan/Search Mode” on Page 53)
  - Edit the Fleet Map (see “Editing the Fleet Map” on Page 53) (must be set up for Type I systems)
  - Set the Motorola Status Bit (see “Setting the Motorola Status Bit” on Page 53 )
  - Set the End Code (see “Setting the End Code” on Page 53)
  - Set I-Call (see “Setting I-Call” on Page 53)
  - Set Emergency Alert (see “Setting Emergency Alert” on Page 54)
  - Set Control-Channel Only Mode (see “Setting Control Channel-Only Mode” on Page 54)
  - Reviewing Locked Out Talkgroups (see “Reviewing Locked-Out Talk Groups” on Page 54)
  - Clearing All Locked Out Talkgroups (see “Clearing All Locked-Out Talk Groups” on Page 54)
  - Setting the Attenuator (see “Setting the Attenuator” on Page 54)
  - Deleting a System (see “Deleting a System” on Page 54)
  - Copying a System (see “Copying a System” on Page 54)
  - Setting System Frequencies (see “Setting System Frequencies” on Page 55)
  - Entering/Editing Motorola Channel Groups (see “Entering/Editing Motorola Channel Groups” on Page 55)

## Programming Radio Systems

---

---

### ***Editing a System Name***

↻ → System name you want to edit → [E]

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

↻ → Edit Name → [E] → System Name

Edit the system name (see “Entering Text” on Page 16),

Note: If you enter a duplicate system name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

### ***Setting the System Quick Key***

Set Quick Key → ↻ → 0-9 → [E] →

### ***Setting System Lockout***

Set Lockout → ↻

Lockout

Unlocked

→ [E]

### ***Setting the System Hold Time***

Set Hold Time → ↻ → 0-255 → [E] →

### ***Setting the Channel Delay Time***

Set Delay Time → ↻

1 sec

2 sec

3 sec

4 sec

5 sec

OFF

→ [E]

---

---

### **Setting ID Scan/Search Mode**

ID SCAN/SEARCH → ⤴  
ID SCAN  
ID SEARCH  
→

### **Editing the Fleet Map**

EDIT FLEET MAP → ⤴  
PRESET  
CUSTOM  
→

If PRESET is entered, turn ⤴ to select one of the scanner's 16 preset fleet maps.

If CUSTOM is entered, enter the size code and block information.

### **Setting the Motorola Status Bit**

Set Status Bit → ⤴  
Yes  
Ignore  
→

### **Setting the End Code**

Set END CODE → ⤴  
Yes  
Ignore  
→

### **Setting I-Call**

Set I CALL → ⤴  
ON  
OFF  
ONLY  
→

---

---

### **Setting Emergency Alert**

EMERGENCY ALERT → ↻  
ALERT  
IGNORE  
→

### **Setting Control Channel-Only Mode**

Set C Ch Only → ↻  
ON  
OFF  
→

### **Reviewing Locked-Out Talk Groups**

12345 (locked-out talk group ID) →  
UNLOCK? (Y/N) →  or [No/Rev]

### **Clearing All Locked-Out Talk Groups**

CONFIRM? UNLOCK ALL (Y/N) →  or [No/Rev]

### **Setting the Attenuator**

Set ATTENUATOR → ↻  
ON  
OFF  
→

### **Deleting a System**

Delete SYSTEM →  
 → Confirm Delete? Yes=E / No=. → E or No=.

### **Copying a System**

New SYS Name? →  
Enter the system name (see "Entering Text" on Page 16)  
→

---

---

## **Setting System Frequencies**

SET FREQUENCIES → [E]

↻ New FREQUENCY → [E]

Input a system frequency, then press E.

To enter additional frequencies, press [MENU], scroll to New Frequency, then repeat the above.

Note: If you select Control Channel Only mode (see “Setting Control Channel-Only Mode” on Page 54), you only need to enter the frequency(s) that can be assigned as the control channel (this is usually notated on the available frequency lists). Otherwise, you must enter all of the frequencies.

## **Entering/Editing Motorola Channel Groups**

To enter channels in a system, first set up a channel group (or groups) to hold the channels. Then, enter the channel and channel parameters in the group(s).

### **Setting Up a Channel Group**

↻ Edit Group → [E]

↻ New Group → [E]

The scanner creates a group with a default name of "Group nn". nn increments by one for each new group you create within a system.

Next, refer to the appropriate section to set group-wide options:

- Edit the Group Name (see “Editing a Group Name” on Page 56)
- Setting the Group Quick Key (see “Setting a Group Quick Key” on Page 56)
- Setting the Group Lockout (see “Setting Group Lockout” on Page 56)

- 
- 
- Deleting a Group (see “Deleting a Group” on Page 57)
  - Entering/Editing Channels (see “Entering/Editing Motorola Channels” on Page 57)

### ***Editing a Group Name***

↻ → Group name you want to edit → [E]

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

↻ → Edit GROUP → [E] → Group Name

Edit the group name (see “Entering Text” on Page 16),

Note: If you enter a duplicate group name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

### ***Setting a Group Quick Key***

Set Quick Key → ↻ → 0-9 → [E] →

### ***Setting Group Lockout***

Set Lockout → ↻

Lockout

Unlocked

→ [E]



---

---

## ***Deleting a Group***

Delete GROUP →

→ Confirm Delete? Yes= / No= →  or No=

## ***Entering/Editing Motorola Channels***

Edit Channel →

New Channel →

Input TGID

Enter the Talk Group ID for the channel, then press .

Notes:

- Motorola Type 2 Talk Group ID's are entered as 5-digit numbers
- Motorola Type 1 Talk Group ID's are entered as two numbers separated by a hyphen. Use the decimal point to enter the hyphen.

Then, refer to the appropriate section to change a channel setting:

- Editing the Channel Name (see "Editing the Channel Name" on Page 58)
- Setting Channel Alert (see "Setting Channel Alert" on Page 58)
- Setting Channel Lockout (see "Setting Channel Lockout" on Page 58)
- Deleting a Channel (see "Deleting a Channel" on Page 58)
- Copying a Channel (see "Copying a Channel" on Page 58)

To program another channel within the same group, press , then repeat the above.

To create another channel group and enter more channels, press  twice, then proceed from "Entering/Editing Motorola Channel Groups" on Page 55.

---

---

### ***Editing the Channel Name***

↻ → Channel name you want to edit → [E]

Edit Name

Set Quick Key

Edit Channel

Delete Group

Set Lockout

↻ → Edit Name → [E] → Channel Name

Edit the channel name (see “Entering Text” on Page 16).

Note: If you enter a duplicate channel name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

### ***Setting Channel Alert***

Set ALERT → ↻

On

Off

→ [E]

### ***Setting Channel Lockout***

Set Lockout → ↻

Lockout

Unlocked

→ [E]

### ***Deleting a Channel***

Delete CHANNEL →

[E] → Confirm Delete? Yes=E / No=. → E OR No=. [E]

### ***Copying a Channel***

New CHANNEL Name? →

Enter the channel name (see “Entering Text” on Page 16)

→ [E]

---

---

## Programming EDACS Systems

**[MENU]** → Program Systems → **[E]** ↻  
New System → **[E]** → EDACS →  
**[E]** → Confirm? → **[E]**

Next, rotate the scroll knob to select the type of EDACS System you will program, then press **[E]**.

- WIDE - Use for wideband EDACS systems
- NARROW - Use for narrowband EDACS systems
- SCAT- Use for EDACS SCAT (Single Channel Autonomous Trunking)

The scanner creates an empty EDACS system, with a default name of System nn E.  
nn increments as you add new systems.  
E indicates that this is an EDACS system.

Next, refer to the appropriate section to set system-wide options. For most settings, you can accept the default. However, for the items in bold, you must enter information in order for your scanner to scan the system.

- Edit the System Name (see “Editing a System Name” on Page 60)
- Set the System Quick Key (see “Setting the System Quick Key” on Page 60)
- Set the System Lockout (see “Setting System Lockout” on Page 61)
- Set the System Hold Time (see “Setting the System Hold Time” on Page 61)
- Set the Channel Delay Time (see “Setting the Channel Delay Time” on Page 61)
- Set ID Scan/Search Mode (see “Setting ID Scan/Search Mode” on Page 61)
- Set I-Call (see “Setting I-Call” on Page 61)
- Set Emergency Alert (see “Setting Emergency Alert” on Page 62)

## Programming Radio Systems

- 
- 
- Set the EDACS ID Format (see “Setting the EDACS ID Format” on Page 62)
  - Reviewing Locked Out Talkgroups (see “Reviewing Locked-Out Talk Groups” on Page 62)
  - Clearing All Locked Out Talkgroups (see “Clearing All Locked-Out Talk Groups” on Page 62)
  - Setting the Attenuator (see “Setting the Attenuator” on Page 62)
  - Deleting a System (see “Deleting a System” on Page 62)
  - Copying a System (see “Copying a System” on Page 62)
  - Setting System Frequencies (see “Setting System Frequencies” on Page 63)
  - Entering/Editing EDACS Channel Groups (see “Entering/Editing EDACS Channel Groups” on Page 63)

### ***Editing a System Name***

↻ → System name you want to edit → [E]

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

↻ → Edit Name → [E] → System Name

Edit the system name (see “Entering Text” on Page 16),

Note: If you enter a duplicate system name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

### ***Setting the System Quick Key***

Set Quick Key → ↻ → 0-9 → [E] →

---

---

### **Setting System Lockout**

Set Lockout → ⤴  
Lockout  
Unlocked

→

### **Setting the System Hold Time**

Set Hold Time → ⤴ → 0-255 →  →

### **Setting the Channel Delay Time**

Set Delay Time → ⤴  
1 sec  
2 sec  
3 sec  
4 sec  
5 sec  
OFF

→

### **Setting ID Scan/Search Mode**

ID SCAN/SEARCH → ⤴  
ID SCAN  
ID SEARCH

→

### **Setting I-Call**

Set I CALL → ⤴  
ON  
OFF  
ONLY

→

---

---

### **Setting Emergency Alert**

EMERGENCY ALERT → ↻  
ALERT  
IGNORE  
→

### **Setting the EDACS ID Format**

EDCS ID FORMAT → ↻  
AFS FORMAT  
DECIMAL FORMAT  
→

### **Reviewing Locked-Out Talk Groups**

12345 (locked-out talk group ID) →  
UNLOCK? (Y/N) →  or No/Rev

### **Clearing All Locked-Out Talk Groups**

CONFIRM? UNLOCK ALL (Y/N) →  or No/Rev

### **Setting the Attenuator**

Set ATTENUATOR → ↻  
ON  
OFF  
→

### **Deleting a System**

Delete SYSTEM →  
 → Confirm Delete? Yes=E / No=. → E or No=.

### **Copying a System**

New SYS Name? →  
Enter the system name (see "Entering Text" on Page 16)  
→

---

---

## **Setting System Frequencies**

SET FREQUENCIES → [E] →  
↻ → NEW FREQUENCY → [E] →

Input a system frequency, then press E. The scanner then prompts you to enter the LCN for the entered frequency. Enter the LCN, then press E.

To enter additional frequencies, press [MENU], scroll to New Frequency, then repeat the above.

## **Entering/Editing EDACS Channel Groups**

To enter channels in a system, first set up a channel group (or groups) to hold the channels. Then, enter the channel and channel parameters in the group(s).

### **Setting Up a Channel Group**

↻ → EDIT GROUP → [E] →  
↻ → NEW GROUP → [E] →

The scanner creates a group with a default name of "Group nn". nn increments by one for each new group you create within a system.

Next, refer to the appropriate section to set group-wide options:

### **Editing a Group Name**

↻ → Group name you want to edit → [E]

Edit Name  
Edit Sys Option  
Edit Group  
Delete System  
Copy System

↻ → Edit GROUP → [E] → Group Name

Edit the group name (see "Entering Text" on Page 16),

---

---

Note: If you enter a duplicate group name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

### **Setting a Group Quick Key**

Set Quick Key → ⏪ → 0-9 → [E] →

### **Setting Group Lockout**

Set Lockout → ⏪

Lockout  
Unlocked

→ [E]

### **Deleting a Group**

Delete GROUP →

[E] → Confirm Delete? Yes=E / No=. → E or No. [E]

### **Entering/Editing EDACS Channels**

⏪ → Edit Channel → [E] →

⏪ → NEW Channel → [E] →

Input TGID

Enter the Talk Group ID for the channel, then press E.

Note: If you have selected to use AFS format for Talk Group ID's (the default), use the decimal point to enter the hyphens.

Then, refer to the appropriate section to change a channel setting:

- Editing the Channel Name (see "Editing the Channel Name" on Page 65)
- Setting Channel Alert (see "Setting Channel Alert" on Page 65)



- 
- 
- Setting Channel Lockout (see “Setting Channel Lockout” on Page 66)
  - Deleting a Channel (see “Deleting a Channel” on Page 66)
  - Copying a Channel (see “Copying a Channel” on Page 66)

To program another channel within the same group, press **[MENU]**, then repeat the above.

To create another channel group and enter more channels, press **[MENU]** twice, then proceed from “Entering/Editing EDACS Channel Groups” on Page 63

### ***Editing the Channel Name***

↻ → Channel name you want to edit → **[E]**

Edit Name

Set Quick Key

Edit Channel

Delete Group

Set Lockout

↻ → Edit Name → **[E]** → Channel Name

Edit the channel name (see “Entering Text” on Page 16).

Note: If you enter a duplicate channel name, the scanner beeps and Name Exists appears. To keep the name, press **[E]**. Otherwise, press **[No/Rev]**.

### ***Setting Channel Alert***

Set ALERT → ↻

On



Off

→ **[E]**



---

---


## **Setting Channel Lockout**

Set Lockout →   
Lockout  
Unlocked  
→ 







## **Deleting a Channel**

Delete CHANNEL →  
 → Confirm Delete? Yes=E / No=. → E OR No=. 

## **Copying a Channel**

New CHANNEL Name? →  
Enter the channel name (see “Entering Text” on Page 16)  
→ 

## **Programming LTR Systems**

 → Program System →    
New System →  → LT →  
 → Confirm? → 

The scanner creates an empty LTR system, with a default name of System nn L.  
nn increments as you add new systems.  
L indicates that this is an LTR system.

Next, refer to the appropriate section to set system-wide options. For most settings, you can accept the default. However, for the items in bold, you must enter information in order for your scanner to scan the system.

- Edit the System Name (see “Editing a System Name” on Page 67)
- Set the System Quick Key (see “Setting the System Quick Key” on Page 68)
- Set the System Lockout (see “Setting System Lockout” on Page 68)

## **Programming Radio Systems**

- 
- 
- Set the System Hold Time (see “Setting the System Hold Time” on Page 68)
  - Set the Channel Delay Time (see “Setting the Channel Delay Time” on Page 68)
  - Set ID Scan/Search Mode (see “Setting ID Scan/Search Mode” on Page 68)
  - Reviewing Locked Out Talkgroups (see “Reviewing Locked-Out Talk Groups” on Page 68)
  - Clearing All Locked Out Talkgroups (see “Clearing All Locked-Out Talk Groups” on Page 69)
  - Setting the Attenuator (see “Setting the Attenuator” on Page 69)
  - Deleting a System (see “Deleting a System” on Page 69)
  - Copying a System (see “Copying a System” on Page 69)
  - Setting System Frequencies (see “Setting System Frequencies” on Page 69)
  - Entering/Editing LTR Channel Groups (see “Entering/Editing LTR Channel Groups” on Page 69)

### ***Editing a System Name***

↻ → System name you want to edit → [E]

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

↻ → Edit Name → [E] → System Name

Edit the system name (see “Entering Text” on Page 16),

Note: If you enter a duplicate system name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

---

---

### **Setting the System Quick Key**

Set Quick Key → ⤴ → 0-9 →  →

### **Setting System Lockout**

Set Lockout → ⤴

Lockout  
Unlocked

→

### **Setting the System Hold Time**

Set Hold Time → ⤴ → 0-255 →  →

### **Setting the Channel Delay Time**

Set Delay Time → ⤴

1 sec

2 sec

3 sec

4 sec

5 sec

OFF

→

### **Setting ID Scan/Search Mode**

ID SCAN/SEARCH → ⤴

ID SCAN

ID SEARCH

→

### **Reviewing Locked-Out Talk Groups**

12345 (locked-out talk group ID) →

UNLOCK? (Y/N) →  or

---

---

### ***Clearing All Locked-Out Talk Groups***

CONFIRM? UNLOCK ALL (Y/N) →  or

### ***Setting the Attenuator***

Set ATTENUATOR →

ON

OFF

→

### ***Deleting a System***

Delete SYSTEM →

→ Confirm Delete? Yes=E / No=. → E or No=.

### ***Copying a System***

New SYS Name? →

Enter the system name (see “Entering Text” on Page 16)

→

### ***Setting System Frequencies***

SET FREQUENCIES →

New FREQUENCY →

Input a system frequency, then press E. The scanner then prompts you to enter the LCN for the entered frequency. Enter the LCN, then press E.

To enter additional frequencies, press , scroll to New Frequency, then repeat the above.

### ***Entering/Editing LTR Channel Groups***

To enter channels in a system, first set up a channel group (or groups) to hold the channels. Then, enter the channel and channel parameters in the group(s).

---

---

## Setting Up a Channel Group

↻ → EDIT GROUP → [E] →

↻ → NEW GROUP → [E] →

The scanner creates a group with a default name of "Group nn". nn increments by one for each new group you create within a system.

Next, refer to the appropriate section to set group-wide options:

- Edit the Group Name (see "Editing a Group Name" on Page 70)
- Setting the Group Quick Key (see "Setting a Group Quick Key" on Page 71)
- Setting the Group Lockout (see "Setting Group Lockout" on Page 71)
- Deleting a Group (see "Deleting a Group" on Page 71)
- Copying a Group (see "Copying a Group" on Page 71)
- Entering/Editing LTR Channels (see "Entering/Editing LTR Channels" on Page 71)

### ***Editing a Group Name***

↻ → Group name you want to edit → [E]

Edit Name

Edit Sys Option

Edit Group

Delete System

Copy System

↻ → Edit GROUP → [E] → Group Name

Edit the group name (see "Entering Text" on Page 16),

Note: If you enter a duplicate group name, the scanner beeps and Name Exists appears. To keep the name, press [E]. Otherwise, press [No/Rev].

---

---

### ***Setting a Group Quick Key***

Set Quick Key → ⏪ → 0-9 → [E] →

### ***Setting Group Lockout***

Set Lockout → ⏪

Lockout

Unlocked

→ [E]

### ***Deleting a Group***

Delete GROUP →

[E] → Confirm Delete? Yes=E / No=. → E or No=. [E])

### ***Copying a Group***

New CHANNEL Name? →

Enter the channel name (see “Entering Text” on Page 16)

→ [E]

### ***Entering/Editing LTR Channels***

⏪ → Edit Channel → [E] →

⏪ → NEW Channel → [E] →

Input TGID

Enter the Talk Group ID for the channel, then press [E].

Note: Use the decimal point to enter the hyphens.

Then, refer to the appropriate section to change a channel setting:

- Editing the Channel Name (see “Editing the Channel Name” on Page 72)
- Setting Channel Alert (see “Setting Channel Alert” on Page 73)

- 
- 
- Setting Channel Lockout (see “Setting Channel Lockout” on Page 72)
  - Deleting a Channel (see “Deleting a Channel” on Page 73)
  - Copying a Channel (see “Copying a Channel” on Page 73)

To program another channel within the same group, press **[MENU]**, then repeat the above.

To create another channel group and enter more channels, press **[MENU]** twice, then proceed from “Entering/Editing LTR Channel Groups” on Page 69.

### ***Editing the Channel Name***

↻ → Channel name you want to edit → **[E]**

Edit Name

Set Quick Key

Edit Channel

Delete Group

Set Lockout

↻ → Edit Name → **[E]** → Channel Name

Edit the channel name (see “Entering Text” on Page 16).

Note: If you enter a duplicate channel name, the scanner beeps and Name Exists appears. To keep the name, press **[E]**. Otherwise, press **[No/Rev]**.

### ***Setting Channel Lockout***

Set Lockout → ↻

Lockout

Unlocked

→ **[E]**



---

---

### **Setting Channel Alert**

Set ALERT → 

On

Off

→

### **Deleting a Channel**

Delete CHANNEL →

→ Confirm Delete? Yes=E / No=. → E OR No=.


### **Copying a Channel**


New CHANNEL Name? →


Enter the channel name (see “Entering Text” on Page 16)

→

### **Using the Backlight**



Press  to turn the backlight on or off. You can choose any of the following backlight options.

*10 sec* The backlight stays on for 10 seconds after you press .

*30 sec* The backlight stays on for 30 seconds after you press .

*Squelch* The backlight turns on when the squelch opens then stays on for 2 seconds.

*Keypress* The backlight turns on when any key is pressed then stays on for 10 seconds.

*Infinite* The backlight turns on when you press  then stays on until you press  again.

---

---

## **Displaying System Information**

You can display information about the scanner, including how much memory has already been used and the current firmware version loaded in the scanner.

### ***Viewing Memory Used***

When you select this option, a bar showing the percent of memory used appears.

The scanner displays the amount of memory used until you press a key. Then the scanner returns to the previous menu.

### ***Viewing the Firmware Version***

The scanner displays the version until you press a key. Then the scanner returns to the previous menu.

## **Adjusting the Key Beep**

When you select this option, you can set the scanner so it beeps when you press a key.

## **Locking/Unlocking the Keypad**

Press Func then press  /  to lock or unlock the keypad.

## **Turning Power Save On or Off**

The power save function lets you set the scanner so it saves battery power when it is stopped on a frequency. You can turn power save on or off.

---

---

## Using the Close Call Feature

---

---

Your scanner's Close Call™ feature lets you set the scanner so it detects, displays the frequency of, and lets you hear a nearby strong radio transmission. You can set the scanner so the Close Call feature works "in the background" while you are scanning other frequencies, turn off normal scanning while the Close Call feature is working, or turn off the Close Call feature and use the scanner normally. You can set the scanner so it alerts you when the Close Call feature finds a frequency. You can also set the frequency band where you want the scanner to look for transmissions.

### Notes:

- The Close Call feature works well for locating the source of strong local transmissions such as mobile and handheld two-way radios in areas with no other strong transmission sources. However, if you are in an area with many transmission sources (such as pager radio transmitters, multi-use radio towers, traffic control devices, etc.), the Close Call feature might not find the transmission you are searching for, or it might find a transmission other than the one you are searching for. You can screen unwanted transmissions by pressing **Func** and **L/O** to lock them out.
- The Close Call feature cannot detect satellite dishes or any transmitter with a frequency above or below the frequency ranges listed under "Setting the Close Call Mode" on Page 76.
- The Close Call feature works better with some types of transmissions than others. It might not correctly display frequency information for transmitters using a highly directive antenna (such as an amateur radio beam antenna), if there are many transmitters operating at the same time in the same area, or if the transmitter is a broadcast television station.

## Using the Close Call Feature

---

---

## Setting the Close Call Mode

1. Press **[MENU]** then turn the scroll control until *Close Call* appears. Then press **[E]**. One of the Close Call feature options appear.
2. Turn the scroll control until one of the following Close Call feature options appears.

- **Close Call Only:** Lets you set the scanner only for Close Call searching. The scanner does not scan frequencies or channels when this option is turned on.

To select this option, press **[E]**. The scanner searches in Close Call mode.

- **Set CC Bands:** Lets you select the Close Call band settings. You can turn the following bands on or off.

VHF Low (25.0000 - 54.0000 MHz)

Air Band (108.0000 - 136.9750 MHz)

VHF High (137.0000 - 224.9950 MHz)

UHF (400.0000 - 512.0000 MHz)

800MHz+ (806.0000 -1300.0000 MHz)

Turn the scroll control to select a band, then press **[E]** to turn it on or off.

- **Set CC Alert:** Lets you select how the scanner alerts you when it receives a Close Call signal. You can select any of the following options.

*Beep+Light* (the scanner beeps and the display backlight turns on when it receives a Close Call signal)

*Light* (the display backlight turns on when it receives a Close Call signal)

*Beep* (the scanner beeps when it receives a Close Call signal)

*None* (the scanner does not beep and the display backlight does not turn on when it receives a Close Call signal)

## Using the Close Call Feature

---

---

Turn the scroll control to display an option, then press **[E]** to select it.

- Set CC Override: Lets you select how the Close Call feature works with other scanning activities. If you turn this option on, when the scanner detects a Close Call signal, *CC Found!* and *E to Listen* appear for about 3 seconds. If you press **[E]** when this appears, the scanner jumps to the Close Call frequency it found.

Turn the scroll control to display an option, then press **[E]** to select it.

- Set CC Mode: Lets you select the Close Call mode. If you turn this option on, the scanner sets itself to its Close Call settings once every 5 seconds.

Turn the scroll control to display an option, then press **[E]** to select it.

- CC AutoStore: Lets you select whether the scanner automatically stores Close Call “hits” into channels. If you turn this option on, the scanner stores Close Call “hits” into channels, up to the maximum you specified in the Max Auto Store setting. If the scanner stores more “hits” than there are empty channels, it stores new “hits” over old ones.

Turn the scroll control to display an option, then press **[E]** to select it.

## Using the Close Call Feature

---

---

## Turning Pager Screen On or Off

---

---

You can set the scanner so it screens common pager frequencies while using the Close Call feature or while searching.

1. Press **[MENU]** then turn the scroll control until *Srch/ CloCall Opt* appears. Then press **[E]**. One of the Close Call options appears.
2. Turn the scroll control until *Pager Screen* appears. Then press **[E]**. One of the following options appears.  
On (the scanner screens common pager frequencies)  
Off (the scanner does not screen common pager frequencies)
3. Turn the scroll control to display the option, then press **[E]** to select it.

---

---

## Turning Repeater Find On or Off

---

---

You can set the scanner so it attempts to locate transmissions on repeater output frequencies when it detects a transmission on a repeater input frequency. If the scanner finds such a transmission, it beeps and Repeater Output Found appears on the display, and it tunes the output frequency. If it does not detect the transmission on the output frequency, it remains on the transmission on the original frequency.

1. Press **[MENU]** then turn the scroll control until **Srch/Cl oCal I Opt** appears. Then press **[E]**. One of the Close Call options appear.s
2. Turn the scroll control until **Repeater Find** appears. Then press **[E]**. One of the following options appears.

*On* (the scanner attempts to locate transmissions on repeater output frequencies when it detects a transmission on a repeater input frequency))

*Off* (the scanner does not attempt to locate transmissions on repeater output frequencies)

3. Turn the scroll control to display the option, then press **[E]** to select it.
  - You might find frequencies that do not have a tone associated with them. This might be because CTCSS or DCS tones are not being transmitted.
1. If necessary, press **PRI** to turn off priority scan.
2. Hold down **CTCSS/DCS** until you hear two short beeps. **CTCSS** and **DCS** appear and begin to flash. If there is a break before a tone is identified, your scanner searches where it left off when the transmission begins again.

## Turning Repeater Find On or Off

---

---

## Using Weather Alert (SAME)

---

---

Your scanner has been primarily designed to be a radio scanner. While it incorporates weather alert as one feature, we strongly recommend that you not use the scanner as your sole means for receiving emergency alerts. Your local electronics retailer carries several weather radios specifically designed for this function.

Your scanner allows you to either search for a local NOAA weather broadcast, or be set to alert when a SAME weather alert is broadcast on a NOAA channel.

### Setting the Weather Mode

You can use the BC246T to search for your local NOAA weather channel.

### *Turning Weather Alert On/Off*

In weather alert mode, your scanner functions as a severe weather warning radio. This is especially useful when your area is expecting severe weather conditions late at night. When you set the scanner to weather alert mode, it emits a loud siren and displays information about the weather alert whenever your local NOAA weather station transmits a severe weather emergency tone.

Follow these steps to turn on weather alert:

1. Press **WX** to find your local weather station.
2. Press **Hold**.
3. Hold down **ALERT** for about 2 seconds. **ALERT** appears.

The scanner's volume is muted until the warning tone sounds.

Your scanner now functions as a weather alert radio, waiting to receive a severe weather emergency tone. When your scanner receives the emergency tone and a SAME event code from your local NOAA weather station, it responds with a loud siren at maximum volume (regardless of the volume control setting) and displays information about the alert.

### Using Weather Alert (SAME)



---

---

You might see any of the following information during a weather alert:

L1 – Warning  
L2 – Watch  
L3 – Advisory  
TST – Test

The siren will continue until the emergency tone stops transmitting.

To cancel the siren, press **WX**. **ALERT** disappears.

## Searching for a Weather Broadcast

You can use the BC246T to search for your local NOAA weather channel.

To search for a weather broadcast, press **WX** to find an active weather channel in your area. **WX** appears.

You might receive more than one weather station in your area. When you press **WX**, your scanner finds the first active transmission. If a transmission seems weak or distant, press **WX** again to find a clearer station.

### Notes:

- Weather scan does not resume automatically. You must press **WX** again to start the weather scan again. In some parts of the country, you might not be able to monitor weather transmissions, such as in low-lying areas. Normally a higher location will improve the reception.
- NOAA broadcasts are continuous broadcasts. You will only lose reception if you move out of a coverage area. If the signal is lost, the scanner resumes searching for a weather transmission.

## Duplicate Frequency Alert

If you enter a frequency already stored in another channel, the scanner beeps and the other channel appears. Press **.** on the keypad to start again or press **[E]** again to store the frequency in both channels.

### Using Weather Alert (SAME)

---

---

## Care and Maintenance

---

---

### General Use

- Turn the scanner off before disconnecting the power.
- Always write down the programmed frequencies in the event of memory loss.
- If memory is lost, simply reprogram each channel. The display shows 000.0000 in all channels when there has been a memory loss.
- Always press each button firmly until you hear the entry tone for that key entry.

### Location

- Do not use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the unit in direct sunlight or near heating elements or vents.
- If the scanner receives strong interference or electrical noise, move it or its antenna away from the source of the noise. If possible, a higher elevation might provide better reception.
- Also try changing the height or angle of the antenna.

### Cleaning

- Disconnect the power to the unit before cleaning.
- Clean the outside of the scanner with a mild detergent.
- To prevent scratches, do not use abrasive cleaners or solvents. Be careful not to rub the LCD window.
- Do not use excessive amounts of water.

### Repairs

Do not attempt any repair. The scanner contains no user serviceable parts. Contact the Uniden Customer Service Center or take it to a qualified repair technician.

---

---

## **Birdies**

All radios can receive “birdies” (undesired signals). If your scanner stops during Scan mode and no sound is heard, it might be receiving a birdie. Birdies are internally generated signals inherent in the electronics of the receiver.

Press **L/O** to lock out the channel, then press **Scan** to resume scanning.

## Troubleshooting

If your BC246T is not performing properly, try the following steps.

<b>Problem</b>	<b>Possible Cause</b>	<b>Suggestion</b>
The scanner doesn't work.	The scanner might not be receiving any power.	Make sure the AC adapter is connected to an AC outlet and the scanner.
		If there is a wall switch that controls power to the AC outlet where you connected the AC adapter, make sure it is on.
Improper reception.	The scanner's antenna might need to be adjusted.	Check the antenna connection or move or reposition the antenna.
		Move the scanner.
		You might be in a remote area that could require an optional multi-band antenna. Check with your dealer or local electronics store.
Scan won't stop.	The squelch might need to be adjusted.	Adjust the squelch threshold. See "Turning On The Scanner and Setting the Squelch" on Page 39.

## Troubleshooting

	The antenna might need to be adjusted.	Check the antenna connection.
	One or more channels might be locked out.	Make sure the channels you want to scan are not locked out.
	The channel's frequency might not be stored in memory.	Make sure the channel's frequency is stored in the scanner's memory.
	The channel might not be active.	Wait for a transmission on the channel.
Scan won't start.	You must press <b>Scan</b> to scan.	Press <b>Scan</b> .
	The squelch might need to be adjusted.	Adjust the squelch threshold. See "Turning On The Scanner and Setting the Squelch" on Page 39.
	One or more channels might be locked out.	Make sure the channels you want to scan are not locked out.
	The antenna might need to be adjusted.	Check the antenna connection.

## Troubleshooting

---



---

Weather scan doesn't work.	The squelch might need to be adjusted.	Adjust the squelch threshold. See "Turning On The Scanner and Setting the Squelch" on Page 39.
	The antenna might need to be adjusted.	Check the antenna connection.

If you experience difficulty while in TrunkTracker™ mode, try the following steps.

<b>Problem</b>	<b>Possible Cause</b>	<b>Suggestion</b>
Scanner won't track a trunked system.	The system might not be one your scanner can scan.	Scan another system.
	The data frequency might be missing.	Enter the data frequency.
	The scanner might need to be changed to a Type 1 scanner setup.	Change to a Type 1 scanner setup. Review "Motorola Trunking" on Page 23.

## Troubleshooting

	The system you are trying to scan might be LTR or EDACS.	Set the scanner to scan LTR or EDACS systems. Review "LTR Trunking" on Page 25 and "EDACS Trunking" on Page 24.
Scanner won't stop scanning during Scan List mode.	No ID's have been programmed.	Program one or more ID's.
	The ID's you have stored are not active.	Wait for the ID's to become active or scan another system.
Scanner won't acquire the data channel.	The squelch might need to be adjusted.	Adjust the squelch threshold. See "Turning On The Scanner and Setting the Squelch" on Page 39.
	The frequency used for the data channel might be missing.	Check your frequency list for the data channel.
Missing replies to conversations .	The scanner might need to be changed to a Type 1 scanner setup.	Change to a Type 1 scanner setup.

## Troubleshooting

.	The fleet map might be incorrect.	Try another preset fleet map or program your own fleet map.
Missing replies to conversations . (continued)	One or more of the system's frequencies might not be entered.	Make sure all the system's frequencies have been entered.
	The system you are trying to scan might be LTR or EDACS.	Set the scanner to scan LTR or EDACS systems. Review "LTR Trunking" on Page 25 and "EDACS Trunking" on Page 24.

If you still cannot get satisfactory results while using your scanner or if you want additional information, please call or write the Uniden Parts and Service Division. The address and phone number are listed in the Warranty at the end of this manual. If you would like immediate assistance, please call Customer Service at (800) 297-1023.

If you have Internet access, you can visit <http://www.uniden.com> for additional information.

## Troubleshooting



---

---

## Specifications

---

---

Certified in accordance with FCC Rules and Regulations Part 15, Subpart C, as of date of manufacture.

Dynamic Allocation Capacity:

- With Name Assigned To Each System, Group, and Channel:

Basic :

10 Systems, 100 Groups, 1500 Channels

Minimum:

200 Systems, 500 Groups, 500 Channels

- With No Name Assigned:

Basic:

10 Systems, 100 Groups, 2500 Channels

Minimum:

200 Systems, 1000 Groups, 1000 Channels

Systems: 200

Groups 20 per system

Channels up to 2500

Channels per Trunked System up to 200

Frequency Range (MHz):

25.0-26.960

Citizens Band/Business Band

26.965-27.405

Citizens Band Class D

27.410-27.995

Business Band

137.0-143.995

Military Band

144.0-147.995

2 Meter Amateur Band

148.0-161.995

Specifications

---

---

VHF High Band

216.0–224.995

1.25 Meter Amateur Band

Above bands in 5 kHz steps

28.0–29.690

10 Meter Amateur Band

29.7–49.990

VHF Low Band

50–54

6 Meter Amateur Band

Above bands in 10 kHz steps

162.0–174.0

Federal Government

400.0–405.9875

Unknown

406.0–419.9875

Federal Land Mobile

420.0–449.9875

70 cm Amateur Band

450.0–469.9875

UHF Standard Band

470.0–512.0

UHF TV Band

806.0–823.9875

Public Service “800” Band

849.0125–868.9875

Public Service “800” Band

894.0125–956.0

Public Service “800” Band

**Specifications**

---

---

1240.0–1300.0

25 cm Amateur Band

Above bands in 12.5 kHz steps

108.0–136.9750

Aircraft Band

Above band in 25 kHz steps

Operating Temperature: –20°C to +60°C

Scan Rate: 100 channels per second  
(conventional mode)

Search Rate: 300 steps per second  
(5 kHz step only)

Scan Delay: 2 seconds

Audio Output: 2W nominal into  
8 ohm internal speaker

Power Requirements: 12 VDC 500mAh  
(AD140U AC adapter)

Antenna: 50 ohms (Impedance)

External Jacks: Antenna Jack BNC Type

Ext. Speaker Jack 3.5mm

Line Out Jack 3.5mm

DC Power Jack 5.5mm

Remote Jack D-sub9 Pins

Size: 10<sup>1</sup>/<sub>2</sub> in. (W) x 7<sup>3</sup>/<sub>8</sub> in. (D) x 3<sup>1</sup>/<sub>2</sub> in. (H)

Weight: 3.8 lbs

Features, specifications, and availability of optional accessories are all subject to change without notice.

## Specifications

---


---

## Optional Accessories


---

---


Contact your local Uniden Dealer or call the Uniden Parts Center at: (800)554-3988, 8:00AM to 5:00PM 246TEST, Monday through Friday, for information about ordering these optional accessories.

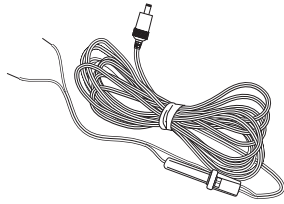


DC Power Cord

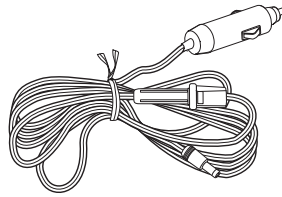

Cigarette Lighter Power Cord

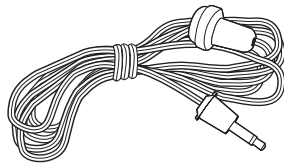

Earphone

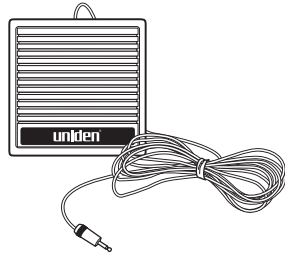

External Amplified Speaker



Betty Bearcat Frequency Direct  
Local Directories

PC Software (BC246T SS)  
Available by download.

## Optional Accessories

# Appendix

## Preset Fleet Maps

Preset Map 1 Preset Map 2

Block	Size Code
0	Size Code 11
1	Size Code 11
2	Size Code 11
3	Size Code 11
4	Size Code 11
5	Size Code 11
6	Size Code 11
7	Size Code 11

Block	Size Code
0	Size Code 4
1	Size Code 4
2	Size Code 4
3	Size Code 4
4	Size Code 4
5	Size Code 4
6	Size Code 4
7	Size Code 4

Preset Map 3 Preset Map 4

Block	Size Code
0	Size Code 4
1	Size Code 4
2	Size Code 4
3	Size Code 4
4	Size Code 4
5	Size Code 4
6	Size Code 12
7	(Size Code 12)

Block	Size Code
0	Size Code 12
1	(Size Code 12)
2	Size Code 4
3	Size Code 4
4	Size Code 4
5	Size Code 4
6	Size Code 4
7	Size Code 4

Preset Map 5 Preset Map 6

Block	Size Code
0	Size Code 4
1	Size Code 4
2	Size Code 12
3	(Size Code 12)
4	Size Code 4
5	Size Code 4
6	Size Code 4
7	Size Code 4

Block	Size Code
0	Size Code 3
1	Size Code 10
2	Size Code 4
3	Size Code 4
4	Size Code 12
5	(Size Code 12)
6	Size Code 12
7	(Size Code 12)

Preset Map 7 Preset Map 8

Block	Size Code
0	Size Code 10
1	Size Code 10
2	Size Code 11

Block	Size Code
0	Size Code 1
1	Size Code 1
2	Size Code 2

Appendix

Block	Size Code
3	Size Code 4
4	Size Code 4
5	Size Code 4
6	Size Code 4
7	Size Code 4

Block	Size Code
3	Size Code 2
4	Size Code 3
5	Size Code 3
6	Size Code 4
7	Size Code 4

Preset Map 9Preset Map 10

Block	Size Code
0	Size Code 4
1	Size Code 4
2	Size Code 0
3	Size Code 0
4	Size Code 0
5	Size Code 0
6	Size Code 0
7	Size Code 0

Block	Size Code
0	Size Code 0
1	Size Code 0
2	Size Code 0
3	Size Code 0
4	Size Code 0
5	Size Code 0
6	Size Code 4
7	Size Code 4

Preset Map 11Preset Map 12

Block	Size Code
0	Size Code 4
1	Size Code 0
2	Size Code 0
3	Size Code 0
4	Size Code 0
5	Size Code 0
6	Size Code 0
7	Size Code 0

Block	Size Code
0	Size Code 0
1	Size Code 0
2	Size Code 0
3	Size Code 0
4	Size Code 0
5	Size Code 0
6	Size Code 0
7	Size Code 4

Preset Map 13Preset Map 14

Block	Size Code
0	Size Code 3
1	Size Code 3
2	Size Code 11
3	Size Code 4
4	Size Code 4
5	Size Code 0
6	Size Code 0
7	Size Code 0

Block	Size Code
0	Size Code 4
1	Size Code 3
2	Size Code 10
3	Size Code 4
4	Size Code 4
5	Size Code 4
6	Size Code 12
7	(Size Code 12)

## Appendix

---

---

Preset Map 15Preset Map 16

Block	Size Code	Block	Size Code
0	Size Code 4	0	Size Code 3
1	Size Code 4	1	Size Code 10
2	Size Code 4	2	Size Code 10
3	Size Code 11	3	Size Code 11
4	Size Code 11	4	Size Code 0
5	Size Code 0	5	Size Code 0
6	Size Code 12	6	Size Code 12
7	(Size Code 12)	7	(Size Code 12)

## User Defined Fleet Maps

### *Type I Programming Information*

When a Type I system is designed, the address information for all the ID's is divided into 8 equal sized blocks, numbered 0–7. When you program your scanner to track a Type I system, you must select a size code for each of these blocks. When you have assigned a size code to all 8 blocks, you'll have defined the fleet map for the system you are tracking. Each size code determines the number of fleets, subfleets, and ID's each block will have. For example, a size code of S-4 has one fleet, which is divided into 16 separate subfleets, and it has a total of 512 individual ID's.

When a block is assigned a size code, the fleet or fleets created within the block are assigned a Type I ID. The way these ID's display on your scanner depend on the block number and the block's size code. When a Type I ID appears, the leftmost digit represents the block which contains the ID.

The next two digits identify which fleet is active, and the last digit(s) identifies the subfleet.

The details concerning how the size codes are selected by a Type I System designer are highly dependent on the specific needs of the system's users. Some organizations might want many subfleets with only a few radios each, while another organization might want only a few subfleets with many radios each. Your task is to program your

## Appendix

---

---

fleet map with the same size code assignments as the trunked system. If you do this accurately, you'll track all the Fleet-Subfleet combinations used by the system. In other words, you'll hear complete communications while monitoring a trunked system.

If you don't already know the size codes used, you'll have to guess at them. But since you don't have to figure out all the blocks at once, this isn't as hard as it seems. Select a size code for a block, and then press **Scan**. Now listen to the communications. If you decide you are receiving most of the replies to the conversations with ID's assigned to the block you just programmed, then you've probably selected the right size code and can work on the next block of the map.

Finally, for most public safety systems there are some size codes which are more common. S-3 and S-4 are probably the most common, followed by S-10, S-11, and S-12.

### ***Size Code Restrictions***

If you select size code S-12, S-13, or S-14, there are some restrictions as to which blocks can be used for these codes.

S-12 can only be assigned to Blocks 0, 2, 4, or 6.

S-13 can only be assigned to Blocks 0 and 4.

S-14 can only be assigned to Block 0.

Since these size codes require multiple blocks, you will be prompted for the next available block when programming a fleet map. For example, if you assign Block 0 as an S-12, you will be prompted for b2, the next block available, instead of b1. And if you assign Block 0 as an S-14, you would not see another prompt because it uses all available blocks.

## **Appendix**



---

---

## **Quick Start to Programming Your Scanner**

This section contains information you'll need to quickly program conventional and trunking frequencies into your scanner. You can use it to help you find information about conventional and trunking frequencies in your area, compile the information into an easy-to-use format, then use the information to program your scanner.

Note: This section does not include all of the programming information for your scanner.

### ***Getting Started***

You can use the scanner to scan agencies such as:

- 800 MHz trunked public safety systems
- Police and fire departments (including rescue and paramedics)
- NOAA weather transmissions
- Business and industrial radio
- Utilities
- Marine bands
- Amateur (ham) radio bands
- Aircraft

Your scanner can monitor any of the following types of systems.

- Conventional (not trunked) systems
- Motorola trunking systems
- LTR trunking systems
- EDACS trunking systems

Getting your scanner programmed and scanning takes a few steps. This help guides you through these steps that will make it easier for you to start scanning.

1. Collect information about the system(s) you want to monitor.

## **Appendix**

---

---

Do you want to listen to your local police and fire departments? How about the highway patrol, ambulance service, and aircraft? You might even want to listen to your local utility company as they track down a break in electrical service in your area.

Make a list of the agencies you want to listen to, then look up the frequencies and systems used by those agencies. The Internet is a great source for current frequencies and information about scanning. Here are a few useful sites:

- <http://www.scannermaster.com/> - frequency resources and home of Police Call.  
You can also call them at 1 800 SCANNER (hours are from 10:00 a.m. to 5:00 p.m. Eastern Time Monday through Friday.)
- <http://www.radioreference.com/> - the Internet's premier source for user-supported radio system information.
- <http://www.bearcat1.com/> - frequency information from National Communications.
- <http://svartifoss2.fcc.gov/reports/index.cfm> - conventional frequency information on file with the US Government

Tips:

- Scanners are designed to monitor complex radio systems. That means that programming your scanner might seem like a daunting task at first. Be patient if you don't get it right the first time. You can also seek out help locally for the systems you want to scan by visiting the forums section of <http://www.radioreference.com/>.
- Before you start to program your scanner, decide how you want to organize the frequencies you want to scan. For example, some areas are best organized by geographic location (east, north, south, west, central, etc), while others are best organized by agency (police, sheriff, ambulance, fire, etc.). You might even find it easier to organize a mixture of frequencies (north, southeast, and west for police but fire all in one group for example).

## Appendix

- 
- 
2. Organize the system information using these system worksheets included in this help.
    - Use “Conventional Scanning Worksheet” on Page 105 to organize information about conventional frequencies.
    - Use “Motorola Trunking Worksheet” on Page 106 to organize information about Motorola frequencies.
    - Use “” on Page 111 to organize information about LTR frequencies.
    - Use “EDACS Trunking Worksheet” on Page 108 to organize information about EDACS frequencies.
  3. Follow the instructions in “Filling Out The Conventional Scanning Worksheet” on Page 100, “Filling Out The Motorola Worksheet” on Page 101, “Filling Out The LTR Worksheet” on Page 103, and “Filling Out The EDACS Worksheet” on Page 104 to program your scanner.
  4. Press SCAN!

Tips:

- Before you start, make as many copies of the worksheets as you think you'll need. You can also go to the download section of <http://www.uniden.com/productsupport.cfm> and download the worksheets there.
- All worksheet instructions assume that you have completed the critical Step 1 (collecting the system information). Don't skip this step.
- Use a pencil to fill out the worksheets. This lets you change information if necessary.

## Appendix

---

---

## **Conventional Scanning Worksheet Instructions**

Important: The conventional scanning worksheet is for conventional frequencies only. To program LTR trunking frequencies, use "" on Page 111. To program Motorola trunking frequencies, use "Motorola Trunking Worksheet" on Page 106. To program EDACS trunking frequencies, use "EDACS Trunking Worksheet" on Page 108.

Tip: If you transfer a frequency to another channel or bank, be sure to update your worksheet with the new information.

### **Filling Out The Conventional Scanning Worksheet**

Name

Fill in a name that describes the frequencies you want to store. For example, you can enter "Dallas Police" or "Amateur Radio" in this field. If you want to store more than one type of frequency, you can enter "Mixed."

Channel

Fill in the channel number where you want to store each frequency.

Tips:

- Try to enter frequencies you write on the worksheet into consecutively numbered channels. This makes it easier to keep track of how many channels you have used.
- Leave this field blank until you gather all information about the frequencies you want to store. Then go back and fill in a channel number for each frequency you entered, beginning with the first open channel if possible.

Frequency

Fill in the frequency you want to store in this channel.

**Appendix**

---

---

#### Location/Radio Service

Fill in information that identifies the frequency. For example, if the motorcycle police on your city's north side use the frequency, you can enter "City Motorcycle Police North Side."

#### Priority

The scanner lets you designate channels as priority channels. Check this field if you want to designate the frequency as a priority channel.

#### CTCSS/DCS

If the agency transmits a CTCSS or DCS tone on the frequency, fill in the frequency. For example, if the agency transmits a CTCSS tone on 173.8 Hz, enter "173.8."

Note: See "What is CTCSS/DCS?" on Page 18 for more information about CTCSS and DCS.

#### Comments

Fill in any general comments about the agency. For example, if the agency is active only during auto races, enter that information in this field.

### ***Motorola Trunking Worksheet Instructions***

Important: The Motorola trunking worksheet is for Motorola frequencies only. (However, you can use unused channels for conventional frequencies). To program conventional scanning frequencies, use "Conventional Scanning Worksheet" on Page 105. To program LTR trunking frequencies, use "" on Page 111. To program EDACS trunking frequencies, use "EDACS Trunking Worksheet" on Page 108.

### **Filling Out The Motorola Worksheet**

#### System Name

Fill in the general name for the system you are programming. For example, "Fort Worth Public Safety."

## Appendix

---

---

### System Type

Fill in the type of Motorola system you are scanning.

- Type 1. A fleet map is supplied for this type of system.
- Type 2 800 MHz. The supplied frequencies are between 851 MHz and 868.9875 MHz. No fleet map is supplied for this type of system.
- Type 2 900 MHz. The supplied frequencies are between 935.0125 MHz and 939.9875 MHz. No fleet map is supplied for this type of system.
- Type 2 UHF. The supplied frequencies are between 406 MHz and 512 MHz. No fleet map is supplied for this type of system.
- Type 2 VHF. The supplied frequencies are between 136 MHz and 174 MHz. No fleet map is supplied for this type of system.

### Channel

This indicates the channel. Write the physical channel number next to this number. For example, write in 201-250.

### Frequency/Name

For each channel, fill in each frequency and name used by the agency.

### Talk Group/Name

Identifies the agency. The talk group ID is sent by the agency on the radio system's control channel, and appears on your scanner's display when the talk group is active.

You can group the talk group ID's you want to hear into their own groups, then write that ID and a name identifying its agency here. Also name each talk group. For example, G1 could be a police department's East Patrol, G2 could be Fire, G3 could be Ambulance, etc.

Fill in the talk group ID and a name for each agency.

### Fleet Map (Type I or Type I/Type II Hybrid Only)

Fill in the fleet map used by this agency.

## Appendix

---

---

### Band Plan (VHF or UHF Only)

A band plan is required so the scanner can correctly determine the voice channel frequency. Fill in the band plan used by this agency, consisting of:

- Base frequency
- Step frequency
- Channel offset

You can enter up to three band plans.

### ***LTR Trunking Worksheet Instructions***

Important: The LTR trunking worksheet is for LTR frequencies only. (However, you can use unused channels for conventional frequencies). To program conventional scanning frequencies, use "Conventional Scanning Worksheet" on Page 105. To program Motorola trunking frequencies, use "Motorola Trunking Worksheet" on Page 106. To program EDACS trunking frequencies, use "EDACS Trunking Worksheet" on Page 108.

### **Filling Out The LTR Worksheet**

#### System Name

Fill in the general name for the system you are programming into this bank. For example, "Fort Worth Public Safety."

#### System Frequencies

For each channel, fill in the frequency and alpha tag used by the agency.

#### Talk Group ID/Name

Identifies the agency. The talk group ID is sent by the agency on the radio system's control channel, and appears on your scanner's display when the talk group is active. You can group the talk group ID's you want to hear into their own groups, then write that ID and a name identifying its agency here. Fill in the talk group ID and a name for each agency.

Tip: Leave this field blank until you gather all remaining information about the agency. Then go back and fill in the talk group ID and name when you see them on the scanner's display.

### **Appendix**

---

---

## ***EDACS Trunking Worksheet Instructions***

Important: The EDACS trunking worksheet is for EDACS frequencies only. (However, you can use unused channels for conventional frequencies). To program conventional scanning frequencies, use "Conventional Scanning Worksheet" on Page 105. To program Motorola trunking frequencies, use "Motorola Trunking Worksheet" on Page 106. To program LTR trunking frequencies, use "" on Page 111.

### **Filling Out The EDACS Worksheet**

#### **System Name**

Fill in the general name for the system you are programming into this bank. For example, "Kansas City Ambulance."

#### **System Frequencies**

For each channel, fill in the frequency and name. Make sure to fill in this information in LCN (logical channel number) order, with LCN1 in position 1, LCN2 in position 2, etc.

#### **Talk Group ID/Name**

Identifies the agency. The talk group ID is sent by the agency on the radio system's control channel, and appears on your scanner's display when the talk group is active. You can group the talk group ID's you want to hear into their own groups, then write that ID and a name identifying its agency here.

EDACS talk group ID's are in the form AFS, where:

- A is the agency (00 through 15)
- F is the fleet (00 through 15)
- S is the subfleet (0 through 7)

You can enter a full or partial talk group ID. For example, if you enter the agency and the fleet but do not enter a subfleet, the scanner scans all subfleets within the fleet you entered.

Fill in the talk group ID and a name for each agency.

## **Appendix**





---



---

## Motorola Trunking Worksheet

**Motorola Trunking Worksheet** *Page 1*

<b>System Name</b>		
<b>System Type (select one)</b>	Type 1 Type 2 800 MHz Type 2 900 MHz	Type 2 UHF Type 2 VHF
<b>System Frequencies</b>		
<b>Channel</b>	<b>Frequency</b>	<b>Name</b>
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		

Appendix



**Motorola Trunking Worksheet** Page 2

Talk Group	Name	Talk Group	Name	Fleet Map	
G1		G6		Block	
1		1		0	
2		2		1	
3		3		2	
4		4		3	
5		5		4	
6		6		5	
7		7		6	
8		8		7	
9		9			
10		10			
G2		G7		<b>Band Plan A</b>	
1		1		Base Freq	
2		2		Step Freq	
3		3		Chan Offset	
4		4			
5		5		<b>Band Plan B</b>	
6		6		Base Freq	
7		7		Step Freq	
8		8		Chan Offset	
9		9			
10		10		<b>Band Plan C</b>	
G3		G8		Base Freq	
1		1		Step Freq	
2		2		Chan Offset	
3		3			
4		4			
5		5			
6		6			
7		7			
8		8			
9		9			
10		10			
G4		G9			
1		1			
2		2			
3		3			
4		4			
5		5			
6		6			
7		7			
8		8			
9		9			
10		10			
G5		G10			
1		1			
2		2			
3		3			
4		4			
5		5			
6		6			
7		7			
8		8			
9		9			
10		10			

---



---

## EDACS Trunking Worksheet

**EDACS Trunking Worksheet** Page 1

System Name		
<i>Important: You must enter EDACS frequencies in logical channel order, not frequency order.</i>		
System Frequencies		
Channel	Frequency	Name
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		



---



---

## LTR Trunking Worksheet

### LTR Trunking Worksheet Page 1

System Name		
<i>Important : You must enter LTR frequencies in channel order, skipping unused channels. For example, if the LTR system uses only Channels 1, 3, 5 and 7, enter frequencies only in the first, third, fifth, and seventh channels in the bank.</i>		
System Frequencies		
Channel	Frequency	Alpha Tag
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		



---

---

## Preprogrammed Systems

Your scanner is preprogrammed with over 400 channels covering police, fire, and ambulance operations in the 25 most populated counties in the US. The following list details the preprogrammed information.

By default, all of the preprogrammed systems are unlocked, and your scanner begins to scan them when you turn it on. To speed up scanning, you can lock out systems that are beyond your reception area (typically no more than 25 miles using the supplied antenna).

Follow these steps to lock out systems:

1. Press and hold **Func**.
2. While continuing to hold **Func**, rotate the scroll control to select a system you want to lock out.
3. While continuing to hold **Func**, press **L/O** to lock out the system.
4. Repeat Steps 2, 3, and 4 to lock out additional systems.

The preprogrammed systems provide a starting point; you will want to find out more information about your local radio systems so you can customize the programming to better suit your listening preferences.

Notes:

- You might hear transmissions on frequencies assigned to very distant stations. This will happen if a local system also uses the same frequency. Disregard the text tag for these transmission (e.g. if you are in California, you aren't really receiving Florida transmissions even if the scanner displays Dade County).
- To free up memory, you can delete systems that you will not be monitoring. Refer to "Deleting a System" on Page 46 (for conventional channels) and "Deleting a System" on Page 54 (for Motorola channels).

## Appendix



- Data used for the preprogrammed information was supplied courtesy of <http://www.radioreference.com>, the Internet's premier scanning resource (RadioReference is not affiliated with Uniden America Corporation).

State	County	City	System
<b>Arizona</b>			
Arizona	Maricopa	Avondale	Maricopa Conv
Arizona	Maricopa	Capitol	Maricopa Conv
Arizona	Maricopa	Chandler	Chandler MO
Arizona	Maricopa	Chandler	Maricopa Conv
Arizona	Maricopa	El Mirage	Maricopa Conv
Arizona	Maricopa	Fort McDowell	
Arizona	Maricopa	Indian Community	Maricopa Conv
Arizona	Maricopa	Goodyear	Maricopa Conv
Arizona	Maricopa	Salt River Indian	
Arizona	Maricopa	Community	Maricopa Conv
Arizona	Maricopa	Scottsdale	Maricopa Conv
Arizona	Maricopa	Tempe	Tempe MO
Arizona	Maricopa	Tolleson	Maricopa Conv
Arizona	Maricopa	Tonopah	Maricopa Conv
Arizona	Maricopa	Wickenburg	Maricopa Conv
<b>California</b>			
California	Alameda	Alameda	Alameda MO
California	Alameda	Albany	Alameda Conv
California	Alameda	East Bay Park	Alameda Conv
California	Alameda	Fremont	Alameda MO
California	Alameda	Hayward	Alameda MO
California	Alameda	Newark	Alameda MO
California	Alameda	Oakland	Oakland EDACS
California	Alameda	Piedmont	Oakland EDACS
California	Alameda	San Leandro	Alameda MO
California	Alameda	Union City	Alameda MO
California	Los Angeles	Alhambra	Los Angeles Conv
California	Los Angeles	Altaden Crest Valley	Los Angeles Conv
California	Los Angeles	Arcadia	Los Angeles Conv
California	Los Angeles	Avalon	Los Angeles Conv
California	Los Angeles	Baldwin Park	Los Angeles Conv
California	Los Angeles	Bell	Los Angeles Conv
California	Los Angeles	Bell Gardens	Los Angeles Conv
California	Los Angeles	Beverly Hills	Los Angeles Conv
California	Los Angeles	Burbank	Los Angeles Conv
<b>State</b>			
California	Los Angeles	Carson	Los Angeles Conv
California	Los Angeles	Century	Los Angeles Conv
California	Los Angeles	Claremont	Los Angeles Conv
California	Los Angeles	College/Transit	Los Angeles Conv
California	Los Angeles	Compton	Los Angeles Conv

## Appendix

California	Los Angeles	Covina	Los Angeles Conv
California	Los Angeles	Crescenta	Los Angeles Conv
California	Los Angeles	Culver City	Culver City MO
California	Los Angeles	Downey	Los Angeles Conv
California	Los Angeles	El Segundo	Los Angeles Conv
California	Los Angeles	Gardena	Los Angeles Conv
California	Los Angeles	Glendora	Los Angeles Conv
California	Los Angeles	Hawthorn	Los Angeles Conv
California	Los Angeles	Hermosa Beach	Los Angeles Conv
California	Los Angeles	Huntington Park	Los Angeles Conv
California	Los Angeles	Industry	Los Angeles Conv
California	Los Angeles	Inglewood	Los Angeles Conv
California	Los Angeles	Irwindale	Los Angeles Conv
California	Los Angeles	LA County	Los Angeles Conv
California	Los Angeles	La Habra Heights	Los Angeles Conv
California	Los Angeles	La Verne	Los Angeles Conv
California	Los Angeles	Lakewood	Los Angeles Conv
California	Los Angeles	Lancaster	Los Angeles Conv
California	Los Angeles	Lennox	Los Angeles Conv
California	Los Angeles	Lomita	Los Angeles Conv
California	Los Angeles	Long Beach	Los Angeles Conv
California	Los Angeles	Lost Hills	Los Angeles Conv
California	Los Angeles	Manhattan Beach	Los Angeles Conv
California	Los Angeles	Marina Del Rey	Los Angeles Conv
California	Los Angeles	Maywood	Los Angeles Conv
California	Los Angeles	Monrovia	Los Angeles Conv
California	Los Angeles	Montebello	Los Angeles Conv
California	Los Angeles	Monterey Park	Los Angeles Conv
California	Los Angeles	Norwalk	Los Angeles Conv
California	Los Angeles	Pasadena	Los Angeles Conv
California	Los Angeles	Pico Rivera	Los Angeles Conv
California	Los Angeles	Pomona	Los Angeles Conv
California	Los Angeles	Redondo Beach	Los Angeles Conv
California	Los Angeles	San Dimas	Los Angeles Conv
California	Los Angeles	San Fernando	Los Angeles Conv
California	Los Angeles	Santa Clarita Valley	Los Angeles Conv
California	Los Angeles	Santa Monica	Los Angeles Conv
California	Los Angeles	Signal Hill	Signal Hill MO
California	Los Angeles	South Bay	Los Angeles Conv
California	Los Angeles	Temple City	Los Angeles Conv
California	Los Angeles	Verdugo	Los Angeles Conv
California	Los Angeles	Walnut	Los Angeles Conv
California	Los Angeles	West Covina	Los Angeles Conv
California	Los Angeles	West Hollywood	Los Angeles Conv
California	Los Angeles	Whittier	Los Angeles Conv
California	Orange	Brea	Orange MO
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
California	Orange	Costa Mesa	Orange MO
California	Orange	La Habra	Orange MO
California	Orange	Laguna Beach	Orange MO
California	Orange	Orange County	Orange MO

## Appendix

California	Orange	Santa Ana	Orange MO
California	Riverside	Banning	Riverside Conv
California	Riverside	Beaumont	Riverside Conv
California	Riverside	Blythe	Riverside Conv
California	Riverside	Cathedral	Riverside Conv
California	Riverside	Corona	Riverside Conv
California	Riverside	Desert Hot Springs	Riverside Conv
California	Riverside	Hemet	Riverside Conv
California	Riverside	Murrietta	Riverside Conv
California	Riverside	Palm Springs	Palm Springs MO
California	Riverside	Palm Springs	Riverside Conv
California	Riverside	Riverside	Riverside Conv
California	Riverside	San Jacinto	Riverside Conv
California	San Bernadino	Adelanto	SanBernadinoE MO
California	San Bernadino	Barstow	SanBernadinoD MO
California	San Bernadino	Big Bear	SanBernadinoA MO
California	San Bernadino	Chino	SanBernadinoA MO
California	San Bernadino	Chino	SanBernadinoB MO
California	San Bernadino	Colton	SanBernadinoA MO
California	San Bernadino	Fontana	SanBernadinoB MO
California	San Bernadino	Greater Highland	SanBernadinoB MO
California	San Bernadino	Loma Linda	SanBernadinoB MO
California	San Bernadino	Lucerne Valley	SanBernadinoC MO
California	San Bernadino	Montclair	SanBernadinoA MO
California	San Bernadino	Ontario	SanBernadinoA MO
California	San Bernadino	Rancho Cucamonga	SanBernadinoB MO
California	San Bernadino	Redlands	SanBernadinoB MO
California	San Bernadino	Rialto	SanBernadinoB MO
California	San Bernadino	San Bernadino	SanBernadinoA MO
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
California	San Bernadino	Twin Peaks	SanBernadinoA MO

## Appendix

California	San Bernadino	Upland	SanBernadinoA MO
California	San Bernadino	Wrightwood	SanBernadinoA MO
California	San Bernadino	Yucaipa	SanBernadinoB MO
California	San Diego	Camp Pendalton	San Diego MO
California	San Diego	Del Mar	San Diego MO
California	San Diego	Escondido	San Diego MO
California	San Diego	Inland	San Diego MO
California	San Diego	Monte Vista	San Diego MO
California	San Diego	National City	National City MO
California	San Diego	North County	San Diego MO
California	San Diego	Rancho	San Diego MO
California	San Diego	San Diego	San Diego City MO
California	San Diego	San Diego County	San Diego Conv
California	San Diego	South Bay	San Diego MO
California	Santa Clara	Gilroy	Santa Clara Conv
California	Santa Clara	Milpitas	Santa Clara Conv
California	Santa Clara	Mountain View	Santa Clara Conv
California	Santa Clara	Palo Alto	Santa Clara Conv
California	Santa Clara	San Jose	Santa Clara Conv
California	Santa Clara	Santa Clara	Santa Clara Conv
California	Santa Clara	Santa Clara	Santa Clara MO
California	Santa Clara	Sunnyvale	Santa Clara Conv
<b>Florida</b>			
Florida	Broward	Broward	Broward County MO
Florida	Broward	Coconut Creek	Broward Conv
Florida	Broward	Coral Springs	Coral Springs MO
Florida	Broward	Dania	Hollywood EDACS
Florida	Broward	Fort Lauderdale	Ft.Lauderdale MO
Florida	Broward	Hollywood	Hollywood EDACS
Florida	Broward	Margate	Coral Springs MO
Florida	Broward	Miramar	Broward County MO
Florida	Broward	Oakland Park	Ft.Lauderdale MO
Florida	Broward	PembrokePines	Broward Conv
Florida	Broward	Plantation	Plantation MO
Florida	Broward	Pompano	Ft.Lauderdale MO
Florida	Broward	Pompano Beach	Ft.Lauderdale MO
Florida	Broward	Sunrise	Broward Conv
Florida	Dade	Carol City	Dade EDACS
Florida	Dade	Cutler Ridge	Dade EDACS
Florida	Dade	Dade	Dade Conv
Florida	Dade	Dade	Dade Fire EDACS
Florida	Dade	Doral	Dade EDACS
Florida	Dade	Hammocks	Dade EDACS
Florida	Dade	Homestead	Dade Conv
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
Florida	Dade	Intracostal	Dade EDACS
Florida	Dade	Kendall	Dade EDACS

## Appendix

Florida	Dade	Miami	Miami MO
Florida	Dade	Miami Beach	Miami Beach MO
Florida	Dade	Miami Lakes	Dade EDACS
Florida	Dade	Miccosokuee	Dade Fire EDACS
Florida	Dade	Municipal	Dade EDACS
Florida	Dade	Northside	Dade EDACS
<b>Illinois</b>			
Illinois	Cook	Alsip	Cook Conv
Illinois	Cook	Chicago	Cook Conv
Illinois	Cook	Englewood	Cook Conv
Illinois	Cook	Evergreen Park	Cook Conv
Illinois	Cook	Franklin Park	Cook Conv
Illinois	Cook	Hoffman	NW Central MO
Illinois	Cook	Hometown	Cook Conv
Illinois	Cook	Merriont Park	Cook Conv
Illinois	Cook	Northlake	Cook Conv
Illinois	Cook	Northlake	Cook Conv
Illinois	Cook	Oak Lawn	Cook Conv
Illinois	Cook	Rosemont	Cook Conv
Illinois	Cook	Schaumburg	Schaumburg MO
Illinois	Cook	Streamwood	NW Central MO
Illinois	Cook	Veteran's Park	Cook Conv
<b>Massachusetts</b>			
Massachusetts	Middlesex	Ashby	Middlesex Conv
Massachusetts	Middlesex	Ayer	Middlesex Conv
Massachusetts	Middlesex	Belmont	Cambridge MO
Massachusetts	Middlesex	Cambridge	Cambridge MO
Massachusetts	Middlesex	Shirley	Middlesex Conv
Massachusetts	Middlesex	Townsend	Middlesex Conv
<b>Michigan</b>			
Michigan	Wayne	Allen Park	Wayne Conv
Michigan	Wayne	Belleville	Wayne Conv
Michigan	Wayne	Canton	Wayne Conv
Michigan	Wayne	Dearborn	Wayne Conv
Michigan	Wayne	Garden City	Wayne Conv
Michigan	Wayne	Huron	Wayne Conv
Michigan	Wayne	Northville	Wayne Conv
Michigan	Wayne	Plymouth	Wayne Conv
Michigan	Wayne	Redford	Wayne Conv
Michigan	Wayne	Romulus	Wayne Conv
Michigan	Wayne	Sumpter	Wayne Conv
Michigan	Wayne	Van Buren	Wayne Conv
Michigan	Wayne	WSU	Wayne Conv
<b>Nevada</b>			
Nevada	Clark	Clark County	Clark County MO
Nevada	Clark	Henderson	Clark County MO
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
Nevada	Clark	Las Vegas	Clark County MO
Nevada	Clark	North Las Vegas	Clark County MO

## Appendix

<b>New York</b>			
New York	New York	Bronx	New York Conv
New York	New York	Brooklyn	New York Conv
New York	New York	Manhattan	New York Conv
New York	New York	New York	New York Conv
New York	New York	Queens	New York Conv
New York	New York	Staten Island	New York Conv
New York	Suffolk	Amangansett	East Hampton MO
New York	Suffolk	Amityville Village	SuffolkCounty MO
New York	Suffolk	Asharoken	SuffolkCounty MO
New York	Suffolk	Bridgehampton	East Hampton MO
New York	Suffolk	East Hampton	East Hampton MO
New York	Suffolk	East Hampton	East Hampton MO
		East Hampton	
New York	Suffolk	Village	East Hampton MO
New York	Suffolk	Islip Township	SuffolkCounty MO
New York	Suffolk	Lloyd Park	SuffolkCounty MO
New York	Suffolk	Montauk	East Hampton MO
New York	Suffolk	Northport	SuffolkCounty MO
New York	Suffolk	Ocean Beach	SuffolkCounty MO
New York	Suffolk	Riverhead	SuffolkCounty MO
New York	Suffolk	Sag Harbor	East Hampton MO
New York	Suffolk	Sag Harbor Village	East Hampton MO
New York	Suffolk	Smithtown	SuffolkCounty MO
New York	Suffolk	Springs	East Hampton MO
New York	Suffolk	Suffolk County	SuffolkCounty MO
<b>Ohio</b>			
Ohio	Cuyahoga	Bay Village	Cuyahoga Conv
Ohio	Cuyahoga	Beachwood	Cuyahoga Conv
Ohio	Cuyahoga	Bedford	Cuyahoga Conv
Ohio	Cuyahoga	Bedford Heights	Cuyahoga Conv
Ohio	Cuyahoga	Bentleyville	Cuyahoga Conv
Ohio	Cuyahoga	Berea	Cuyahoga Conv
Ohio	Cuyahoga	Bratenhal	Cuyahoga Conv
Ohio	Cuyahoga	Brecksville	Cuyahoga Conv
Ohio	Cuyahoga	Broadview Heights	Cuyahoga Conv
Ohio	Cuyahoga	Brooklyn	Parma EDACS
Ohio	Cuyahoga	Brooklyn Heights	Cuyahoga Conv
Ohio	Cuyahoga	Brookpark	Brook Park MO
Ohio	Cuyahoga	Chagrin Falls	Cuyahoga Conv
Ohio	Cuyahoga	Cleveland Heights	Cuyahoga Conv
Ohio	Cuyahoga	Cuyahoga	Cuyahoga Conv
Ohio	Cuyahoga	Cuyahoga Heights	Cuyahoga Conv
Ohio	Cuyahoga	East Cleveland	Cuyahoga Conv
Ohio	Cuyahoga	Euclid	Cuyahoga Conv
Ohio	Cuyahoga	Fairview Park	Cuyahoga Conv
Ohio	Cuyahoga	Garfield Heights	Cuyahoga Conv
Ohio	Cuyahoga	Gates Mills	Cuyahoga Conv
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
Ohio	Cuyahoga	Glenwillow	Cuyahoga Conv
Ohio	Cuyahoga	Highland Heights	Cuyahoga Conv

**Appendix**

Ohio	Cuyahoga	Highland Hills	Cuyahoga Conv
Ohio	Cuyahoga	Hunting Valley	Cuyahoga Conv
Ohio	Cuyahoga	Independence	Cuyahoga Conv
Ohio	Cuyahoga	Lakewood	Cuyahoga Conv
Ohio	Cuyahoga	Linndale	Parma EDACS
Ohio	Cuyahoga	Lyndhurst	Cuyahoga Conv
Ohio	Cuyahoga	Maple Heights	Cuyahoga Conv
Ohio	Cuyahoga	Mayfield	Cuyahoga Conv
Ohio	Cuyahoga	Middleburg Heights	Brook Park MO
Ohio	Cuyahoga	Middleburg Heights	Cuyahoga Conv
Ohio	Cuyahoga	Moreland Hills	Cuyahoga Conv
Ohio	Cuyahoga	Newburg Heights	Cuyahoga Conv
Ohio	Cuyahoga	North Olmsted	Cuyahoga Conv
Ohio	Cuyahoga	North Randall	Cuyahoga Conv
Ohio	Cuyahoga	North Royalton	Brook Park MO
Ohio	Cuyahoga	North Royalton	Cuyahoga Conv
Ohio	Cuyahoga	Oakwood	Cuyahoga Conv
Ohio	Cuyahoga	Olmstead Falls	Brook Park MO
Ohio	Cuyahoga	Olmsted Falls	Cuyahoga Conv
Ohio	Cuyahoga	Olmsted Township	Cuyahoga Conv
Ohio	Cuyahoga	Orange	Cuyahoga Conv
Ohio	Cuyahoga	Parma	Parma EDACS
Ohio	Cuyahoga	Parma Heights	Brook Park MO
Ohio	Cuyahoga	Pepper Pike	Cuyahoga Conv
Ohio	Cuyahoga	Richmond Heights	Cuyahoga Conv
Ohio	Cuyahoga	Rocky River	Cuyahoga Conv
Ohio	Cuyahoga	Seven Hills	Cuyahoga Conv
Ohio	Cuyahoga	Shaker Heights	Cuyahoga Conv
Ohio	Cuyahoga	Solon	Cuyahoga Conv
Ohio	Cuyahoga	South Euclid	Cuyahoga Conv
Ohio	Cuyahoga	Strongsville	Brook Park MO
Ohio	Cuyahoga	University Circle	Cuyahoga Conv
Ohio	Cuyahoga	University Heights	Cuyahoga Conv
Ohio	Cuyahoga	Valley View	Cuyahoga Conv
Ohio	Cuyahoga	Walton Hills	Cuyahoga Conv
Ohio	Cuyahoga	Warrensville Heights	Cuyahoga Conv
Ohio	Cuyahoga	Westlake	Cuyahoga Conv
Ohio	Cuyahoga	Woodmere	Cuyahoga Conv
<b>Pennsylvania</b>			
Pennsylvania	Philadelphia	Temple PD	Philadelphia Conv
<b>Texas</b>			
Texas	Bexar	Alamo Heights	Bexar Conv
Texas	Bexar	Balcones Heights	Bexar Conv
Texas	Bexar	Bexar County	Bexar Conv
Texas	Bexar	Castle Hills	Bexar Conv
Texas	Bexar	Hollywood Park	Bexar Conv
Texas	Bexar	Kirby	Bexar Conv
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
Texas	Bexar	Leon Valley	Bexar Conv
Texas	Bexar	Live Oak	Bexar Conv
Texas	Bexar	Shavano Park	Bexar Conv

## Appendix

Texas	Bexar	Terrell Hills	Bexar Conv
Texas	Bexar	Universal City	Bexar Conv
Texas	Bexar	Windcrest	Bexar Conv
Texas	Dallas	Addison	Carrollton MO
Texas	Dallas	Carrollton	Carrollton MO
Texas	Dallas	Cockrell Hill	Dallas MO
Texas	Dallas	Coppell	Lewisville MO
Texas	Dallas	Dallas	Dallas Conv
Texas	Dallas	Dallas	Dallas MO
Texas	Dallas	Desoto	Dallas Conv
Texas	Dallas	Duncanville	Dallas Conv
Texas	Dallas	Farmers Branch	Carrollton MO
Texas	Dallas	Flower Mound	Lewisville MO
Texas	Dallas	Garland	Garland MO
Texas	Dallas	Grand Prairie	Grand Prairie MO
Texas	Dallas	Highland Park	Dallas Conv
Texas	Dallas	Highland Village	Lewisville MO
Texas	Dallas	Hutchins	Dallas Conv
Texas	Dallas	Irving	Irving EDACS
Texas	Dallas	Lake Cities	Lewisville MO
Texas	Dallas	Lancaster	Dallas Conv
Texas	Dallas	Lewisville	Lewisville MO
Texas	Dallas	Mesquite	Mesquite MO
Texas	Dallas	Richardson	Richardson EDACS
Texas	Dallas	Rowlett	Garland MO
Texas	Dallas	Sachse	Garland MO
Texas	Dallas	Seagoville	Dallas Conv
Texas	Dallas	Sunnyvale	Dallas Conv
Texas	Dallas	University Park	Dallas Conv
Texas	Dallas	Wilmer	Dallas Conv
Texas	Harris	Arcola	Starnet MO
Texas	Harris	Baytown	Starnet MO
Texas	Harris	Brazoria County	Starnet MO
Texas	Harris	Cy-Fair	Harris Conv
Texas	Harris	Cypress Creek	Harris Conv
Texas	Harris	Fresno	Starnet MO
Texas	Harris	Ft Bend County	Starnet MO
Texas	Harris	Fulshar	Starnet MO
Texas	Harris	Galena Park	Starnet MO
Texas	Harris	Harris County	Starnet MO
Texas	Harris	Humble	Starnet MO
Texas	Harris	Jersey Village	Starnet MO
Texas	Harris	Katy	Starnet MO
Texas	Harris	Kendleton	Starnet MO
Texas	Harris	Meadows	Starnet MO
Texas	Harris	Needville	Starnet MO
Texas	Harris	Pasadena	Starnet MO
Texas	Harris	Pecan Grove	Starnet MO
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
Texas	Harris	Richmond	Starnet MO
Texas	Harris	Rosehill	Harris Conv

## Appendix



Texas	Harris	Rosenberg	Starnet MO
Texas	Harris	Tomball	Harris Conv
Texas	Harris	Webster	Starnet MO
Texas	Harris	West University Place	Starnet MO
Texas	Harris	Willow Fork	Starnet MO
Texas	Tarrant	Arlington	Arlington MO
Texas	Tarrant	Azle	Tarrant Conv
Texas	Tarrant	Bedford	NE Tarrant MO
Texas	Tarrant	Benbrook	Tarrant Conv
Texas	Tarrant	Burleson	Tarrant Conv
Texas	Tarrant	Colleyville	NE Tarrant MO
Texas	Tarrant	Crowley	Tarrant Conv
Texas	Tarrant	Dalworthington Gardens	Tarrant Conv
Texas	Tarrant	Eagle Mount	Tarrant Conv
Texas	Tarrant	Eules	NE Tarrant MO
Texas	Tarrant	Forest Hill	Tarrant Conv
Texas	Tarrant	Forest Hills	Fort Worth MO
Texas	Tarrant	Fort Worth	Fort Worth MO
Texas	Tarrant	Grapevine	NE Tarrant MO
Texas	Tarrant	Haltom City	Fort Worth MO
Texas	Tarrant	Haslet	Tarrant Conv
Texas	Tarrant	Hurst	Tarrant Conv
Texas	Tarrant	Keller	NE Tarrant MO
Texas	Tarrant	Kennedale	Fort Worth MO
Texas	Tarrant	Lake Worth	Tarrant Conv
Texas	Tarrant	North Richland Hills	Fort Worth MO
Texas	Tarrant	Rendon	Tarrant Conv
Texas	Tarrant	Richland Hills	Fort Worth MO
Texas	Tarrant	Saginaw	Tarrant Conv
Texas	Tarrant	Southlake	Fort Worth MO
Texas	Tarrant	Southlake	NE Tarrant MO
Texas	Tarrant	Watauga	Tarrant Conv
Texas	Tarrant	Westlake	NE Tarrant MO
Texas	Tarrant	White Settlement	Tarrant Conv
<b>Washington</b>			
Washington	King	Airport	PortOfSeattle MO
Washington	King	Algona	Seattle MO
Washington	King	Auburn	Seattle MO
Washington	King	Bellevue	Seattle MO
Washington	King	Bothell	Seattle MO
Washington	King	Des Moines	Seattle MO
Washington	King	Eastside	Seattle MO
Washington	King	Enumclaw	Seattle MO
Washington	King	Federal Way	Seattle MO
Washington	King	Issaquah	Seattle MO
Washington	King	Kent	Seattle MO
<b>State</b>	<b>County</b>	<b>City</b>	<b>System</b>
Washington	King	King County	Seattle MO

## Appendix

---

---

Washington	King	Kirkland	Seattle MO
Washington	King	Mercer Island	Seattle MO
Washington	King	Muckleshoot	Seattle MO
Washington	King	Normandy Park	Seattle MO
Washington	King	Port	PortOfSeattle MO
Washington	King	Redmond	Seattle MO
Washington	King	Seattle	Seattle MO
Washington	King	Snoqualmie	Seattle MO
Washington	King	Tukwilla	Seattle MO
Washington	King	Waterfront	PortOfSeattle MO

Appendix

---

---

## One-Year Limited Warranty

---

---

**Important:** Evidence of original purchase is required for warranty service.

**WARRANTOR: UNIDEN AMERICA CORPORATION** (“Uniden”)

**ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Operating Guide for this product.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will repair the defect and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIM-

**One-Year Limited Warranty**

---

---

BURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion might not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights, and you might also have other rights which vary from state to state. This warranty is void outside the United States of America.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in this Operating Guide you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, or delivered, to warrantor at:

Uniden America Corporation

Parts and Service Division

4700 Amon Carter Boulevard

Fort Worth, TX 76155

(800) 297-1023, 8:00 a.m. to 5:00 p.m., Central, Monday through Friday

**One-Year Limited Warranty**



**One-Year Limited Warranty**

125



**One-Year Limited Warranty**



**One-Year Limited Warranty**

FOR  
ACCESSORIES,  
GO ONLINE @  
WWW.UNIDEN.COM

REGISTER ONLINE TODAY!  
THANK YOU FOR BUYING A UNIDEN PRODUCT.

A World Without Wires | Uniden®

May be covered under one or more of the following U.S. patents:

4,389,304	4,497,089	4,495,879	4,461,039	4,381,916	4,597,104
4,627,100	4,841,302	4,888,815	4,932,074	4,947,456	5,014,348
5,169,109	5,428,892	5,428,826	5,438,888	5,449,256	5,465,402
5,471,660	5,483,884	5,530,296	5,548,832	5,551,071	5,574,995
5,577,076	5,588,433	5,600,223	5,642,424	5,710,992	5,859,875
5,886,422	5,981,349	5,991,803	6,012,158	6,025,758	6,034,573
6,084,270	6,266,521				

©2004 Uniden America Corporation, Fort Worth, Texas.  
Contains additional foreign articles. Custom manufactured in China.