

Uniden®

UNIDEN  
CORDLESS  
TELEPHONES

DECT3080 SERIES

Note:  
Required User information is  
described in page 60.



## Table of Contents

<b>Welcome</b> .....	<b>4</b>	Answering system features .....	15
Accessibility .....	4	Terminology Used in this Manual .....	16
<b>Installing the Phone</b> .....	<b>5</b>	Manual Conventions .....	16
Choosing the Best Location .....	5	Parts of the Handset .....	17
Installing the Battery .....	6	Parts of the Base .....	18
Connecting the AC adapter .....	7	<b>Using the Interface</b> .....	<b>19</b>
To the base .....	7	Reading the Handset Display .....	19
To the charging cradle (for multi-handset packs only) .....	7	Using the Four-way Function Key .....	20
Charging the Handset .....	8	Using the Handset Menu .....	20
Connecting to the Phone Line .....	9	Entering Text from Your Handset .....	21
Testing the Connection .....	10	<b>Basic Setup</b> .....	<b>22</b>
Changing the dial mode .....	11	Selecting a Language .....	22
Installing the Belt Clip .....	11	Setting the Day & Time .....	22
Expanding Your Phone .....	12	Activating Personal Settings .....	23
Adding accessory handsets .....	12	Activating the Key Touch Tone .....	23
Registering accessory handsets .....	12	<b>Setting Up the Phonebook</b> .....	<b>24</b>
Using Multiple Bases .....	13	Creating Phonebook Entries .....	24
Registering the Handset to Another Base .....	13	Finding a Phonebook Entry.....	25
Selecting the Base .....	14	Editing an Existing Phonebook Entry.....	26
<b>Getting to Know Your New Phone</b> .....	<b>15</b>	Storing Caller ID or Redial Numbers in the Phonebook .....	26
Features.....	15	Deleting a Single Phonebook Entry .....	26

Deleting all Phonebook Entries.....	27	<b>Adjusting the Ringer, Earpiece and Speaker Volume .....</b>	<b>36</b>
Copying Phonebook Entries to Another Handset....	27	Adjusting the Ringer Volume.....	36
<b>Customizing Your Handsets.....</b>	<b>28</b>	Muting the Ringer (One call only) .....	36
Changing the Handset Banner.....	28	Adjusting the Earpiece Volume .....	36
Selecting a Ringer Tone .....	28	Adjusting the Speaker Volume.....	37
Activating AutoTalk.....	29	Adjusting the Audio Tone .....	37
Activating Any Key Answer .....	29	<b>Finding a Lost Handset.....</b>	<b>38</b>
Color Scheme .....	29	<b>Using Hold, Conference and Transfer .....</b>	<b>38</b>
Wallpaper .....	30	Placing a Call on Hold.....	38
Adjusting the Display (LCD Contrast) .....	30	Conferencing.....	38
<b>Using Your Phone.....</b>	<b>31</b>	Transferring a Call.....	39
Making a Call from the Phonebook.....	32	Answering a transferred call.....	39
Chain dialing from the phonebook.....	32	<b>Using Special Features .....</b>	<b>40</b>
Switching to the Handset Speakerphone During a Call .....	32	Privacy Mode .....	40
<b>Using Caller ID, Call Waiting, and Redial Lists.....</b>	<b>33</b>	Using the Intercom.....	40
Using the Caller ID List .....	33	Making an intercom page .....	40
Making a Call from a Caller ID Record .....	33	Answering an intercom page.....	41
Seven-digit dialing .....	34	Muting the Microphone .....	41
Deleting Caller ID Numbers .....	34	Tone Dialing Switch Over.....	41
Using Call Waiting .....	35	Using a Voice Mail Service .....	42
Redialing a Number .....	35	Resetting the voice message waiting indicator ..	42
Deleting a Redial Record .....	35	Installing the Optional Headset .....	42

<b>Setting Up the Answering System .....</b>	<b>43</b>	Cleaning the charging contacts .....	52
Recording a Personal Greeting.....	43	Battery replacement and handling .....	52
Selecting a Greeting .....	43	Power Failures .....	52
Deleting Your Personal Greeting.....	44	<b>Troubleshooting .....</b>	<b>53</b>
Selecting the Language for Announcements .....	44	Common Issues .....	53
Setting the Number of Rings.....	45	Resetting the Handset .....	55
Setting the Record Time (or Announce only) .....	45	Resetting the Handset Without the Base .....	56
Activating the Message Alert.....	46	Changing the Line Mode for Multiple Extensions....	57
Activating the Base Call Screen.....	46	Traveling Out of Range .....	57
<b>Using the Answering System .....</b>	<b>47</b>	Liquid Damage.....	58
Turning Your Answering System On and Off.....	47	<b>Precautions! .....</b>	<b>59</b>
Reviewing Messages .....	48	Rechargeable Nickel-Metal-Hydride Battery	
Screening Calls.....	49	Warning .....	59
Turning Off the Message Alert Tone.....	49	Important Safety Instructions .....	59
Operating the Answering System While You Are		The FCC Wants You To Know .....	60
Away from Home .....	49	Radio interference .....	61
Setting a security code or Personal		Cordless telephone privacy .....	61
Identification Number (PIN) .....	49	I.C. Notice .....	61
Dialing in to your answering system.....	49	Terminal equipment .....	61
<b>Maintenance.....</b>	<b>51</b>	Radio equipment .....	61
Specifications .....	51	<b>One Year Limited Warranty.....</b>	<b>62</b>
Battery Information.....	51	<b>Index.....</b>	<b>63</b>
Battery life .....	51	<b>Remote Operation Card .....</b>	<b>65</b>
Low battery alert .....	52		

## Welcome

Thank you for purchasing a Uniden Multi-Handset phone.

Note: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit.

As an Energy Star® Partner, Uniden has determined that this product or product models meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

Uniden is a registered trademark of Uniden America Corporation.



Welcome

## Accessibility

Uniden provides a customer service hotline for accessibility questions. If you have a disability and need customer service assistance or if you have any questions about how Uniden's products can accommodate persons with disabilities, please call the accessibility voice/TTY line: 1-800-874-9314.

Our customer care hours as well as accessibility information can be found on our website, [www.uniden.com](http://www.uniden.com), under the "Accessibility" link. If your call is received outside of our business hours, you can leave us a message and we will call you back.

May be covered under one or more of the following U.S. patents:

4,797,916	5,426,690	5,491,745	5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,663,981	5,671,248	5,717,312	5,732,355	5,754,407	5,758,289	5,768,345
5,787,356	5,794,152	5,801,466	5,825,161	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082	6,076,052	6,125,277
6,253,088	6,314,278	6,321,068	6,418,209	6,618,015	6,671,315	6,714,630	6,782,098
6,788,920	6,788,953	6,839,550	6,889,184	6,901,271	6,907,094	6,914,940	6,940,867
6,953,118	7,023,176	7,030,819	7,146,160	7,203,307	7,206,403		

Other patents pending.


## Installing the Phone

### Choosing the Best Location







When choosing a location for your new phone, here are some important guidelines you should consider:

Installing the Phone

#### PLACE YOUR BASE

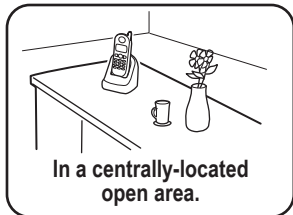

#### TRY TO AVOID

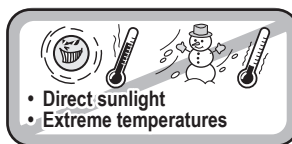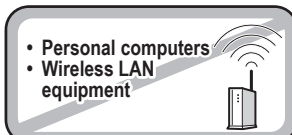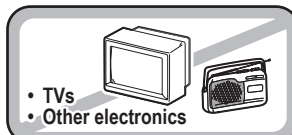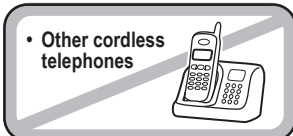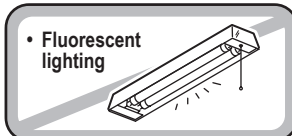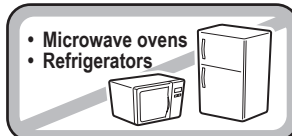


Note: For maximum range:

- Keep both the base and handset antennas free of obstruction.
- When the handset is not in use, place the handset in an upright position.
- Metal and reinforced concrete may affect cordless telephone performance.


## Installing the Battery

Use only the Uniden BT-1011 rechargeable battery pack supplied with your cordless telephone.


- ① Locate the battery pack, battery cover and the handset.

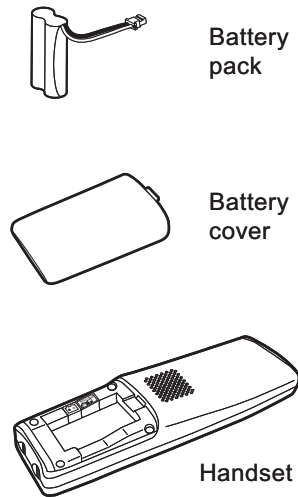


- ② Line up the red and black wires on the battery pack connector with the sticker in the handset's battery compartment.

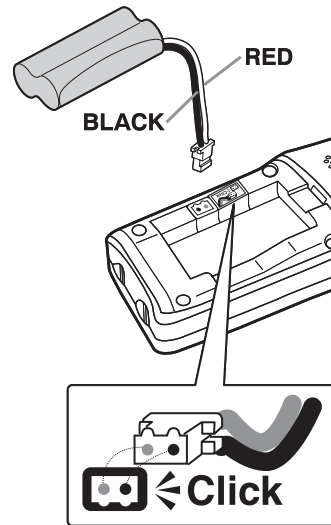

- ③ Push the battery pack connector in firmly. (You should hear it click into place.) Gently tug on the battery wires to make sure the connection is secure.

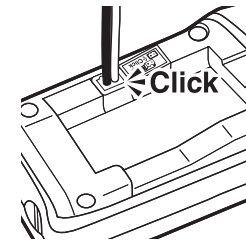

- ④ Place the cover over the battery compartment and slide it up into place.

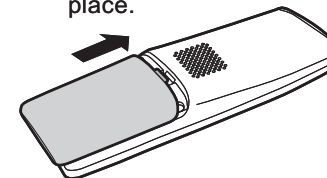


Installing the Phone

## Connecting the AC adapter


### To the base

To avoid risk of fire and shock, only use the Uniden PS-0009 AC adapter with the base.

- 1 Connect the AC adapter to the **DC IN 9V** jack on the bottom of the base.

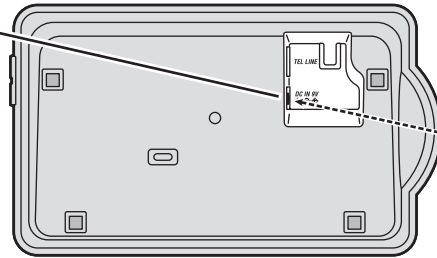

- 2 Connect the AC adapter to a standard 120V AC wall outlet.


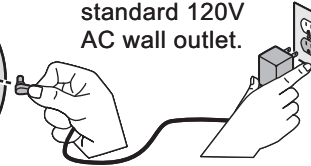


Don't put any power cord where it people might trip over it or step on it. If a power cord becomes chafed or worn out, it can create a fire or electrical hazard.

### To the charging cradle (for multi-handset packs only)

Use only the Uniden PS-0007 AC adapter with the charging cradle.

- 1 Place the cord through the molded wiring channel.

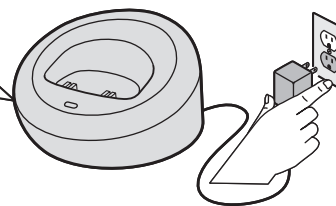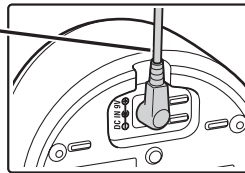


- 2 Connect the AC adapter to a standard 120V AC wall outlet.




## Charging the Handset

- ① Place the handset in the base cradle with the display facing forward.

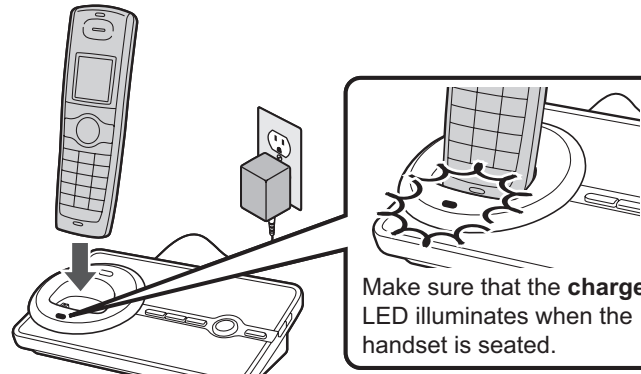

- ② If you have an accessory handset, place it in the charging cradle with the display facing forward.

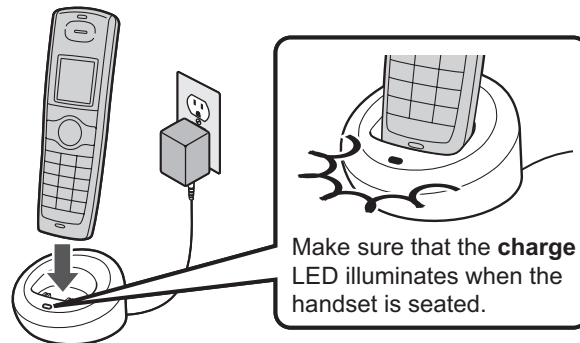

❓ What if the **charge** LED doesn't light up?


- Reseat the handset; make sure the contacts on the bottom of the handset are lined up with the contacts in the cradle.
- Check the AC adapter connection.
- Make sure you are not using an outlet that is controlled by a wall switch.

- ③ Charge your handset at least 15 to 20 hours before plugging into the phone line.

## Connecting to the Phone Line

Make sure that the battery pack is fully charged.

- ① Connect the AC adapter to the **DC IN 9V** jack on the bottom of the base.

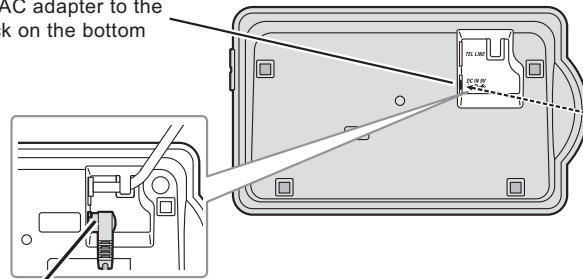

- ③ Connect the AC adapter to a standard 120V AC wall outlet.


? What if CHECK TEL LINE appears on the handset display?

The telephone cord may not be connected correctly. Check the telephone cord connection.

- ② Route the cord through the molded wiring channel.

? Do you have DSL or any high-speed Internet service delivered through your phone line?


💡 Try putting a DSL filter between the base and the wall jack. Without a filter, telephone-line-based Internet services can interfere with standard phones.

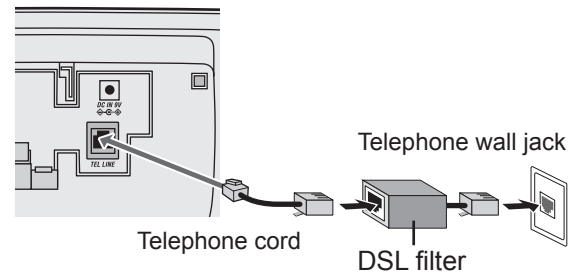

## Testing the Connection


① Pick up the handset from the base and press **[\*/flash]**. You should hear a dial tone, and the display should show TALK.

- ① ? What if I can't hear a dial tone?
- 💡 Check the telephone cord connection on the base.
- ① ? What if the display doesn't show TALK?
- 💡
  - Check the battery pack connection in the handset.
  - Make sure the battery pack is fully charged.
  - Make sure the AC adapter cord is securely connected to the **DC IN 9V** jack and a standard power outlet.
  - Try resetting the handset (see page 50).

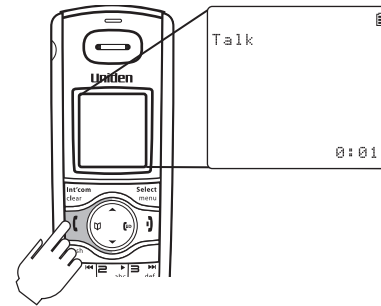

② Make a quick test call, and then press **[\*]** to hang up.

- ① ? What if there is a lot of static?
- 💡 Check the sources of interference described in Choosing the Best Location (see page 5): is the base near any of those?
- ① ? What if the call doesn't go through?
- 💡 Try changing the dialing mode (see the next section).

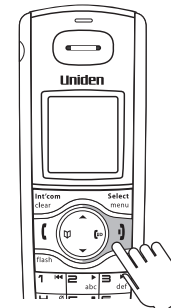


Note: Make sure you can get a dial tone on any accessory handsets that were packaged with your phone.

### Changing the dial mode

Your phone can communicate with the telephone network in two different ways: tone dialing or pulse dialing. These days, most base networks use a method called tone dialing, so your phone comes programmed for tone dialing. If your phone company uses pulse dialing, you will need to change your phone's dial mode. If you don't get a dial tone or can't connect to the telephone network, please follow the steps below to modify your phone's settings:

- 1) Press **[Select/menu]**.
- 2) Select the GLOBAL SETUP menu, and then the DIAL MODE submenu.
- 3) Scroll **[▼]** to highlight PULSE.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.

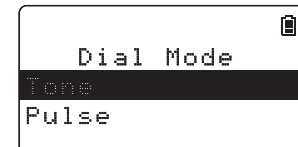


If you ever need to change the dial mode back to tone dialing, follow the same procedure, but select TONE in step 2.

## NOW YOU ARE READY TO USE YOUR PHONE!

### Installing the Belt Clip

Insert the tabs on the sides of the belt clip into the holes on either side of the handset. Press the belt clip down until it clicks into place. (Tug on the clip to make sure it's secure.)

To remove the belt clip, gently pull the tabs out of the holes, then slide the belt clip off of the handset.

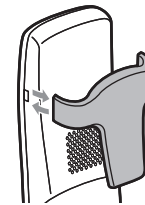

## Expanding Your Phone


### Adding accessory handsets

Your phone supports a total of six cordless handsets, including any that were supplied with your phone. You can now place a fully-featured cordless handset anywhere AC power is available to connect the charging cradle.

- Your phone is compatible with the DCX300 accessory handset.
- For instructions on connecting the charging cradle, see page 7.
- If you purchase any accessory handsets separately, you must register the handsets to the base before you can use them. (Accessory handsets that come packaged with a base are already registered to that base.)

### Registering accessory handsets

When charged, registered handsets display a handset ID number. Handsets that have not been registered display:

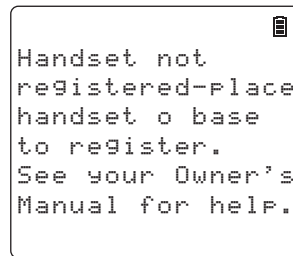

Handset not  
registered-Place  
handset on base  
to register.  
See your Owner's  
Manual for help.

To register a DCX300 accessory handset:

- 1) Charge the handset for 15-20 hours.
- 2) Place the handset in the base cradle for about thirty seconds. HANDSET REGISTERING will appear in the LCD.
- 3) When the handset has registered to the base, the LCD will display REGISTRATION COMPLETE then show the handset ID number.

If REGISTRATION FAILED appears in the LCD, please try these steps again.

Note: If a handset has ever been registered to a base, you must reset the handset before you can register it to a new base. See Resetting the Handset on page 50.

## Using Multiple Bases

The handsets supplied with your phone (or any DCX200 accessory handsets) can be registered to a total of four different bases. Compatible bases include the DECT2060, DECT2080, DECT2085, and DECT2088 models. Once your handset is registered to more than one base, you can set the handset to search automatically the available base, or you can select manually which base the handset should connect to (for example, if you have one base with an answering machine, you can tell the handset to connect that base to check messages).

### Registering the Handset to Another Base

1. Make sure the handset battery is fully charged.
2. To register a handset to DECT2060 or DECT2080 base:
  - Disconnect the base AC adapter. Then press and hold **[find hs]** while you reconnect the adapter. Keep pressing **[find hs]** until the charge LED starts to blink.To register a handset to DECT2085 or DECT2088 base:
  - With the phone in standby, press **[Select/menu]** on the base. Move the cursor to select the REGISTER HANDSET menu, and then press **[Select/menu]**. HANDSET REGISTERING will appear.
3. On the handset, Press **[Select/menu]**. Select the REGISTER BASE menu. HANDSET REGISTERING will appear in the display.
4. Wait approximately thirty seconds. "REGISTRATION COMPLETE" will be displayed to indicate the handset has been registered to the base and a handset ID will be automatically assigned.

If REGISTRATION FAILED appears in the LCD, please try these steps again.

## Selecting the Base

When your handset is registered to another base, it will automatically connect to the base. A base ID (that is for the handset only) will be assigned in the order of registration. You can either select a base you want to use manually, or set to AUTO. If you set to AUTO, when the handset comes out of range, it searches automatically the available base in order of base ID.

1. With the phone in standby, press **[Select/menu]**. Select the HANDSET SETUP menu, and then the SELECT BASE submenu.
2. Move the cursor to select the base you want to connect to, or choose AUTO to have the handset automatically select the base.
3. Press **[Select/menu]**. SEARCHING will appear in the display.
4. When the base is found, the handset will return to standby. If the base is not found, "SEARCHING" continues to appear. You can repeat the procedure listed above to return back to the original connection or to find the different base.

Notes: • You cannot change bases during a call.

- To confirm which bases the handset is registered to, open the SELECT BASE submenu and use **[▲]** and **[▼]** to scroll through the list. Press **[i]** to close the list and return to standby.

## Getting to Know Your New Phone

### Features

- 5.8GHz FHSS expandable system
- Expands up to 10 handsets
- Integrated digital answering system
- Caller ID/Call Waiting
- Base keypad
- Advanced phonebook features:
  - Store 70 phonebook entries on base & each handset
  - Alphabetical search
  - Personalized ring by party (on handset)
  - Transfer single listing or entire phonebook
- Store 30 Caller ID numbers on base & each handset
- Speakerphone on base & handset
- 7 ringer options on handset (3 tones/4 melodies)
- Last 5 number redial
- Bilingual menu displays  
(for US models: English and Spanish,  
for Canadian models: English and French)
- Call transfer
- Conferencing
- Intercom

### Answering system features

- Digital tapeless recording
- Up to 14 minutes of recording time
- Call screening
- Personal or pre-recorded outgoing messages
- Bilingual voice prompts  
(for US models: English and Spanish,  
for Canadian models: English and French)
- Day and time announcement
- Remote message retrieval
- Toll saver
- Message alert
- Records up to 59 messages



## Terminology Used in this Manual



<b>Accessory Handsets</b>	Additional handsets that can register to the base, allowing you to add handsets without connecting another phone line. This base supports a total of ten cordless handsets; see page 12 for compatible handsets.
<b>Base</b>	The main part of the phone that connects to your phone line and lets you make and receive calls.
<b>Charging cradle</b>	A cradle that comes with an accessory handset and charges the handset battery pack. It connects to power but does not connect to a phone line.
<b>CID</b>	Caller ID is available from your telephone provider and is offered to users on a subscription basis. With this service, you will be able to see the incoming caller information such as name and phone number.
<b>CID/CW or CIDCW</b>	Caller ID with Call Waiting is available by subscription from your telephone provider. With this service, you will be able to view incoming caller information while on a call with another user.
<b>Global Settings</b>	Any settings that apply to all registered handsets and the base. These features are available by selecting "GLOBAL SETUP" in the handset or the base menu. Only one handset or the base can change global settings at a time, and you have to make sure the phone is not currently being used. If you have multiple bases, the different bases have each global settings; select the base before changing the global setting (see Selecting the Base on page 14).
<b>Standby</b>	The handset and the base are not in use. (It doesn't matter whether the handset is in the cradle: the <b>[flash]</b> or <b>[ ]</b> hasn't been pressed, and there is no dial tone.)
<b>Station</b>	Any registered handset or the base.
<b>Talk</b>	A dial tone has been enabled, so you can dial and carry on a conversation with an outside party.

## Manual Conventions


This manual uses several different type styles to help you distinguish between different parts of the phone:

- **Bold** text with "[ ]" indicates a key or button on the phone
- ALL CAPITALS indicates text on the display, such as menu options, prompts, and confirmation messages
- **lower case bold** text indicates a status light on the phone
- **ALL CAPITALS BOLD** indicates a connection jack on the base or charging cradle

## Parts of the Handset

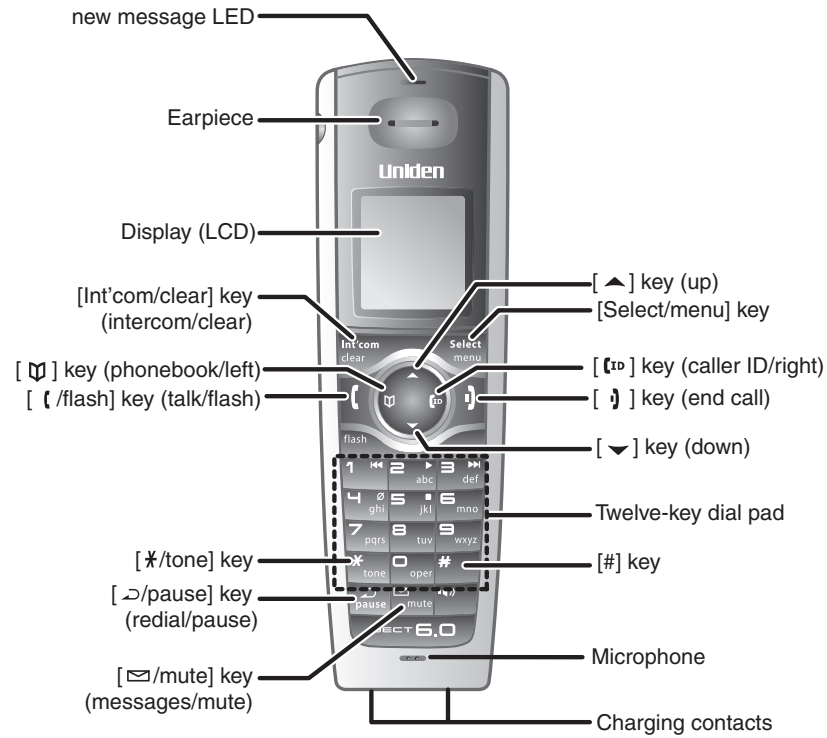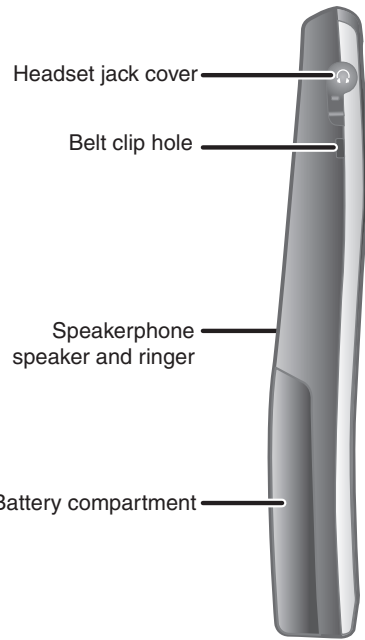


## Parts of the Base

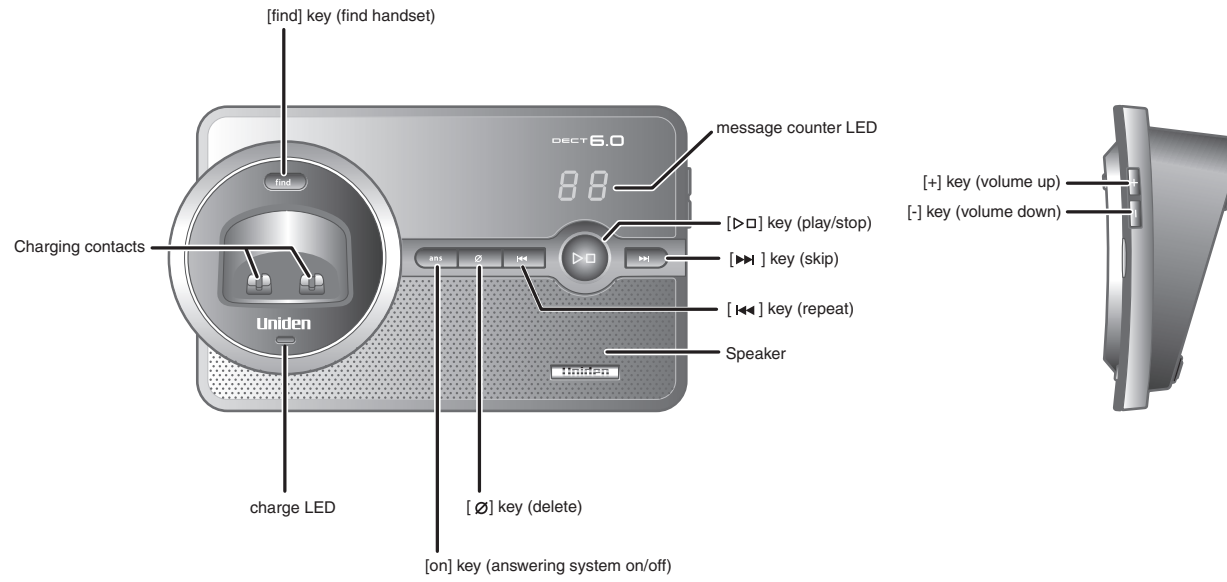


## Using the Interface

### Reading the Handset Display

In standby

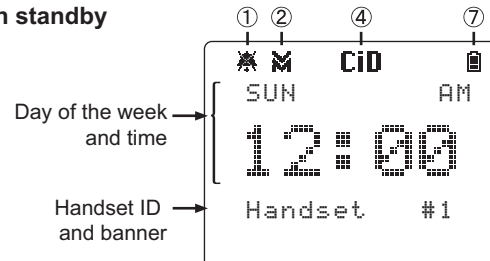


During a call

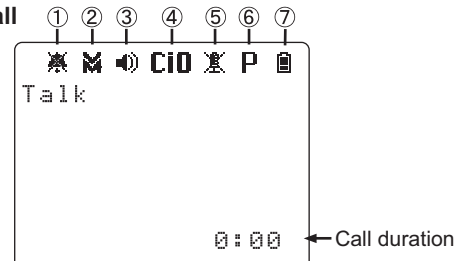

①		The <b>ringer off</b> icon indicates that the ringer is turned off.
②		The <b>voice mail</b> icon appears when you have messages waiting in your voice mailbox.
③		The <b>privacy</b> icon appears when the Privacy Mode is turned on.
④		The <b>speaker</b> icon appears when the speaker phone is in use.
⑤		The <b>mute</b> icon appears while the microphone is muted.
⑥		The <b>battery</b> icon indicates the handset battery status: full, medium, low, and empty.

## Using the Four-way Function Key

Your handset has a four-way function key that allows you to move the cursor or pointer on the display and access the most commonly used features at the touch of a button. By moving this key to the left, you open the phonebook. Move the key to the right to access Caller ID information. To use this four-way key, place your thumb over the key and move to the four positions to get the feel of how it moves and operates.

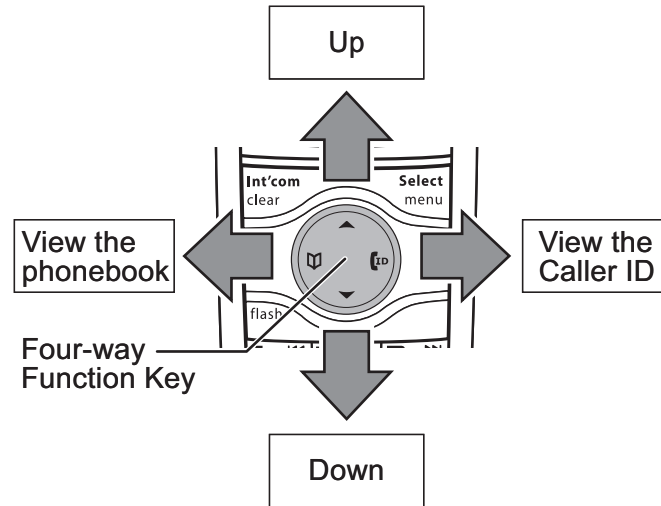

Using the Interface

## Using the Handset Menu

- To open the menu, press the **[Select/menu]** key.
- The arrow pointer on the left side of the line shows which menu item is currently highlighted. Use **[▲]** on the four-way function key to move the pointer up and **[▼]** to move the pointer down.
- To select the highlighted option, press **[Select/menu]**.
- To go back to the previous screen, press **[left]** on the four-way function key.
- To exit the menu, press **[\*]**.
- If you don't press any keys for thirty seconds, the phone will time out and exit the menu.
- For ANSW. SETUP, GLOBAL SETUP and DAY & TIME menu options, make sure the line is not in use and the handsets are within range of the base.

## Entering Text from Your Handset

You can use the number keypad on your handset to enter text by referring to the letters printed on each number key. When you press the number key in a text entry field, the phone displays the first letter printed on the number key. Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, and then the number on the key.

If two letters in a row use the same number key, enter the first letter, then use **[right]** on the four-way function key to move the cursor to the next position to enter the second letter.

For example, to enter the word "Movies":

- 1) Press **[6]** once to enter *M*.
- 2) Use **[right]** on the four-way function key to move the cursor to the right.
- 3) Press **[6]** six times to enter *o*.
- 4) Press **[8]** six times to enter *v*.
- 5) Press **[4]** six times to enter *i*.
- 6) Press **[3]** five times to enter *e*.
- 7) Press **[7]** eight times to enter *s*.
- 8) Press **[Select/menu]** to end your text entry.

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
<b>1</b>	1								
<b>2 abc</b>	A	B	C	a	b	c	2		
<b>3 def</b>	D	E	F	d	e	f	3		
<b>4 ghi</b>	G	H	I	g	h	i	4		
<b>5 jkl</b>	J	K	L	j	k	l	5		
<b>6 mno</b>	M	N	O	m	n	o	6		
<b>7 pqrs</b>	P	Q	R	S	P	q	r	s	7
<b>8 tuv</b>	T	U	V	t	u	v	8		
<b>9 wxyz</b>	W	X	Y	Z	w	x	y	z	9
<b>0 oper</b>	&	<	>	<	>	/	(blank)	-	_
	.	,	:	?	!	@	'	"	*
	#	0							


If you make a mistake while entering a name, use **[right]** or **[left]** on the four-way function key to move the cursor to the incorrect character. Press **[Int'com/clear]** to erase the wrong character, and then enter the correct character. To delete all characters, press and hold **[Int'com/clear]**.

## Basic Setup

### Selecting a Language

Each handset supports two languages: English and Spanish for US models or English and French for Canadian models. Once you select a language, the menus on the handset will display in that language. The default language is English.

- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the HANDSET LANGUAGE submenu.
- 3) Move the cursor to choose a language.  
**for US models:** Choose ENGLISH or ESPAÑOL (Spanish).  
**for Canadian models:** Choose ENGLISH or FRANÇAIS (French).
- 4) Press **[Select/menu]**.  
You will hear a confirmation tone.

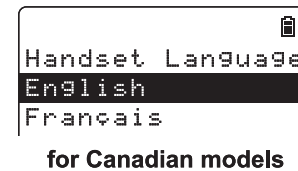

### Setting the Day & Time

If you do not set the clock on your answering system, your messages may not have the correct time and day stamp.

- 1) Press **[Select/menu]**.
- 2) Move the cursor to DAY & TIME and press **[Select/menu]**.
- 3) Use **[▲]** and **[▼]** to select the day of the week, and press **[Select/menu]**.
- 4) Use the number keypad (**[0]** through **[9]**) to enter the hour and minutes.
- 5) Use **[▲]** and **[▼]** to select AM or PM, and press **[Select/menu]**. You hear a confirmation tone.

## Activating Personal Settings

You can assign special ringer tones to anyone in your phonebook. When your phone gets a call, it looks up the Caller ID information in your phonebook. If you've assigned a personal ringer and color to that number, the phone uses it so you know who is calling. To turn the personal ringing on or off, follow these steps:


- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the PERSONAL RING submenu.
- 3) Move the cursor to select ON or OFF.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.



## Activating the Key Touch Tone

Key Touch Tone is the tone your keypad makes when keys are pressed. You can turn this tone on or off.

- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the KEY TOUCH TONE submenu.
- 3) Move the cursor to select ON or OFF.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.

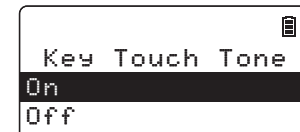



## Setting Up the Phonebook


Each handset has its own separate phonebook that holds up to seventy names and numbers. When a handset's phonebook is full, the handset beeps and shows MEMORY FULL on the display. You cannot add any names and numbers in that handset's phonebook until you delete some of the existing ones.

You can also use the phonebook entries to store a group of numbers (up to twenty digits) that you may need to enter once your call connects. This is referred to as chain dialing. (See Chain dialing from the phonebook on page 32.)

### Creating Phonebook Entries

To store names and numbers in your phonebook, please follow these steps:

- 1) With the phone in standby, press [**Ⓜ**] (on the left side of the four-way key).
- 2) To create a new phonebook entry, press [**Select/menu**]. Select the CREATE NEW menu. EDIT NAME appears.

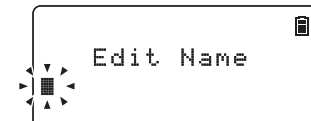


- 3) **Enter the name for this entry (EDIT NAME).**

Use the keypad to enter a name for this entry; the name can contain up to sixteen characters. (See Entering Text from Your Handset on page 21 for instructions on entering text.) If you do not want to enter a name for this entry, your phone will store this entry as <NO NAME>. Press [**Select/menu**] when you are finished.


- 4) **Enter the number for this entry (EDIT NUMBER).**

Once you have stored a name, EDIT NUMBER appears next. Use the number keypad to enter the phone number; the phone number can contain up to twenty digits. If you need the phone to pause between digits when it's dialing (for example, to enter an extension or an access code), press [**Ⓜ/pause**] to insert a two-second pause. You will see a P in the display. You can also use more than one pause together if two seconds is not long enough. Each pause counts as one digit. Press [**Select/menu**] when you are finished.

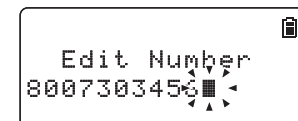


### 5) Assign a personal ring tone for this entry (PERSONAL RING).

You can attach a special ring tone to each phonebook entry; the phone will use this ring tone when this person calls. Use [▲] and [▼] to select one of the seven different ring tone options (see Selecting a Ring Tone on page 29 for a complete list of ring tones). As you scroll through the tones, you will hear a sample of each tone (unless the handset ringer volume is set to off). When you hear the ring tone you want to use, press [Select/menu]. If you do not want to use a personal ring tone for this phonebook entry, choose NO SELECTION; the phone will use your standard ring tone setting.

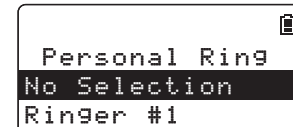

### 6) Assign a personal display color for this entry (PERSONAL COLOR).

You can attach a color scheme to each phonebook entry; the display will use this color when this person calls. Use [▲] and [▼] to select one of the seven different color scheme options. As you scroll through the options, you will see each color scheme on the display. When you see the color scheme you want to use, press [Select/menu]. If you do not want to use a color scheme for this phonebook entry, choose NO SELECTION; the phone will use your standard color scheme setting.

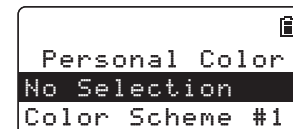

7) You will hear a tone confirming that the new entry has been stored, and DONE! appears in the display.


## Finding a Phonebook Entry

Press [Ⓜ] to open the phonebook. Phonebook entries are stored in alphabetical order. To scroll through the phonebook from A to Z, press [▼]. To scroll through the phonebook from Z to A press [▲].

You can also use the letters on the number keys to jump to a name that starts with that letter. For example, to search for an entry beginning with the letter M, press [6] once. The phonebook jumps to the first entry that begins with the letter you entered; you can then use [▲] and [▼] to scroll to other entries.



To close the phonebook and return to standby, press [Ⓜ]. If you are looking up a phonebook entry during a call and want to close the phonebook, press [Ⓜ] again instead of [Ⓜ].

## Editing an Existing Phonebook Entry


- 1) With the phone in standby, press [  ] to open the phonebook.
- 2) Find the entry you want to edit and press [Select/menu].
- 3) Select EDIT. Follow the steps for Creating Phonebook Entries on page 24. If you do not wish to change the information at any step, simply press [Select/menu] to go to the next step.


## Storing Caller ID or Redial Numbers in the Phonebook

You can store Caller ID records or redial numbers in the phonebook so you can use them later. Go to the Caller ID or redial list and select the number you want to store. (If the Caller ID information did not include the number, then you will not be able to store it.)


- 1) With the phone in standby, press [  ] to open the Caller ID list or [  /pause ] to open the redial list.
- 2) Use [▲] and [▼] to scroll through the Caller ID records or redial numbers. When you come to the information you want to store, press [Select/menu].
- 3) Select STORE INTO PB. EDIT NAME appears. If the phone number is already stored in memory, you will hear a beep, and THIS DATA IS ALREADY SAVED! appears in the display. The number will not be stored.
- 4) Continue by following the steps for Creating Phonebook Entries on page 24.

## Deleting a Single Phonebook Entry

- 1) With the phone in standby, press [  ].
- 2) Find the entry that you want to delete and press [Select/menu].
- 3) Select DELETE. DELETE ENTRY? appears in the display.
- 4) Move the cursor to select YES.
- 5) Press [Select/menu]. You will hear a confirmation tone, and DELETED! appears in the display.

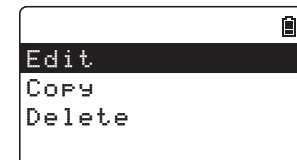


## Deleting all Phonebook Entries

- 1) With the phone in standby, press [  ].
- 2) Press [**Select/menu**], and then select DELETE ALL. DELETE ALL? appears in the display.
- 3) Move the cursor to select YES.
- 4) Press [**Select/menu**]. You will hear a confirmation tone, and DELETED! appears in the display.



## Copying Phonebook Entries to Another Handset

If you have more than one handset, you can transfer phonebook entries from one handset to another without having to re-enter names and numbers. You can transfer one phonebook entry at a time or all phonebook entries at once.

- 1) With the phone in standby, press [  ].
- 2) To copy one entry, find the phonebook entry you want to copy. Press [**Select/menu**], and then select COPY. To copy all entries, press [**Select/menu**], and then select COPY ALL.
- 3) Move the cursor to select the handset which you want to transfer the entries to and then press [**Select/menu**]. If you select COPY ALL, ARE YOU SURE? appears on the display screen. Move the cursor to select YES, and then press [**Select/menu**].
- 4) The phonebook entries will be transferred to the designated handset. During the copy process, the receiving handset shows RECEIVING and the ID of the sending handset.
- 5) When the transfer is completed, DONE! appears on the handset.

Notes: • The handsets must be currently connected to the same base (see page 14).

- If the handset you want to transfer to already has seventy entries in its phonebook, you will hear a beep, and NOT ENOUGH MEMORY IN RECEIVING UNIT appears on the display.
- If the selected handset is out of range or data transfer is cancelled, UNAVAILABLE appears in the display. Phonebook listings will not be transferred.

## Customizing Your Handsets

All of the following options are set separately for each handset, so you can customize a handset for each room in your house.

### Changing the Handset Banner

Each handset will display a banner name once it is registered to the base. The default banner is Handset #1, Handset #2, etc. You can change the name your phone displays by changing the banner display. If you have more than one handset, the banner name identifies your handset.




- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the BANNER submenu.
- 3) Use the keypad to enter or edit the banner name. (See Entering Text from Your Phone on page 21 for detailed instructions on entering text.)
- 4) Press **[Select/menu]**. You will hear a confirmation tone.

Note: When you have multiple bases and even if the handset ID is changed when you switch to a different base, the handset will keep the banner name.

### Selecting a Ringer Tone

You may choose from five melodies or tones for your phone's primary ring tone. Each handset can use a different ring tone or melody.

- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the RINGER TONES submenu.
- 3) Move the cursor to select a ringer tone. As each ringer tone is highlighted, you will hear a sample (unless the handset ringer volume is set to off).
- 4) When you hear the tone you want to use, press **[Select/menu]**. You will hear a confirmation tone.

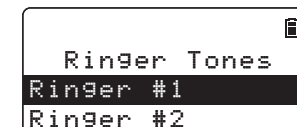

## Activating AutoTalk

AutoTalk allows you to answer the phone simply by picking up the handset from the cradle. You do not have to press a button to answer the call.


- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the AUTOTALK submenu.
- 3) Move the cursor to select ON or OFF.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.



## Activating Any Key Answer

Any Key Answer allows you to answer the phone by pressing any key on the twelve-key dial pad.


- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the ANY KEY ANSWER submenu.
- 3) Move the cursor to select ON or OFF.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.

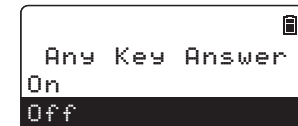

## Color Scheme

You can change the color of your phone's display. There are 7 different colors to choose from.


- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the COLOR SCHEME submenu.
- 3) Move the cursor to select a color scheme. As you scroll through the options, you will see each color scheme on the display.
- 4) When you see the color scheme you want to use, press **[Select/menu]**. You will hear a confirmation tone.

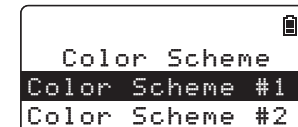

## Wallpaper

Your phone has 4 wallpapers to choose from.

- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP menu, and then the WALLPAPER submenu.
- 3) Move the cursor to select a wall paper. As you scroll through the options, you will see each wallpaper on the display. If you do not want to use a wallpaper, choose NO SELECTION.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.

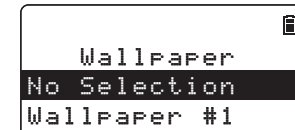

## Adjusting the Display (LCD Contrast)

LCD Contrast adjusts the handset display brightness. Choose from one of the 10 levels for optimum viewing.

- 1) Press **[Select/menu]**.
- 2) Select the HANDSET SETUP, and then the LCD CONTRAST submenu.
- 3) Use **[▲]** or **[▼]** to adjust the contrast of the display.
- 4) Press **[Select/menu]**. You will hear a confirmation tone.

