


GLOSSARY


- A/B switching* Switch between carriers. Refer to page 31.
- Any-Key Answer* Press any key (**other than ▲ or ▼**) to answer an incoming call. Refer to page 19.
- Call Timers* Keeps count of the time (hours, minutes and seconds) that you have used the phone. Reset when you want. Can be for one call, totals calls on line 1 and/or line 2. Refer to page 27.
- Earpiece* Where you hear conversations. Refer to the back page foldout.
- Emergency 911* With the phone on in standby mode (no numbers in the display), press and hold  for one second. Refer to page 8.
- Greeting* The first message that appears when your phone is turned on. Refer to page 21.
- Keypad* Disables the keypad until there is an incoming call. Refer to page 22.
- Keypad* The number keys (0 through 9). Refer to the back page foldout.
- Minute Minder* During your conversation, alerts you (through the earpiece) five seconds before each minute is over. You can set the volume or enable/disable the feature. Refer to page 17.
- Monitor* "On hook dialing" - You hear the conversation from the speaker on the back instead of from the earpiece. Since the microphone (on the front) is disabled during monitor, the caller can't hear you. This feature is great for calling a bank or similar automated answering system. Refer to page 9.
- Mute* Disables/enables the (mouthpiece) microphone during a conversation. Refer to page 9.
- Roam* With the roam feature, use your unit when you are out of the home service area. When your cellular phone is "roaming," **ROAM** appears in the display. Refer to the back page foldout.
- Scratchpad* Temporary location for a phone number. Refer to page 9.
- Speaker* On the back of your phone, it emits sounds and tones. Refer to the back page foldout.
- PIN* Personal Identification Number. Refer to page 26.
- Standby* Ready to send or receive a call. Refer to page 6.

CONTENTS

CONTENTS

Glossary	2
Introduction	3
• Welcome	3
• Authorization Requirements	3
• Features	3
• Included In Your Package	4
Setting Up Your Phone	5
• Installing the Battery	5
• Charging the Battery	5
• Battery Low Alarm	6
• Antenna	6
• Power	6
Calling	7
• Receiving a Call	7
Absent Call Counter	7
• Making a Call	7
Direct Dialing	7
Redial From Last 10 Completed Calls	8
One-Touch Emergency Dialing	8
PIN Calling	8
Inserting a Pause	8
• Ending a Call	8
• While Calling	8
Adjusting the Earpiece Volume	8
Using the Scratch Pad	9
Mute	9
Monitor	9
Transmitting DTMF Signal(s)	9
Flash Signal (Signaling Tone)	9
Memory Programming	10
• Storing Numbers and Names	10
• Checking Memory Status	10
• Calling Stored Numbers	11
Speed Dial	11
Super Speed Dial	11
• Clearing a Memory Location	11

NOTE: Foldout the back cover of this owner's manual to refer to the "Keys and Display" page.

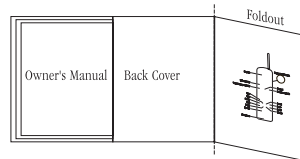

Menus - Customizing Your Phone	12
• The Function Menu Map	12
Quick Menu Access	12
• Sound Menu	13
Alert Volume and Tone Menu	13
Earpiece Volume Menu	14
Keypad Volume Menu	15
Speaker Volume Menu	16
Minute Minder Menu	17
• Phone Settings Menu	18
Vibrate Menu	18
Answer Option Menu	19
Light Menu	20
Change Greeting Menu	21
Enable Keyguard Menu	22
Headset Menu	23
Contrast Menu	24
• Security Menu	25
Change Password Menu	25
PIN Calling Menu	26
• Call Timers Menu	27
Current Call Menu	27
Show Last Call Time Menu	28
All Calls Menu	29
• Service Settings Menu	30
Phone Line Menu	30
Network Menu	31
Specifications	32
Optional Accessories	33
Keys and Display	inside back cover