

INTRODUCTION

TO YOUR NEW MINICEL PHONE

WELCOME

Congratulations on your purchase of the Uniden MiniCel cellular phone. You have chosen to enter the world of cellular telephone technology with one of the finest portable cellular phones available today. Now you can place or receive calls from anywhere there is cellular coverage.

Your MiniCel can go with you anywhere so that you're never out of touch – in your car, on the beach, at the golf course or even just for a walk in the woods.

With the roam feature, you can use your phone when you travel away from your own area. The many standard features on the MiniCel make calling quick and convenient. The easy-to-use menu functions help you customize your MiniCel.

We're confident you will be proud to own the MiniCel. To make sure you understand all its convenient features, please take the time to read this owner's manual. It will help you use the technology and convenience of cellular communications.

AUTHORIZATION REQUIREMENTS

You must contact your local cellular service company to obtain authorization and a cellular telephone number before using your MiniCel. Fees for cellular service vary from company to company.

FEATURES

- 50 Memory Locations
- 128K Bytes Flash Memory
- Any Key Answer
- One-Touch Emergency Dial
- Speed Redial and Super Speed Redial
- Programmable 20-Character Greeting
- Password Protection Auto PIN
- Battery Alarm
- Two-Line, 20 Character LCD Display
- Scratch Pad Memory
- Speaker and Ringer Volume Control
- Keyguard
- Call Timers
- Tone or Vibrate Alert

TIP

To get the most from your phone, please read this owner's manual thoroughly. Also, be sure to complete and mail the product registration form.


WARNING

If any of these items are missing or damaged, immediately contact your place of purchase.


INCLUDED IN YOUR PACKAGE



 Mini 200

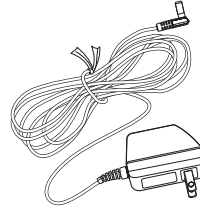

AC Adapter and Charger

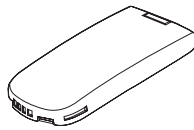 


Rechargeable Battery
(one of the following:)
580 mAH nickel metal (MC580N)
580 mAH Lithium-ion (MC580L)

- This Owner's Manual
- Precautions and Important Safety Instructions
- Registration Card

INSTALLING THE BATTERY

Your MiniCel comes with either one of the following:
580 mAH nickel metal (MC580N) or
580 mAH Lithium-ion (MC580L).

 - 1) Line up the notches and metal contacts on the bottom of the battery and the base (the back of the MiniCel). Make sure the label side is facing the phone.

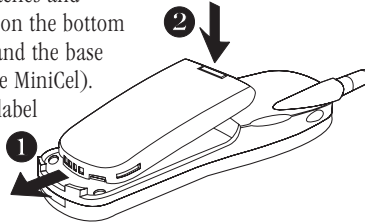


- 2) Gently press the battery top until it clicks into place.

CHARGING THE BATTERY

- 1) Plug the AC adapter cord into the input jack on the side of the phone.
- 2) Plug the AC adapter into a standard 120 VAC wall outlet.

 ! Use only the Uniden AC adapter supplied with this phone.
DO NOT use an outlet controlled by a wall switch.

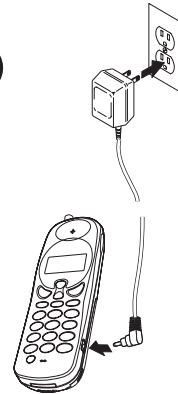

If you turn the phone on while the battery is charging, *CHARGING* will show in the display.

- 3) Charge the battery for 3 hours.
If the power is on when the battery is fully charged, the display reads:



 
HINT Before using your phone, fully charge the rechargeable battery pack. We recommend that the battery pack charges for 3 hours.

BATTERY LOW ALARM

When the battery is low, *RECHARGE BATTERY* shows in the LCD display, the battery icon starts flashing, and the battery low warning tone sounds.

ANTENNA

Before placing or receiving a call, gently pull the antenna up until it clicks into place.

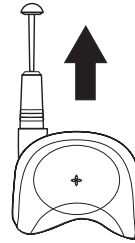

Do not touch the antenna while you are using the phone.



Do not use the phone with a damaged antenna. Use only the supplied or approved antenna. Unauthorized antennas, attachments or modifications could damage the phone, degrade the quality of the call and violate FCC regulations.



For the best reception, extend the antenna before using the phone.

POWER

 
▼ Power On

Press and hold the *end on/off* key until you hear a tone and see the opening greeting.



Then the standby display shows:

The MiniCel is now in standby mode.



▼ Power Off

Press and hold the *end on/off* key and the display goes blank.





Press **mem**, the two-digit memory location number (01-50)

and **send**.

Or, press **mem**, the one-digit number for 1 through 9, and **send**.



From the standby display, press and hold the one-digit number (only for locations **1** through **8**).

Caution: location 9 is for *emergency* dialing only.

CALLING
WITH YOUR MINICEL

RECEIVING A CALL

1) When someone calls your MiniCel, the LCD backlight flashes, the alert sounds (see page) or vibrates (see page) and *INCOMING CALL* appears.



2) If the "any key" feature (page) is active, press any key **other than** ▲ or ▼.

If you have disabled the "any key" feature, press **send**.

3) The backlight stops flashing and the  icon appears in the display.



4) When you finish your call, press **end**.

▼ Absent Call Counter

 
When you don't answer an incoming call, the display shows the number of unanswered call(s). Press any key to erase the message.




MAKING A CALL

▼ Direct Dialing

1) Enter the phone number on the keypad. To erase a digit, press **clear** and reenter the correct number. To erase all the digits, press and hold **clear**.



2) Press **send**.

The  icon shows in the display while a call is in progress. If the "current call timer" feature is on, the counter starts (see page).



CALLING



 
To return to the blank screen, press **end** or **clear**.




To store the number in memory, press and hold **mem**. See page 10.

▼ Redial From Last 10 Completed Calls

1) With no digits in the display, press **send**.
You will see the last number dialed.



 2) Press ▲ or ▼ to scroll through the list.



3) When you find the number that you want to call, press **send**.



▼ One-Touch Emergency Dialing

To call 911, make sure that there are no numbers in the display, then press and hold **9wxyz** for one second.

NOTE: This overrides the keyguard.

▼ PIN Calling

To protect from unauthorized use of some cellular or automated systems, you can use a personal identification number (PIN). The PIN must be programmed; see page 26.

If you enter a service area that does not require a PIN, set the PIN feature to off.

▼ Inserting a Pause

If you need a pause to separate groups of numbers during dialing, press and hold **0oper**.

This pause counts as one digit. Entering another pause increases the length of the pause between numbers.

ENDING A CALL

When you finish your call, press **end**.

WHILE CALLING

▼ Adjusting the Earpiece Volume

During a conversation, press either ▲ or ▼.

You can do this through the volume menu (page 14).

 
▼ Using the Scratch Pad

Use the scratch pad to record a phone number during a call. Then you can dial that number from the scratch pad or enter it into a memory location.

- 1) During a call, enter the number with the keypad.



- 2) When you are finished with your call, press **end**.



- 3) To dial the number in the scratch pad, press **send**.



▼ Mute

- If you want to mute the microphone so the caller cannot hear, press **menu** and **0^{oper}**.
- To turn the microphone back on, press **menu** and **0^{oper}** again.

▼ Monitor

During monitor, you hear the conversation from the speaker on the back. The microphone is disabled. Use this feature for calling a bank or similar automated answering system.

- To enable the monitor feature, press **monitor**.
- To disable the monitor feature, press **monitor**.

▼ Transmitting DTMF Signal(s)

DTMF (dual tone multi-frequency) tones are transmitted from your phone when you press a digit key during a call.

▼ Flash Signal (Signaling Tone)

When you press **send** during a call, it generates a flash signal (signaling tone).

NOTE

Since the microphone (on the front) is disabled during monitor, the caller can't hear you.



To exit memory mode,
press **end** or **clear**.

MEMORY

PROGRAMMING FOR YOUR PHONE

STORING NUMBERS AND NAMES

The MiniCel has 50 memory locations (01 through 50). You can also store a 10-digit description or name to identify the phone number. There are three sources to enter numbers into memory: the scratch pad, entered in standby or the recall numbers list.

- 1) With the number in the display,



press and hold **mem** for one second.



- 2) Enter the location number where you want to store the number. *Example:* location 01

To search for an empty location, press either ▲ or ▼. At the empty location, press **mem**. If all the locations are full, the *MEMORY FULL* message appears and an error tone sounds.

If the location is occupied, you will be prompted:



Example: you want to replace the number in memory, press ▲ for yes.

- 3) If you want, you can enter a 10-character name with the keypad. *Example:* HOME
- Press **4ghi** **4ghi** = H
Press **6mno** **6mno** **6mno** = O
Press **6mno** = M
Press **3def** **3def** = E

- 4) To store the name or to finish, press **mem**. You will see:



After two seconds, the display returns to standby.

CHECKING MEMORY STATUS

From the standby display, press **mem** three times. To return to the standby display, press either **mem**, **end** or **clear**.



TIP

Put the phone numbers that you call the most in the first nine memory locations. Then use speed dial to call them.

CAUTION

Within the super speed dial feature, location **9** is reserved for emergency calling. If any service provider is available (even one the phone isn't registered with), you can use the emergency call feature.

HINT

To exit memory mode, press **end** or **clear**.

CALLING STORED NUMBERS

▼ Speed Dial

 
Press **mem**, the two-digit memory location number (01-50) and **send**.

Or, press **mem**, the one-digit number for 1 through 9; then press **send**.

▼ Super Speed Dial

You can super speed dial from memory locations **1** through **8**. *Caution: location 9 is for emergency only!*

- 1) From the standby display, press and hold the one-digit number (only for locations **1** through **8**) until it appears in the display.




- 2) The display changes to:

The call is in process.



CLEARING A MEMORY LOCATION

 - 1) To select the location, press **mem** and the two-digit location number (01 - 50).
Example: 01



- 2) To clear the number, press and hold **clear**.



 
- 3) Press ▲ for yes (to delete).
The display returns to standby.

or

Press ▼ for no.
To return to standby, press **end**.



THE FUNCTION MENU MAP

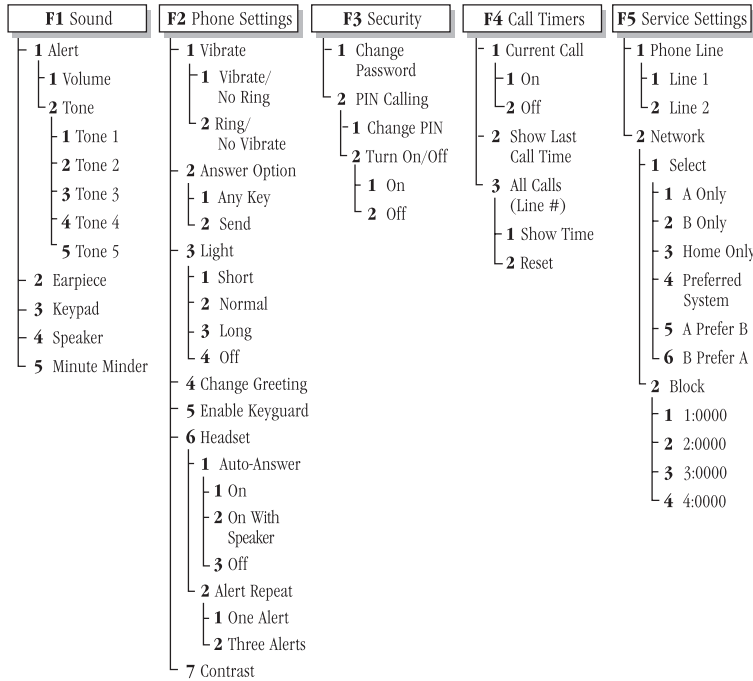

MENUS

CUSTOMIZING YOUR PHONE

▼ Quick Menu Access

To quickly move through the menu levels, use the keypad.

Example: To quickly change the answer option from any key to send only:

Press **menu**, **2abc**, **2abc**, **2abc**, and **menu**.

TIP

The alert tones come from the speaker on the back of the phone.

HINT

To enter a menu, with your phone on, press **menu**. You will see **MENU SELECT**. To select another menu, press the ▲ (up) or ▼ (down) key.

NOTE!

For a “road map” through the menus, refer to the Function Menu Map on page 12.

HINT

To exit menu mode, press **end** or **clear**.

SOUND MENU

▼ Alert Volume and Tone Menu

You can change both the volume and tone of the alert.

To change the alert volume:

- 1) To go to the sound menu from standby, press **menu**.



- 2) Press ▼.



- 3) Press **menu**.



- 4) Press **menu** again.



- 5) Press **menu** again.



- 6) Use the ▼ or ▲ keys to increase or decrease the volume.

- 7) Press **menu** again. You will see:

 


In about two seconds, the display returns to standby.


To change the alert tone:

- 1) Repeat steps 1 through 4 above.

- 2) Press the ▼ key.



 - 3) Press **menu** to hear tone 1.



- 4) Use the ▼ or ▲ keys to listen to the other tones (tone 2 through 5).

- 5) To select a tone, press **menu**.

In about two seconds, the display returns to standby.



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ Earpiece Volume Menu

You can adjust the volume from loud to soft.

- 1) To go to the sound menu from standby, press **menu**.



- 2) Press ▼.



- 3) Press **menu**.



- 4) Press ▼.



- 5) Press **menu**.

 


- 6) Use the ▼ or ▲ keys to change the earpiece volume.

- 7) Press **menu** again. You will see:



In two seconds, the display returns to standby.





The keypad tones comes from the speaker on the back of the phone.



To move to a menu, use either the ▲ (up) or ▼ (down) key.



To exit menu mode, press **end** or **clear**.

▼ Keypad Volume Menu

When you press the keys, a tone sounds. You can adjust the volume from loud to no sound.

- 1) To go to the sound menu from standby, press **menu**.



- 2) Press ▼.



- 3) Press **menu**.



- 4) Press ▼.



- 5) Press ▼ again.



- 6) Press **menu**.



- 7) Use the ▼ or ▲ keys to increase or decrease the keypad tone volume.

- 8) Press **menu** again.



In two seconds, the display returns to standby.

MENUS

TIP

The alert tones comes from the speaker on the back of the phone.

HINT

To move to a menu, use either the ▲ (up) or ▼ (down) key.

HINT

To exit menu mode, press **end** or **clear**.

▼ *Speaker Volume Menu*

You can adjust the volume from loud to no sound.

- 1) To go to the sound menu from standby, press **menu**.



 
- 2) Press ▼.




- 3) Press **menu**.



- 4) Press ▼ three times to get to the speaker menu.



 - 5) Press **menu**.



- 6) Use the ▼ or ▲ keys to increase or decrease the speaker volume.

- 7) Press **menu** again. You will see:



In two seconds, the display returns to standby.



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ *Minute Minder Menu*

1) To go to the sound menu from standby, press **menu**.



2) Press ▼.



3) Press **menu**.



4) Press ▼ four times to get to the minute minder menu.



5) Press **menu**.



6) Use the ▼ or ▲ keys to increase or decrease the minute minder volume.

7) Press **menu** again. You will see:



In two seconds, the display returns to standby.

M E N U S

PHONE SETTINGS MENU

▼ *Vibrate Menu*

You can choose between “ring” or vibrate to alert you to an incoming call.

 
- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press **menu** again.



- 5) Use the ▼ or ▲ keys to choose between *VIBRATE/NO RING* or *RING/NO VIBRATE*.



- 6) Press **menu** again. You will see:



In two seconds, the display returns to standby.

HINT

To move to a menu, use either the ▲ (up) or ▼ (down) key.

HINT

To exit menu mode, press **end** or **clear**.



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ *Answer Option Menu*

You can choose whether you want to answer a call by pressing any key on the keypad (*other than* ▲ or ▼) or by pressing **send**.

 
- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press ▼.



- 5) Press **menu**.



- 6) Use the ▼ or ▲ keys to choose between **ANY KEY** or **SEND ONLY**.

- 7) Press **menu** again. You will see:



In two seconds, the display returns to standby.

M E N U S



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ *Light Menu*

You can choose how long you want the backlight to light.

- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press ▼ twice.



- 5) Press **menu** again.



- 6) Use the ▼ or ▲ keys to choose between *SHORT, NORMAL, LONG* or *OFF*.

- 7) Press **menu** again. You will see:



In two seconds, the display returns to standby.



To move to a menu, use either the ▲ (up) or ▼ (down) key.



To exit menu mode, press **end** or **clear**.



For changes, use #➡ to move right and ⬅* to move left, then enter the correct letter.

▼ Change Greeting Menu

The first message that appears when your phone is turned on is the greeting.

 
- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press ▼ three times.



- 5) Press **menu** again.



- 6) You can enter up to 20-characters with the keypad.
For example: MINICEL

Press **6mno** = M
Press **4ghi** **4ghi** **4ghi** = I
Press **6mno** **6mno** = N
Press **4ghi** **4ghi** **4ghi** = I
Press **2abc** **2abc** **2abc** = C
Press **3def** **3def** = E
Press **5jkl** **5jkl** **5jkl** = L

To enter a space, press and hold #➡ until the cursor moves to the next space.

- 7) To store the greeting, press **menu** again.
After two seconds, the display returns to standby.



MENUS



To enable/disable keyguard in standby, press and hold **menu** for two seconds.



To exit menu mode, press **end** or **clear**.



To enable keyguard from standby display, press and hold **menu** for two seconds.

▼ Enable Keyguard Menu

You can protect your phone from accidental key stroke by disabling the keypad until there is an incoming call.

- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press ▼ four times.



- 5) Press **menu**.



- 6) The display switches from *KEYGUARD ENABLED* to *HOLD MENU TO DISABLE*.
To enable keyguard, press and hold **menu** for two seconds.



- 7) The phone returns to standby mode.

To disable keyguard, press and hold **menu** for two seconds.



To move to a menu, use either the ▲ (up) or ▼ (down) key.



When the headset is attached and auto-answer is enabled, an incoming call is automatically answered.



The three options for auto answer are: on, on with speaker or off (standby). The two options for alert repeat are: one alert or three alerts.

▼ Headset Menu

For hands-free calling, you can add an optional headset. The headset menu has two settings: alert repeat or auto-answer.

 
- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press ▼ five times.



- 5) Press **menu** again.



- 6) Use the ▼ or ▲ keys to choose between *AUTO ANSWER* or *ALERT REPEAT*. Our example: *ALERT REPEAT*.



- 7) Press **menu**.



- 8) Use the ▼ or ▲ keys to select one alert or three alerts.

- 9) Press **menu**. In two seconds, the display returns to standby display.



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ Contrast Menu

You can choose how much contrast you want in the backlight display. High increases the contrast (darker pixels) and low decreases the contrast (lighter pixels).

 
- 1) To go to the phone settings menu from standby, press **menu**.



- 2) Press ▼ twice.



- 3) Press **menu**.



- 4) Press ▼ six times.



- 5) Press **menu** again.



- 6) Use the ▼ or ▲ keys to choose between low to high. The display changes as you choose different contrasts.

- 7) Press **menu** again. You will see:

In two seconds, the display returns to standby.





To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit the change
password menu,
press *end*.

SECURITY MENU

▼ Change Password Menu

1) To go to the security menu
from standby, press *menu*.



2) Press ▼ three times.



3) Press *menu*.



4) Press *menu* again.



5) To change the four-digit password,
enter the current
four-digit password.



- You must enter the correct password within ten seconds. If not, the *CHANGE PASSWORD* prompt appears.
- If you enter the wrong password, the *INCORRECT PASSWORD* message appears followed by the *PASSWORD* prompt. These messages will repeat until you enter the correct password or press *end*.



6) Enter a new four-digit password.



7) To confirm, reenter the
new password.



8) The display returns to standby.





To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ PIN Calling Menu

To change the PIN:

1) To go to the security menu from
standby, press **menu**.



2) Press ▼ three times.



 
3) Press **menu**.



4) Press ▼.



5) Press **menu**.



6) Press **menu**.



7) Enter your password.

8) Enter the new PIN.



9) Press **menu** again.

In two seconds, the display returns to standby.

To Turn On or Off the PIN:

1) Follow steps 1 through 4 above.

2) Press ▼.



3) Press **menu**.

4) Use the ▼ or ▲ keys to choose between on or off.

5) Press **menu** again.

In two seconds, the display returns to standby.



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

CALL TIMERS MENU

Call timers keeps count of the time (hours, minutes and seconds) that you have used the phone. Reset when you want. Can be for one call, totals calls on line 1 and/or line 2.

▼ *Current Call Menu*

- 1) To go to the call timers menu from standby, press **menu**.



 
- 2) Press ▼ four times.



- 3) Press **menu**.



- 4) Press **menu** again.



- 5) Use the ▼ or ▲ keys to choose between *ON* or *OFF*.

- 6) Press **menu** again. You will see:



In two seconds, the display returns to standby.



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ *Show Last Call Time Menu*

1) To go to the call timers menu from standby, press **menu**.



2) Press ▼ four times.



3) Press **menu**.



4) Press ▼.



5) Press **menu**. The length of your last call displays.



6) Press **menu** to return to standby.





To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.



There are two
independent timers for
each phone line.

▼ All Calls Menu

1) To go to the call timers menu from
standby, press **menu**.



2) Press ▼ four times.



3) Press **menu**.



4) Press ▼ twice.



5) Use the ▼ or ▲ keys to choose between *SHOW TIME* or *RESET*.

6) Press **menu**.

- If you choose *SHOW TIME*
you will see:



In two seconds, the display
returns to standby.

- If you choose *RESET*, you will be prompted for your password.
When you enter the password, you will see *RESET*.
Press **menu** again.
In two seconds, the display returns to standby.

MENUS



To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.



Contact your service
provider to set up line 1
and line 2.

SERVICE SETTINGS MENU

▼ Phone Line Menu

1) To go to the service settings menu
from standby, press **menu**.



2) Press ▼ five times.



3) Press **menu**.



4) Press **menu** again.



5) Use the ▼ or ▲ keys to choose
between **LINE 1** or **LINE 2**.



6) Press **menu** again. You will see:

In two seconds, the display
returns to standby.





To move to a menu,
use either the ▲ (up)
or ▼ (down) key.



To exit menu mode,
press **end** or **clear**.

▼ *Network Menu*

1) To go to the service settings menu
from standby, press **menu**.



2) Press ▼ five times.



3) Press **menu**.



4) Press ▼.

 


5) Press **menu**.



6) Use the ▼ or ▲ keys to choose between *SELECT* or *BLOCK*.
Example: choose SELECT.

7) Press **menu** again.



8) Use the ▼ or ▲ keys to choose between *AM ONLY*, *B ONLY*,
HOME ONLY, *PREFERRED SYSTEM*, *A PREFER B* or *B PREFER A*.

9) Press **menu**.

In two seconds, the display returns to standby.

SPECIFICATIONS OF YOUR PHONE

Channels: 832

Frequency Range: Transmit: 824.04 to 848.97 MHz
Receive: 869.04 to 893.97 MHz

Channel Spacing: 30 kHz

Duplex spacing: 45 MHz

Frequency Stability: +/- 2.5 ppm

Receiver Sensitivity:
-116 dBm at -4°F (-20°C)
to +122°F (50°C) 3.7V +/- 10%
-113 dBm at -22°F (-30°C)
to +140°F (60°C) 3.7V +/- 10%

ERP: 0.6 W - 6.3 mW (6 levels in 4dB steps)

Modulation: Data - FSK Voice - FM (with compander)

Display: Illuminated Liquid Crystal

Power: 3.7 VDC +/- 10%

Battery Drain:
Standby: 53 mA (Typical), (approx. 11 hours)
TX: 600 mA (Typical), (approx. 1 hour)

Operating Temperature: -22°F (-30°C) to +140°F (60°C)

Battery Packs:
standard: 580 mAH Lithium-ion (MC580L)
optional:
580 mAH nickel metal hydride (MC580N)
850 mAH Lithium-ion (MC850L)

 
Size of Phone and Battery (with antenna stored):
5 1/2 inches (13.97 cm) H
x 1 1/3 inch (3.39 cm) W
x 1 inch (2.54 cm) D

Weight: 4.23 oz. (119.2 g)


Specifications, features, and availability of optional accessories are all subject to change without prior notice.

ACCESSORIES


FOR YOUR PHONE

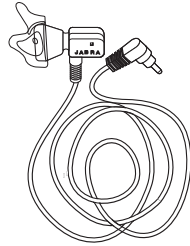


Hands-free Headset Pack
MC2006

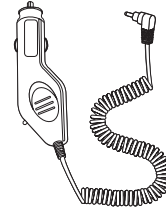 


Car Power Adapter
MC2004

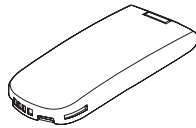 

 Rechargeable Battery
580 mAH nickel metal
hydride (MC580N)

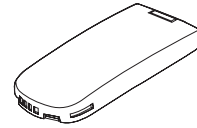

 Rechargeable Battery
580 mAH Lithium-ion
(MC580L)

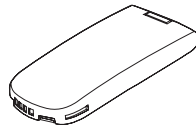

Extended Life
Rechargeable Battery
850 mAH Lithium-ion
(MC850L)



Wrist Strap
MC2007

- Leather Case with Beltclip
MC2005

ACCESSORIES