
 
 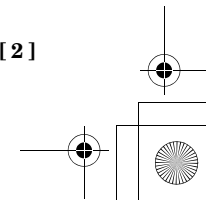
 

 


Contents

Welcome/Features/Terminology	3	From the Handset Speakerphone	43
Accessibility	4	From the base	43
Controls & Functions	5	Receiving a call/AutoTalk set to OFF	44
Setting up the Phone	7	Hanging Up	44
Choose the best location	7	Switching to the Handset Speakerphone During a Call	44
Power Backup Feature	8	Moving out of range	45
Install the rechargeable battery pack	9	Call Waiting	45
Low battery alert	10	Placing a Call on Hold	47
Cleaning the battery charging contacts	10	Conferencing	47
Connect the base unit and charge the handset	11	Redialing Calls	49
Mounting the Base Unit on a Wall	12	Adjusting Base Ringer and Speaker Volumes	50
Standard wall plate mounting	12	Using the Handset Volume Setting Menu	51
Expanding Your Phone	13	Mute	53
Backwards/Forwards Compatibility	13	Mute the Handset Microphone	53
Connect the expansion handset's charger	14	Tone Dialing Switch Over	53
Register the Handset	14	Privacy Mode	54
Register handsets	15	Find Handset	54
Changing the Digital Security Code	16	Reminder (Handset only)	55
Installing the Holster	16	Using the Phonebook	57
Optional Headset Installation	17	Creating and Editing Phonebook Entries	57
Installing Uniden's Cordless Customization PC Application	18	Storing Caller ID or Redial Numbers in the Phonebook	60
Using the Interface	19	Storing and Editing Numbers from the Dial Operation	60
Display Icons	20	Checking the number of stored entries	62
Soft Key Function	21	Changing the sorting order	62
Entering text	23	Naming phonebook groups	62
Main Menu Options	24	Making Calls with the Phonebook	63
System Setup Menu	25	Caller ID Features	64
System Setup	25	Using the Caller ID List	64
Global Setup	28	Deleting Caller ID numbers	65
Setting the Ringer Options	30	Answering Machine	66
Display Setting (Handset Only)	35	Features	66
Using the Bluetooth Feature	38	Setting Up the Answering Machine	67
Using Bluetooth headset	38	Setting Your Outgoing Greeting	70
De-register the Bluetooth Headset	41	Using the Answering Machine	71
Using Your Phone	42	Recording a phone conversation	74
Making Calls	42	Screening Calls	74

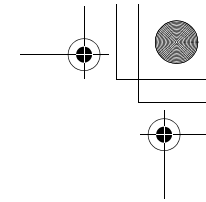

Do Not Disturb (DND)	75
Remote Operation	76
Multi-Handset Features	78
Using DirectLink Mode	78
Room/Baby Monitor	79
Intercom	80
Transferring a Call	81
Note on Power Sources	82
Power Failure	82
Battery replacement and handling	82
Warning	82
General Information	83
AC Adapter Information	83
Battery Information	83
Troubleshooting	84
Bluetooth Trouble Shooting	86
System Reset	87
Liquid Damage	88
Precautions & Warranty	89
I.C. Notice	91
Index	92



Welcome

Thank you for purchasing a Uniden Multi-Handset phone. This phone is compatible with Bluetooth enabled headsets. The USB connection lets you use your PC to edit your phonebook, download pictures and ringtones, and even import contacts from MicroSoft Outlook.

Note: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit.



As an Energy Star® Partner, Uniden has determined that this product or product models meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

Features

- 5.8GHz Direct Spread Spectrum
- Compatible with Bluetooth Enabled Headsets
- Integrated Answering Device
- Caller ID/Call Waiting Deluxe Options
- Customize Phone/Personal Profiles Using Computer (USB Cable and CD-Rom included)
- 100 Phonebook Names w/400 Numbers
- Downloadable Images
- Recordable Ringer Tones
- Text Messaging
- Calendar w/Reminders
- Battery Backup During Power Failure

Uniden® is a registered trademark of Uniden America Corporation. AutoStandby, DirectLink, IntegriSound and Random Code are trademarks of Uniden America.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Uniden is under license. Other trademarks and trade names are those of their respective owners.

Terminology

- **Standby mode:** The handset is not in use. If it is off the cradle, no line has been activated. No dial tone is present.
- **Talk mode:** A telephone line has been activated on the handset, enabling a dial tone.

Accessibility


Uniden provides a customer service hotline for accessibility questions. If you have a disability and need customer service assistance or if you have any questions about how Uniden's products can accommodate persons with disabilities, please call the accessibility voice/TTY line:
1-800-874-9314


A representative is available to talk to you M-F, 8:00 am to 5:00 pm, CST. After hours, you can leave us a message, and we will call you back. Information is also available on our website, www.uniden.com, under the "Accessibility" link.

www.uniden.com

Welcome/Features/Terminology [4]

Controls & Functions

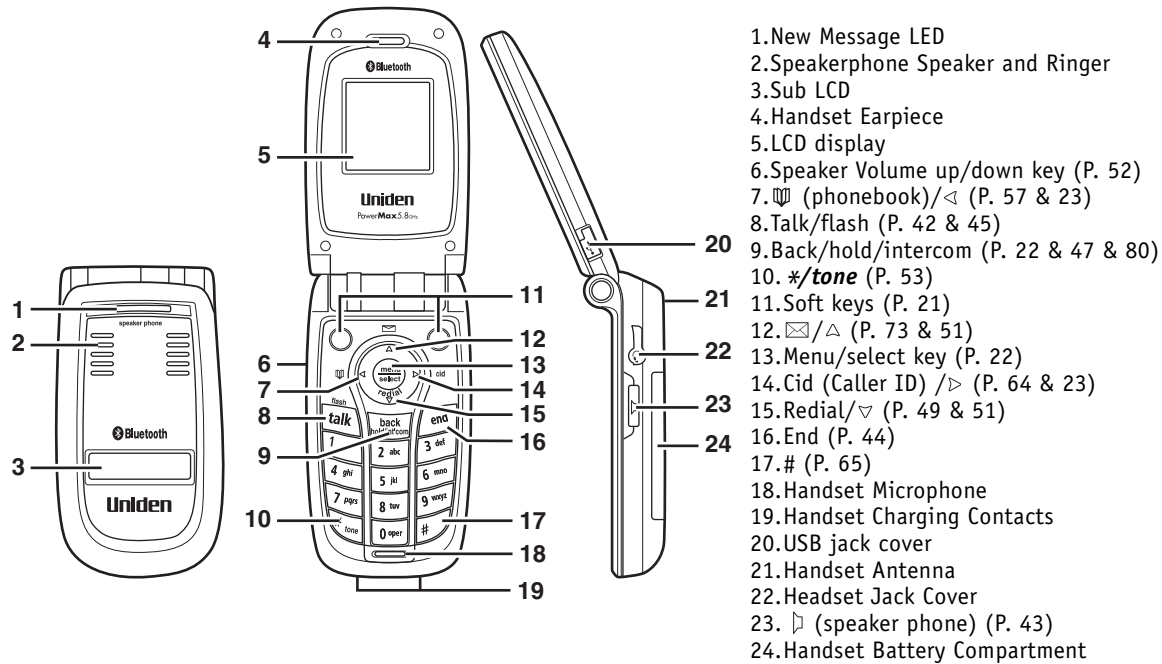

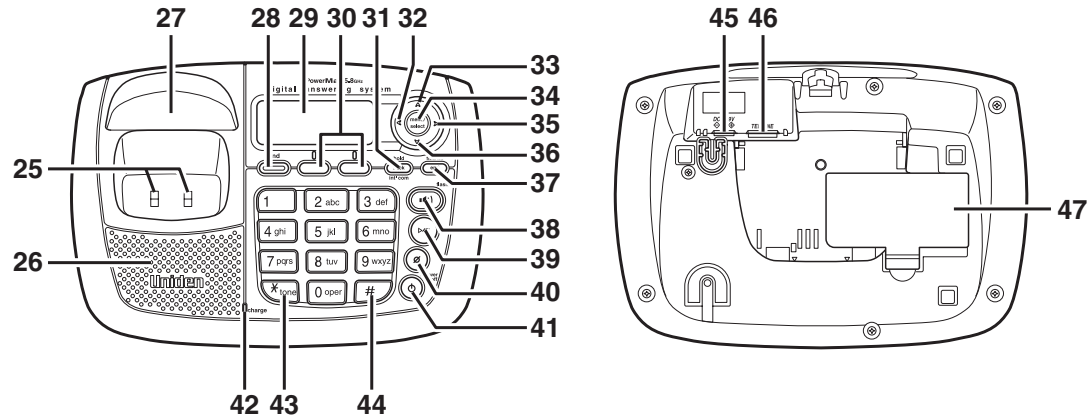

- 25. Base Charge Contacts
- 26. Base Speaker
- 27. Base Antenna
- 28. Dnd key (P. 75)
- 29. LCD Display
- 30. Soft keys (P. 21)
- 31. Back/hold/intercom (P. 22 & 47 & 80)
- 32. Phonebook/< key (P.xx & xx)


- 33. Δ Volume up (P. 50)
- 34. Menu/select (P. 22)
- 35. Cid (Caller ID)/> (P. 23 & 64)
- 36. ∇ Volume down (P. 50)
- 37. End/find hs (P. 44)
- 38. \bullet (speaker)/flash (P. 43 & 45)
- 39. \triangleright (play/stop) (P. 73)
- 40. \emptyset (delete) (P. 73)
- 41. ϕ (answer on/off) (P. 72)

- 42. Handset Charge LED
- 43. */tone (P. 53)
- 44. # (P. 65)
- 45. DC IN 9V Jack
- 46. TEL LINE Jack
- 47. Base Battery Compartment

Setting up the Phone

Choose the best location

When choosing a location for your new phone, here are some important guidelines you should consider:

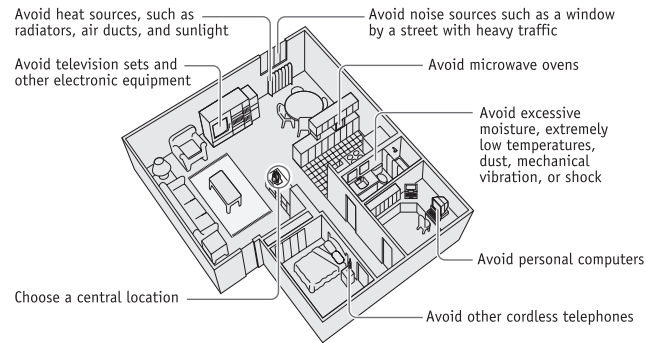


- The location should be close to both a phone jack and a continuous power outlet (one which is not connected to a switch).
- The base and handset should be kept away from sources of electrical noise such as motors, Microwave ovens, and fluorescent lighting.
- For better reception, place the base as high as possible.
- The base should be placed in an open area for optimum range and reception.
- If your home has specially wired alarm equipment connected to phone line, be sure that installing the system does not disable your alarm equipment.
- If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.
- The base should be placed in an open area for optimum range and reception.

[7] Setting up the Phone



For maximum range:


- Do not hold the handset where you would block the signal.

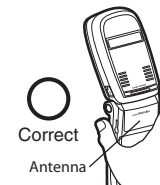

- Metal and reinforced concrete may affect cordless telephone performance.

www.uniden.com

note

-  appear if the battery pack is not installed in the base.
- To use power backup feature, you need to connect the AC adapter to the base, and charge the base battery at least for 24 hours.
- To make or receive a call, you must connect the AC adapter when setting up the phone.





www.uniden.com

Power Backup Feature

The phone uses the power backup feature to provide power backup for a power failure or outage.

Install the power backup battery in the base

- 1) Open the battery case cover by pressing the release button on the bottom of the base as shown.
- 2) Plug the battery connector (red and black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one way). Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
- 3) Make sure you have a good connection by gently pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 4) Place the battery case cover back on the base.
- 5) Align the tabs on the cover with the grooves on the base, and press down the cover until it clicks into place.

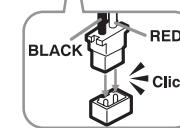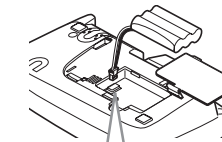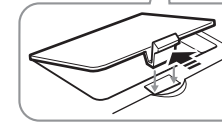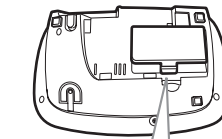


Setting up the Phone [8]

Setting up the Phone

Install the rechargeable battery pack

Follow the steps below if you need to install a battery.

- 1) Press down on the handset battery case cover (use the finger indention for a better grip) and slide the cover downward to remove.
- 2) Place the battery pack in the battery compartment with the connectors on the battery and the on the compartment aligned.
- 3) Place the battery case cover back on the handset and slide it upwards until it clicks into place.

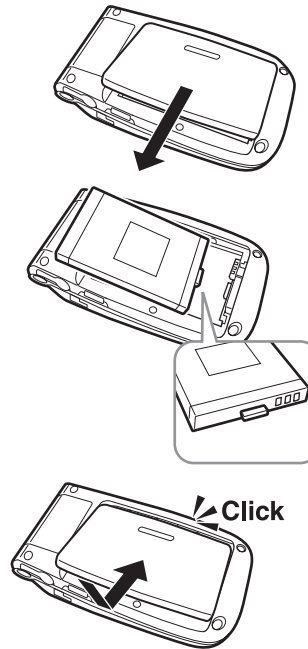

Use only the Uniden
(BT-0002)
rechargeable battery
pack supplied with
your cordless
telephone.

note

- Even when the battery pack is not being used, it will gradually discharge over a long period of time.
- For optimum performance, be sure to return the handset to the cradle after each telephone call.
- If the handset is left off of the base, the actual Talk mode duration will be reduced respective to the amount of time the handset is off the cradle.

www.uniden.com


Low battery alert

When the battery pack is very low, the phone is programmed to eliminate functions in order to save power.

The battery pack needs to be charged when:

- The empty battery icon appears.
- Low Battery appears in the display.


If the phone is in standby mode, none of keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the cradle.

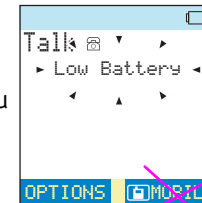

Cleaning the battery charging contacts

To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the cradle.

Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

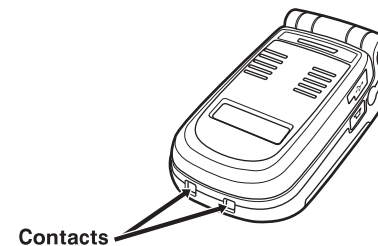

Setting up the Phone [10]

Setting up the Phone

Connect the base unit and charge the handset



- 1) Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
Connect the AC adapter to a continuous power supply (i.e., an outlet that is not controlled by a switch).

Place the base unit close to the AC outlet to avoid long extension cords.

- 2) Place the handset in the base unit with the top panel facing forward.
Connect the AC adapter to a continuous power supply (i.e., an outlet that is not controlled by a switch).

Place the base unit close to the AC outlet to avoid long extension cords.

- 3) Make sure that the **charge** LED illuminates.
If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.
- 4) Charge your handset at least **10 hours before plugging into the phone line.**
- 5) Once the handset battery pack is fully charged, connect the telephone line cords to the **TEL LINE** jack and to a telephone outlets.

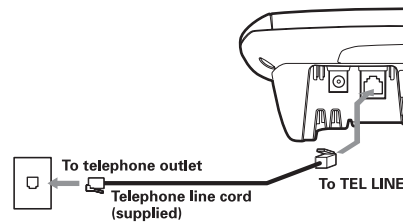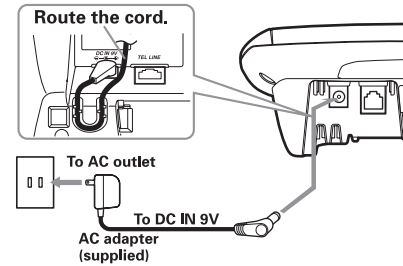

note

- Use only the supplied **AD-0009 AC adapter**. Do not use any other AC adapter.
 - Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
 - Don't place the base in direct sunlight or subject it to high temperatures. The battery may not charge properly.
- for assistance.

tip

If your telephone outlet isn't modular, contact your telephone company.

www.uniden.com





DO NOT use an AC outlet controlled by a wall switch.

Mounting the Base Unit on a Wall

Standard wall plate mounting

This phone can be mounted on any standard wall plate.

- 1) Snap the wall mount adapter into the notches on the base top.
- 2) Plug the AC adapter into the DC IN 9V jack.
- 3) Wrap the AC adapter cord inside the molded wiring channel as shown.
- 4) Plug the AC adapter into a standard 120V AC wall outlet.
- 5) Plug the telephone line cord into the TEL LINE jack.
Wrap the cord inside the molded wiring channel as shown.
- 6) Plug the telephone line cord into the telephone outlet.
- 7) Raise the antenna to a vertical position.
- 8) Align the mounting slots on the base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

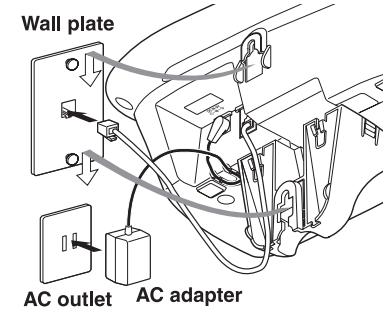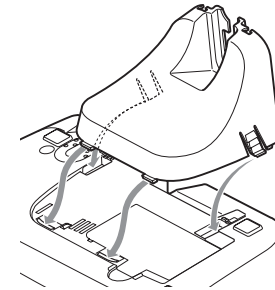


www.uniden.com

Mounting the Base Unit on a Wall [12]

Mounting the Base Unit on a Wall

Expanding Your Phone

Your phone can support a total of ten handsets. Expansion handsets do not need to be connected to a phone jack. Expansion handsets allow you to use additional features such as DirectLink Mode and up to 5-way conference calling. Expansion handsets need to be registered to the base before they will operate.

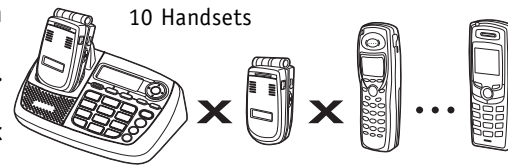

Backwards/Forwards Compatibility

Your phone is compatible with other Uniden 5.8GHz Digital Expandable Handsets. Compatible models include the TCX860 and ELX500. Visit our website for updated model listings and feature compatibility information.



- Advanced features may not be supported by older handsets (such as the TCX800/860).
- If you have any trouble with your phone or if you need a part or accessory, call our Customer Hotline at 1-800-297-1023 (Mon - Fri 7 am to 7 pm, Sat/Sun/holidays -- except US Thanksgiving and Christmas -- 9 am to 5 pm, CST) or visit our web site at www.uniden.com.

note

•Use only the supplied AD-0009 AC adapter. Do not use any other AC adapter.


•Your phone maybe compatible with other Uniden 5.8Ghz Digital Expandable Systems. Look for the technology icon on our boxes or visit our website for a list of compatible models.

www.uniden.com

Connect the expansion handset's charger

The handset is powered by a rechargeable battery pack. The battery recharges automatically when the handset is placed in the charger.

- 1) Connect the AC adapter to the DC IN 9V jack and to a standard 120V AC wall outlet.
- 2) Set the charger on a desk or tabletop, and place the handset in the charger with the top panel facing forward.
- 3) Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the charger charging contacts.
- 4) Charge the handset battery pack for at least 10 hours before using your new cordless telephone for the first time.

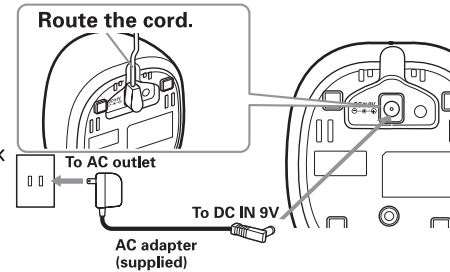

Register the Handset

Handset supplied with the phone is registered to the base by the factory. When charged, pre-registered handset display a handset ID number. Handsets that have not been registered display **MUST** place the handset in base to register! Models may vary, refer to Owners Manual for guidance in the LCD, and Handset must be registered in the sub LCD. When you register an extra handset to the base, the handset ID will be assigned. Only one handset can be registered at a time.

Expanding Your Phone

in the LCD, and (normal font)

Register handsets

Before registering the extra handset, the battery pack **MUST** be charged for 10 hours.

Place the ELX500 handset in the main base unit to begin registration. You can also register the handset manually.

Registering ELX500 handsets

- 1) From the base, press *menu/select* and select System Setup menu.
- 2) Select Register Handset, and press *menu/select*.
- 3) On the handset, press and hold # until you hear beep.

TCX860 Handsets



~~Registering TCX860 Handsets~~

- ~~1) Press and hold the **Registration** button on the back of the base.~~
- ~~2) Keep pressing the **Registration** button on the base until the handset charge on main base start to blink.~~
- ~~3) On the handset, press and hold # until you hear beep.~~

While the handset is registering, Handset Registering will appear in the LCD. When Registration Complete is displayed, the handset has been registered to the base. If Registration Failed appears, please try these steps again.

note

You must remove the holster to charge the handset.

www.uniden.com


Changing the Digital Security Code

The digital security code is an identification code used to connect the handset and the base unit. Normally, setting the code is not necessary. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code. To change the digital security code:

1. Perform the "System Reset" options ("De-register the Handset" and "Replacing the Base Setting") for all the handsets you have (see page 87).
2. Re-register each handset by following the steps on page 14.


Installing the Holster

- Line up the groove on the back of the handset with the groove on the holster. It fits in the holster only one way.
- Slide the phone into the holster.
- Use the spring clip to attach the holster to your belt or pocket.

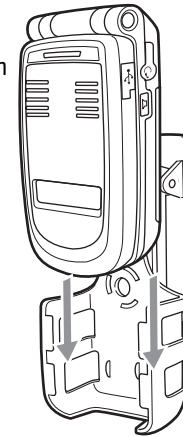

Optional Headset Installation

Your phone may be used with an optional headset. To use an optional headset, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headset may be purchased by calling Uniden's Customer Hotline or visiting the web site. See page 82.)

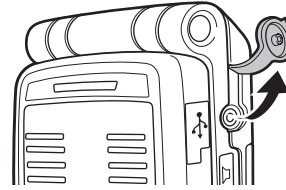

note


To use with a bluetooth headset, see page 43.

Installing Uniden's Cordless Customization PC Application

This phone includes Uniden's Cordless Customization application for your Windows PC. You can use this application to completely configure your phone, download pictures for wallpaper, and import contacts from MicroSoft Outlook.

NOTE: The Uniden Custom Cordless application requires Microsoft®, Windows® 98, Windows® 98SE, Windows ME, Windows 2000, Windows XP and more than 150MB free hard drive space.


- 1) Insert the Cordless Customization CD into your computer's CD-ROM drive. The installation application should start automatically.
- 2) If the application doesn't start, go to the **Start** menu and select **Run**.
- 3) In the window, type **d:\setup.exe** (where **d** is the letter assigned to your CD-ROM drive), and click **OK**.
- 4) Once the software is installed, connect the USB cable to the handset and your PC as shown.
- 5) Customize your Uniden Cordless Handset.

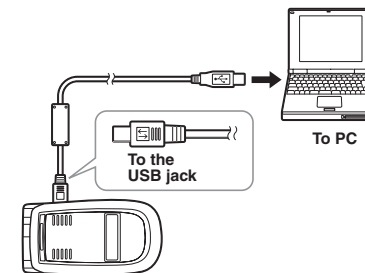


Using the Interface

Example of the standby mode display


• Handset

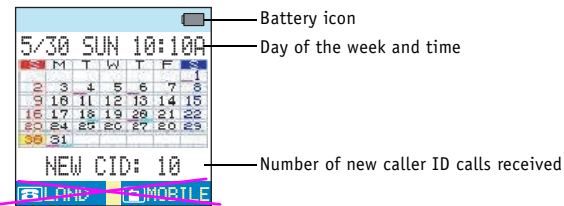

• Sub-LCD

 

• Base

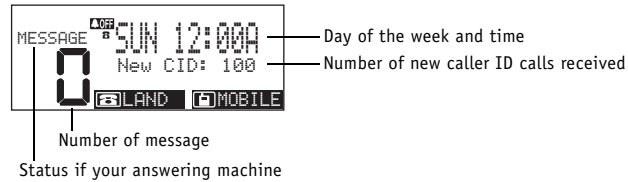

NEW — appears if you have a new message.

FULL — appears when the message storage is full.

Announce ONLY — appears if you set your answering system to announce only.

Display Icons

ICON			DESCRIPTION
Handset	Base	Sub-LCD	
	-		Battery icons indicate the handset battery status. This icon cycles depending on the battery status (full, medium, low, and empty).
			Ringer off icon indicates that ringer is turned off.
		-	Bluetooth icon appear when you are using bluetooth features.
			Mute icon appears when you mute the handset.
	-		Speaker icon appears when the handset speaker phone is used.
	-	-	When a new message is received, an envelope icon is displayed on the LCD screen
			Privacy icon appears when the Privacy Mode is turned on.
			Call record icon appears while recording a conversation.

Soft Key Function

"Soft" keys are keys that change function during the operation of the phone. There are two soft keys on the handset and base.

The text right above the soft key indicates that key's current function. For example, when the phone is in standby mode, pressing soft key 1 on the handset make a selection. When the phone is in talk mode, pressing soft key 1 brings up up the options menu. Complete information on the features controlled by the soft keys can be found under each feature.

In standby mode

Handset




Soft key 2


Base



In talk mode

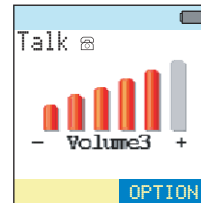


Soft key 2

 

Soft key 2

To make menu selections, please follow the instructions below:

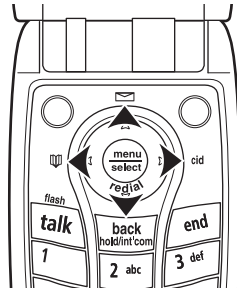


Press **menu/select**.

Highlight the option you want by pressing up, down, right, or left key on the handset, or up or down key on the base. This will move the cursor; the option currently highlighted appears in reversed out text:

To exit the **MENU** and return to standby, press the **end** key on the handset or the **end/find hs** key on the base.

To go back a level in the menu, press the **back/hold/intercom**.

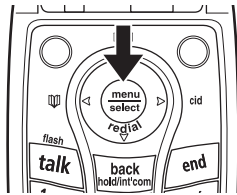

Select the highlighted option by pressing the **menu/select** key.

Entering text

You can use the number keypad on your phone to enter text by referring to the letters printed on each number key. When you press the number key in a text entry field, the phone displays the first letter printed on the number key. Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, then the number on the key.

If two letters in a row use the same number key, enter the first letter, then use the right **and left** key to move the cursor to the next position to enter the second letter. For example, to enter Movies:

- 1) Press 6 once to enter M.
- 2) Use right **or left** key to move the cursor to the right.
- 3) Press 6 six times to enter o.
- 4) Press 8 six times to enter v.
- 5) Press 4 six times to enter i.
- 6) Press 3 five times to enter e.
- 7) Press 7 eight times to enter s.
- 8) Press right or left key to end your text entry.

If you make a mistake while entering a name, use right or left key to move the cursor to the incorrect character. Press the **DELETE** soft key to erase the incorrect character, and then enter the correct character. To delete all characters in the text entry field, press and hold the **DELETE** soft key.

keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
1	i								
2 abc	A B C	a b c	2						
3 def	D E F	d e f	3						
4 ghi	G H I	g h i	4						
5 jkl	J K L	j k l	5						
6 mno	M N O	m n o	6						
7 pqrs	P Q R	p q r s	7						
8 tuv	T U V	t u v	8						
9 wxyz	W X Y Z	w x y z	9						
	& < > / (blank)	- _							
0 oper	. : ; ? ! @ * "	'							
	# 0								

Options,

Main Menu Options


Your phone has various main menu options:

On the handset, the options are DirectLink, Room Monitor, Messages, Reminders, Speaker Setup, Display Setup, Ringer Setup, System Setup and Bluetooth.

Note:

- If you do not press a key within 30 seconds, the phone will time out and exit the menu mode. When setting Day and Time, the time-out period is extended to two minutes.
- All of these options can be configured in the Cordless Customization Application.

Handset Main Menu Options

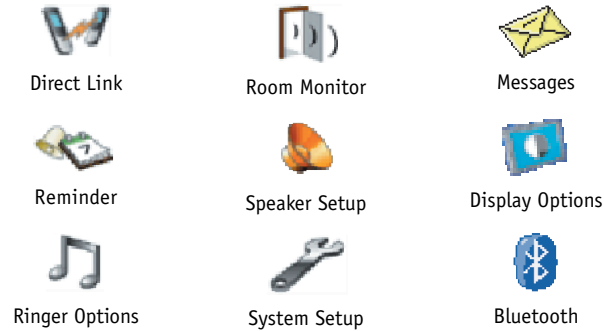

On the base, the options are Rings/Volumes, Caller ID, Redial, Phonebook, Room Monitor, Record Memo, System Setup, and Reconnect.

www.uniden.com



Main Menu Options [24]

Main Menu Options

System Setup Menu

System Setup

The following submenu options must be set separately for each handset and the base.



Through this section we use handset display images for explanation.


LCD Contrast (For Base)

You can change the contrast of your base display to make it easier to read. You might want to adjust the contrast whenever you change the display color. Your phone gives you 10 levels of contrast to choose from. To adjust the contrast, go to LCD Contrast. Use up or right key to increase the contrast and down or left key to decrease the contrast. When you like the level of contrast, press *menu/select* to select it.




Open to Answer (Handset only)

Open to Answer lets you answer the phone by opening flip cover of the handset. To turn on Open to Answer, go to Open to Answer and select On. A confirmation tone tells you that Open to Answer is active.

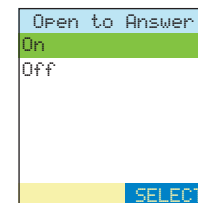


Any Key Answer (Handset only)

Any Key Answer lets you answer the phone by pressing any key on the number pad. To turn on Any Key Answer, go to Any Key Answer and select On. A confirmation tone tells you that Any Key Answer is active.

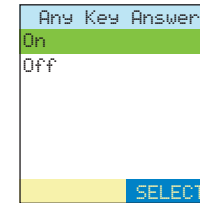

Banner (Handset only)


You can change the name your phone displays on the screen. If you have more than one handset, you can use the banner name to identify your handset during handset-to-handset functions like intercom and DirectLink. Go to Banner Display and enter the name you want to use. You can use up to 10 characters. Use the **DELETE** soft key to delete an existing handset name. Press *menu/select* when you're finished.

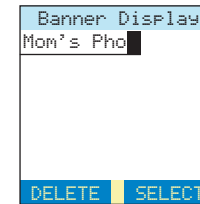

Key Touch Tone


Key Touch Tone is the tone your keypad makes when keys are pressed.

To turn off the tone, go to Key Touch Tone and select Off. A confirmation tone tells you that the tone has been deactivated.

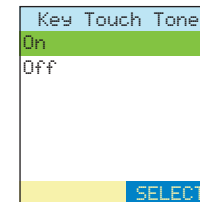

Call Privacy

If you don't want other registered handsets and the base to interrupt you on a call, you can turn on privacy mode. As long as your handset or the base is in privacy mode, other handsets won't be able to join your call or make any calls of their own. To turn on privacy mode, go to **Call Privacy** and select **On**. You can turn on privacy mode when the phone is in standby or when you're already on a call.

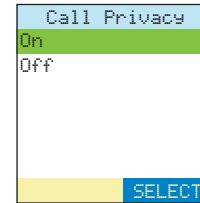


Language (For Base)

You can change the language the menu display will use. Choose from English, French, or Spanish. To change the language, go to **Language** and select **English**, **Français** (French), or **Español** (Spanish). You'll hear a confirmation tone, and the display will use the selected language.



Unique ID (Handset only)

You can assign special ringer tones to anyone in your phonebook. When your phone gets a call, it looks up the Caller ID information in your phonebook; if you've assigned a distinctive ringer and pictures to that number, the phone uses it so you know who's calling. To turn on distinctive ringing, go to **Unique ID** and select **On**. A confirmation tone tells you that distinctive ringing is active.

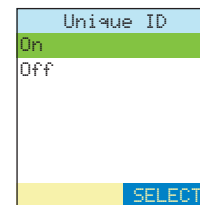


Global Setup

Global settings apply to all registered handsets and the base. If you change something under the global menu, you change it for all handsets and the base. Only one handset or the base can change global settings at a time, and you have to make sure the phone is not currently being used.

Day and Time

To change the date and time shown in the display, go to **Date & Time**. Use the up, down, right, left keys to highlight the part you want to change (date, time, AM/PM). Use the number keypad, up or down key, or ***/tone** to change each part. Press **menu/select** when you're finished.


Note: If you don't press any keys for two minutes when setting the day and time, the phone will exit the menu mode.

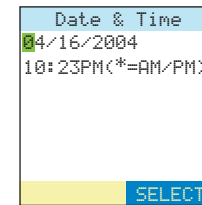

Call Waiting

Your phone supports Caller ID on Call Waiting, so you can see the name and number of someone who calls when you're already on the line. Your phone also supports Call Waiting Deluxe, which gives you a choice of how you want to handle a waiting call. You'll need to subscribe to these features with your phone company before you can use them.


To let your phone support these features, go to **Call Waiting**. Select **On**, and the phone will display the CallWaitDeluxe screen. Select **On**. (You have to turn on Call Waiting before you can turn on Call Waiting Deluxe.) A confirmation tone tells you that your phone is ready to use these features.

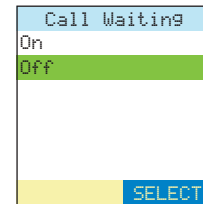

Area Code

If you can make a call by dialing only 7 digits (instead of 10), you can program your local area code in your phone. If you get a call from within your area code, you'll only see the 7-digit phone number. If you get a call from outside your area code, you'll see all 10 digits.


To enter an area code, go to **Area Code**. Use the number keypad to enter your 3-digit area code. Press **menu/select** when you're finished.

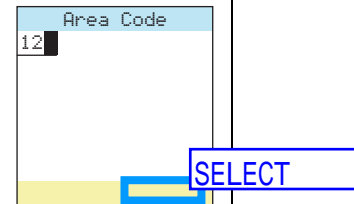

Dial Mode

Your phone can communicate with the telephone network in two different ways: tone dialing and pulse dialing. These days, most phone networks use a method called tone dialing, so your phone comes programmed for tone dialing.

If your phone company uses **Pulse** dialing, you'll need to change your phone's dial mode. There's an easy way to tell: try making a call. If your call connects, your phone's setting is fine. If not, go to **Dial Mode** and select **Pulse**. A confirmation tone tells you you've changed the dial mode, and you can try making a call again.

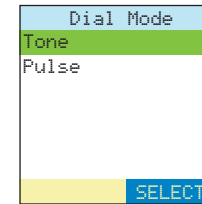

Setting the Ringer Options

This menu lets you customize Ringer or Speaker Volume setting in your phone. You can set these options separately for each handset and the base.



Ringer Tone

You can set a different ringer for each handset and the base. This phone comes with 10 prerecorded songs and 15 different ringer tones; you can also record your own ringer tones (see page 33).

- Songs: Beethoven's Symphony #9 [Beethoven9], Fur Elise [Elise], Home Sweet Home [Home Sweet Home], Lorri Song #6 [Lorri Song], WT Overtune (Handset only), Twinkle Star (Handset only), Je Te Veux (Handset only) When the Irish Eyes Are Smiling [Irish Eyes] (Base only), Aura Lee (Base only), Let Me Call You Sweet Heart [Sweetheart] (Base only), Star Spangled Banner [Star Spangled] (Base only), Old MacDonald [Old MacDonald], We Wish You A Merry Christmas [Merry Christmas]
- Ringer tones: Flicker, Clatter, Coin Toss, Synthesize, Finish **Lin**, Soft Alert, Wake Up, Lighting Bug, Bebop, Tone Board, Chirp, Party Clap, Reminder, Burble, TeleTone,

- 1) Go to **Ringer Tones** and highlight the ringer you want. (Each ringer will sound as you highlight it.)
- 2) Select a ringer from the list.
- 3) Press **menu/select** to confirm the setting. You'll hear a confirmation tone, and the phone will go back to the menu.

 
Line

[31] System Setup Menu

www.uniden.com

Unique Ring Setup (Base Only)


You can assign special ringer tones to anyone in your phonebook. When your phone gets a call, it looks up the Caller ID information in your phonebook; if you've assigned a distinctive ringer to that number, the phone uses it so you know who's calling.



To turn on distinctive ringing, go to *Unique Ring* and select *On*. A confirmation tone tells you that Unique Ring is active.

Vibrate Alert (Handset Only)

The vibrator mode allows you to vibrate the phone when you receive a call and the handset is off the base. To turn on the Vibrate Alert, go to *Vibrate Alert* and select *On*. A confirmation tone tells you that Vibrate Alert is active.

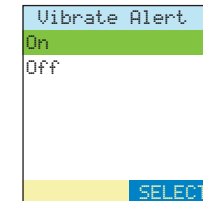


Vibrate Pattern (Handset Only)

You can choose a vibrate pattern (4 patterns (1-4) and Off). To set Vibrate Alert, go to *Vibrate Pattern* and then select the pattern. A confirmation tone tells you that Vibrate Pattern is active.

Customize Your Own Distinctive Ringer Tones

Your phone can store up to 5 different recordings to use as ringer tones (a total of 100 seconds). Each recording must be less than 20 seconds long.

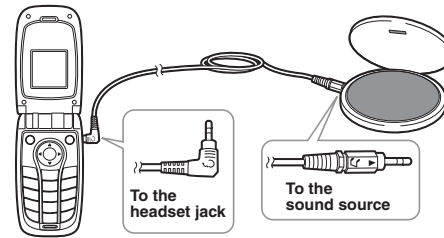

Storing Ringer Tones

1) Connect the audio recording cable to the handset and sound source (e.g. stereo or cd player). Insert one end of the audio recording cable into the handset's headset jack and the other end into the sound source.

You can also simply use the handset's microphone by holding the handset close to the sound source.

- 2) Go to *Rec/Edit Rings*.
- 3) Select a location from 1-5, and press the **OPTIONS** soft key.
- 4) Use the up/down key to select *Record*. To start recording, press the **RECORD** soft key. The **message timer** displays 20 and then begins to count down.



- 5) When you are finished recording, press the **STOP** soft key. The phone will play the recorded ringer. To record another ringer, press the **ReRec** soft key.
- 6) Enter the title of this ringer (up to 12 digits) using the number keypad, **/tone, #*, the **DELETE** soft key, right, or left key.
- 7) Press *menu/select*, you will hear a confirmation tone, and Done! appears.

Playing the Ringer


- 1) Go to *Rec/Edit Rings*.
- 2) Select a ringer to play, and press the **OPTIONS** soft key.
- 3) Use the up/down key to select *Play*. To start playing, press *menu/select*. To stop, press *menu/select* again.



Change Ringer Name

- 1) Go to *Rec/Edit Rings*.
- 2) Select a ringer you want to change the title, and press the **OPTIONS** soft key.
- 3) Use the up/down key to select *Change Title*.
- 4) Edit the title of this ringer (up to 12 digits) using the number keypad, **/tone, #*, the **DELETE** soft key, right, or left key.

When you are finished, press *menu/select*, you will hear a confirmation tone, and Done! appears.

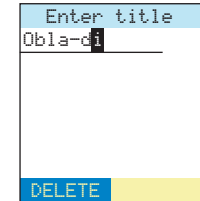

Delete Ringer

To delete a ringer tone, go to *Rec/Edit Rings*, and select the ringer you want to delete. Press **OPTIONS** soft key. Use up/down key to select *Delete*. Select *Yes*. You will hear a confirmation tone, and *Deleted!* appears. The ringer is deleted from the list, and the phone stays on the ringer list.



Display Setting (Handset Only)

The following submenu options must be set separately for each handset.

Themes (wallpaper)

Your phone has 30 different wall papers themes (example is Yellow flower). The wall paper will displays on the handset's LCD during standby mode:

To turn on the wallpaper, go to *Wall Paper* and highlight the wallpaper you want. Press the **VIEW** soft key to see the wallpaper or **menu/select** to activate it.

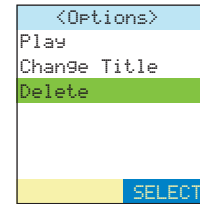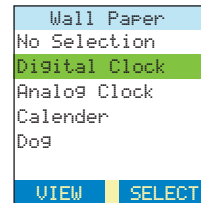


You can not delete the ringer used for ringer tone, Unique ring, or Reminder.

You can download images from the PC application CD-ROM, and use them for your wallpaper.

Color Scheme

You can change the color of your phone's display. There are 5 different colors choose from: Lucid White, Haze Gray, Chic purple, Coral Red, and Lime Green.

To change the color of the display, go to Color Scheme and select the color you want. As you scroll through the options, the phone displays the highlighted color for you.

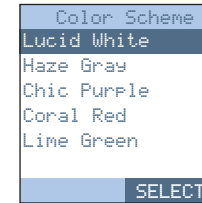

LCD Contrast (for the handset)

LCD Contrast adjusts the handset LCD brightness. To adjust the contrast, go to LCD Contrast and highlight the contrast level you want. Press **menu/select** to activate it. you will hear a confirmation tone.




7

Animation Type (Handset only)

Your phone has 4 different system animations (Dog, Car, Frog and Abstract) with 10 different animation schemes (example is for dog):



To turn on the animation, go to Animation Type and highlight the animation you want. Press the **SELECT** soft key to activate it.

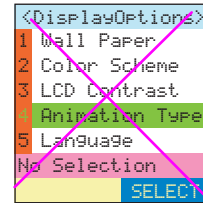

Language

You can change the language the menu display will use. Choose from English, French, or Spanish. To change the language, go to Language and select English, Français (French), or Español (Spanish). You'll hear a confirmation tone, and the display will use the selected language.



note

Ringer tone of the Bluetooth headset will sounds even if you turn off the ringer tone or the DND feature is on.


Using the Bluetooth Feature

Using Bluetooth headset

The phone also supports Bluetooth v 1.1 compliant headsets. Please visit our web site for more detailed information about Bluetooth compatibility and troubleshooting tips.

Before you can use a bluetooth headset, you must pair it with the phone. Once you have paired your headset with the phone, you do not have to pair it again until you want to use it with another phone.


Registering the bluetooth headset

- 1) Prepare your bluetooth headset according to the headset's owner's manual on pairing.
- 2) When the phone is in standby mode, press **menu/select** on the handset.
- 3) Select the Bluetooth icon.
- 4) Use the up/down key to select Find/Pair , and then press **menu/select**.



The phone will search for a bluetooth device. When a BlueTooth headset is detected, its name appears on the display.

Press the **STOP** soft key to back to show the list of the bluetooth headsets.

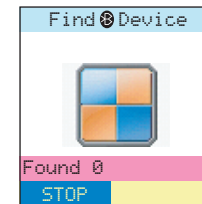


Using the Bluetooth Feature

Move to the next page.

- 5) Use the up/down key to select a headset to be registered and press the **CONNECT** soft key.
- 6) Enter the pin code using the number keypad, and then press **menu/select**.

When the operation is complete, Pairing Successful! appears.

the **SELECT** soft key.

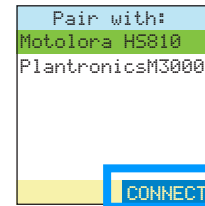

SELECT




note

If no device is detected, Bluetooth Device was not found. appears, the phone goes back to the Bluetooth setup menu.

Turning On or Off the Bluetooth Set Up

This feature allows you to save the power of the phone. When you do not use the Bluetooth feature for a long period, turn the Bluetooth Set Up to off.


- 1) When the phone is in standby mode, press **menu/select** on the handset.
- 2) Select the Bluetooth icon.
- 3) Use the up/down key to select  On/Off, and then press **menu/select**.
- 4) Use the up/down key to select On or Off, and then press **menu/select**.



Viewing Paired Headsets

To see all headsets that are paired to this handset, follow the steps below:


- 1) When the phone is in standby mode, press **menu/select** on the handset.
- 2) Select the Bluetooth icon.
- 3) Use the up/down key to select My Handset, and then press **menu/select**.

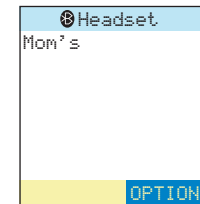

The handset name and serial number are displayed. To back to the Bluetooth setting display, press **back/hold/intercom**.


- 1) When the phone is in standby mode, press menu/select on the handset.
- 2) Select the Bluetooth icon.
- 3) Use the up/down key to select {bluetooth icon} Headset, and then press **<i>menu/select</i>**.

To reconnect the Bluetooth Headset


- 1) Press the **OPTION** key, and select Reconnect .
- 2) Use the up/down key to select Yes, and then press **menu/select**.

You will hear a confirmation tone, and Done! appears.

De-register the Bluetooth Headset

- 1) Press the **OPTION** key, and select Deregister .
- 2) Use the up/down key to select Yes, and then press **menu/select**.

You will hear a confirmation tone, and Deregistration Successful! appears.

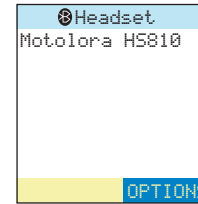

note

- When you dial the number, hyphens are inserted between numbers.
- If the line is already in use, all registered handsets and the base that are not currently in use will display "In Use."
- For best performance, use the speaker phone in a quiet room and let the caller finish speaking before you speak. If you or the other party has difficulty hearing, adjust the speaker volume.

www.uniden.com

Using Your Phone

Making Calls

From the Handset


- 1) Remove the handset from the charging cradle.
- 2) Flip the top panel up.
- 3) Press **talk/flash**.
- 4) Listen for the dial tone.
- 5) Dial the number.

OR

- 1) Remove the handset from the charging cradle.
- 2) Flip the top panel up.
- 3) Dial the number.

If you need the phone to pause before dialing more digits (for example, to enter an access code or extension), press **menu/select**, and select **Pause Entry** from the list. **P** appears in the display, which represents a 2-second pause.


- 4) Press **talk/flash**.

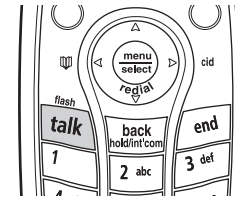


Using Your Phone [42]


Using Your Phone

From the Handset Speakerphone


- 1) Remove the handset from the charging cradle.
- 2) Flip the top panel up.
- 3) Press  (Speaker Phone) on the side of the handset.
- 4) Listen for the dial tone.
- 5) Dial the number.
- 6) When the other party answers, talk into the microphone in the bottom of the handset.

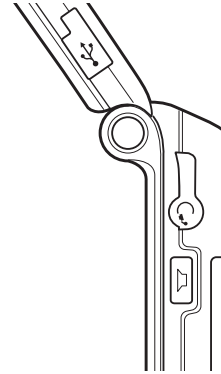


From the base

- 1) Press /flash.
- 2) Listen for the dial tone.
- 3) Dial the number.

OR

- 1) Dial the number.
If pause is required, press *menu/select*, and select **Pause Entry** from the list.
- 2) Press /flash or the **LAND** soft key for the Land line.

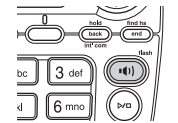

note

- To set Open to Answer see page 25 or to set "Any Key Answer" see page 26.
- If you plug a headset, or use the handset speaker phone, you can not hang up the call when you close the top panel.
- While using the handset speaker phone or a headset, closing the top panel will not hang up the call.
- To scroll through the help, press the **▶▶** soft key.
- You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.

www.uniden.com

Receiving a call/AutoTalk set to OFF

Handset is in the cradle	Handset is off the cradle
1) Remove the handset from the charging cradle.	1) Flip the top panel up.
2) Flip the top panel up.	2) Press talk/flash .
3) Press talk/flash .	
If Open to Answer is ON, the phone will automatically answer the call when you flip the top panel up.	If Any Key Answer is set to On, you can also press any number key on the keypad to answer a call.

(see pagexx)

From the base

Press **Ⓜ/flash**.

Hanging Up

From the handset or handset speakerphone, press **end** or return the handset to the cradle (AutoStandby). Or close the top panel.

From the base, **end/find hs**.

Switching to the Handset Speakerphone During a Call

To switch a normal call to the speakerphone, press **Ⓜ** (speaker phone) on the side of the handset. To switch from a speakerphone call to a normal call, press **Ⓜ** (speaker phone).

Moving out of range

If you move your handset farther from the base unit during a call, you might start to hear more noise than usual. If you go too far from the base, you'll hear a beep and see **No Signal**. Press **HELP**. Press the **HELP** soft key on the display. The base will stay connected to the caller for another 35 seconds, so you can move back within range and press **talk/flash** or **⏏** (speaker phone), or ***1/flash** on the base to return to the call.

Call Waiting

If you hear a call waiting tone while you're on a call, press **talk/flash** or ***1/flash** on the base to switch to the new call. After a short pause, you'll hear the new caller. Press **talk/flash** or ***1/flash** on the base again to go back to the original caller.



Your phone can't show call waiting caller ID information when a call is on hold.

Call Waiting Deluxe


If you subscribe to Call Waiting Deluxe (CWDX) from your phone company, you have several different options when you get a call waiting call. When you hear the call waiting tone, instead of answering the call, you can press **menu/select** or the **OPTION** soft key, and then select **CallWaitDeluxe**. Then, use the up/down key or press 1-7 to choose from the following options:



Option	Definition	Press
Ask to Hold	A prerecorded message tells the caller that you'll be available shortly, and the call is place on hold	1
Tell Busy	A prerecorded message tells the caller you are busy, and the waiting call is disconnected.	2
Forward	The caller is sent to your voice mail box, if available.	3
Answer/Drop 1	Disconnects the first call, and connects to the new caller.	4
Conference	Starts a conference call with your first and second callers.	5
Drop First/Drop Last	During a conference call, allows you to choose to drop the first or last caller.	6 / 7

Placing a Call on Hold

During a call, press. Press **back/hold/intercom, end, or end/find hs** on the base to put the call on hold. Press **talk/flash** or ***/flash** on the base to go back to the call.

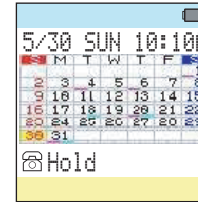

- If you leave a call on hold for more than 5 minutes, warning tone sounds and Hold Reminder! Answer held line appears, and the line will disconnect in 15 seconds.
- If someone is using another handset or base in Privacy Mode, Unavailable appears in the display and you cannot join the call.

Conferencing

If you have more than one handset, up to four people can participate in a conference call.

3-Way Conferencing

- Outside line + Handset + Base (or Handset)

4-Way Conferencing

- Outside line + Handset + Handset + Base

Joining a Conference Call


 
You can easily join a call already in progress.

From the base

- 1) Press **Ⓜ** on the base to join the conference call.
- 2) To hang up, press **Ⓜ**. The handset(s) will still be connected to the call.

From the handset

- 1) Press **talk/flash** or **Ⓜ** on the handset to join the call.
- 2) To hangup, return the handset to the cradle or press **end** on the handset. The base or other handset will still be connected to the call.

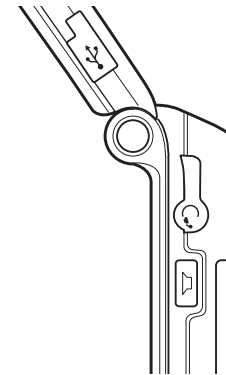

Redialing Calls

You can quickly redial the last 20 phone numbers for each handset and 10 numbers for the base.



With the phone in standby mode, press **redial**/ ∇ on the handset (or press **menu/select**, and then select **Redial** on the base). This brings up the redial list. Use the up/down key to scroll through the numbers, and select the number you want to dial.

Press **talk/flash** (or \triangleright) or **flash** on the base to dial the selected number.

You can also display the list for redial number with the phone in talk mode. After select the redial number, press the **DIAL** soft key to redial the number.

Deleting Redial Records

If you want to delete a phone number from the redial list, go to the redial list in standby mode, and select the number you want to delete. Press the **OPTIONS** soft key, and select **Delete Selection**, and then **Yes**. If you want to delete all the redial records, select **Delete All**, and then **Yes**.

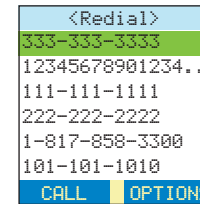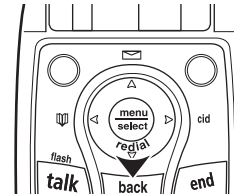


- Each redial record can store up to 32 digits.
- To store redial numbers in the Phonebook, see page 60.

Adjusting Base Ringer and Speaker Volumes

Adjusting the base ringer volume

 You can choose from three ringer settings on the base: off, low, and high. When the phone is in standby mode, go to Rings/Volumes menu, and then select **Ringer Volume**. Use the up/down key to select the ringer volume, and **menu/select**. You will here a confirmation tone.



Adjusting the base speaker volume

You can adjust the volume of the answering machine speaker while a message is playing. Press **volume** up/down during a message to choose one of the 10 volume levels.

You can also set the speaker volume from the base. Go to Rings/Volumes menu, and then select **Speaker Volume**. Use the up/down key to select the speaker volume, and then **menu/select**. You will hear a confirmation tone.

Using the Handset Volume Setting Menu


Ringer: Adjust the handset ringer volume

You can choose from three different ringer volume settings on your handset: off, low, and high. When the phone is in standby mode, go to the Rings/Volumes menu, and then select Ringer Options. Use the up/down key to select the ringer volume, and **menu/select**. You will here a confirmation tone.



Ear speaker: Adjust the handset earpiece volume During a call.

You can choose from six volume levels for the earpiece speaker. To adjust the earpiece volume, go to Speaker Setup menu, and select Earpiece Volume and select the volume level you want to use.


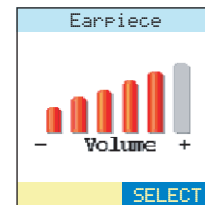


You can also adjust the earpiece volume during a call by pressing the Δ or ∇ keys on the side of the handset, and then up (to make it louder) or down (to make it softer).

Speaker: Adjust the handset speaker volume


You can choose from six volume levels for the handset speakerphone. To adjust the speaker volume, go to Speaker Setup menu, and select **Speaker volume** select the volume level you want to use.

You can also adjust the handset speaker volume during a call by pressing the ∇ or Δ key on the side of the handset.

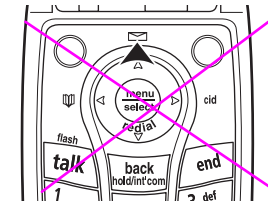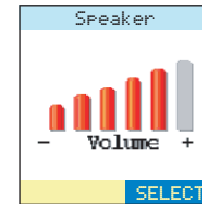

Audio Tone

If you aren't satisfied with the audio quality of your phone, you can adjust the Audio Tone of the earpiece. Your phone gives you three audio tone options: low, natural or high. Go to Speaker Setup menu, and select **Audio Tone** and select the option that sounds best to you. (Audio tone adjustments only apply to the earpiece, not the speakerphone.)

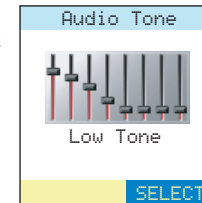

Mute


While the handset is ringing, you can mute the handset ringer for this call by pressing **end** on the handset. To mute the base ringer, press **end** on the base. The phone will ring again on the next call.

Mute the Handset Microphone

When you're on the phone, press the **OPTIONS** key and select **Mute** to turn off the microphone so the caller can't hear you. The display shows **Mute** while the microphone is muted. To turn off muting, repeat the above steps again.

Tone Dialing Switch Over

If your telephone company uses pulse dialing, you can switch over to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc.

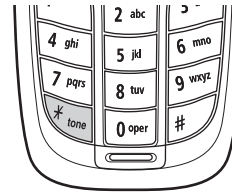

If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press the ***/tone** key. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.



You can only mute the handset ringer if the handset is off the base when the phone starts ringing.


Privacy Mode

Privacy mode prevents interruption from other registered handsets or the base. This works only when the phone is in use. While on a call, press the **OPTIONS** soft key on the handset or base. Use the up/down key to select Call Privacy. Privacy mode On appears in the display. To exit Privacy Mode, use the same procedure. Privacy Mode Off appears.



Find Handset


To locate the handset, press **end/find hs** on the base when the phone is in standby mode. Select the handset to page. The handset beep for 60 seconds, and **Paging** appears on the handset display. To cancel paging, press any key on the handset or **end/find hs** on the base.

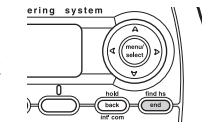

{!}
Date & Time must be set to access Calendar menu option. To set Date & Time, scroll to Global System Setup options.

Reminder (Handset only)


Your phone has a built-in calendar that you can use to schedule reminders and appointments (all the way through December 31, 2099). You can set alarms for up to 30 different events. A pop-up screen appears and reminder tone sounds when the scheduled time & date comes. To show detailed info on the reminder, press **menu/select**. To mute the reminder tone, press the **MUTE** key.

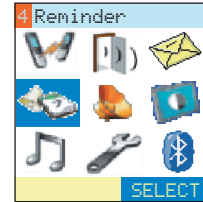

To reset the reminder and clear the screen, press **end** when reminder tone stops. To dismiss Reminder display Press DISMISS appears. Press the **DIMISS** soft key. The phone return to standby mode.


Scheduling a reminder

Select the reminder option to show Reminder (Calendar). Today is highlighted. If the reminder is set for the morning, a bar appears lower left of the date number; if the reminder is set for the afternoon or evening, a bar appears lower right of the date number. Use up, down, right or left key to move the cursor to the date.

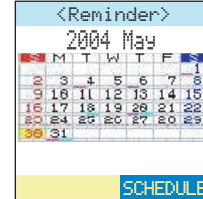


note
Before using this feature, you must set date and time (see page 24).

- 1) Press **menu/select** to select day.
- 2) Press the **STORE** soft key to add a reminder.
- 3) Use the number keypad to change the day and time.
- 4) Use the number keypad or ***/tone** to select the hours and minutes. Press **menu/select** when you're finished.
- 5) To change the title, select **!** and press **menu/select**. Use the number keypad, ***/tone**, #, left, right key, and the **DELETE** soft key. Press **menu/select** when you're finished.
- 6) If you want to set recurrence, press **Q**, and press **menu/select**. Select frequency (None, Daily, Weekly, Monthly, Yearly) from the list. Press **menu/select** when you're finished.
- 7) If you want your phone to ring when this reminder occurs, move to the line **J** indicated, and press **menu/select**. Select the ringer tone you want the phone to ring. Press **menu/select** when you're finished.
- 8) To enter a reminder text for this reminder, select **Message** and press **menu/select**. Edit **Message** appears. You can enter up to 80 digits. Press **menu/select** when you're finished.
- 9) When everything is correct, press the **DONE** soft key.

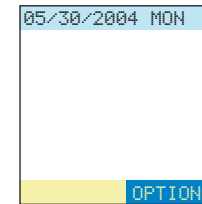

Editing and deleting reminders


You can edit reminders by pressing the **SCHEDULE** soft key and selecting the reminder by pressing the **OPTION** key. Once the reminders is selected, you can edit the date, time, reminder tone, and text the same way you entered them for a new entry. To delete reminders, select the reminder and press the **OPTION** soft key. Select Delete Selection. To delete all reminders, select Delete All.

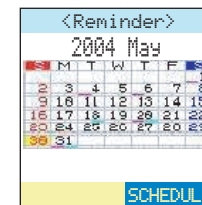

Using the Phonebook

Your phone lets you store up to 100 entries in each handset and base. You can store up to 4 phone numbers for each name in your phonebook (for a total of 400 numbers), and you assign names to groups for easy searching. You can store a distinctive ringer tone, picture display, and backlight color to **your** each or group.

You can enter your phonebook by Pressing the phonebook key on the handset or base.

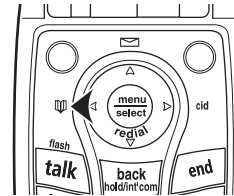




Creating and Editing Phonebook Entries

Press the phonebook key and press the **OPTIONS** soft key. Select **New Entry** to store, or **Edit Selection** to edit the location. Enter as much of the following information as you want. Press **menu/select** to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.





Step 1: Name ,

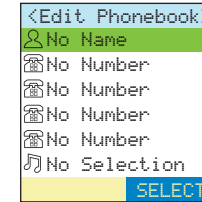





Select ,  and use the keypad to enter the name for this entry. You can enter up to 16 characters. If you don't want to enter a name, your phone will store this entry as No Name. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.



 Step 2: Number ,



Select ,  and enter a phone number for this entry. If you need your phone to pause between digits when it's dialing (for example, to enter an extension or an access code), press the **PAUSE** soft key to insert a two-second pause. You'll see a P in the display. You can stack more than one pause together if two seconds isn't long enough. Each pause counts as one digit; you can enter up to 20 digits for the phone number. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.



You can select an icon to remind you which number this is: home , , work , , mobile , , or general phone number. Press **menu/select** when you're finished.

telephone icon


Step 3: Unique Ring ,

Select ,  to attach a special ring to this phone. Select the ringer tone you want the phone to use when this person calls, or select No Selection to have the phone use its regular ringer tone. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.

You can save up to 4 numbers for each phonebook entry. If you try to save more than 4 numbers for a phonebook entry, your phone will display Dial data is full. You'll have to delete one of the existing numbers before you add a new one.



www.uniden.com

Step 4: Unique Display (Handset only) 

Select  to attach a special screen display to this entry. Select the display you want the phone to use when this person calls, or select *No Selection* to have the phone use its regular display. You can press the **VIEW** soft key to see the display choices:

Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.

Step 5: Phonebook Group , 

Select ,  to place this entry into a phonebook group. Select the group (0-9) you want this entry to belong to, or select *No Selection* to leave the entry outside of any group. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry. See page 62 for information on creating and editing groups. To select a group, see page 62.

Step 6: Speed Dial , 

Select **0-9** to save this number to one of the 10 speed dial numbers or *No Selection* if you don't want to save it to a speed dial number. If there's already a phone number saved to the speed dial number you select, your phone will ask if you want to overwrite the number. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.

Storing Caller ID or Redial Numbers in the Phonebook

You can store Caller ID or redial numbers in your phonebook so you can use them later. Go to the Caller ID list or redial list and select the number you want to store. (If the Caller ID information didn't include the number, then you can't store it.) Press the **OPTIONS** soft key and select *Add to Phonebook*. Your phone will create a phonebook entry so you can enter the additional information shown on page 57. If the number you want to save is already in the phonebook, your phone will display *This data is already stored!*.

Storing and Editing Numbers from the Dial Operation

- 1) With the phone in standby mode, enter the number to store using the number keypad.
- 2) Press *menu/select*, and then select *Add to Phonebook*.
- 3) Use the up/down key to select *New Entry* to enter a new phonebook location. If you want to add a number to the existing phonebook location, select *Store & Edit*, and then select a location to edit.
- 4) Enter each entry and confirm the selection by following the steps in pages 58-59.

Managing the Phonebook

With the **OPTIONS** soft key, you can delete phonebook entries, copy entries to another handset, check how many empty phonebook and speed dial entries you have available, sort your phonebook by groups, and name phonebook groups.

Deleting phonebook entries

Go to the phonebook and select the entry you want to delete. Press the **OPTIONS** soft key and select **Delete**. Use the up/down key to select **Delete Selection**. Your phone will ask you to confirm select **Yes**.


To delete all the entries from your phonebook, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select **Delete**, and then **Delete All**. Your phone will ask you to confirm select **Yes**.

Copying phonebook entries to another handset

When you copy entries to another handset or base, the group and speed dial information won't be transferred. Your phone will cancel the copying process if any one of the following things occurs:

- If the handset you are copying to doesn't have enough memory (the phone will show "Not enough memory in receiving unit").
- If the handset you are copying to already has that phone number in its phonebook.
- A call comes in during the copying process.


To copy a single entry, go to the Phonebook and select the entry you want to copy. Press the **OPTIONS** soft key and then **COPY Selection**. Select the handset or base you want to copy to the entry to.

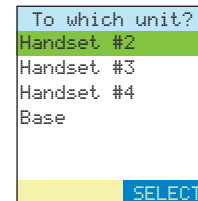


To copy all the phonebook entries, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select then **COPY All**. Select the handset or base you want to copy to the entry to.

Checking the number of stored entries


To see how many phonebook entries you have, go to the phonebook and press the **OPTIONS** soft key and select PhoneBk Capacity. The phone will show you how many stored names (entries) and how many stored phone numbers (total) you have.

To see your speed dial entries, go to the phonebook and press the **OPTIONS** key and select Check  Dials. The phone will show you which speed dial numbers have phone numbers stored in them.

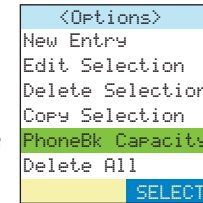

Changing the sorting order

To change the sorting of your phonebook, go to the phonebook and press the **OPTIONS** soft key and select Sort. Select Alphabetically to see the list of names in alphabetical order; select Group to see the list of groups in alphabetical order. Enter a letter from the keypad to jump to the first entry beginning with that letter.

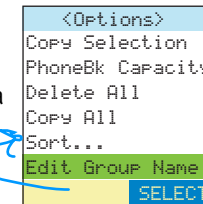

Naming phonebook groups

Your phone comes with 10 groups to organize your phonebook. You can name groups things like "Family" or "Friends" or "Softball team" to let you find entries in your phonebook more quickly.

Follow the steps below to name a group:

- 1) Go to the Phonebook and select the **OPTIONS** soft key.
- 2) Scroll down to Edit Group Name and press *menu/select*.
- 3) Scroll down to the group number you want to edit, and press *menu/select*.

4) Use the number keypad to enter a name for this group. Press *menu/select* when finished.

Making Calls with the Phonebook

To call someone in your phonebook, go to the phonebook and select that person's phonebook entry. Select the number (one of the four available) that you want to call, and then press the **CALL** soft key. The number at the top of the list will dial. You can also dial the number with the phone in talk mode. After select number, press the **DIAL** soft key.

Using the Speed Dial

Flip the top panel up. Press and hold the number of the speed dial entry you want to call until the phonebook entry appears. ~~Use the up/down key to select a number.~~

Press *talk/flash* or

Select the number (one of the four available) that you want to call, and then press the **CALL** soft key.

With the phone in standby mode, flip