

GMR 2-way radios
 THANK YOU FOR PURCHASING A UNIDEN PRODUCT
CHECK OUT THE LATEST ACCESSORIES
 www.uniden.com

GMR1558-2CK

- 15 GMRS / 7 FRS Channels
- 142 Privacy Codes (CTCSS Tone and DCS Code)
- Up to 15 Mile Range*
- Scramble
- Internal VOX Circuitry
- 5 Selectable Call Tone Alerts
- Backlit LCD Display
- Optional Headset Accessories
- Headset Jack
- Roger Beep
- Power Boost Button for Maximum Range
- Battery Charger
- Battery Level Meter
- Channel Monitor
- Channel Scan
- Keypad Lock
- DC IN 9V Jack

Congratulations on your purchase of the Uniden GMR1558-2CK (General Mobile Radio Service) radio. This lightweight, palm-sized, radio is a state-of-the-art device, equipped with many valuable features. Use it at sporting events, to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication.

PACKAGE CONTENTS

Your package contains two GMR1558-2CK radios, two rechargeable NiMH battery packs (#BP38), two AC adapters (#AD-1004), two charging cradles (#RC1041), two belt clips and this reference guide. You can operate the unit using the rechargeable NiMH battery pack or 4 AAA alkaline batteries (not included).


To order the following optional accessories, visit our web site @www.uniden.com or call 1-800-554-3988, Mon-Fri, 8 a.m. to 5 p.m. CST. Use only Uniden accessories.

- NiMH Battery Pack - #BP38
- Charging Cradle - #RC1041
- Headset - #HS910/HS915
- AC Adapter - #AD-1004
- DC Adapter - #DC-1002



*Range may vary depending on environmental and/or topographical conditions.

GMR1558-2CK RADIO

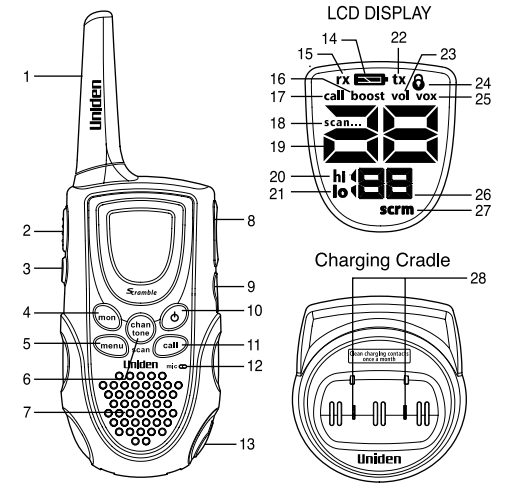

- | | |
|-----------------------------|-----------------------------|
| 1 Antenna | 15 Receive Indicator |
| 2 PTT (Push-To-Talk) Button | 16 boost Indicator |
| 3 Power Boost Button | 17 Call Indicator |
| 4 Monitor Key | 18 Scan Indicator |
| 5 Menu Key | 19 Channel Indicator |
| 6 Channel Tone/Scan Key | 20 Hi Power Indicator |
| 7 Speaker | 21 Low Power Indicator |
| 8 Up/Down Button | 22 Transmit Indicator |
| 9 Headset Jack | 23 Volume Setting Indicator |
| 10 On/Off Key | 24 Keypad Lock Indicator |
| 11 Call Key | 25 VOX Indicator |
| 12 Microphone | 26 Privacy Code Indicator |
| 13 DC IN 9V | 27 Scramble Indicator |
| 14 Battery Level Meter | 28 Charging Contacts |

GMRS LICENSE

The GMR1558-2CK radio operates on the General Mobile Radio Service (GMRS) frequencies when using Channels 1-7 and channels 15-22. You must have a GMRS license issued by the Federal Communications Commission to legally use these channels. For licensing information and application forms, visit the FCC online at: www.fcc.gov/wtb/uls or call the FCC hotline at 1-800-418-3676. If you have any questions, you can contact the FCC direct at 1-888-225-5322. No license is required for operation on channels 8-14 or operation on any channel in Canada.

INSTALL THE BATTERY

Your GMR1558-2CK radio uses a supplied NiMH battery pack or 4 AAA alkaline batteries (not included).

To install the NiMH battery pack:

- 1) Make sure your radio is OFF.
- 2) Remove the battery compartment door by pressing the tab at the bottom of the compartment door, and remove the cover.

- 3) Install the NiMH battery pack into the battery compartment. Be certain to follow the instructions written on the label on the battery pack. Installing the battery pack incorrectly will prevent the unit from operating.
- 4) Replace the battery compartment door.

BATTERY LEVEL AND LOW BATTERY ALERT

This unit has a battery level meter on the display to indicate the status of the batteries. When the battery in the unit is low, the battery level meter icon flashes. Recharge the NiMH battery pack immediately or, if you are using the alkaline batteries, you must replace the alkaline batteries in order to continue using the radio.

Warning! To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden accessories specifically designated for this product.

CHARGING THE RADIO

If you use the rechargeable NiMH battery pack, two GMR1558-2CK radios can be charged directly or by using the supplied charging cradle.

- ### Charge by Using the Radio
- 1) Connect the AC or DC adapter's plug to the radio's DC IN 9V jack and plug the other end into an appropriate power source.
 - 2) Charge the battery pack for 16 hours until the battery indicator stop flashing.

- ### Using the Charging Cradle
- 1) Connect the AC or DC adapter's plug to the radio's DC IN 9V jack and plug the other end into an appropriate power source.
 - 2) Set the charging cradle on the desk or tabletop, and place the radio in the charging cradle with the keypad facing forward.
 - 3) Charge the battery pack for 16 hours until the battery indicator stops flashing. Then remove the radio from the charging cradle after completing charging.

- Note:**
- DC IN 9V Jack of the radio is for charge only. Be sure to install the battery before charging.
 - Use only the supplied battery, AC or DC adapter or approved accessories from Uniden.
 - Charge time may vary depending on the battery life remaining.
 - Do not recharge alkaline batteries. Doing so can create a safety hazard or damage the radio.
 - For fastest charging, turn off the radio before charging.

- Battery must be installed for operation, even from external power.
- If battery Power is low, you cannot operate the radio even using external power. Allow the batteries to charge before using. If you try to transmit while power is low, the radio will automatically turn off.

USING THE RADIO

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit.

- ### Turning the Radio On and Adjusting the Volume
- 1) Press and hold the key to turn the radio ON, and increase the speaker volume by pressing the button. To decrease the volume, press the button.
 - 2) Press and hold the key again to turn the radio OFF.

- ### Adjusting the Sound (Key Beeps)
- Your radio emits a beep each time one of the keys (except for the **PTT** and **Power boost** button and **call** key) is pressed. To turn this sound OFF, press and hold the **call** key while turning ON the radio. Repeat this step to turn the sound ON.

- ### Choosing a Channel
- Your radio has 22 channels and 142 Privacy codes you can use to talk to others. In order to speak to someone, each of you must be set to the same channel and Privacy Code.

- To choose a channel:
- With the radio in "Normal" operating mode press the **chan tone/scan** key and press the or button to increase or decrease the channel number displayed.

Note: Channels 1-7 have a typical range of up to 15 miles by pressing the **Power boost** button. Channels 8-14 have a typical range of up to 5 miles. Channels 15-22 have a typical range of up to 15 miles by pressing the **Power boost** button. You can know which GMRS or FRS channel is active by the icon. **hi** icon is displayed while scanning GMRS channels, and the **lo** icon is displayed while scanning FRS channels.

- ### Choosing a Privacy Code
- Each of the channels 1-22 may have any one of the codes, OFF or 1-142 selected. Code **oF** (OFF) indicates no Privacy Code selected and your radio can receive a signal regardless of the code settings of the transmitting radio.

- 1) Press **chan tone/scan** in channel select mode. The privacy code indicator will flash.
- 2) Press the or button to increase or decrease the code number displayed. You can

- also select **oF** (OFF) at this stage.
- 3) Exit the Menu.

Channel Scan Feature

Your GMR1558-2CK radio has a channel scan feature that allows you to easily scan all 22 channels. When an active channel is detected, the radio pauses on that channel until the channel is clear. Then after a 2 second delay, the radio continues scanning. Pressing the **PTT** and **Power boost** button while the scan is paused on a channel allows you to transmit on that channel.

- To turn ON channel scan:
- Press and hold the **chan tone/scan** key until the **scan...** icon is displayed. The channel number on the display changes as the radio rapidly cycles through the channels.
- To turn OFF channel scan:
- Press the **call**, **PTT**, **Power boost** or **menu** key, or press and hold the **chan tone/scan** key for 2 seconds.

Talking on Your Radio

To talk to others using the radio:

- 1) Press and hold the **PTT** button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **tx** icon appears on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the **PTT** button before you start talking.
- 2) When you have finished speaking, release the **PTT** button. You can now receive incoming calls. While receiving, the **rx** icon appears on the display.

Note: When you press the **Power boost** button, **boost** and **tx** icon appear on the display. The radio will transmit Maximum power when a GMRS channel is selected. After one minute past when the boost transmission is established, the transmission stops automatically, and you will hear a boost time out error tone.

Warning! The typical range of GMRS channels can be boosted only with NiMH batteries. When the **Power boost** key is pressed while using alkaline batteries, **hi** icon appears instead of boost icon and the range is not boosted.

Monitor Mode Feature

Your GMR1558-2CK radio allows you to listen for weak signals on the current channel at the press of a key.

- To turn ON the Monitor Mode:
- For brief listening, press **mon** button. The **rx** icon blinks.
 - Press and hold **mon** button for 2 seconds until two beeps sound for continuous listening. The


receiver circuit stays open, letting both the noise and weak signals to be heard.

To turn OFF Monitor Mode:

Press **mon** button to return to "Normal" mode, and the **rx** icon stops blinking and disappears.

Navigating through the Menu

To access the advanced features of the GMR1558-2CK, your radio has a Menu function.

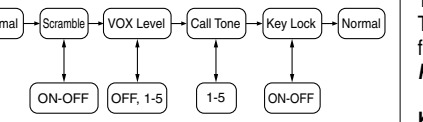

- 1) To enter the Menu, press the **menu** key.
- 2) Additional presses of the **menu** key advances you through the Menu until exiting to "Normal" operating mode.
- 3) Other methods of exiting the Menu function are:
 - a. Press and hold the key again.
 - b. Press the **PTT**, **Power boost**, **mon**, **call** or **chan tone/scan** key.
 - c. Wait 10 seconds until the unit automatically returns to "Normal" mode.

Setting Scramble

Scramble feature allows you to make a private conversation. No one listening to your conversation can understand what you are talking about. Be sure that your party also sets their radio to the scramble feature.

- To set Scramble:
- 1) Enter the Menu.
 - 2) Select on using or button.

Voice Operated Transmission

Your GMR1558-2CK radio is equipped with a user selectable Voice Operated Transmitter (VOX) that can be used for automatic voice transmissions. The VOX feature is designed to be used with a headset with a microphone. Transmission is initiated by speaking into the remote microphone instead of pushing the **PTT** and **Power boost** button.

- To select the VOX level:
- 1) Enter the Menu. Advance through the Menu until the **vox** icon appears on the display. The current level (OFF, 1-5) will be indicated. Level **oF** (OFF) disables VOX, while levels 1-5 set the sensitivity of the VOX circuit.
 - 2) Press either the or button to the desired VOX sensitivity level. Use level 1 for increased sensitivity to voice in normally quiet environments, and use a higher level to reduce undesired activation in very noisy environments.

Transmitting a Call Tone

Your GMR1558-2CK radio is equipped with 5 selectable call tones that are transmitted when the

- call** key is pressed.
- To select a call tone:
- 1) Enter the Menu. Advance through the Menu until the **call** icon is shown on the display. The current call tone number (1-5) is indicated.
 - 2) Press the or button to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.

To transmit the selected call tone, press the **call** key. The selected tone will automatically be transmitted for a fixed length of time. Call Tone will be cancelled when the **PTT** and **Power boost** button is pressed.

- ### Key Lock
- To lock the keypad:
- 1) Enter the Menu. Advance through the Menu until the icon appears on the display. The current Key Lock status **oF** (OFF) blinks on the display.
 - 2) To switch the Key Lock mode from **oF** (OFF) to **on**, press the button.
 - 3) To confirm the setting, press the **menu** key. The radio returns to the "Normal" mode.

Note: If you exit the setting mode before confirming your selection by pressing the **menu** key, the Key Lock setting will be set to **oF** (OFF).

- To unlock the keypad:
- 1) Press and hold the key to turn the radio OFF.
 - 2) Press and hold the key again to turn the radio ON. The keypad is unlocked.

Automatic Power Save Feature

Your GMR1558-2CK radio has a unique circuit designed to dramatically extend the life of the batteries. If there is no transmission nor an incoming call within 3 seconds, your radio switches to the Power Save mode. The radio is still able to receive transmissions in this mode.

LCD Backlight

The LCD Backlight automatically turns ON when any key (except the **PTT** and **Power boost** button) is pressed. The LCD display illuminates for 10 seconds before turning OFF.

Roger Beep

Roger Beep is a BEEP that is sent to notify the end of transmission (PTT, Power boost and VOX transmission). Roger Beep can be heard through the speaker when both Roger beep and Key Beep are set to ON. When Roger beep is set to ON and Key Beep OFF, Roger Beep will not be heard from the speaker but it will be transmitted to your party. When Roger Beep is set to OFF, Roger Beep neither be heard nor transmitted.

- To turn ON Roger Beep:
- Press and hold the button while turning ON the radio.
- To turn OFF Roger Beep:
- Press and hold the button while turning ON the radio.

Please do not send products or other correspondence to this address.

039 Q

Uniden
 PRODUCT REGISTRATION DEPARTMENT
 PO BOX 44486
 DENVER CO 80201-4486
 USA



Uniden

PRODUCT REGISTRATION CARD

Complete the attached registration card and return today to receive these 3 important benefits:

- ▶ **CONFIRM YOUR WARRANTY:**
Your prompt product registration confirms your right to the protection available under the terms and conditions of your Uniden warranty.
- ▶ **PROTECT YOUR PRODUCT:**
We will keep the model number and date of purchase of your new Uniden product on file to help you refer to this information when necessary.
- ▶ **HELP US DEVELOP NEW PRODUCTS:**
We value your input! Your responses will help us bring you new products specifically designed to meet your needs.

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

PLACE
FIRST-CLASS
STAMP
HERE

Please fill-out and return this card within 10 days!



1 First name: Initial: Last name: Address: Apt number: City: State: Zip code:

2 E-mail address: (EXAMPLE: yourname@yourhost.com)

- 1. Yes! I want to receive offers or communications from Uniden via e-mail.
2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail.

3 Date of purchase: Month Day Year

4 Purchase Price: \$.00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase? 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

10 Check the two (2) most important features to you on this Uniden product:

11 How did you first become aware of this product?

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: Month Day Year

15 Including yourself, how many people live in your household? Children (18 and younger) Adults

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here []. PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

SPECIFICATIONS

Channels 15 GMRS/7 FRS
Privacy Code 38 Sub-Audible Tones
Operating Frequency GMRS/FRS: 462.5500 - 467.7125 MHz
Power Source NiMH Battery Pack (BP38) or 4 AAA Alkaline Batteries
Range Channel 1-7 up to 10 miles
Battery Life 12 Hours typ. - NiMH Battery Pack (5/5/90 duty cycle)

Frequency Chart

Table with 4 columns: Ch. Freq., Cross Ref., Ch. Freq., Cross Ref. listing various channels and their frequencies.

CTCSS Chart (Hz)

Table with 4 columns: Code, Freq., Code, Freq. listing CTCSS codes and their corresponding frequencies.

Table with 4 columns: Channels, Privacy Code, Operating Frequency, Power Source, Range, Battery Life.

DCS Code List

Table with 6 columns: Tone No., Octal Code, Tone No., Octal Code, Tone No., Octal Code listing DCS codes.

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage.

RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations.

Body-worn Operation This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging).

is void outside the United States of America and Canada. PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging).

Uniden America Service 4700 Amon Carter Blvd. Fort Worth, TX 76155 (800) 297-1023, 7:00 a.m. to 7:00 p.m. CST, Monday through Friday: 9:00 a.m. to 5:00 p.m. CST, Saturday, Sunday and Holidays (except Thanksgiving and Christmas).

Covered under one or more of the following U.S. patents: 4,684,870 4,734,049 5,203,015 5,214,789 5,491,745 5,497,508 5,517,677 5,557,606 5,574,994 5,610,946 5,613,201 5,625,870 5,627,876 5,628,059 5,634,196 5,634,205 5,678,176 5,697,096 5,717,312 5,722,070 5,787,345 5,901,341 6,021,326 6,084,861 6,163,691 6,195,415 6,353,730 6,839,550



© 2006 Uniden America Corporation All rights reserved Printed in China UTZZ01017ZZ(0)