



Fill-out and return this card within 10 days!



Registration form with fields for name, address, phone, date of purchase, and product details. Includes checkboxes for warranty and return policies.

transmitted when you press c-call in standard mode. To select a call tone: 1) Enter the menu. Advance through the menu until CALL appears. The current call tone number (1-10) flashes. 2) Press ▲ or ▼ to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.

Note: If you exit the setting mode before confirming your selection by pressing menu/Grp, Key Lock is set to OFF. To unlock the keypad: 1) Turn off the radio by rotating vol/off counterclockwise until it clicks. 2) Turn on the radio again by rotating vol/off clockwise until it clicks. The keypad is unlocked, and is transmitted in your location.

When in the Weather Radio Broadcast mode, you can only see the Key Lock from the Menu mode. To lock the keypad: 1) Enter the menu. Advance through the menu until CALL appears. The current call tone number (1-10) flashes. 2) Press ▲ or ▼ to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.

Specifications table with columns: Channels, Operating Frequency, Power Source, Range Channel, Battery Life, Frequency Chart, CTCSS Code (Hz).

DCS Code List table with columns: Tone, Total, Tone, Total, Tone, Total, Tone, Total.

REGULATORY INFORMATION This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

RF EXPOSURE INFORMATION WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States issued an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

ONE YEAR LIMITED WARRANTY Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and workmanship with any limitations or exclusions set out below.

is void outside the United States of America and Canada. PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from its original packaging. Return the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return the Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service 4700 Amer Center Blvd, Fort Worth, TX 76155 (800) 297-1023, 7:00 a.m. to 7:00 p.m. CST. Monday through Friday; 9:00 a.m. to 5:00 p.m. CST. Saturday, Sunday and Holidays (except Thanksgiving and Christmas). Covered under one or more of the following U.S. patents: 4,684,870; 4,734,049; 5,203,015; 5,214,789; 5,491,745; 5,497,508; 5,517,677; 5,557,606; 5,574,954; 5,610,940; 5,610,921; 5,625,070; 5,627,876; 5,628,059; 5,634,195; 5,634,205; 5,678,176; 5,697,096; 5,717,212; 5,722,070; 5,787,345; 5,901,341; 6,051,269; 6,084,861; 6,163,691; 6,185,415; 6,263,720; 6,839,550; 6,860,770

