



general mobile radio service

- 15 GMRS / 7 FRS Channels
- 38 CTCSS Codes
- Up to 7 Mile Range\*
- Internal VOX Circuitry
- 5 Selectable Call Tone Alerts
- Backlit LCD Display
- Optional Headset Accessories
- Headset Jack
- Battery Level Meter
- Channel Monitor
- Channel Scan
- Keypad Lock
- 7 Emergency / Weather Channels
- Emergency / Weather Alert

## GMRS750

Congratulations on your purchase of the Uniden GMRS750 (General Mobile Radio Service) radio. This product is a lightweight, palm-sized radio. Use it at sporting events to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication. This compact, state-of-the-art device is equipped with many features.

### OPTIONAL ACCESSORIES

Your package contains the GMRS750 radio, this reference guide, including a product registration card. You may operate the unit using 4 AA alkaline batteries (included). The following optional accessories may be purchased from your participating Uniden dealer or call 1-800-554-3988 or visit us on the web at [www.uniden.com](http://www.uniden.com). Use only Uniden accessories.

- Headset - #HS2467

### FCC GMRS LICENSE

The GMRS750 radio operates on the General Mobile Radio Service (GMRS) frequencies which require a Federal Communication Commission license to operate. For licensing information and application forms, visit the FCC online at [www.fcc.gov/wtb/uls](http://www.fcc.gov/wtb/uls) or call the FCC hotline at 1-800-418-3676. If you have any questions you can contact the FCC direct at 1-888-225-5322.

### INSTALL THE BATTERIES

Your GMRS750 radio uses 4 AA alkaline batteries. If alkaline batteries are used, we recommend using high quality alkaline batteries.


To install the 4 AA alkaline batteries:

- 1) Make sure your radio is OFF.
- 2) Open the battery compartment door by pressing the ratch on the bottom of the radio. Then, remove the battery holder.
- 3) Pull up the tab on the battery holder to slide the battery compartment cover.
- 4) Install the 4 AA alkaline batteries (included) into the battery compartment. Be certain to follow the + and - symbols in the compartment. Installing the batteries incorrectly will prevent the unit from operating.
- 5) Replace the battery compartment cover.
- 6) Insert the battery holder into the radio until it clicks. Then, replace the battery compartment door.



\* Range may vary depending on environmental and/or topographical conditions.

### GMRS750 RADIO

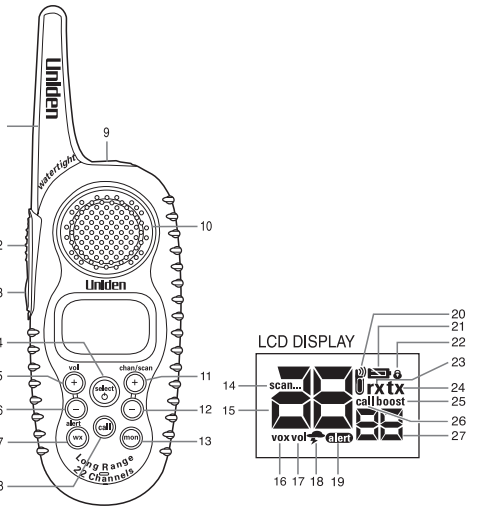

- |                              |                             |
|------------------------------|-----------------------------|
| 1 Antenna                    | 15 Channel Indicator        |
| 2 PTT (Push-To-Talk) Button  | 16 VOX Indicator            |
| 3 Boost Key                  | 17 Volume Setting Indicator |
| 4 Select/⊙ (power) Key       | 18 Weather Indicator        |
| 5 Vol (volume) Up Key        | 19 Weather Alert Indicator  |
| 6 Vol (volume) Down Key      | 20 GMRS/FRS Indicator       |
| 7 WX/Alert Key               | 21 Battery Level Meter      |
| 8 Call Key                   | 22 Keypad Lock Indicator    |
| 9 Headset Jack               | 23 rx (receive) Indicator   |
| 10 Speaker                   | 24 tx (transmit) Indicator  |
| 11 Channel/Scan + (Up) Key   | 25 Boost Indicator          |
| 12 Channel/Scan - (Down) Key | 26 Call Indicator           |
| 13 Mon (monitor) Key         | 27 CTCSS Indicator          |
| 14 Scan Indicator            |                             |

### BATTERY LEVEL AND LOW BATTERY ALERT

This unit has a battery level meter on the display to indicate the status of the batteries. When the batteries in the unit are low, the battery level meter icon will flash. Replace the alkaline batteries immediately.

### USING THE RADIO

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit.

#### Turning the Radio On and Adjusting the Volume

 
- 1) Press and hold the select/⊙ key to turn the unit ON, and increase the speaker volume by pressing the vol + key. To decrease the volume, press the vol - key.
- 2) Press and hold the select/⊙ key again to turn the unit OFF.

#### Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the buttons or keys (except for the **PTT** button and **call** key) are pressed. To turn this sound OFF, press and hold **call** while turning ON the radio. Repeat this step to turn the sound ON.

#### Navigating through the Menu

To access the advanced features of the GMRS750, your radio has a Menu function.



- 1) To enter the Menu, press the select/⊙ key.
- 2) Additional presses of the select/⊙ key will advance you through the Menu until exiting to "Normal" operating mode.
- 3) Other methods of exiting the Menu function are:
  - a. Press and hold the select/⊙ key again.
  - b. Press **PTT**, **boost**, **mon**, **vol +/-**, **call**, and **call**.
  - c. Wait 10 seconds until the unit automatically returns to "Normal" mode.

**Note:** Only the Key Lock menu is available when it is in the WX mode.

#### Choosing a Channel

Your radio has 22 channels and 38 CTCSS codes you can use to talk to others. In order to speak to someone, each of you must be set to the same channel and CTCSS code.

To choose a channel:

With the radio in "Normal" operating mode press the **chan/scan +** or - key to increase or decrease the channel number displayed.

**Note:** FRS Channels 8-14 have an expectancy range of up to 2 miles. GMRS channels 1-7, 15-22 have an expectancy range of up to 5 miles.

#### Choosing a CTCSS Code

Each of the channels 1-22 may have any one of the codes, OFF or 1-38 selected. Code "OFF" indicates no CTCSS code selected and your radio can receive a signal regardless of the code settings of the transmitting radio.

- 1) Enter the Menu. The CTCSS code on the LCD display will flash.
- 2) Press the **chan/scan +** or - key to increase or decrease the code number displayed. You can also select "OFF" at this stage.
- 3) Exit the Menu to return to "Normal" mode.

#### Talking on Your Radio

To talk to others using the radio:

- 1) Press and hold the **PTT** button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **tx** icon will appear on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the **PTT** button before you start talking.
- 2) When you are finished speaking, release the **PTT** button. You can now receive incoming calls. While receiving, the **rx** icon will appear on the display.

**Note:** When you press the **boost** key, **boost** and **TX** appear on the display. The radio will transmit Maximum Power when a GMRS channel is selected. When one minute past after the boost transmission is established, the transmission stops automatically, and you will hear a boost time out error tone.

#### Voice Operated Transmission

Your GMRS750 radio is equipped with a user selectable Voice Operated Transmitter (VOX) that can be used for automatic voice transmissions.

The VOX feature is designed to be used with a headset with a microphone. Transmission is initiated by speaking into the remote microphone instead of pushing the **PTT** button.

To select the VOX level:

- 1) Enter the Menu. Advance through the Menu until the **vox** icon appears on the display. The current level (off, 1-3) will be indicated. Level **OFF** disables VOX, while levels **1-3** set the sensitivity of the VOX circuit.
- 2) Press either the **chan/scan +** or - key to the desired VOX sensitivity level. Use level 1 for increased sensitivity to voice in normally quiet environments, and use a higher level to reduce undesired activation in very noisy environments.
- 3) Exit the Menu.

#### Transmitting a Call Tone

Your GMRS750 radio is equipped with 5 selectable call tones that will be transmitted when the **call** key is pressed.

To select a call tone:

- 1) Enter the Menu. Advance through the Menu until the **call** icon is shown on the display. The current call tone number ( **1-5** ) will be indicated.
- 2) Press the **chan/scan +** or - key to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.
- 3) Exit the Menu.

To transmit the selected call tone, press the **call** key. The selected tone will automatically be transmitted for a fixed length of time.

#### Channel Scan Feature

Your GMRS750 radio has a channel Scan feature that allows you to easily Scan all 22 channels. When an active channel is detected, the unit will pause on that channel until the channel is clear. Then after a 2 second delay, the unit will continue scanning. Pressing the **PTT** button or the **boost** key while the Scan is paused on a channel will allow you to transmit on that channel.

To turn ON channel scanning:

Press and hold either the **chan/scan +** or - key until the **scan** icon is displayed. The channel number on the display will change as the radio rapidly cycles through the channels.

To turn OFF channel scanning:

Press the select/⊙, **call**, or **boost** key, or **PTT** button.

Please do not send products or other correspondence to this address.

039 Q

PLACE  
FIRST-CLASS  
STAMP  
HERE

**Uniden®**  
PRODUCT REGISTRATION DEPARTMENT  
PO BOX 44486  
DENVER CO 80201-4486  
USA



## PRODUCT REGISTRATION CARD

Complete the attached registration card and return today to receive these 3 important benefits:

- **CONFIRM YOUR WARRANTY:** Your prompt product registration confirms your right to the protection available under the terms and conditions of your Uniden warranty.
- **PROTECT YOUR PRODUCT:** We will keep the model number and date of purchase of your new Uniden product on file to help you refer to this information when necessary.
- **HELP US DEVELOP NEW PRODUCTS:** We value your input! Your responses will help us bring you new products specifically designed to meet your needs.

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

Please fill-out and return this card within 10 days!



1 First name: \_\_\_\_\_ Initial: \_\_\_\_\_ Last name: \_\_\_\_\_  
 Address: (number and street) \_\_\_\_\_ Apt number: \_\_\_\_\_  
 City: \_\_\_\_\_ State: \_\_\_\_\_ Zip code: \_\_\_\_\_

2 E-mail address: (EXAMPLE: yourname@yourhost.com) \_\_\_\_\_

1.  Yes! I want to receive offers or communications from Uniden via e-mail.  
 2.  Yes! I want to receive offers or communications that may interest me from other companies via e-mail. I understand this e-mail address may be shared with and/or combined with information from other sources.

3 Date of purchase: \_\_\_\_\_  
 Month Day Year

4 Purchase Price: \$ \_\_\_\_\_ .00 (excluding tax)

5 Serial Number: (Located on the back of each unit) \_\_\_\_\_

6 Model Number: (Example: GMRS540-2, WX500) \_\_\_\_\_

7 Which Uniden product did you purchase?  
 1.  FRS/GMRS Radio 2.  Weather Radio

8 Store Name: \_\_\_\_\_

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

- |   |  |
|---|--|
| 1. <input type="checkbox"/> Uniden reputation   | 6. <input type="checkbox"/> Style/appearance   |
| 2. <input type="checkbox"/> Previous experience | 7. <input type="checkbox"/> Warranty           |
| 3. <input type="checkbox"/> Features            | 8. <input type="checkbox"/> Received as a gift |
| 4. <input type="checkbox"/> Value for price     | 9. <input type="checkbox"/> Other _____        |
| 5. <input type="checkbox"/> Quality/durability  |  |

10 Check the two (2) most important features to you on this Uniden product:

- |  |   |
|--|---|
| 1. <input type="checkbox"/> Range              | 6. <input type="checkbox"/> Color         |
| 2. <input type="checkbox"/> Low battery alert  | 7. <input type="checkbox"/> Design        |
| 3. <input type="checkbox"/> Clarity            | 8. <input type="checkbox"/> Channel scan  |
| 4. <input type="checkbox"/> Number of channels | 9. <input type="checkbox"/> LCD backlight |
| 5. <input type="checkbox"/> Auto squelch       |   |

11 How did you first become aware of this product?

- |   |   |
|---|---|
| 1. <input type="checkbox"/> Previous Use        | 7. <input type="checkbox"/> Recommendation of Salesperson   |
| 2. <input type="checkbox"/> Comparison Shopping | 8. <input type="checkbox"/> Recommendation of Friend/Family |
| 3. <input type="checkbox"/> In-Store Display    | 9. <input type="checkbox"/> Direct Mail                     |
| 4. <input type="checkbox"/> Newspaper Ad        |   |
| 5. <input type="checkbox"/> Magazine Ad         |   |
| 6. <input type="checkbox"/> TV Ad               |   |

12 Your gender: 1.  Male 2.  Female

13 Your marital status: 1.  Married 2.  Single

14 Date of your birth: \_\_\_\_\_  
 Month Day Year

15 Including yourself, how many people live in your household?  
 (Examples: 01, 02, etc.) Children (18 and younger) \_\_\_\_\_ Adults \_\_\_\_\_

16 Date of birth of children in your household 18 years of age and younger:

Child #	Gender		Birth Date	
	Male	Female	Month	Year
Child #1	<input type="checkbox"/>	<input type="checkbox"/>	____	____
Child #2	<input type="checkbox"/>	<input type="checkbox"/>	____	____

17 For your primary residence, do you:  
 1.  Own 2.  Rent

18 Education: (Please check which category applies to you):

- |   |   |
|---|---|
| 1. <input type="checkbox"/> Some high school      | 3. <input type="checkbox"/> College degree  |
| 2. <input type="checkbox"/> Completed high school | 4. <input type="checkbox"/> Graduate degree |

19 I/we buy these things through the mail, over the Internet, or from television:

	A. Mail	B. Internet	C. TV
1. Books/magazines	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2. Checks (not from a bank)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3. Children's products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4. Clothing	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5. Computer products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6. Cosmetics/jewelry	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7. Crafts/hobbies	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8. Gardening supplies	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9. Gifts	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10. Housewares/furnishings	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11. Insurance/financial products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12. Music/video/DVD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13. Sports equipment	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14. Travel	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15. Other	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

20 I/we have these credit cards:

- |  |   |
|--|---|
| 1. <input type="checkbox"/> American Express/Diners Club | 4. <input type="checkbox"/> Visa/MasterCard |
| 2. <input type="checkbox"/> Discover                     | 5. <input type="checkbox"/> Other           |
| 3. <input type="checkbox"/> Retail/Gas                   | 6. <input type="checkbox"/> None            |

21 Someone in my home enjoys:

- |   |   |
|---|---|
| 1. <input type="checkbox"/> Astrology               | 21. <input type="checkbox"/> Gourmet food/cooking   |
| 2. <input type="checkbox"/> Auto racing             | 22. <input type="checkbox"/> Grandchildren          |
| 3. <input type="checkbox"/> Automotive work         | 23. <input type="checkbox"/> Home decorating        |
| 4. <input type="checkbox"/> Books                   | 24. <input type="checkbox"/> Hunting/shooting       |
| 5. <input type="checkbox"/> Camping/hiking          | 25. <input type="checkbox"/> Investing              |
| 6. <input type="checkbox"/> Casino gambling         | 26. <input type="checkbox"/> Lottery/sweepstakes    |
| 7. <input type="checkbox"/> Cigars                  | 27. <input type="checkbox"/> Pets-cats              |
| 8. <input type="checkbox"/> Collecting              | 28. <input type="checkbox"/> Pets-dogs              |
| 9. <input type="checkbox"/> Computers/Internet      | 29. <input type="checkbox"/> Pets-other             |
| 10. <input type="checkbox"/> Cooking/recipes        | 30. <input type="checkbox"/> Photography            |
| 11. <input type="checkbox"/> Crafts/needlework      | 31. <input type="checkbox"/> Play sports            |
| 12. <input type="checkbox"/> Cultural art/events    | 32. <input type="checkbox"/> Self improvement       |
| 13. <input type="checkbox"/> Cycling                | 33. <input type="checkbox"/> Skiing/snowboarding    |
| 14. <input type="checkbox"/> Dieting/weight control | 34. <input type="checkbox"/> Travel-Foreign         |
| 15. <input type="checkbox"/> Do-it-yourself         | 35. <input type="checkbox"/> Travel-U.S.            |
| 16. <input type="checkbox"/> Donating to charity    | 36. <input type="checkbox"/> Vacation cruises       |
| 17. <input type="checkbox"/> Fishing                | 37. <input type="checkbox"/> Vitamins/natural foods |
| 18. <input type="checkbox"/> Fitness/exercise       | 38. <input type="checkbox"/> Wines                  |
| 19. <input type="checkbox"/> Gardening              | 39. <input type="checkbox"/> Woodworking            |
| 20. <input type="checkbox"/> Golf                   | 40. <input type="checkbox"/> Worship/Bible          |

**USING THE WEATHER RADIO**

Your GMRS750 radio can receive weather broadcasts from the NOAA National Weather Service. When in the Weather Radio Alert mode, the system functions as it does in GMRS mode but also monitors the selected weather channel for alerts while you are not transmitting. While using the Weather Radio, you are not able to receive GMRS communications.

- 1) To turn ON the Weather Radio Broadcast mode, press the **wx/alert** key. The weather icon appears on the display.
- 2) Press **chan/scan + or -** to increase or decrease the number to the desired Weather Channel.
- 3) To exit, press the **wx/alert** key. The weather icon disappears from the display.

**Choosing an Emergency/Weather Channel**

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada. You will need to know what frequency is being transmitted in your location.

- 1) Press and hold the **wx/alert** key, the **aler** icon appears on the display.
- 2) When the unit receives a warning signal, it beeps for 5 seconds. The weather icon, **aler** icon and channel indicator blinks.
- 3) To turn OFF Weather Alert, press and hold the **wx/alert** key, the **aler** icon disappears from the display.

- When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 6 seconds and switches to the warning receive mode automatically.

**NOAA Weather Radio Frequency List**

Channel 1 162.550 MHz	Channel 5 162.450 MHz
Channel 2 162.400 MHz	Channel 6 162.500 MHz
Channel 3 162.475 MHz	Channel 7 162.525 MHz
Channel 4 162.425 MHz	

**SPECIFICATIONS**

Channels	15 GMRS / 7 FRS
CTCSS Codes	38 Sub-Audible Tones
Operating Frequency	UHF 462.5500-467.7125 MHz
Power Source	4 AA Alkaline Batteries
Range	Channels 8-14 up to 2 miles Channels 1-7, 15-22 miles Up to 7 miles (at boost mode)
Battery Life	18 Hours typ. - Alkaline Batteries (5/5/90 duty cycle)

**Frequency Chart**

Ch.	Freq.	Cross Ref.	Ch.	Freq.	Cross Ref.
1	462.5625	FRS & GMRS 1	12	467.6625	FRS 12
2	462.5875	FRS & GMRS 2	13	467.6875	FRS 13
3	462.6125	FRS & GMRS 3	14	467.7125	FRS 14
4	462.6375	FRS & GMRS 4	15	462.5500	GMRS 11
5	462.6625	FRS & GMRS 5	16	462.5750	GMRS 8
6	462.6875	FRS & GMRS 6	17	462.6000	GMRS 12
7	462.7125	FRS & GMRS 7	18	462.6250	GMRS 9
8	467.5625	FRS 8	19	462.6500	GMRS 13
9	467.5875	FRS 9	20	462.6750	GMRS 10
10	467.6125	FRS 10	21	462.7000	GMRS 14
11	467.6375	FRS 11	22	462.7250	GMRS 15

**CTCSS Chart (Hz)**

Code	Freq.	Code	Freq.
oF	OFF	20	131.8
1	67.0	21	136.5
2	71.9	22	141.3
3	74.4	23	146.2
4	77.0	24	151.4
5	79.7	25	156.7
6	82.5	26	162.2
7	85.4	27	167.9
8	88.5	28	173.8
9	91.5	29	179.9
10	94.8	30	186.2
11	97.4	31	192.8
12	100.0	32	203.5
13	103.5	33	210.7
14	107.2	34	218.1
15	110.9	35	225.7
16	114.8	36	233.6
17	118.8	37	241.8
18	123.0	38	250.3
19	127.3		

**FCC INFORMATION**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference.  
 (2) This device must accept any interference received, including interference that may cause undesired operation.  
**Important:** Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by qualified technicians.

- To be safe and sure:**
- Never open your radio's case.
  - Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio.

**Hazardous Environments:** Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

**Care and Safety:** To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately.

Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

**FCC RF EXPOSURE INFORMATION**

**WARNING!** Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

**WARNING!** It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

- Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations. Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

**Body-worn Operation**

This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip.

For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at [www.fcc.gov](http://www.fcc.gov).

**ONE YEAR LIMITED WARRANTY**

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is:

- (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor:

Uniden America Corporation  
 Parts and Service Division  
 4700 Amon Carter Blvd., Fort Worth, TX 76155  
 (800) 297-1023, 8 a.m. to 5 p.m. Central,  
 Monday through Friday  
[www.uniden.com](http://www.uniden.com)

Covered under one or more of the following U.S. patents:

4,684,870	4,734,049	5,203,015	5,214,789
5,491,745	5,497,508	5,517,677	5,557,606
5,574,994	5,610,946	5,613,201	5,625,870
5,627,876	5,628,059	5,634,196	5,634,205
5,678,176	5,697,096	5,717,312	5,722,070
5,787,345	5,901,341	6,021,326	6,084,861
6,163,691	6,195,415	6,353,730	



© 2003 Uniden America Corporation  
 All rights reserved  
 Printed in China  
 UTZZ01896ZZ

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here [ ].

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.