

Start Here!

Set-Up Guide

DXAI5588-2

Step 1 Check the Package Contents

Make sure your cordless phone's packaging includes the following items.



 
Base



2-Handsets



2-Belt Clips



2-AC adapters



2-Rechargeable batteries



Telephone cord



Charger


Also included:

- This set-up guide
- Owner's manual
- Other printed material


Step 2 Install Handset Battery Pack

Note Use ONLY the Uniden rechargeable battery pack supplied with your new phone!


- 1 Remove the cover.

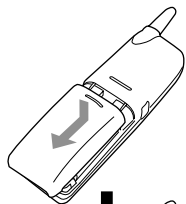


- 2 Connect the battery pack with the correct polarity.

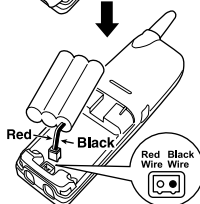


- 3 Replace the cover.

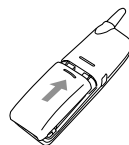

Step 3 Set up the Base

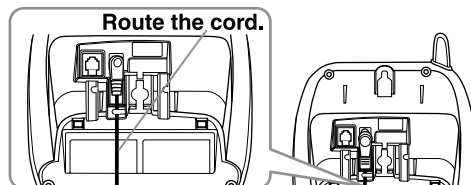

 - 1 Plug the AC adapter cord to the **DC IN 9V** jack (yellow).




- 2 Plug the AC adapter to a 120V AC power outlet.

Note Use ONLY the Uniden AC adapter supplied with your new phone!

Step 4 Charge the Handset

Place the handset in the base or charger.

Make sure that charge LED illuminates.

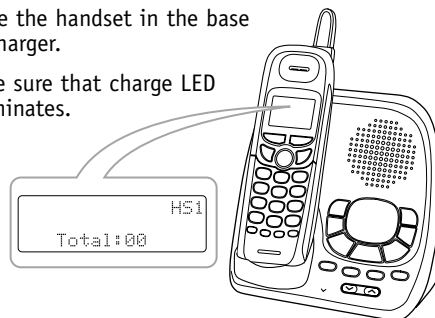


Charge the handset 15-20 hours.

Fully charge the battery pack by placing the handset in the base or charger before using phone.

Step 5 Connect to the Phone Line

 - 1 Plug one end of the telephone cord into the base **TEL LINE** jack.



- 2 Plug the other end into the telephone wall jack.

Step 6 Make & Receive Calls


To Make a Call

- 1 Press **talk/flash**.
- 2 Listen for dial tone.
- 3 Dial the desired number.




To Receive a Call

Pick up the handset and press **talk/flash**.

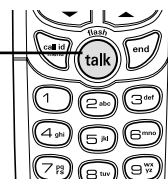

To Hang Up a Call

Press **end** or return the handset to the base or charger.

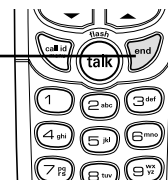

Additional Features

For more information on these and other features, please refer to your Owner's Manual. For your convenience, listed below are important features that will help you set up your new cordless phone.

Handset/Base Set up:

- Set the time → P.34
- Adjust the Earpiece and Speaker Volume → P.20, 41
- Set the Ringer Volume → P.17, 40
- Set Tone/Pulse Dialing → P.16

Caller ID:

Set Caller ID on Call Waiting (CIDCW) → P.15

Note: You must subscribe to Caller ID services through your local telephone provider to use Caller ID and CIDCW.

Answering System:

- Turn the Answering System On or Off → P.41
- Record a Personal Greeting → P.39
- Select the Pre-recorded message or Personal Greeting → P.40

Refer to your Owner's Manual for detailed operations.

For answers to questions and to order genuine Uniden parts and accessories 24 hours a day visit our website at www.uniden.com. If you have any problems, you can also call our Customer Hotline at 1-800-297-1023, Mon-Fri 7 a.m. to 7 p.m., Sat/Sun 9 a.m. to 5 p.m. CST. (Phone support is closed on holidays.)

Printed in China

UCZZ69011BZ

www.uniden.com

A World Without Wires

Uniden®