UMX Mobile Phone

Quick Start Guide

MXW2

MXW2

Quick Start Guide

Contents

| Welcome1 | 9. Email |
|-----------------------------------|------------------------------|
| 1. What's in the package 1 | 10. Sending an email message |
| 2. Getting to know your phone1 | 11. Wi-Fi |
| 3. Before you turn on your phone2 | 12. Play store |
| 4. Getting Started | |
| 5. Keep in contact | |
| 6. Send a message5 | |
| 7. Make your first call 5 | |
| 8. Capture your big moment5 | |

Congratulations on the purchasing of your

new Android phone!



This Quick Start Guide is to welcome and familiarize you with the features of this phone.

1. What's in the package

- Mobile device
- Battery
- USB cable
- · Travel adapter (charger)
- · Quick Start Guide

2. Getting to know your phone



1

3. Before you turn on your phone

Inserting the battery

- With your thumb or finger, open the back cover from the notch at the left of your phone.
- Take the battery out from battery bag and gently push the battery into place.





Charging the battery

- 1. Plug the micro-USB end of the data cable into the jack.
- Plug the other end of the data cable into the Travel Adapter (charger).



Inserting the microSD card - Opitional

- Remove the battery cover
- Position the microSD card into the slot above the battery facing up and slide it into place until it is fully inserted









4. Getting Started

Turning your device on and off

- To turn your device on, press and hold the power button for three seconds.
- To turn your device off, press and hold the power button for three seconds. Tap "power off" > "ok" to power off.

Activating your phone

- 1. Insert battery
- 2. Turn on your new phone
- Follow the activation material provided in your package

NOTE: Don't press ____ while the phone is being activated.

Using the touch screen

Control your touch screen with the following actions:

- \cdot Tap: Tap on an icon once with your finger to select or launch a menu, application, or option
- Tap and hold: Tap an item and hold it for more than one second to open a pop-up option list.
- Scroll: Tap and drag your finger up, down, left, or right to move through items on lists/screens
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item up or down
- Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages

Personalizing your home screen

To make your home screen look just the way you want, choose from a selection of scenes and layouts, or create a custom scene or layout of your own. You can also pick

different wallpaper or shortcuts.

Tap and hold an empty spot on one of the home screens to change the wallpaper.

Locking and unlocking the screen

- · You can lock the touch screen and keys to prevent accidental calls
- 1. To lock, press power button.
- To unlock, turn on the screen by pressing power button, and then flick the grey window with your finger.
- 3. Set an unlock pattern
- From home screen, tap setting

 The leasting and sequifical sections
- Tap location and security ->screen lock->pattern to set up by moving your finger along the screen in one movement.

Setting the ringtone and volume

- To change the phone ringtone, from the home screen.
- 1. Tap "setting"->"Audio profiles"->"General".
- 2. Tap the icon
- 3. Tap the ringtone or volumes you want to use

from the list

NOTE: Adjust the volume to your desired level by pressing

the volume up or down button on the left side of your phone.

The ringer and media volume can be adjusted separately. Adjusting the media volume changes the volume level of sound notifications, music, or video playback.

5. Keep in contact

Using your phone's icons, it's simple to manage your contacts via phone, messaging, and email.

From the Home screen, tap People. Or tap Apps >

Adding a new contact

- People.

 2. Tap.
- If you have more than one account, select an
 account then enter the information for the contact.
 - Tap > select Take photo or Select photo from

Gallery.

- To add a picture (optional).
- · Enter your contact's information.
- 4. Tap Done

6. Send a message

- 2. Tap Create New message.
- 3. Enter the phone number in the To field. Fill in one or more recipients. You can enter the first few letters of a contact name or phone number. Matching contacts are displayed. Continue typing or tap a name or phone number from the search results.
 - Tap Select message recipients from your contact list >Ok.
- 4. Tap Type message >enter your message.
- Tap ≥to Send.
 - Tap Back to save the message as a draft.

7. Make your first call

- 1. From the Home screen, tap Phone. Or tap Phone.
- 2. Tap the number you want to dial.
 - If you make a mistake, tap to erase a single character. Tap and hold to erase the entire string.
- The Calling screen is shown and ppears in the
 - Status bar while the call is active.

 To change the volume during a call, press
- Volume up / Volume down.
 4. To end the call, tap End Call.

8. Capture your big moment

Use your phone's camera to take photos and videos.

- 1. From the Home screen, tap Or tap Apps >
- 2. Frame your subject on screen.
- · Tap. The picture you just took is briefly previewed

full-screen, and then is displayed as a thumbnail at the bottom right. Tap the thumbnail to view, share, or work with your pictures in Gallery. The camera files will be saved in the internal memory.

When you're in Camera mode, tap to choose change to camcorder.

9. Email

Check and send email messages directly from your phone. If you have already signed up your Gmail account when you first set up your phone, you'll be able to send and receive Gmail messages from the home screen, by tapping the ™icon.

Adding your email accounts

- From the Home screen, tap Apps > Email.
- Enter the Email address and Password for your email account >Next

10. Sending an email message

- 1. From the Home screen, tap Email. Or tap EMApps >
- Tap I to create new Email.
- Enter a name or email address in the To field. If you are sending the mail to several recipients, separate the email addresses with a comma ",".
 - As you enter text, matching addresses are suggested from your Contacts list.
 - Tap menu >Add Cc/Bcc to add additional recipient field types.
- 4. Enter a Subject and type your message.
 - To attach an image file, tap attach>select the picture you want to attach.
 - NOTE: The attachable file size is limited to 5 MB.

5. Tap Send.

- To save an unsent email message on your phone, tap
 Save as draft.
- To cancel an email message, tap Discard.

11. Wi-Fi

- 1. From the Home screen, tap Settings -> WiFi. Or tap Apps > Wi-Fi.
- 2. Tap icon
- 3. Select the Wi-Fi check box to turn Wi-Fi on.
- The network names and security settings of detected Wi-Fi networks are displayed.
- 5. Tap a Wi-Fi network to connect.
- If you selected a network that is secured, enter the security key and then tap Connect. Depending on the network type and security settings, you may also need to enter more information or choose a security certificate.

12. Play store

You can browse and sort applications by category.

1. From the Home screen, tap ■ Apps > Play Store.

- Tap GAMES, BOOKS & REFERENCE, BUSINESS or COMICS. etc.
 - Scroll to view subcategories and tap one to explore.
- 3. Tap the subcategory you want.
 - If you selected paid apps, you'll be redirected to the Google Checkout screen.

FCC Regulations:

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTF-

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

7

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the senaration between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.
SAR information Statement

Your wireless mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The consumer troows as the Specific Manufacture for the consumer troows as the Specific Manufacture for SAR limit set by the FCC is 1.6 W/Mg.* Tests for SAR are concluded with the mobile phone transmitting at its highest certified power level will tested frequency bands. Although the SAR is determined at the

highest certified power level, the actual SAR level of the mobile phone while operating can be well below the maximum value. This is because the mobile phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a mobile phone model is available for sale to the public, it must be tested and certified to the ECC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the ECC for each model. The highest SAR value for this model mobile phone when tested for use at the ear is 0.653W/Kg and when worn on the body, as described in this user guide, is 0.656W/Kg (Body-worn measurements differ among mobile phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.998W/Kg. While there may be differences between the SAR levels of various mobile phone and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model mobile phone with all reported SAR levels evaluated as in compliance with the ECC RE exposure guidelines. SAR information on this model mobile phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/_oet/fccid_after searching on

FCC ID: P46-MXW2 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications industry Asso-clation (CTA) web-site at http://www.wow-com.com.* in the United States and Canada, the SAR limit for mobile phone used by the public is 1.6watts/lg (W/kg) averaged over one gram of tissue. The standard incorporates as ub-stantial margin of safety to give. additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

HEARING AID COMPATIBILITY HAC FOR WIRELESS TELECOMMUNICATIONS DEVICES THIS PHONE HAS A HAC RATING OF M4/T3 WHAT IS HEARING AID COMPATIBILITY?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANS) standard C63.19. There are two sets of ANSI standards with ratings from one to four (four being the best rating): an "M" rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a "T" rating that enables the phone to be used with hearing aids operating in the telecoil mode thus reducing unwanted background noise.

HOW WILL I KNOW WHICH WIRELESS PHONES ARE HEARING AID COMPATIBLE?

The Hearing Aid Compatibility rating is displayed on the wireless phone box. A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an "M3" or "M4" rating. A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (telecoll mode) if it has a "T3" or "T4" rating.

HOW WILL I KNOW IF MY HEARING AID WILL WORK WITH A PARTICULAR DIGITAL WIRELESS PHONE?

You'll want to try a number of wireless phones so that you can

decide which works the best with your hearing alds. You may also want to talk with your hearing aid professional about the extent to which your hearing aids are immune to interference, if they have wireless phone shielding, and whether your hearing aid has a HAC rating. For this phone model number MXW2 is rated MA/TA.

SAFFTY & PRECAUTION

You should only use Manufacturer Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your smartphone null and void. The use of an unspecified type of battery may also cause an explosion. Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine manufacturer replacement parts.

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate
- . Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat (>60° C or 140° F), moisture or caustic environments.

