




**DC750 Universal Remote Control**

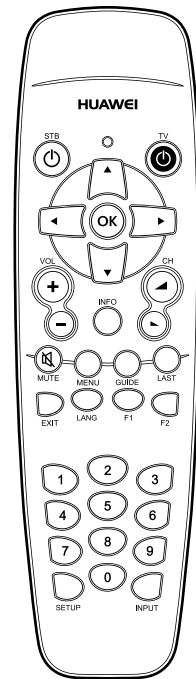

**OVERVIEW**

The DC750 universal remote is designed to work with the Digital Transport Adapter (Digital Adapter) supplied by your Cable Provider. This remote is designed to operate all of the features and functions of the Digital Adapter and is programmable to operate the Volume and Power of your TV.

The remote control requires installing two (2) new AAA batteries (included) and simple programming instructions to control your TV. For best results, please read and perform all instructions listed here. Also, keep this guide for future reference.

**INSTALLING BATTERIES**

1. Pull back the remote control's battery cover and remove it.
2. Insert the two (2) supplied AAA batteries according to the + and - marks in the battery case.
3. Push the battery cover back into place.
4. Test the unit by pressing the power key.

If batteries are inserted correctly, the Red Light will blink.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries within 15 minutes and the unit will be restored to its full functionality.

**FEATURES AND FUNCTIONS**

Use the remote control's keys to perform actions described below (see the following key chart).

- TV**  
When a valid TV code is programmed the **POWER** key will turn on or off the TV.
- SETUP**  
Use **SETUP** for all programming sequences.
- INFO**  
Use **INFO** to display current channel information.
- Use the keypad (0 ~ 9) to directly select the channels (e.g., 09 or 031).**
- LAST**  
Use **LAST** to recall the last channel.
- LANG**  
Use **LANG** to switch between different languages and audio options, when available on the Digital Adapter.
- CH+ (or CH-)**  
Use **CH+** (or **CH-**) to select the next higher (or lower) channel.
- VOL+ (or VOL-)**  
Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume on the Digital Adapter. When a valid TV code is programmed these keys will operate the TV's volume control.
- MUTE**  
Press **MUTE** once to turn sound off or on.

**PROGRAMMING TV CONTROL**

The DC750 remote control is pre-programmed at the factory to operate the Digital Adapter. The DC750 remote also contains a universal TV library to allow you to control the Power and Volume of your TV.

1. Turn on the TV  
  
NOTE: Please read steps 2 to 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.
2. Press and hold **SETUP** until the **Red Light** blinks twice, then release **SETUP**.
3. Locate the code for your device in Manufacturer's Codes on the back of this user guide. Brands are listed in alphabetical order with the most popular codes listed first.
4. Enter the first four-digit code for your TV. If you perform this procedure correctly, the **Red Light** will blink twice.  
  
NOTE: If you enter an invalid code, the red light will display one long blink and exit the programming mode. Repeat steps 2 to 5 with a valid code.

5. Aim the remote control at your TV and press **Power** once. The device should turn off. If it does not respond, repeat steps 2 to 4, trying each code listed for your brand until you find one that works. If it still does not work, try Searching For Your Code.

6. For future reference, write your TV code below:  
  
**TV Code:**  
□ □ □ □

**SEARCHING FOR YOUR CODE**

If your brand of TV does not respond to the remote control after trying all of the codes listed, or if your brand is not listed at all, try searching for your code.

1. Turn on your TV.
2. Press and hold **SETUP** until the **Red Light** blinks twice, then release **SETUP**.
3. Enter in **9 - 9 - 1**. The **Red Light** will blink twice.
4. While pointing the remote control at the TV and press and release the **Power** key until the TV turns off. (Note: You may need to press **Power** numerous times).

NOTE: In the search mode, the remote control will send IR codes from its library to the TV.

5. Press **SETUP** once to lock in the code. The **Red Light** will blink twice.

**CHECKING THE CODES**

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which five-digit code is operating your TV. Perform the following steps after setting up your TV to find out which five-digit code operates your TV.

1. Press and hold **SETUP** until the **Red Light** blinks twice, then release **SETUP**.
2. Enter in **9 - 9 - 0**. The **Red Light** will blink twice.
3. To view the code for the first digit, press **1** once. Wait 3 seconds and count the number of times the **Red Light** blinks (e.g., 3 blinks = 3) and write down the number in the left most TV Code box (at end of this section).  
  
NOTE: If a code digit is "0" the red light will not blink.
4. Repeat step 3 four more times for the remaining digits. Use **2** for the second digit, **3** for the third digit, **4** for the fourth digit. Finish writing down the code in the TV Code boxes (at end of this section).

**TV Code:**  
□ □ □ □

**CHANGING VOLUME LOCK**

The DC750 remote is set to control the volume level of the Digital Adapter. Once a valid TV code is programmed the volume keys will operate the volume of the TV.

However, you may change the Volume Lock setting to regain volume control of the Digital Adapter as follows:

**Changing volume Lock from TV to the Digital Adapter :**

1. Press and hold **SETUP** until the **Red Light** blinks twice, then release **SETUP**.
2. Enter in **9 - 9 - 3** (The **Red Light** will blink twice after the 3).
3. Press and release the digit **1** (The **Red Light** will blink 4 times after the 1).

**Changing volume Lock from Digital Adapter to the TV:**

1. Press and hold **SETUP** until the **Red Light** blinks twice, then release **SETUP**.
2. Enter in **9 - 9 - 3** (The **Red Light** will blink twice after the 3).  
  
Note: If a valid TV code is not programmed the **Red Light** will display one long blink.
3. Press and release the digit **2** (The **Red Light** will blink 2 times after the 2).

**METHOD OF PAIRING**

1. Press Setup key until the LED indicator blinks twice.
2. Press Info key until 3 random digits are displayed on TV screen, the LED indicator turns on.
3. Enter the 3 random digits numeric displayed on TV screen to pair the remote control with target STB. When each digit key has been pressed and released, the LED indicator acts a reverse blink.
4. The LED indicator will blink twice once the remote control has been paired with the target successfully. Otherwise if pairing is unsuccessful, the LED indicator will blink 5 times and the remote control returns to user mode.

**COMPLIANCE WITH FCC RULES AND REGULATIONS**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged or try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

**TROUBLES SHOOTING**

- PROBLEM:** During programming, the Red Light displays one long blink.  
**SOLUTION:** An invalid entry has occurred. Check the key to be entered and try programming again.
- PROBLEM:** The Red Light blinks when you press a key, but Digital Adapter and TV do not respond.  
**SOLUTION:** Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.
- PROBLEM:** When using the volume lock sequence or code verification, the Red Light displays one long blink.  
**SOLUTION:** The long blink indicates that a valid TV code has not been programmed.
- PROBLEM:** The audio output on the TV is not in the right language.  
**SOLUTION:** Press the Language (LANG) key to change the audio option back to the preferred language.

**SETUP CODES FOR TELEVISION**

Accurian	1803
Action	0873
Akai	1675, 1207, 1676 1688, 1689, 1692 1935, 2232
America Action	0180
Anam	0180
AOC	1365, 1590, 2014 2087, 2402, 2621
Aomni	1623
Apex Digital	0890, 1217, 2397
Astar	1531, 1738
Audinac	0180
Audiovox	1564, 0180, 0802 0846, 0875, 1766 1803, 1937, 1951 2121, 2513, 3065
Aventura	0171
Axion	1937
Baysonic	0180
BenQ	1032, 1315
BGH	0876
Blue Sky	2153
Bradford	0180
Broksonic	1935
Byd:sign	1309
Candle	0186
Carver	0170
Casio	1205
Citizen	0186, 1935
Clarion	0180
Coby	1538, 1634, 2017 2306, 2314, 2315 2326, 2338, 2340 2344, 2345, 2348 3202
Commercial Solutions	1447
Contec	0180
Continental	2357
Coradir	2844
Craig	0180
Crown	0180
Curtis	1200, 2352, 2397 2855, 2859
Curtis Mathes	0145, 1661
CXC	0180
Daewoo	1661, 0661
Dell	1264, 1080
Delta	1369
Denon	0145
Denstar	0628
Digital Lifestyles	1765, 1822
Disney	1665, 1892
Durabrand	0180, 0178, 0171 1665
Dynex	1463, 1785, 2049
Electrograph	1755, 1623
Electrohome	1670
Elektra	1661
Element	1687, 1886, 2183

Emerson	1864, 0180, 0178 0171, 1661, 1394 1665, 1886, 1963
Emprex	1422, 1765
Encross	0876, 1474
Envision	0813, 1365, 2014 2087
ESA	0171, 1963
Fujitsu	0809, 0186, 0683
Funai	0180, 0171, 1963
Futuretech	0180
Gateway	1755, 1756
GE	1447, 0178
GFM	1864, 0171, 1665 1886, 1963
Go Video	0886, 1823, 1831
GoldStar	0178
GPX	2693
Gradiente	0170
Grundig	0683
Grunpy	0180
Haier	1753, 2293, 2494 2690, 3204
Hallmark	0178
Hanns.G	1783
Hannspree	1348, 1745, 1783
Harvard	0180
Helios	0865
Hewlett Packard	1494, 1088
Hikato	0628
Himitsu	0180, 0628
Hisense	1314, 1660, 2098
Hitachi	1643, 0145, 0797 2215, 2433, 2679 2879
Hitech	1814
HP	1494, 1088
Hyundai	0849, 1219, 1294 1814
I-Inc	1746
iLo	1463, 1286, 1394 1603, 1665, 1684 1990
Initial	1603, 1990
Insignia	1423, 1564, 0171 1204, 1517, 1660 1710, 1785, 1892 1963, 2049, 2417
iRIS	2189
IRT	1661, 0628
IX	0877
JCM	2189, 2256
Jensen	1299
JVC	1601
KDS	1498, 1687
KEC	0180
Kioto	0706, 0628
Konka	0628, 1831
Kost	1483
Kreisen	0876, 1474
KTV	0180
Lasonic	3198