

LG	1423, 1447, 0178 0856, 1530
LiteOn	1088
LodgingStar	3147
LXI	0156, 0178
MAG	1498, 1687
Magnavox	1454, 1866, 1755 0171, 0706, 0186 0802, 1198, 1365 1525, 1867, 1963 1990, 2655
Marantz	1454, 0704, 1398
Maxent	1755, 1211, 1757
Megatron	0178, 0145
Memorex	0150, 0178, 0877 1665, 1670, 1785 1892, 2739
MGA	0150, 0178
Mintek	1603, 1990
Miray	3309
Mitsubishi	1250, 0150, 0178 1797
Multitech	0180
NAD	0156, 0178
Naxa	2104, 2735
NEC	0170, 0704, 0876 1398, 1797, 2026
NetTV	1755, 2753
NEX	1814
Nexus Electronics	2183
Nikko	0178
Niko	1581
Nimbro	2104
Norcent	0824, 1365, 1590 1591, 1745
Norwood Micro	1286, 1303
NuVision	1657, 2158
Olevia	1610, 1144, 1240
Onwa	0180
Optoma	1348
Orion	1463
Panasonic	1480
PARK	2104
PDI	1474
Penney	0156, 0178
Philco	0145, 0171, 1661 1394, 1665, 1963
Philips	1454, 1866, 0171 0899, 1394, 1483 1867
Pioneer	1457, 1398
Planar	1496
Polaroid	0865, 1286, 1314 1328, 1341, 1498 1538, 1687, 1766 1767, 2063, 2121
Portland	1661
Prima	1753, 1785
Proscan	1447, 2147, 2183 2256
Proton	0178
Protron	1320
Proview	1498, 1687
Punktal	2687

Pyle	1200, 2196
RadioShack	0180, 0178
RCA	1447, 1661, 0899 1781, 2434, 2746 2932
Realistic	0180, 0178
Recco	0706
RevolutionHD	1623
Runco	1398
Sampo	1755
Samsung	0178, 0766, 0814 1060, 2051
Sansui	0171, 1463, 1409 1670, 1892, 1935
Sanyo	1142
Sceptre	0878, 1217, 1360 1599, 2337
Scotch	0178
Scott	0180, 0178, 1711
Sears	0156, 0178, 0171
Semivox	0180
Semp	0156, 1743
Sharp	0818, 2402
Sherwood	1399
Simpson	0186
Skyworth	1799
Solarism	1220
Sole	1377, 1483, 1530 1623
Sony	0810, 1685
Soundesign	0180, 0178, 0186
Sova	1320
Soyo	1520, 1746, 1826 1828, 1830, 1831
Spectroniq	1498, 1687
Squareview	0171
SSS	0180
Starlite	0180
SunBriteTV	1610, 1420, 1435 2337
Superscan	0864
Supersonic	1753, 2104, 2784 3154, 3204
SVA	0865, 0871, 1963
Sylvania	1864, 0171, 1314 1394, 1665, 1886 1963
Symphonic	0180, 0171, 1394
Syntax	1610, 1144, 1240
Tatung	1286, 1756, 2496
TCL	2434
Teknika	0180, 0150, 0186
TMK	0178
Tophouse	0180
Toshiba	1524, 0156, 1343 1369, 1743, 1935
TruTech	1665, 1723
US Logic	1286, 1303
Vidikron	1398
Vidtech	0178

Viewsonic	1755, 1564, 0797 0864, 0885, 1330 1365, 1578, 1627 1742, 2014, 2049 2087, 2277
Viore	1207, 1684, 2104 2352, 3094, 3118
Visart	1336
Vito	1320
Vizio	1758, 0864, 0885 1756, 2707
Wards	0156, 0180, 0178 0186
Waycon	0156
Westinghouse	0885, 0890, 1217 1282, 2195, 2293 2499
White Westinghouse	1661
Wyse	1365
Yamaha	0797
Zenith	1423, 0178, 0145 1661, 1365

ADDITIONAL INFORMATION

The DC750 remote control does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

All other product or service names are the property of their respective owners. Copyright Universal Electronics Inc., 2012.