


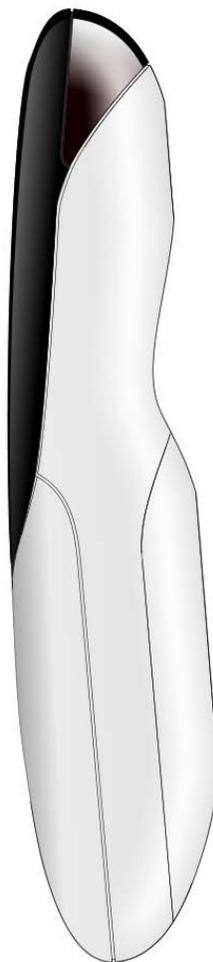

**DIRECTV.**

RC70RXMP-19  
URC-3002BC0-X-R



**DIRECTV®**  
**Universal Remote Control**  
**Quick Reference Guide**

### **CONTROLLING YOUR TV**

1. Turn on the TV.
2. Locate the 5- digit code for your TV.
3. Turn on the TV.
4. Press and hold **MUTE** and **ENTER** at the same time until the green light flashes twice.
5. Using the number keys enter the 5-digit code for your brand of TV. If performed correctly, the green light under the TV flashes twice.
6. Aim the remote at your TV and press **VOL or MUTE** key once. Your TV should ramp up or down or MUTE. If Volume does not change, repeat steps 3 and 5, trying each code for your brand until you find the correct code.

### **Activating RF**

To activate the RF Transmitter on the DIRECTV remote control, perform the following steps:

1. Locate the 12 Digit Receiver ID number(RID) on your DIRECTV receiver. THE RID number is located on the back panel of the receiver.
2. Note the last six digits of the RID number.
3. Press and hold **MUTE** and **ENTER** at the same time until the green light flashes twice.
4. Using the number keys enter 961
5. Press and Release CH Up.
6. Using the number keys enter the last six digits of the RID number.
7. Press and release SELECT key (the green light flashes twice).

### **Deactivating RF**

To deactivate the RF Transmitter on the DIRECTV remote control, perform the following steps:

1. Press and hold **MUTE** and **ENTER** at the same time until the green light flashes twice.
2. Using the number keys enter 961
3. Press and Release CH Down.

### **RESTORING FACTORY DEFAULT SETTINGS**

To reset all the functions of the remote control to the factory default settings following these steps:

4. Press and hold **MUTE** and **ENTER** at the same time until the green light flashes twice.
5. Using the number keys, enter **9-8-1**. (The green light flashes 4 times).

## **COMPLIANCE WITH FCC RULES AND REGULATIONS**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet or circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced remote control/ TV technician for help.

*Operation with non-approved equipment is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.*

### **FCC Authorization Label**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

DIRECTV, Inc.

2230 E. Imperial Hwy.

El Segundo, CA 90245

1-800-531-5000

FCC ID #: MG3 3002

## SETUP CODES FOR TV's

To reset all the functions of the remote control to the factory default settings following these steps

3M	10724, 10737, 11616, 11655, 12508, 12838, 12974
A-Mark	10003
Accurian	11803
Action	10873
Admiral	10093, 10463, 10179
Advent	10761, 10782, 10784, 10807, 10815, 10817, 10842, 11528, 11570
Adventura	10046
Aiko	10092
Aiwa	10701, 11362, 11916, 11955
Akai	10812, 11675, 10702, 10765, 10030, 12232, 11935, 11903, 11692, 11689, 11688, 11676, 11385, 11207, 10745, 10672, 10591
Alaron	10179
Albatron	10700, 10843
Ambassador	10177
America Action	10180
Anam	10180, 10068
AOC	10030, 10003, 10019, 10052, 10185, 11089, 11365, 11589, 11590, 12014, 12087, 12402, 12621
Aomni	11623
Apex Digital	10748, 10879, 10765, 10890, 11217, 12397
AquaVision	11861
Archer	10003
Archos	12503
Astar	11531, 11738
Audiovox	11564, 10451, 10180, 10092, 13065, 12513, 11952, 11951, 11937, 11868, 11865, 11803, 11769, 11766, 11284, 10875, 10846, 10802, 10713, 10623, 10003
Aurora Systems	10801
Aventura	10171
Axion	11827, 11937, 13050
Bang & Olufsen	10620, 11620
Belcor	10019
Bell & Howell	10154, 10016
BenQ	11032, 11212, 11315, 11562, 12807
Bradford	10180
Brilliant	11007, 11255, 11257
Brockwood	10019
Broksonic	10236, 10463, 10003, 10426, 11905, 11911, 11929, 11935, 11938
Byd:sign	11309
C & M	10700
Cadia	11283
Candle	10030, 10046, 10056, 10186
Canon	10793, 11396, 12590, 12610, 12743
Carnivale	10030
Carver	10054, 10170
Casio	10611, 11205, 13059
CCE	10217, 10329, 10623
Celebrity	10000
Celera	10765
Champion	11362
Changhong	10765
Cinego	11986
Citizen	10060, 10030, 10092, 10039, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11928, 11935
Clairtone	10185
Clarion	10180
Classic	11984
Coby	11538, 11634, 11680, 12017, 12306, 12314, 12315, 12326, 12338, 12340, 12344, 12345, 12347, 12348, 12560
Cocom	11611

Commercial Solutions	11447, 10047, 11126
Compaq	10749, 10750
Concerto	10056
Contec	10180, 10185
Craig	10180
Crosley	10000, 10054
Crown	10180, 10039
CTX	10700
Curtis	11200, 11326, 12352, 12397, 12855, 12859
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 10145, 10166, 11661, 11959, 11919, 11347, 10747, 10466, 10068, 10056, 10039, 10016
CXC	10180
CyberHome	10794
Cytron	11326, 12003
Daewoo	10154, 10451, 10092, 11661, 10019, 10039, 10066, 10067, 10402, 10623, 10672, 11909, 11921, 11928
Daytron	10019
Dell	11264, 11178, 11403, 11863
Delta	11369
Denon	10145
Denstar	10628
Diamond Vision	11996, 11997
Digistar	11565
Digital Lifestyles	11765, 11822
Digital Projection Inc.	11725, 11750
DirectTV	11501
Disney	11665, 12152
Dream Vision	11164, 11297
Dumont	10017, 10019
Durabrand	10463, 10180, 10178, 10171, 11034, 10003, 11665
Dwin	10720, 10747, 10774
Dynatech	10049
Dynex	11463, 11785, 12049
Eiki	10735, 12455, 12600
Electric Mirror	13166
Electroband	10000, 10185
Electrograph	11755, 11623
Electrohome	10463, 10381, 10389, 11570, 11670, 11672
Element	11687, 11886, 12183
Emerson	11864, 10154, 10451, 10236, 10463, 10180, 10178, 10171, 11661, 11886, 11905, 11909, 11911, 11913, 11928, 11929, 11944, 11963, 11997, 12776, 12828, 11665, 11394, 10623, 10282, 10280, 10270, 10185, 10181, 10179, 10177, 10039, 10038, 10019, 10002
Emprex	11422, 11546, 11765
Encross	10876, 11474
Envision	10030, 10813, 11365, 11506, 11589, 12014, 12087
Epson	10831, 10881, 11122, 11290, 11379, 11735, 12520, 12550
Erae	11222
ESA	10812, 10171, 11944, 11963
Fisher	10154, 10159, 11362
FlexVision	10713
Fluid	12964
Fujitsu	10809, 10179, 10186, 10683, 10853, 12008
Funai	10000, 10180, 10171, 10179, 11904, 11963
Futuretech	10180
Gateway	11755, 11756
GE	11447, 10047, 10051, 10451, 10765, 10178, 11922, 11919, 11917, 11907, 11347, 10747, 10282, 10279, 10251, 10027, 10021
GFM	11864, 10171, 11665, 11886, 11963
Gibraltar	10017, 10030, 10019
Go Video	10886, 11823, 11831
GoldStar	10178, 10030, 10002, 10019, 10039, 10056, 11926
GPX	10179, 12693
Grundig	10683
Grunpy	10180, 10179
H & B	11366
Haier	11034, 10768, 11009, 11570, 11753, 12293, 12494, 12690, 13204

Hallmark	10178
Hanns.G	11783
Hannspree	11348, 11351, 11352, 11745, 11783
Harley Davidson	10043, 10179, 11904
Harman/Kardon	10054
Harsper	11206
Harvard	10180, 10068
Havermy	10093
Helios	10865
Hello Kitty	10451, 12776
Hewlett Packard	11494, 11088, 11089, 11101, 12540
Hisense	10748, 11314, 11660, 12098, 12355
Hitachi	11643, 11145, 10145, 10723, 10724, 10737, 10770, 10777, 10797, 11345, 11484, 11500, 11576, 11904, 12679, 12838, 13007, 10016, 10036, 10038, 10039, 10043, 10056, 10095, 10096, 10151, 10163, 10217, 10227, 10279, 10413, 10583, 10600, 10679
HP	11494, 11088, 11089, 11101, 12540
Humax	11501
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11463, 11286, 11394, 11603, 11665, 11684, 11990
Infinity	10054
InFocus	10736, 10738, 10741, 10781, 11164, 11430, 11516, 12199
Initial	11603, 11990
Insignia	11423, 11564, 10463, 10171, 12751, 12417, 12049, 12002, 11963, 11785, 11710, 11660, 11641, 11517, 11385, 11326, 11204, 10842
Inteq	10017
iRIS	12189
iView	12842
IX	10877
Janeil	10046
JBL	10054
JCB	10000
JCM	12189, 12256
Jensen	10761, 10050, 10807, 10815, 10817, 11299, 11326
JVC	10463, 10053, 10036, 10069, 10160, 10371, 10731, 11253, 11302, 11352, 11357, 11818, 11923, 12264, 12321
Kaypani	10052
KDS	11498, 11687
KEC	10180
Kenwood	10030, 10019
KLH	10765, 11962
Kloss	10024, 10046
KMDS	12278
Knoll Systems	10781
Konka	10628, 10632, 10638, 10703, 10707, 11385, 11831, 11939
Kost	11262, 11483
Kreisen	10876, 11474
KTV	10180, 10030, 10039, 10185, 10217, 10280
Lasonic	13198
LG	11423, 11447, 10017, 11265, 10178, 10823, 10829, 10856, 11178, 10700, 10442, 11530, 11637, 11768, 11934, 12864, 12867
LiteOn	11088
Lloyd's	11904
LodgingStar	13147
Logik	10016
Luce	10837, 11031
Luxman	10056
LXI	10047, 10054, 10154, 10156, 10178, 10747
MAG	11498, 11687
Magnasonic	11713, 11913, 11928
Magnavox	11454, 11755, 10054, 10051, 10030, 10171, 10706, 11525, 11867, 11904, 11913, 11931, 11944, 11963, 11990, 12492, 12552, 12597, 12655, 11506, 11365, 11198, 11154, 10802, 10435, 10386, 10187, 10186, 10179, 10096, 10036, 10024, 10020
Magnin	11907
Majestic	10016

Marantz	11454, 10054, 10030, 10704, 10854, 10855, 11154, 11398, 11714, 12447
Matsushita	10250
Maxent	11755, 11211, 11714, 11757
MB Quart	11868
Megapower	10700
Megatron	10178, 10145, 10003
MEI	10185
Memorex	10154, 10463, 10150, 10178, 12739, 11938, 11927, 11926, 11924, 11920, 11911, 11903, 11785, 11670, 11665, 11570, 10877, 10179, 10016
MGA	10150, 10178, 10030, 10019, 11907
Micro	11436
Midland	10047, 10017, 10051, 10039, 10747
Mintek	11603, 11990
Minutz	10021
Mitsubishi	11250, 10093, 10150, 10178, 12624, 12576, 11917, 11797, 11350, 11278, 10868, 10836, 10358, 10331, 10036, 10019, 10014
Monivision	10700, 10843
Motorola	10093, 10835
Moxell	10835
MTC	10060, 10030, 10019, 10049, 10056, 10185
Multitech	10180, 10049, 10217
NAD	10156, 10178, 10056, 10866, 11156
Nakamichi	11493
Naxa	11998, 12104, 12735
NEC	10030, 10019, 10036, 10056, 10170, 10704, 10876, 10882, 11398, 11704, 11797, 12026, 12199
NetTV	11755, 12753
Nexus Electronics	12183
Nikko	10178, 10030, 10092
Niko	11618
Norcent	10748, 10824, 11089, 11365, 11589, 11590, 11591, 11745
Norwood Micro	11286, 11296
Noshi	10018
NTC	10092
NuVision	11657, 12158
Olevia	11610, 11144, 11240
Onwa	10180
Optimus	10250, 10154, 10166, 11913, 11924, 11927
Optoma	10887, 11348, 11622, 12161, 12514, 12593, 13062
Optonica	10093, 10165
Orion	10236, 10463, 11463, 10179, 10443, 10655, 11905, 11911, 11929, 11938, 12108
Panasonic	10250, 11480, 10051, 11290, 11335, 11410, 11919, 11924, 11927, 11946, 11947, 12080, 12240, 12264
PARK	11376, 12104, 12194, 12202
PDI	11474
Penney	10047, 10156, 10051, 10060, 10178, 10030, 11926, 11919, 11907, 11347, 10747, 10309, 10149, 10039, 10027, 10021, 10019, 10018, 10003, 10002
Philco	10054, 10030, 10171, 10019, 10020, 10024, 10096, 10179, 10187, 10381, 11394, 11665, 11963
Philips	11454, 10054, 10171, 10690, 10899, 11154, 11394, 11483, 11506, 11867, 12492, 12501, 12552, 12597, 12622, 12992
Pilot	10030, 10019, 10039
Pioneer	11457, 10166, 10038, 10172, 10608, 10679, 10776, 10866, 11398, 12240, 12286, 12458
Planar	11288, 11496, 11589, 13019, 13224
Polaroid	10765, 12120, 12117, 12063, 12002, 11962, 11769, 11767, 11766, 11763, 11762, 11687, 11565, 11538, 11498, 11385, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865
Portland	10451, 10092, 11661, 10019, 10039
Prima	10761, 10807, 10815, 10817, 11389, 11753, 11785
Princeton	10685, 10700, 10717
Prism	10051
Projectiondesign	11750, 11752
Proscan	11447, 10047, 10030, 10466, 10747, 11347, 11922, 12147, 12183, 12256

Proton	10178, 10003, 10031, 10052, 10466
Protron	11320, 11323
Proview	10835, 11498, 11687
Proxima	10735, 10737, 10742, 10758, 11430
Pulsar	10017, 10019
Puneet	11546
Pvision	11222
Pye	10412
Pyle	11200, 12196, 12641
Quasar	10250, 10051, 10165, 11919, 11924, 11927
RadioShack	10047, 10154, 10180, 10178, 10030, 10019, 10039, 10056, 10165, 10747, 11827, 11904, 11920
RCA	11447, 10047, 10051, 10093, 11661, 12932, 12746, 12434, 12002, 11959, 11958, 11922, 11919, 11917, 11907, 11347, 11126, 10899, 10774, 10747, 10679, 10278, 10254, 10090, 10038, 10019, 10018
Realistic	10154, 10180, 10178, 10030, 10019, 10039, 10056, 10165
Reoc	10714
RevolutionHD	11623
Rhapsody	10185
Runco	10017, 10030, 10251, 11398, 11629, 11679
Sampo	11755, 10030, 10039, 10052
Samsung	12051, 10812, 10060, 10702, 10178, 10030, 12733, 12596, 12557, 11959, 11903, 11618, 10814, 10766, 10587, 10482, 10427, 10329, 10217, 10056, 10039, 10019
Samsux	10039
Sansui	10463, 10171, 11463, 10165, 10371, 11670, 11904, 11911, 11929, 11935, 11938
Sanyo	10054, 10154, 12990, 12600, 12455, 12452, 11974, 11907, 11649, 11648, 11647, 11362, 11216, 11142, 10799, 10798, 10735, 10484, 10208, 10159, 10146, 10107, 10088, 10036
Sceptre	10878, 11217, 11360, 11599, 12337, 12506, 12528
Scimitsu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711
Sears	10047, 10054, 10154, 10156, 10178, 10171, 10056, 10146, 10149, 10159, 10179, 10747, 11007, 11904, 11926
Seleco	10737, 11297, 11351
Sense	11865
Sharp	10818, 10093, 10039, 10153, 10165, 10386, 10491, 10608, 10720, 10854, 11407, 11917, 12402, 12495, 12603
Sharper Image	11950
Sheng Chia	10093
Sherwood	11399
Shogun	10019
Signature	10054, 10016
Signet	10800, 10844, 11262
SIM2 Multimedia	11297
Simpson	10186, 10187
Sinudyne	10347
Skyworth	11799
Solarism	11220
Sole	11031, 11366, 11377, 11483, 11530, 11623, 12076
Sony	10000, 10810, 10011, 10080, 10353, 10834, 11317, 11400, 11685, 11786, 11904, 11925, 12736
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Spectricon	10003
Spectroniq	11498, 11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBriteTV	11610, 11420, 11435, 12337, 12528
Superscan	10093, 10864, 11944
Supersonic	11753, 12104, 12516, 12784, 13154, 13204
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10871, 10872, 11963
Sylvania	11864, 10054, 10030, 10171, 11963, 11944, 11931, 11913,

	11886, 11665, 11394, 11314, 10587, 10381, 10187, 10096,
	10065, 10024, 10020
Symphonic	10180, 10171, 10068, 11394, 11904, 11913, 11944
Syntax	11610, 11144, 11240
Tandy	10093
Tatung	10003, 10049, 11101, 11286, 11287, 11288, 11361, 11503,
	11756, 12496
TCL	12434
Teac	11248
Technics	10250, 10051
Technol Ace	10179
Techview	10847, 12004
Techwood	10051, 10003, 10056
Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10019, 10039,
	10056, 10179, 10186, 10312
Telefunken	10702, 10056
Telemagic	10735
Tera	10031
Thomas	11904
TMK	10178, 10056, 10177
TNCi	10017
Toshiba	11524, 10154, 10156, 11265, 10060, 12802, 12684, 11959,
	11935, 11918, 11716, 11704, 11369, 11343, 11164, 11156,
	11155, 10832, 10736, 10243, 10241, 10149, 10036, 10003
Tosonic	10185
Totevision	10039
TruTech	11665, 11723, 12066
TVS	10463
Ultra	10391, 11323
Universal	10027
US Logic	11286
UTI Technology	12244
Vector Research	10030
Venturer	11727, 11865, 11868
VEOS	11007
Victor	10053
Vidikron	10054, 11302, 11398, 11629
Vidtech	10178, 10019, 10036
Viewsonic	11755, 11564, 12839, 12510, 12504, 12277, 12111, 12087,
	12049, 12014, 11742, 11627, 11578, 11542, 11511, 11365,
	11330, 10885, 10864, 10857, 10797, 10777, 10775, 10724
Viking	10046, 10312
Viore	11207, 11684, 11811, 12104, 12352, 13094, 13118
Visart	11336
Visco	11967
Vistron	12142
Vito	11320
Vizio	11758, 10864, 10885, 11756
Wards	10000, 10047, 10054, 10017, 10154, 10156, 10051, 10180,
	10060, 10178, 10030, 11347, 11156, 10866, 10187, 10186,
	10016, 10179, 10165, 10018, 10019, 10096, 10080, 10020,
	10056, 10021, 10024, 10027
Waycon	10156
Westinghouse	10451, 10885, 10890, 11217, 11282, 12195, 12293, 12499
White Westinghouse	10463, 11661, 10623, 11909
WinBook	11381, 11503
Wyse	11365
Xoceco	11469
Yamaha	10030, 10019, 10769, 10797, 11407
Zenith	10000, 11423, 10047, 10017, 10463, 11265, 10178, 10030,
	11145, 10145, 10092, 11661, 10160, 11365, 10016, 11904,
	11909, 11911, 11929, 12616, 12950
Zonda	10003
---	DLP (T) ---
Durabrand	11665
Hewlett Packard	11494
HP	11494
iLo	11463
LG	11423, 11265
Magnavox	11506, 11525

Mitsubishi	11250
NuVision	12158
Optoma	10887
Orion	11463
Panasonic	11480
Philips	10899, 11867
RCA	11447
Samsung	10812, 14000, 12557
Sansui	11463
SIM2 Multimedia	11297
SVA	10872
Toshiba	11524, 11265
--- LCD (T) ---	
Accurian	11803
Action	10873
Akai	11675, 11676, 11688, 11689, 11692, 11935, 12232
AOC	11365, 11589, 12014, 12087, 12402, 12621
Aomni	11623
Apex Digital	10890, 11217, 12397
AquaVision	11861
Astar	11531, 11738
Audiovox	11564, 10180, 10802, 10846, 10875, 11284, 11766, 11769, 11803, 11865, 11868, 11937, 11951, 11952, 12513, 13065
Axion	11827, 13050
BenQ	11315
Byd:sign	11309
Cadia	11283
Casio	11205
Citizen	11669, 11671, 11672, 11935
Coby	11538, 11634, 12017, 12306, 12314, 12315, 12326, 12338, 12340, 12344, 12345, 12348, 12560
Curtis	12352, 12397, 12855, 12859
CyberHome	10794
Dell	11264, 11178, 11863
Digital Lifestyles	11765, 11822
DirectTV	11501
Dynex	11785, 12049
Electric Mirror	13166
Element	11687, 11886, 12183
Emerson	11864, 10171, 11394, 11886, 11963
Emprex	11422, 11546, 11765
Encross	10876, 11474
Envision	10813, 11365, 11506, 11589, 12014, 12087
Fluid	12964
Funai	10171
GFM	11864, 11886
Go Video	10886, 11823, 11831
GPX	12693
H & B	11366
Haier	11753, 12293, 12690
Hanns.G	11783
Hannspree	11348, 11351, 11745, 11783
Harsper	11206
Hewlett Packard	11088, 12540
Hisense	11314, 11660, 12098, 12355
Hitachi	11643, 10723, 11345, 13007
HP	11088, 12540
Humax	11501
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11286, 11394, 11603, 11684, 11990
Initial	11603, 11990
Insignia	11564, 11204, 11517, 11710, 11785, 12002, 12049, 12417, 12751
iRIS	12189
IX	10877
JCM	12189, 12256
Jensen	11299
JVC	11253, 11818, 12321
Konka	11831

Kost	11262
Kreisen	10876, 11474
Lasonic	13198
LG	11423, 11265, 10178, 10856, 11178, 11768, 12864, 12867
LodgingStar	13147
MAG	11687
Magnavox	10802, 11198, 11365, 11990
Marantz	10855
Maxent	11755, 11211, 11714, 11757
MB Quart	11868
Memorex	11670, 12739
Micro	11436
Mintek	11603, 11990
Mitsubishi	11250, 10150, 11797
Naxa	12104, 12735
NEC	10876, 11797, 12026
NetTV	12753
Nexus Electronics	12183
Niko	11618
Norcent	11365, 11589, 11591, 11745
Norwood Micro	11286, 11296
NuVision	11657, 12158
Olevia	11610, 11144, 11240
Panasonic	11480, 12080
PARK	12104, 12194, 12202
PDI	11474
Philips	11454, 11483, 11506, 11867, 12622, 12992
Planar	11496, 11589
Polaroid	11262, 11276, 11316, 11498, 11538, 11687, 11762, 11763, 11766, 11767, 11769, 12063, 12120
Prima	11753, 11785
Proscan	12147, 12183, 12256
Protron	11320, 11323
Proview	11687
Puneet	11546
Pyle	11200, 12196, 12641
RadioShack	11827
RCA	11447, 10047, 11958, 12434, 12746, 12932
RevolutionHD	11623
Runco	11629
Sampo	11755
Samsung	10812, 10702, 10766, 10814, 14000, 12596, 12733
Sansui	11670, 11935
Sanyo	11142, 11362
Sceptre	10878, 11217, 11360, 11599, 12337, 12506, 12528
Scott	11711
Sense	11865
Sharp	10818, 10093, 12402, 12495
Sherwood	11399
Signet	11262
Skyworth	11799
Solarism	11220
Sole	11031, 11366, 11377, 11483, 11530, 11623, 12076
Sony	10000, 10810, 11317, 11685, 11786, 12736
Sova	11320
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
SunBriteTV	11610, 11420, 11435, 12337, 12528
Superscan	10864
Supersonic	12104, 12784, 13154, 13204
SVA	10587, 10871
Sylvania	11864, 10171, 11314, 11394, 11886, 11963
Symphonic	10171, 11394
Syntax	11610, 11144, 11240
Tatung	11286, 12496
Techview	10847, 12004
Toshiba	11524, 11343, 11935, 12802
TruTech	11723
Ultra	11323
US Logic	11286
UTI Technology	12244
Venturer	11865, 11868

Vidikron	11398, 11629
Viewsonic	11564, 10857, 10864, 10885, 11330, 11365, 11578, 11627, 11742, 12014, 12049, 12087, 12277
Viore	11684, 11811, 12104, 12352, 13094, 13118
Visart	11336
Visco	11967
Vistron	12142
Vito	11320
Vizio	11758, 10864, 10885, 11756
Westinghouse	10885, 10890, 11217, 11282, 12195, 12293, 12499
WinBook	11381, 11503
Wyse	11365
Zenith	11423, 11265, 10178, 11365

--- TV/DVD Combination (T) ---

Accurian	11803
Advent	11570
Akai	11675, 11935, 12232
Audiovox	11865, 11868, 11937, 11951, 11952, 12513, 13065
Axion	11937
Broksonic	11935
Cinego	11986
Citizen	11935
Classic	11984
Coby	11538, 12315, 12340, 12344, 12347, 12560
Curtis	12855
Cytron	12003
Diamond Vision	11997
Disney	12152
Dynex	12049
Electrohome	11670
Emerson	11864, 11394, 11886, 11963, 11997
ESA	11963
Funai	11963
GFM	11963
Haier	11753
iLo	11990
Initial	11990
Insignia	11963, 12002, 12049, 12417, 12751
KLH	11962
Konka	11939
LG	11423
Magnavox	11944, 11963, 11990
Maxent	11714
Memorex	11670
Mintek	11603, 11990
Naxa	11998, 12104
Panasonic	11927, 12080
Philips	11394, 12992
Polaroid	11538, 11766, 11769, 11962, 12002
Prima	11753
Proscan	12256
Pyle	12196
RCA	11447, 11958, 12002, 12746, 12932
Samsung	11903
Sansui	11670, 11935
Sense	11865
Sharp	10818
Skyworth	11799
Sova	11952
Supersonic	11753, 12104, 12784
Sylvania	11864, 11394, 11886, 11963
Techview	12004
Toshiba	11524, 11935, 12684, 12802
TruTech	12066
Venturer	11865
Viewsonic	10864, 12049
Viore	11811, 12104, 12352, 13094, 13118

--- TV/VCR Combination (T) ---

America Action	10180
----------------	-------

Audiovox	10180
Broksonic	11905, 11911, 11929
Citizen	11928
Curtis Mathes	11919, 11959
Daewoo	11909, 11921, 11928
Emerson	10236, 11905, 11909, 11911, 11913, 11928, 11929
Funai	11904
GE	10047, 11907, 11917, 11919, 11922
GoldStar	11926
Harley Davidson	11904
Hitachi	11904
JVC	11253, 11923
LG	11934
Lloyd's	11904
Magnasonic	11913, 11928
Magnavox	11904, 11913, 11931, 12597
Magnin	11907
Memorex	11920, 11924, 11926, 11927
MGA	11907
Mitsubishi	11917
Optimus	11913, 11924, 11927
Orion	11905, 11911, 11929
Panasonic	11919, 11924, 11927, 11947
Penney	11907, 11919, 11926
Philips	12501, 12597
Quasar	11919, 11924, 11927
RadioShack	11904, 11920
RCA	10047, 11126, 11907, 11917, 11919, 11922, 11959
Samsung	11959
Sansui	11904, 11911, 11929
Sanyo	11907
Sears	11904, 11926
Sharp	10818, 10093
Sony	10000, 11904, 11925
Sylvania	11913, 11931
Symphonic	11904, 11913
Thomas	11904
Toshiba	11918, 11959
White Westinghouse	11909
Zenith	10017, 11904, 11909, 11911, 11929, 12950