



DIRECTV®
Universal Remote Control
Quick Reference Guide RC80HB

CONTROLLING YOUR TV

1. Turn on the TV.
2. Locate the 5- digit code for your TV.
3. Turn on the TV.
4. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
5. Using the number keys enter the 5-digit code for your brand of TV. If performed correctly, the green light under the TV flashes twice.
6. Aim the remote at your TV and press **VOL or MUTE** key once. Your TV should ramp up or down or MUTE. If Volume does not change, repeat steps 3 and 5, trying each code for your brand until you find the correct code.

Activating RF

To pair the DIRECTV remote control to the STB, perform the following steps:

1. Press and HOLD **MUTE** and **SELECT** at the same time until the green light flashes twice.
2. Enter digits 961 follow by CH up key.
3. Using the number keys enter the last six digits of the RID number located behind the STB.
4. Press and release ENTER key (the green light flashes twice).

Deactivating RF

To deactivate the RF Transmitter on the DIRECTV remote control, perform the following steps:

1. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
2. Using the number keys enter 961
3. Press and Release CH Down. (Green LED flashes four times)

RESTORING FACTORY DEFAULT SETTINGS

To reset all the functions of the remote control to the factory default settings following these steps:

4. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
5. Using the number keys, enter **9-8-1**. (The green light flashes 4 times).

COMPLIANCE WITH FCC RULES AND REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced remote control/ TV technician for help.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

FCC Authorization Label

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

DIRECTV, Inc.
2230 E. Imperial Hwy.
El Segundo, CA 90245
1-800-531-5000

SETUP CODES FOR TV's

To reset all the functions of the remote control to the factory default settings following these steps

Aaxa	13634
Acer	11339
Admiral	10093, 10463, 10179
Advent	11570
Affinity	13577, 13716, 13717
Aiwa	11362, 11916
Akai	10702, 11675, 10765, 10672, 11207,
	11385, 11688, 11690,
	11692, 11903, 11935, 12232
Akura	11498
Alaron	10179
Albatron	10700
America Action	10180
Anam	10180
AOC	11589, 12087, 11089, 11365, 11590,
	12014, 12402, 12621,
	13707
Aomni	11623
Apex Digital	12397, 10748, 10765, 10890, 11217,
11943	
Astar	11531
Asus	13340
Audiosonic	11675
Audiovox	11564, 10451, 10180, 13410, 13065,
	12513, 12413, 12121,
	11951, 11937, 11868, 11865, 11769,
	11766, 11276, 10875,
	10846, 10802, 10623
Auria	12087, 12277
Aventura	10171
Axion	11937
Bang & Olufsen	11620
Bell & Howell	10154
BenQ	11756, 11315, 11562
Berkshire	10047
Bradford	10180
Broksonic	10463, 11911, 11935, 11938
Byd:sign	11311
Candle	10186
Carver	10054
CCE	10623
Celera	10765
Champion	11362
Changhong	10765
Citizen	10060, 10186, 11672, 11935
Clarion	10180
Claris	13807

Coby 13478, 13646, 13629, 13627, 13493,
13202, 12560, 12348,
12315, 12314, 12306,
12347, 12344, 12340, 12338, 12326,
12017, 11634, 11538
Commercial Solutions 11447, 10047
Conia 11498
Contec 10180
Cornea 13677
Craig 10180, 13423
Crosley 10054, 13115
Crown 10180
CTX 10700
Curtis 12397, 11326, 12352, 12466, 12855,
12859, 13228, 13577,
13636, 13895, 13939
Curtis Mathes 10702, 10054, 10093, 10060, 10047,
10154, 10451, 10145,
11661, 11347, 11959
CXC 10180
Cytron 11326
Daewoo 10154, 10451, 11661, 10623, 10661,
10672, 13115
Dell 11264, 11863
Denon 10145
Digital Lifestyles 11765, 11822
Disney 11665, 11892
Dumont 10017
Durabrand 10178, 10171, 10463, 10180, 11463,
11570, 11595, 11665
Dynex 12049, 11463, 12184
Electric Mirror 13166
Electrograph 11755, 11623
Electrohome 10463, 11570, 11670, 11672
Electron 12855
Element 11886, 12183, 12964, 13559
Elite 13867
Emerson 11864, 11394, 11886, 10178, 10171,
10154, 10451, 10463,
10180, 11661, 11595, 11665, 10623,
10179, 11911, 11913,
11944, 11963, 12183, 13559
Emprex 11422, 11765
Envision 11589, 12087, 11365, 12014
Epson 11122
ESA 10171, 11595, 11944, 11963
Fisher 10154, 11362
Fluid 12964
Fujimaro 11498
Fujitsu 10809, 10179, 10186, 10853
Fujitsu Siemens 10809
Funai 11394, 10171, 10180, 10179, 11271,
11904, 11913, 11963
Futuretech 10180

Gateway 11756, 11755
GE 11447, 10178, 10047, 10051, 10451,
10765, 11347, 11547,
11917
GFM 11864, 11886, 10171, 11665, 11963
Gibralter 10017
GoldStar 10178
GPX 10179, 12617, 12784, 13402
Grunpy 10180, 10179
H & B 11366
Haier 11753, 11749, 11748, 11570, 12293,
12309, 12494, 12690,
13204, 13382
Hallmark 10178
Hanns.G 11783
Hannspree 11348, 11351, 11352, 11745, 11783,
12786
Harley Davidson 10179, 11904
Harman/Kardon 10054
Harvard 10180
Havermy 10093
Helios 10865
Hello Kitty 10451
Hewlett Packard 11642, 11494, 11089, 13126
Hidear 13817
Hisense 10748, 11314, 11660, 12183, 13519
Hitachi 11643, 10145, 10679, 10797, 11484,
11576, 11904, 12207,
12756
Hyundai 11219, 13418
iLo 11394, 11463, 11286, 11603, 11665,
11684, 11990, 13149
Infinity 10054
InFocus 11366
Initial 11603, 11990
Insignia 12049, 11423, 11564, 10171, 10463,
12751, 12432, 12417,
12184, 12088, 12002, 11963, 11892,
11660, 11641, 11517,
11385, 11326, 11204
Inteq 10017
iRIS 12189
iSymphony 13094, 13118, 13382
JBL 10054
JCM 12189, 12256
Jensen 11299, 11326, 12541, 13204
JVC 11601, 12271, 12264, 10650, 11774,
10463, 10731, 11253,
11352, 11670, 11923, 12321, 13650,
13854
KDS 11498
KEC 10180
Kingston 13284
Klegg 11366

KLH	10765
Konka	11385
Kost	11483
KTV	10180
Lasonic	13198
LG	11423, 12358, 12731, 12424, 12834,
10178, 10017, 11265,	10700, 12612, 12864, 13941
Lloyd's	11904
LodgingStar	13147
LXI	10156, 10054, 10178, 10047, 10154
MAG	11498
Magnasonic	11913
Magnavox	11867, 11454, 11455, 12597, 12372,
11755, 10054, 10171,	10051, 10706, 13292, 12492, 10179,
11990, 11963, 11944,	11931, 11913, 11904, 10186, 11856,
10230, 10802, 11365,	11198, 11054, 11012
Marantz	11454, 10054, 10704, 11054, 11154,
11398, 11714	
Matsushita	10250, 10650
Maxent	11755, 11714, 11757
MB Quart	11868
Megapower	10700
Megatron	10178, 10145
Memorex	10178, 10154, 10463, 10150, 10179,
11570, 11665, 11670,	11892, 11903, 11911, 11924, 11927,
11938, 12739	
MGA	10178, 10150
Midland	10047, 10017, 10051
Mintek	11603, 11990
Mitsubishi	11250, 10093, 10178, 10150, 11797,
11917	
Monivision	10700
Motorola	10093
MTC	10060
Multitech	10180
Mx Onda	11498
NAD	10156, 11156, 10178
Naxa	12104, 12735, 13154, 13382
NEC	10704, 11398, 11704, 11797, 12293,
13257	
NetTV	11755
Nexus Electronics	12183
Nikko	10178
Nimbro	12104
Norcent	11589, 10748, 11089, 11365, 11590,
11591, 11745	
Norwood Micro	11286
NuVision	11657, 12158
Ölevia	11610, 11144, 11240, 11331

Onwa 10180
Optimus 10250, 10650, 10154, 11913, 11924,
11927
Optique 12189
Optoma 11348
Optonica 10093
Orion 10463, 11463, 10179, 11911, 11938,
13540
Otic 11498
Panasonic 11480, 10250, 11291, 12264, 10650,
10051, 11271, 11924,
12654
PARK 11376, 12104, 12194, 12202
Penney 10156, 10178, 10060, 10047, 10051,
11347
Philco 11394, 10054, 10171, 10179, 11271,
11665, 11963
Philips 11867, 11454, 11455, 11744, 12597,
12372, 11394, 10054,
12652, 12492, 11990,
11154, 11054, 11012,
13254
Pioneer 10230
11457, 10679, 11260, 11398, 12240,
Planar 11589
Polaroid 11523, 11498, 10765, 11276, 11286,
11314, 11316, 11326,
11767, 11769, 11826,
Portland 12002, 12121
Power Acoustik 10451, 11661
Prima 11865
Princeton 11753, 11749
Prism 10700
Proscan 10051
12256, 13382, 13577,
Proton 11447, 10047, 11347, 12147, 12183,
Provew 13717
Pulsar 10178
Pyle 11498
Quasar 10017
12196, 12641
11927 10250, 11291, 10650, 10051, 11924,
RadioShack 10178, 10047, 10154, 10180, 11904
RCA 11447, 12434, 12746, 12932, 12187,
10093, 10047, 10051,
13147, 12855, 12183,
11781, 11547, 11385,
11661, 13938, 13717, 13577, 13382,
12002, 11959, 11958, 11917, 11868,

11347, 10679, 10090
Realistic
RevolutionHD
Runco
Sampo
Samsung
10814, 11060, 11235,
12814
Sansui
11892, 11904, 11911,
Sanyo
Sceptre
12506, 12528
Scotch
Scott
Sears
10154, 10179, 11904
Seiki
Seleco
Sens
Sharp
12402, 13867
Sheng Chia
Sherwood
Sigmac
Signature
Silo Digital
Simpson
Skyworth
Sole
Sony
11904, 12736
Soundesign
Soyo
Spectroniq
Squareview
SSS
Starlite
SunBriteTV
12925, 12935
Superscan
Supersonic
13593, 13595, 13877,
SVA
Sylvania
11271, 11314, 11595,
Symphonic
11913, 11944
Syntax
TAG

10178, 10154, 10180
11623
10017, 11398
11755
10702, 10650, 10178, 10060, 10766,
11267, 11903, 11959, 12596, 12733,
10171, 10463, 11463, 11409, 11670,
11935, 11938, 13540, 13564
11142, 10054, 10154, 10088, 11362
10878, 11217, 11360, 11599, 12337,
10178
10178, 10180, 10179, 11711
10156, 10054, 10178, 10047, 10171,
10178, 12964, 13559, 13560, 13953
11351
11865
12360, 10818, 10093, 11393, 11917,
10093
11399, 13061
13423, 13477
10054
13794
10186
11799, 13253
11366, 11483, 11623
11300, 11317, 11685, 11786, 11791,
10178, 10180, 10179, 10186
11520, 11826
11498
10171
10180
10180
11610, 11420, 11435, 12337, 12528,
10864, 10093, 11944
11753, 12104, 12784, 13154, 13204,
13894
10748, 10865, 11963
11864, 11394, 11886, 10054, 10171,
11665, 11913, 11931, 11944, 11963
11394, 10171, 10180, 11595, 11904,
11610, 11144, 11240, 11331
13498

Tandy 10093
Tatung 11756, 11286
TCL 12434
Technics 10250, 10051
Technol Ace 10179
Techwood 10051
Teknika 10054, 10060, 10180, 10150, 10179,
10186
Telefunken 10702
Thomas America 11904
TMK 10178
TN Ci 10017
Toshiba 11524, 11656, 10156, 11156, 11256,
11936, 12006, 10650,
11704, 11916, 11935,
11945, 11959, 12667, 12684
Toshinaer 13576
TruTech 11665, 11723, 12066
TVS 10463
US Logic 11286
Venturer 11865, 11868
Vidikron 10054, 11398
Vidtech 10178
Viewsonic 12049, 10864, 11755, 11564, 12087,
13706, 12839, 12745,
11578, 11542, 11365,
11330, 10885, 10857, 10797
Viore 11207, 11684, 11811, 12104, 12352,
13094, 13118, 13159,
13382
VisionQuest 13380
Vivitek 11369
VIZIO 11758, 13758, 12757, 10864, 11756,
10885
Vuon 13418
Wards 10156, 11156, 10054, 10178, 10060,
10047, 10154, 10017,
10051, 10180, 10179, 10186, 11347
Waycon 10156
Westinghouse 11712, 13470, 13579, 12397, 10451,
13949, 13908, 13382,
13094, 12499, 12293, 12195, 11577,
11300, 11282, 11217,
10890, 10885
White Westinghouse 10463, 11661, 10623
Wyse 11365
Yamaha 10797, 11576
Zenith 11423, 12358, 12731, 10178, 10047,
10017, 10463, 11265,
12612, 12742 10145, 11661, 11365, 11904, 11911,

--- 3D TV (T) ---

Coby	13478
Dynex	12049
Elite	13867
Hisense	13519
LG	11423, 12731, 12424, 11265
Panasonic	11480, 11941
Sanyo	11142
Sceptre	12337
Sharp	12360, 13867
Toshiba	11524
VIZIO	11758, 13758

--- DLP (T) ---

Audiovox	11951
Durabrand	11665
Hewlett Packard	11494
iLO	11463
LG	11423, 11265
Mitsubishi	11250
NuVision	12158
Orion	11463
Panasonic	11480, 11291, 10650
Philips	11867
RCA	11447
Samsung	11060
Sansui	11463, 11892
Toshiba	11524, 11265
Viore	11811

--- LCD (T) ---

Acer	11339
Akai	11675, 11385, 11688, 11692, 11935,
12232	
AOC	11589, 12087, 11365, 12014, 12402,
12621	
Aomni	11623
Apex Digital	12397, 10890, 11217
Astar	11531
Asus	13340
Audiosonic	11675
Audiovox	11564, 10180, 13410, 13065, 12513,
12413, 12121, 11951,	
11276, 10875, 10846,	11937, 11868, 11865, 11769, 11766,
	10802
Auria	12087, 12277
BenQ	11315, 11562
Byd:sign	11311
Citizen	11672, 11935
Claris	13807
Coby	13478, 13646, 13627, 13493, 13202,
12560, 12348, 12344,	

12340, 12338, 12326, 12315, 12314,
12306, 12017, 11634,
Cornea
Craig
Crosley
Curtis
13228, 13577, 13895
Dell
Digital Lifestyles
Dynex
Electric Mirror
Electrohome
Electron
Element
Emerson
12183, 13559
Emprex
Envision
Epson
Fluid
Funai
GFM
GPX
H & B
Haier
12690, 13382
Hanns.G
Hannspree
12786
Hewlett Packard
Hidear
Hisense
Hitachi
Hyundai
iLo
13149
InFocus
Initial
Insignia
12184, 12417, 12751
iRIS
iSymphony
JCM
Jensen
JVC
12321, 13650, 13854
Kingston
Klegg
Kost
Lasonic
LG
10178, 11265, 12864
LodgingStar
11538
13677
13423
13115
12397, 12352, 12466, 12855, 12859,
11264, 11863
11765, 11822
12049, 12184
13166
11672
12855
11886, 12183, 12964, 13559
11864, 11394, 11886, 10171, 11963,
11422, 11765
11589, 12087, 11365, 12014
11122
12964
10171
11864, 11886
10179, 12617, 12784, 13402
11366
11753, 11749, 11748, 12293, 12309,
11783
11348, 11351, 11352, 11745, 11783,
11642, 11494, 13126
13817
11314, 11660, 12183, 13519
11643, 11576, 12207, 12756
11219, 13418
11394, 11286, 11603, 11684, 11990,
11366
11603, 11990
12049, 11564, 11204, 11517, 12002,
12189
13094, 13118, 13382
12189, 12256
11299, 12541, 13204
11601, 12271, 11774, 11253, 11670,
13284
11366
11483
13198
11423, 12358, 12731, 12424, 12834,
13147

Magnavox 11455, 12372, 10802, 11012, 11198,
11365, 11944, 11990,
13292
Marantz 11454
Maxent 11755, 11714, 11757
MB Quart 11868
Memorex 10179, 11570, 11670, 11892, 12739
Mintek 11603, 11990
Mitsubishi 11250, 10150, 11797
Naxa 12104, 12735, 13154, 13382
NEC 11398, 11797, 12293, 13257
12183
Nexus Electronics 11589, 11089, 11365, 11591, 11745
Norcent 11286
Norwood Micro 11657, 12158
NuVision 11610, 11144, 11240, 11331
Ölevia 12189
Optique 13540
Orion 11480, 11291, 10650, 11941
Panasonic 12104, 12194, 12202
PARK 11394, 10171, 11963
Philco 11867, 11454, 11455, 11744, 12372,
10230, 11483, 11856,
13292, 13565
Pioneer 11260
Planar 11589
Polaroid 11523, 11498, 11276, 11314, 11316,
11538, 11762, 11766,
11767, 11769, 12121
Prima 11753, 11749
Proscan 12147, 12183, 12256, 13382, 13577
Pyle 12196, 12641
RCA 11447, 12434, 12746, 12932, 12187,
10047, 11781, 11868,
11958, 12183, 12855, 13382, 13577,
13938
RevolutionHD 11623
Sampo 11755
Samsung 10702, 10766, 10814, 11235, 12596,
12733, 12814
Sansui 11409, 11670, 11892, 11935, 13540,
13564
Sanyo 11142, 11362
Sceptre 10878, 11217, 11360, 11599, 12337,
12506, 12528
Scott 11711
Seiki 10178, 12964, 13559, 13560, 13953
Sens 11865
Sharp 12360, 10818, 10093, 11393, 12402
Sherwood 11399, 13061
Sigmac 13477
Silo Digital 13794
Skyworth 11799, 13253
Sole 11366, 11483, 11623

Sony 11317, 11685, 11786, 11791, 12736
Soyo 11520, 11826
SunBriteTV 11610, 11420, 11435, 12337, 12528,
12925, 12935
Superscan 10864
Supersonic 12104, 12784, 13154, 13204, 13593,
13595, 13877, 13894
SVA 11963
Sylvania 11864, 11394, 11886, 10171, 11271,
11314, 11963
Symphonic 11394, 10171, 11595
Syntax 11610, 11144, 11240, 11331
TAG 13498
Tatung 11286
TCL 12434
Toshiba 11524, 11656, 10156, 11256, 12006,
11343, 11935, 12667
Toshinaer 13576
TruTech 11723
US Logic 11286
Venturer 11865, 11868
Vidikron 11398
Viewsonic 12049, 10864, 11564, 12087, 10857,
10885, 11330, 11365,
12111, 12277, 12745
Viore 11684, 11811, 12104, 12352, 13094,
13118, 13159, 13382
VisionQuest 13380
Vivitek 11369
VIZIO 11758, 13758, 12757, 10864, 11756,
10885
Vuon 13418
Westinghouse 11712, 13470, 13579, 12397, 13949,
13908, 13382, 13094,
11282, 11217, 10890,
10885
Wyse 11365
Zenith 11423, 10178, 10017, 11265, 11365,
12612, 12742

--- TV/DVD Combination (T) ---

Advent 11570
Affinity 13717
Akai 11675, 11935, 12232
Apex Digital 10765, 11943
Audiovox 11766, 11865, 11868, 11937, 11951,
12413, 12513, 13065,
13410
Axion 11937
Broksonic 10463, 11935
Citizen 11935

Coby 11538, 12314, 12315, 12340, 12344,
12347, 12560, 13202,
13627
Curtis 12466, 12855, 13895
Durabrand 10171
Dynex 12049, 12184
Electrohome 11670
Emerson 11864, 11394, 11886, 11963
ESA 11963
Funai 11394, 11963
GFM 11963
GPX 12617, 12784
Haier 11753, 11749, 11748, 12309
Hisense 13519
Hitachi 12207, 12756
iLo 11990
Initial 11990
Insignia 12049, 11892, 11963, 12002, 12417,
12751
iSymphony 13094
JVC 12271, 11774, 11670, 13854
LG 11423
Magnavox 11454, 12372, 11944, 11963, 11990
Maxent 11714
Memorex 10463, 11670, 11911
Mintek 11603, 11990
Naxa 12104, 13382
Nimbro 12104
Panasonic 10051, 11924, 11927, 11941, 11947,
12654
Philco 11963
Philips 11454, 12372, 11394, 11961, 12740
Polaroid 11523, 11538, 11766, 11769, 12002
Power Acoustik 11865
Prima 11753
Proscan 12256
Pyle 12196
RCA 11447, 12746, 12932, 12187, 10047,
11868, 11958, 12002,
13382
Samsung 11903
Sansui 11670, 11935, 13564
Sceptre 12528
Sens 11865
Sharp 12360, 10818
Skyworth 11799, 13253
Supersonic 11753, 12104, 12784, 13593, 13595,
13877, 13894
Sylvania 11864, 11394, 11886, 10171, 11944,
11963
Symphonic 11595, 11944
Toshiba 11524, 11656, 11256, 12006, 11935,
12667, 12684
TruTech 12066

Venturer	11865, 11868
Viewsonic	12049, 10864
Viore	11811, 12104, 12352, 13094, 13118,
13382	
VisionQuest	13380
Westinghouse	11712, 11300