



T01 Universal Remote Control

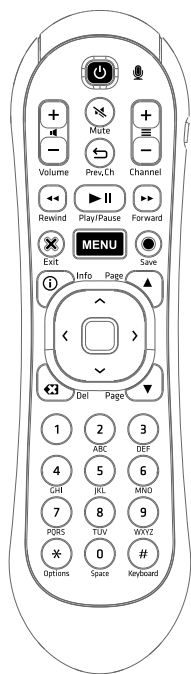

FUNCTIONAL KEY CHART

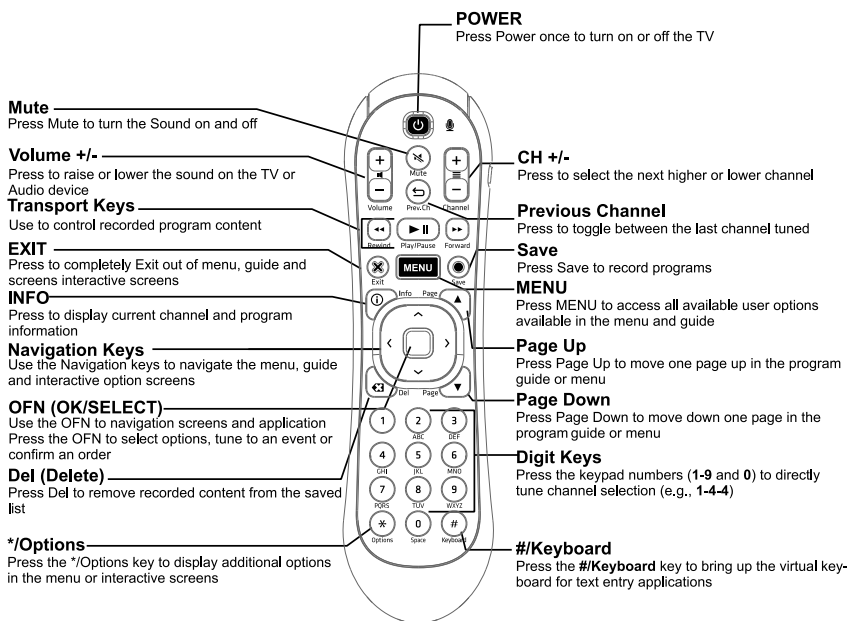

PAIRING T01 REMOTE

To fully enjoy all of the features and functions of the T01 remote and set-top box you must put the remote control in the RF mode by using the following pairing process.

1. Press both oval buttons on the front of the set-top box for 3 seconds.
2. Point the T01 remote at the set-top box and press the MENU key on the remote for 3 seconds to complete the pairing process.
3. Once the pairing process is completed, press the OK/SELECT (OFN) key on the remote to clear the on-screen display.

PROGRAMMING TV CONTROL

The T01 remote also contains a universal TV library and can be programmed to operate the Power and Volume control of your TV.

1. Turn on the TV you want to control.
2. Press and hold the Del key until the green light under the Power key blinks twice.
3. See setup codes for TVs to find the brand name of the TV you want to control. Enter the first 5-digit code for your brand of TV. If performed correctly, the green light under the Power key blinks twice.

NOTE: If the green light emits one long blink, repeat steps 2 and 3, entering the same code.

4. Aim the remote at the TV and press the Power key. If the TV turns off you have found the correct code. If the TV does not respond, repeat steps 2-4 trying each code listed for your brand of TV. If none of the codes work, see "SEARCHING FOR A DEVICE CODE".

TV Code:

□ □ □ □ □

PROGRAMMING AUDIO CONTROL

The T01 remote also contains a universal audio library and can be programmed to operate the power and volume controls of your audio device such as an Amplifier.

1. Turn on the audio device you want to control.
2. Press and hold the Del key until the green light under the Power key blinks twice.
3. See setup Codes for Audio Devices, find the brand name of the audio device you want to control. Enter the first 5-digit code for your brand of audio device. If performed correctly, the green light under the Power key blinks twice.

4. Aim the remote at the audio device and press the Power key. If the audio device turns off you have found the correct code. If the audio device does not respond repeat steps 2-4, trying each code listed for your brand of audio device. If none of the codes work, see "SEARCHING FOR A DEVICE CODE".

Audio Code:

□ □ □ □ □

SEARCHING FOR A DEVICE CODE

If the Brand of your TV or audio device is not listed in the code list, try searching for your code.

1. Turn on your TV or audio device.
2. Press and hold the Del key until the green light under the Power key blinks twice.
3. Press 9 - 9 - 1. The green light under the Power key will blink twice.
4. Press 1 to search for a TV, or press 3 to search for an audio device.

5. While pointing the remote control at the device, press and release the Cursor Up key until the device turns off. (You may need to press Cursor Up numerous times).

NOTE: In the search mode, the remote control sends IR codes from its library to the target device.

6. Press OK/SELECT (OFN) to lock in the code.

CHECKING THE CODES

If you have set up the remote control using the "SEARCHING FOR A DEVICE CODE" procedure, you may need to find out which 5-digit code is operating your TV or audio device. Perform the following steps after setting up your TV or audio device to find out which 5-digit code operates your TV or audio device.

1. Press and hold the Del key until the green light under the Power key blinks twice.
2. Press 9 - 9 - 0 - 1 to find the TV code or 9 - 9 - 0 - 3 to find the audio code. The green light under the Power key blinks twice.
3. To view the code for the first digit, press 1 once. Wait 3 seconds and count the number of times the green light blinks (e.g., 3 blinks =3) and write down the number in the left most TV or audio code boxes (at end of this section).

NOTE: If a code digit is "0", the green light under the Power key will not blink.

4. Repeat step 3 four more times for the remaining digits. Use 2 for the second digit, 3 for the third digit, 4 for the fourth digit and 5 for the fifth digit. Finish writing down the code in the TV or audio code boxes below.

TV Code:

□ □ □ □ □

Audio Code:

□ □ □ □ □

ADDITIONAL INFORMATION

The T01 remote control does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics, Inc.

All trademarks and service marks appearing herein are the properties of their respective owners. Copyright © 2011 Universal Electronics Inc.

M4167_Rev 1.2

2-1-11

SETUP CODES FOR TVS

A-Mark	10003
Abex	10032
Accurian	11803
Action	10873
Admiral	10093, 10463, 10179
Advent	10761, 10783, 10815, 10817, 10842, 11933
Adventura	10046
Aiko	10092
Aiwa	10032, 10701, 11914
Akai	11675, 10060, 10702, 10030, 10765, 10098, 10672, 11207, 11385, 11676, 11688, 11689, 11692, 11935
Albatron	10700, 10843
Ambassador	10177
America Action	10180
Anam	10180, 10004, 10009, 10008
Anam National	10161
AOC	10030, 10003, 00019, 10052, 10137, 10185, 11089, 11365, 11590, 12014, 12087
Anam National	10161
AOC	10030, 10003, 00019, 10052, 10137, 10185, 11089, 11365, 11590, 12014, 12087
Aomni	11623
Apex Digital	10748, 10879, 10765, 10890, 11217, 11991, 12397
Archer	10003
Astar	11531, 11738
Audiovox	10451, 10180, 10092, 10003, 10802, 10846, 10875, 11284, 11766, 11769, 11803, 11868, 11951, 11952, 12513
Aurora Systems	10801
Aventura	10171

Axon	10171
Belcor	10019
Bell & Howell	10154, 10016
BenQ	11032, 11315
Bradford	10180
Brilliant	11007
Brockwood	10019
Broksonic	10236, 10463, 10003, 10426, 11905, 11911, 11929, 11935
Bydesign	11309
C&M	10700
Cadia	11283
Candle	10030, 10046, 10056, 10186
Carnivale	10030
Carver	10054, 10170
Casio	10611, 11205
CCE	10217, 10329
Celebrity	10000
Celera	10765
Changhong	10765
Cinego	11986
Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11935
Claritone	10185
Claron	10180
Classic	11984
Coby	11538, 12017, 12306, 12314, 12315, 12326, 12338, 12340, 12344, 12345, 12347, 12348, 12351, 12560
Commercial Solut.	10047
Compaq	10749
Concerto	10056
Contec	10180
Craig	10180
Crosley	10000, 10054
Crown	10180, 10039
CTX	10700
Curtis	11200, 11326, 12352, 12466
CXC	10180
Cyberhome	10794
Cytron	11326
Daewoo	10145, 10451, 10092, 11661, 10019, 10066, 10067, 10091, 10672, 11909
Daytron	10019
Dell	11264, 11080, 11178
Delta	11369
Denon	10145, 10511
Diamond Vision	11996
Digistar	11565
Digital Lifestyles	11765, 11822
Disney	11665, 12152
Cytron	11326
Daewoo	10145, 10451, 10092, 11661, 10019, 10066, 10067, 10091, 10672, 11909
Daytron	10019
Dell	11264, 11080, 11178
Delta	11369
Denon	10145, 10511
Diamond Vision	11996
Digistar	11565
Digital Lifestyles	11765, 11822
Disney	11665, 12152
Dumont	10017, 10019
Durabrand	10463, 10180, 10178, 10171, 11034, 10003, 11665
Dwin	10747
Dynex	12049, 11463
Elki	10735
Electroband	10000, 10185
Electrograph	11755, 11623
Electrohome	10463, 10381, 10409, 11570, 11670, 11672

OVERVIEW

The T01 universal remote control works exclusively with the set-top box supplied by your cable operator. This remote control operates all of the features and functions of the set-top box and is programmable to operate the Volume and Power of your TV or audio device.

INSTALLING BATTERIES

1. Pull back the remote control's battery cover and remove it.
2. Insert the two (2) supplied AA batteries according to the + and - marks in the battery case.
3. Push the battery cover back into place.
4. Test the unit by pressing the Power key.
5. If the batteries are inserted correctly, the green light blinks.

NOTE: When batteries need replacement, the remote control stops operating. Replace the old batteries with new AA batteries.

Element	11687, 12183
Emerson	11864, 11394, 10154, 10451, 10236, 10462, 10180, 10178, 10171, 11661, 11905, 11909, 11911, 11913, 11929, 11944, 11963, 12167, 10282, 10280, 10183, 10182, 10181, 10179, 10177, 10158, 10039, 10038, 10019, 10002
Emprex	11422, 11765
Encross	10876, 11474
Envision	10030, 10813, 11365, 12014, 12087
Epson	11122, 11290
Erae	11222
ESA	10171, 11944, 11963
Fisher	10154, 10159
Fujitsu	10179, 10186, 12008
Funai	10000, 10180, 10171, 10179, 11904, 11963
Futuretech	10180
Gateway	11755, 11001, 11756
GE	10047, 10051, 10451, 10178, 10021, 10027, 10029, 10055, 10135, 10279, 10282, 10747, 11907, 11919, 11922, 12359
GFM	10171, 11665, 11963, 12167
Gibraltar	10017, 10030, 10019
Go Video	10886, 11823, 11831
GoldStar	10178, 10030, 10002, 10019, 11032, 10039, 10056, 10409, 11926
Goodmans	10360
GPX	10360
Gradiente	10392
Grundig	10180, 10179
H & B	11366
Haier	11034, 10768, 11009, 11570, 11748
Hallmark	10178
Hanns.G	11783
Hannspree	11348, 11745, 11783
Harley Davidson	10043, 10179, 11904
Harman/Kardon	10054
Harvard	10180, 10068
Hewlett Packard	11494, 11088, 11089, 11101
Hewlett Packard	11494, 11088, 11089, 11101
Hisense	10748, 11314, 11660, 12089
Hitachi	10279, 10227, 10217, 10173, 10151, 10097, 10096, 10095, 10056, 10043, 10038, 10036, 10032, 10016
HP	11494, 11088, 11089, 11101
Hyundai	10849, 11219, 11294
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11394, 11286, 11603, 11665, 11684, 11990
Infinity	10054
Insignia	12049, 11423, 10463, 10171, 11204, 11326, 11385, 11517, 11660, 11892, 11963, 12002, 12417
Inteq	10017
iRIS	12189
IX	10877
Janeil	10046
JBL	10054
JCB	10000
JCM	12189, 12256
Jensen	10761, 10050, 10817, 11299, 11326, 11933
JVC	10463, 10053, 10036, 10069, 10160, 10169, 10182, 10731,
Kamp	10216
Kawasho	10158, 10216, 10308
Kaypani	10052
KDS	11687
KEC	10180
Kenwood	10030, 10019
KLH	10765, 10767

Kloss	10024, 10046
Knoll Systems	10781
KMDS	12278
Konka	10632, 10638, 10707, 11385, 11831, 11939
Kost	11262, 11483
Kreisen	10876, 11474
KTV	10180, 10030, 10039, 10183, 10185, 10217, 10280
LG	11423, 10017, 11265, 10178, 10442, 10700, 10856, 11178, 11530, 11637, 11934
LiteOn	10088
Lloyd's	11904
Loewe	10136
Logik	10016
Luce	10837, 11031
Luxman	10056
LXI	10047, 10054, 10154, 10156, 10178, 10148, 10747
MAG	11678
Magnasonic	11713, 11913
Magnavox	11454, 11866, 11755, 10054, 10051, 10030, 10171, 10706, 11944, 11963, 11931, 11913, 11904, 11990, 12372, 11525, 12597, 11365, 11198, 10802, 10386, 10230, 10187, 10186, 10179, 10096, 10036, 10028, 10024, 10020
Magnin	11907
Majestic	10016
Marantz	11454, 10054, 10030, 10704, 11714, 12447
Matsushita	10250
Maxent	11755, 11597, 11714, 11757
MB Quart	11868
Megatron	10178, 10145, 10003
Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11665, 11670, 11892, 11911, 11920, 11924, 11926
MGA	10150, 10178, 10030, 10019, 10155, 11907
Micro	11436
Midland	10047, 10017, 10051, 10032, 10039, 10135, 10747
Mintek	11603, 11990
Minutz	10021
Mitsubish	11250, 10093, 10150, 10178, 10014, 10019, 10036, 10098, 10155, 10331, 10592, 11797
Monivision	10700, 10843
Motorola	10093
MTC	10060, 10030, 10019, 10056, 10091, 10185, 10216
Multitech	10180, 10217
NAD	10156, 10178, 10056
Nakamichi	11493
Naxa	11998
NEC	10030, 10019, 10036, 10056, 10170, 10704, 11797, 12026
NetTV	11755
Nexus Electronics	12183
Nikko	10178, 10030, 10092
Niko	11581
Noblex	10430
Norcent	10748, 10824, 11089, 11365, 11590, 11591
Norwood Micro	11286, 11296
Noshi	10018
NTC	10092
NuVision	11657
Olevia	11610, 11144, 11240
Onwa	10180
Optimus	10250, 10154, 10166, 11913, 11924
Optoma	10887, 11348
Optonica	10093, 10165
Orion	10236, 10463, 11463, 10179, 11905, 11911, 11929
Panasonic	11480, 10250, 11457, 10051, 10161, 10162, 10226, 11291, 11919, 11924, 11947, 11969
Park	12104

PDI	11474
Petters	11523
Philco	11394, 10054, 10030, 10171, 10019, 10020, 10024, 10028, 10096, 10179, 10187, 10381, 11665, 11963
Philips	11454, 11394, 11866, 10054, 10690, 11483, 11744, 12372, 12597
Pilot	10030, 10019, 10039
Pioneer	11457, 10166, 10038, 10172
Planar	11496
Polaroid	11523, 10765, 12120, 12117, 12063, 12002, 11991, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11538, 11385, 11341, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865, 11314, 11286, 11276, 11262, 10865, 11385
Portland	10451, 10092, 11661, 10019, 10039
Prism	10051
Proscan	10047, 10030, 10466, 10747, 11922, 12147, 12183, 12256
Proton	10178, 10003, 10031, 10052, 10466
Protron	11320, 11323
Proview	11687
Pulsar	10017, 10019
Pvision	11222
Pyle	11200
Quasar	10250, 10051, 10165, 10219, 11291, 11919, 11924, 11969
RCA	12434, 10047, 10051, 10093, 11661, 12932, 12746, 12002, 11958, 11953, 11922, 11919, 11907, 10747, 10278, 10254, 10135, 10090, 10038, 10029, 10019, 10018
Realistic	10154, 10180, 10178, 10030, 10019, 10032, 10039, 10056, 10165
RevolutionHD	11623
Rhapsody	10183, 10185, 10216
Runco	10017, 10030, 10612
Sampo	11755, 10030, 10032, 10039, 10052, 10100, 10110, 11597
Samsung	12051, 10060, 10702, 10178, 10030, 11959, 11060, 10814, 10766, 10587, 10482, 10427, 10329, 10217, 10056, 10039, 10032, 10019
Samsux	10039
Sansui	10463, 10171, 10165, 10173, 11670, 11892, 11904, 11911, 11929, 11935
Sanyo	10054, 10154, 10036, 10088, 10107, 10146, 10159, 10232, 10484, 10798, 11907
Sceptre	10878, 11217, 11360, 11599, 12337
Scimitisu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711
Sharp	10093, 10039, 10153, 10157, 10165, 10281, 10386, 10491
Sharper Image	11950
Sheng Chia	10093
Shogun	10019
Signet	10800, 10844, 11262
Simpson	10186, 10187
Skyworth	11799
Solarism	11220
Sole	11031, 11366, 11377, 11483, 11530, 11623, 12076
Sony	10810, 10000, 10011, 10080, 11400, 11685, 11904, 11925
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11746, 11826, 11828, 11830, 11831
Spectricon	10003, 10137
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843

SunBrite	11420, 11435, 12337
Superscan	10093, 10864, 01944
Signature	10463, 10016
Signet	10800, 10844, 11262
Simpson	10186, 10187
Skyworth	11799
Solarism	11220
Sole	11031, 11366, 11377, 11483, 11530, 11623, 12076
Sony	10810, 10000, 10011, 10080, 11400, 11685, 11904, 11925
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11746, 11826, 11828, 11830, 11831
Spectricon	10003, 10137
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBrite	11420, 11435, 12337
Superscan	10093, 10864, 01944
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10871, 10872, 11963
Sylvania	11864, 11394, 10054, 10030, 10171, 11963, 11944, 11931, 11913, 11665, 11314, 10587, 10381, 10187, 10096, 10065, 10028, 10024, 10020
Symphonic	10180, 10171, 11904, 11913
Syntax	11610, 11144, 11240
Tandy	10093, 10218
Tatung	10003, 11101, 11286, 11287, 11288, 11361, 11503, 11756
Technics	10250, 10051
Technol Ace	10179
Techview	10847, 12004
Techwood	10051, 10003, 10056
Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10019, 10039, 10056, 10179, 10186, 10312
Telefunken	10702, 10056
Tera	10031
Thomas	11904
Thomson	10209, 10625
TMK	10178, 10056, 10177
TNCi	10017
Toshiba	10156, 10154, 11265, 10060, 10003, 10036, 10149, 11343, 11369, 11935, 11945, 11959, 12006
Tosonic	10185
Totevision	10039
Trical	10157
TruTech	11665, 11723, 12066
TVS	10463
Ultra	10391, 11323
Universal	10027
US Logic	11286
Vector Research	10030
Venturer	11865
VEOS	11007
Victor	10053
Video Concepts	10098
Vidikron	10054
Vidtech	10178, 10019, 10036
Viewsonic	11755, 10797, 10857, 10864, 10885, 11330, 11365, 11578, 11627, 11742, 12014, 12087
Viking	10046, 10312
Viore	11207, 11684, 11811, 12104, 12087
Visart	11336
Vizio	11758, 10864, 10885, 11756
Waycon	10156

Westinghouse	10451, 10885, 10889, 10890, 11217, 11282, 11577, 12293
White Westinghouse	10463, 11661, 11909
WinBook	11381, 11503
Wyse	11365
Yamaha	10030, 10019, 10797
Zenith	11423, 10000, 10047, 10017, 10463, 11265, 10178, 10030, 10145, 10092, 11661, 10160, 11365, 10016, 11904, 11909, 11911, 11929
Zonda	10003

RCA	31023, 31609, 31254, 30346, 30531, 31074, 31390, 31459, 31511, 32041, 32611
Samsung	31868
Sansui	30189, 30346, 31089
Sanyo	31251, 31469, 31801
Sharp	30186
Sherwood	31077, 31423, 31517, 31653, 32169
Sony	31622, 30158, 31131, 31382, 31503, 31558, 31658, 31722, 31758, 32216, 32475
Soundesign	30670
Stereophonics	31023
Stunfire	31313
Sylvania	30797
Teac	30463, 31074, 31390, 31528, 32261
Technics	31308, 31518, 30039, 31633
Thorens	31189
Toshiba	31572
Vivid	31635
Vizio	31517
Yamaha	32061, 30176, 30186, 30376, 31176, 31276, 31331, 31375, 31476, 32455, 32467, 32471
Yorx	30195
Zenith	30857, 31293, 31524, 31652

SETUP CODES FOR AUDIO

ADC	30531
Aiwa	30158, 30189, 30121, 31089, 31388, 31641
Akai	31512
Altec Lansing	32595, 32597
AMC	31077
Amphion Media	31563, 31615
AMW	31563, 31615
Anam	31609, 31074
Apex Digital	31257, 31430, 31774
Arcam	31189, 30189
Audiologic	31646
Audiotronic	31189
Audiovox	31390
B & K	30820
Bose	31229, 30639, 31253, 31841, 31933
Cambridge Sound	31370
Carver	31189, 30189, 30042, 30121, 31089
Casio	30195
Coby	31389, 32127
Criterion	31420
Curtis	30797, 31389
Daewoo	31250
Denon	32857, 31360, 30176, 31142, 32279
Dynex	32971
Fisher	30042, 31409, 31801
Garrard	30463
GE	31379
Go Video	31532
GPX	32604
Harman/Kardon	30110, 30189, 30891, 31306, 32443
Hitachi	31273, 31801
Insignia	31030, 31077, 31652, 31751, 31893, 32126, 32169, 32175, 32472, 32929, 32966
Integra	31805, 30135, 31298
iSymphony	32018, 32258, 32442
JBL	30110, 31306
Jensen	30797
JVC	30074, 30531, 31374, 31495, 31676
Kenwood	31313, 30042, 30077, 30186
KLH	31390, 31412, 31428
Klipsch	31443
Koss	31497
Lasonic	31798
Lennox	31437
Lexicon	31076
LG	31293, 31524, 32676
Linn	30189
Liquid Video	31497
Magnavox	31189, 31269, 30189, 30195, 30391, 30531