

Proscan	31254
Quasar	30039
RadioShack	31263
RCA	31023, 31609, 31254, 30054, 30080, 30346, 30530, 30531, 31074, 31154, 31390, 31511
Realistic	30181
Regent	31437
Rio	31383, 31869
Saba	31519
Samsung	31295, 31500
Sansui	30189, 30346
Sanyo	30801, 31251, 31469, 31801
Sharp	30186, 31286
Sharper Image	31263, 31556
Sherwood	30491, 30502, 31077, 31423, 31517, 31653, 31905
Shinsonic	31426
Sirius	31602, 31627, 31811, 31987
Sonic Blue	31383, 31532, 31869
Sony	31058, 31441, 31258, 31759, 31622, 30158, 30168, 31349, 31406, 31442, 31558, 31658, 31758, 31858, 31958
Soundesign	30670
Stereophonics	31023
Sunfire	31313, 30313, 30314, 31052
Teac	30463, 31074, 31390, 31528
Technics	31308, 31518, 30039, 30309
Thorens	31189
Toshiba	31788
Venturer	31390
Victor	30074
Wards	30158, 30189, 30014, 30054, 30080
XM	31406, 31414
Yamaha	30176, 30186, 31176, 31276, 31331, 31375, 31476
Zenith	30857, 31293

Setup Codes for Audio Accessories

Accurian	31106
Aiwa	30159
Altec Lansing	31056, 31485
Apple	31115, 31644
Cambridge Soundworks	31530
Creative	30872
iDeck	31106
Marantz	31491
Monitor Audio	31106
Motorola	31464
NaviPod	31644
Netgear	31785
Omnifi	31605
Roku	31828
Russound	31302
Slim Devices	31844
Sony	30159
Yamaha	31809, 31810

Setup Codes for Cable Boxes/Converters

ABC	00003, 00008
Americast	00899
Bell South	00899
Digeo	01187
Director	00476
General Instrument	00476, 00810, 00276, 00003
GoldStar	00144
Hamlin	00273
Jerrold	00476, 00810, 00276, 00003
Memorex	00000
Motorola	01376, 00476, 00810, 00276, 01187
Pace	01877, 00237, 00008
Panasonic	00000, 00107
Paragon	00000
Philips	01305, 00317
Pioneer	01877, 00877, 00144, 00533
Pulsar	00000
Quasar	00000
RCA	01256

Regal	00273
Runco	00000
Samsung	00144
Scientific Atlanta	01877, 00877, 00477, 00008
Sony	01006
Starcom	00003
Supercable	00276
Thomson	01256
Torx	00003
Toshiba	00000
Zenith	00000, 00525, 00899

Setup Codes for CD Players

Aiwa	30157
Burmester	30420
California Audio Labs	30029, 30303
Carver	30157, 30179
Denon	30873, 30003, 30034
DKK	30000
DMX Electronics	30157
Fisher	30179
Garrard	30420
Genexxa	30032
Harman/Kardon	30157, 30173
Hitachi	30032
Integra	30101
JVC	30072
Kenwood	30681, 30626, 30028, 30037, 30190
KLH	31318, 31372, 31373, 31711
Krell	30157
Linn	30157
Magnavox	30157
Marantz	30626, 30029, 30157
MCS	30029
Miro	30000
Mission	30157
MTC	30420
NSM	30157
Onkyo	30868, 30101

Optimus	31063, 30000, 30032, 30037, 30087, 30145, 30179, 30420, 30468, 31075
Panasonic	30029, 30303, 30388, 30752
Parasound	30420
Philips	30626, 30157
Pioneer	31063, 31062, 30032, 31087, 30468
Polk Audio	30157
Proton	30157
QED	30157
Quad	30157
Quasar	30029
RadioShack	31075
RCA	31062, 30032, 30053, 30179, 30420, 30468
Realistic	30179, 30420
Rotel	30157, 30420
SAE	30157
Sansui	30157
Sanyo	30087, 30179
Sharp	30861, 30037
Sherwood	31067
Sonic Frontiers	30157
Sony	30490, 30000, 30100, 31364, 30185
Soundesign	30145
TAG McLaren	30157
Tascam	30420
Teac	30420
Technics	30029, 30303
Victor	30072
Wards	30157, 30053
Yamaha	30490, 30888, 30036, 31292

Setup Codes for DBS

AlphaStar	00772
Coolsat	01806
DirecTV	01377, 00392
Dishpro	01505, 01005, 00775, 01775
Echostar	01505, 01005
Hitachi	00819

HTS	00775, 01775
Hughes Network Systems	00749, 01749
JVC	00775, 01775
LG	01414
Magnavox	00724, 00722
Memorex	00724
Motorola	00869
Panasonic	00247, 00701
Philips	00724, 01076, 00722, 00099
RCA	00566, 00855, 00143, 01392
Samsung	01276, 01109
Sony	01639
Star Choice	00869
Toshiba	00749, 00790, 01285
Uniden	00724, 00722
Zenith	01856

Setup Codes for DVD Players

Accurian	21072, 21416
Adcom	21094
Advent	21016
Aiwa	20641
Akai	20695, 20770, 20899, 21089
Alco	20790
Allegro	20869
Amphion Media Works	20872
AMW	20872
Apex Digital	20672, 20717, 20755, 20794, 20796, 20797, 20830, 21004, 21020, 21056, 21061, 21100
Arrgo	21023
Aspire Digital	21168, 21407
Audiovox	20790, 21071, 21072, 21121, 21122
Axion	21071, 21072
Bel Canto Design	21571
Blaupunkt	20717
Blue Parade	20571
Broksonic	20695, 20868
Cinea	20831

CineVision	20876, 20833, 20869
Citizen	20695, 21277
Coby	20778, 21086, 21107, 21177
Craig	20831
Curtis Mathes	21087
CyberHome	20816, 20874, 21023, 21024, 21117, 21129, 21502
Daewoo	20784, 20705, 20833, 20869, 21169, 21172, 21234, 21242
Denon	20490, 20634
Desay	21407
DigitalMax	21738
Disney	20675, 21270
Dual	21068, 21085
Durabrand	21127
DVD2000	20521
Emerson	20591, 20675, 20821, 21268
Enterprise	20591
ESA	20821, 21268
Fisher	20670
Funai	20675, 21268, 21334
Gateway	21073, 21077, 21158, 21194
GE	20522, 20815, 20717
Go Video	20744, 20715, 20741, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304, 21730
Go Vision	21071, 21072
GoldStar	20741
Greenhill	20717
Harman/Kardon	20582, 20702
Hitachi	20573, 20664, 21247
Hiteker	20672
Humax	21588
iLo	21348
Initial	20717
Insignia	21268
Integra	20627
JBL	20702
Jensen	21016

JVC	20558, 20623, 20867, 21164, 21275, 21602, 21863
Kawasaki	20790
Kenwood	20490, 20534
KLH	20717, 20790, 21020, 21149
Koss	20651
Lasonic	20798
Lenoxx	21127
LG	20591, 20741, 20801, 20869
LiteOn	21058, 21158, 21416, 21440, 21738
Loewe	20511
Magnavox	20503, 20539, 20646, 20675, 20821, 21268, 21506
Malata	20782
Marantz	20539
McIntosh	21273
Memorex	20695, 20831, 21270
Microsoft	20522, 21708
Mintek	20839, 20717
Mitsubishi	21521, 20521
NAD	20741
Nakamichi	21222
NEC	20785
Nesa	20717
NexxTech	21402
Norcent	21003, 20872, 21107, 21265
Onkyo	20503, 20627, 20792
Oritron	20651
Panasonic	20490, 20632, 20703, 21362, 21462, 21490, 21762
Philips	20503, 20539, 20646, 20675, 20854, 21260, 21267, 21354
Pioneer	20525, 20571, 20631, 20632
Polaroid	21020, 21061, 21086
Polk Audio	20539
Portland	20770
Presidian	20675, 21072, 21738
Prima	21016
Proscan	20522
ProVision	20778

Qwestar	20651
RCA	20522, 20571, 20717, 20790, 20822, 21022, 21132, 21769
Rio	20869
Rotel	20623, 21178
Rowa	20823
Sampo	20698, 20752
Samsung	20490, 20573, 20199, 20820, 20899, 21044, 21075
Sansui	20695
Sanyo	20670, 20695, 20873
Sensory Science	21158
Sharp	20630, 20675, 20752, 21256
Sharper Image	21117
Sherwood	20633, 20770, 21043, 21077
Shinonic	20533, 20839
Sonic Blue	20869, 21099
Sony	20533, 21533, 20864, 21033, 21070, 21431, 21892
Sova	21122
Superscan	20821
Sylvania	20675, 20821, 21268
Symphonic	20675, 20821
TAG McLaren	20894
Teac	20790
Technics	20490, 20703
Theta Digital	20571
Tivo	21503
Toshiba	20503, 20695, 21045, 21154, 21503, 21588, 21769
Tredex	20800
Urban Concepts	20503
US Logic	20839
Venturer	20790
Vizio	21064, 21226
Xbox	20522, 21708
Yamaha	20490, 20539, 20545
Zenith	20503, 20591, 20741, 20869
Zoece	21265

Setup Codes for DVD/PVR Combos

www.urcsupport.com



 
 
Controlled by the DVD

Go Video	21730
Humax	21588
Panasonic	20490
Pioneer	20631
RCA	20522
Sharp	21256
Sylvania	20675
Toshiba	21503, 21588



Controlled by the VCR

RCA	20880
Sylvania	20000
Toshiba	21008, 21996



Setup Codes for Home Automation

Accutek	31215
Amana	31716
Audio Access	30154
Bonaire	30846, 31215
Comfortex	30400
Da-Lite	30780
Frigidaire	31333, 31845
GE	30240
GoldStar	31537
Holmes	31215
Hunter Douglas	30433
Kenmore	31537
Lasko	30846
LG	31537
Lightolier	30184
LiteTouch	30084
Lutron	30597, 30318, 31239, 31597
One For All	30167
PCS	30184
RadioShack	30240
Royal Sovereign	31651
Russound	31232, 31233
Security System	30167
Sharper Image	30846
SmartLinc	30184
Somfy	30780
Universal X10	30167
Whirlpool	31332
Windmere	31215
X10	30167

Setup Codes for Satellite Receivers

AlphaStar	00772
Bell ExpressVu	00775, 01170
Chaparral	00216
Coolsat	01806
Crossdigital	01109

DirecTV	01377, 00392, 00566, 00639, 01639, 01142, 00247, 00749, 01749, 00724, 00819, 01856, 01076, 01108, 00099, 01109, 01392, 01414, 01442, 01443, 01444, 01609, 01640
Dish Network System	01505, 01005, 00775, 01170, 01775
Dishpro	01505, 01005, 00775, 01775
Echostar	01505, 01005, 00775, 01170, 01775
Expressvu	00775, 01775
GE	00566
General Instrument	00869
GOI	00775, 01775
Hisense	01535
Hitachi	00819, 01250
HTS	00775, 01775
Hughes Network Systems	01142, 00749, 01749, 01442, 01443, 01444
Humax	01790
iLo	01535
JVC	00775, 01170, 01775
LG	01226, 01414
Magnavox	00724, 00722
Memorex	00724
Mitsubishi	00749
Motorola	00869
Next Level	00869
Panasonic	00247, 00701
Pansat	01807
Paysat	00724
Philips	01142, 00749, 01749, 00724, 01076, 00722, 00099, 01442, 00856
Proscan	00392, 00566
Proton	01535
RadioShack	00869
RCA	00566, 00855, 00143, 01392
Samsung	01377, 01276, 01108, 01109, 01442, 01609
Sony	00639, 01639, 01640

Star Choice	00869
Tivo	01142, 01442, 01443, 01444
Toshiba	00749, 01749, 00790, 01285
UltimateTV	01392, 01640
Ultrasat	01806
Uniden	00724, 00722
US Digital	01535
USDTV	01535
Voom	00869
Zenith	01856, 00856

Setup Codes for DVR/PVR Systems

ABS	21972
Alienware	21972
CyberPower	21972
Dell	21972
DirecTV	20739
Gateway	21972
Go Video	20614
Hewlett Packard	21972
Howard Computers	21972
HP	21972
Hughes Network Systems	20739
Humax	20739
Hush	21972
iBUYPOWER	21972
Linksys	21972
Media Center PC	21972
Microsoft	21972
Mind	21972
Niveus Media	21972
Northgate	21972
Panasonic	20614, 20616
Philips	20618, 20739
RCA	20880
ReplayTV	20614, 20616
Samsung	20739
Sonic Blue	20614, 20616
Sony	20636, 21972
Stack 9	21972
Systemax	21972
Tagar Systems	21972
Tivo	20618, 20636, 20739
Toshiba	21008, 21972, 21996
Touch	21972
Viewsonic	21972
Voodoo	21972
ZT Group	21972

Setup Codes for TVs

A-Mark	10003
--------	-------

Abex	10032
Accurian	11803
Action	10873
Admiral	10093, 10463
Advent	10761, 10783, 10815, 10817, 10842, 11933
Adventura	10046
Aiko	10092
Akai	10812, 10702, 10030, 10672, 11207, 11675, 11676, 11903, 11935
Alaron	10179
Albatron	10700, 10843
Ambassador	10177
America Action	10180
Ampro	10751
Anam	10180
AOC	10030, 10003, 10052, 11365
Apex Digital	10748, 10879, 10765, 10767, 10890, 11217, 11943
Archer	10003
Astar	11531, 11548
Audiovox	10451, 10180, 10092, 10003, 10623, 10710, 10802, 10846, 10875, 11284, 11937, 11951, 11952
Aventura	10171
Axion	11937
Bell & Howell	10154, 10016
BenQ	11032, 11315
Bradford	10180
Broksonic	10236, 10463, 10003, 11911, 11929, 11935, 11938
Byd:sign	11309, 11311
Cadia	11283
Candle	10030, 10046, 10056
Carnivale	10030
Carver	10054
Celebrity	10000
Celera	10765
Champion	11362
Changhong	10765

Cinego	11986
Citizen	10060, 10030, 10092, 10039, 10046, 10056, 10280, 11928, 11935
Clarion	10180
Commercial Solutions	11447, 10047
Concerto	10056
Contec	10180
Craig	10180
Crosley	10054
Crown	10180, 10039
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 10145, 10166, 11919, 11347, 11147, 10466, 10056, 10039, 10016
CXC	10180
CyberHome	10794
Cytron	11326
Daewoo	10451, 10092, 11661, 10039, 10623, 10661, 10672, 11928
Dell	11080, 11178, 11264, 11403
Denon	10145, 10511
Denstar	10628
Diamond Vision	11996, 11997
Dumont	10017
Durabrand	10463, 10180, 10178, 10171, 11034, 10003
Dwin	10720, 10774
Electroband	10000
Electrograph	11623, 11755
Electrohome	10463
Emerson	10154, 10236, 10463, 10180, 10178, 10171, 11963, 11944, 11929, 11928, 11911, 11394, 10623, 10280, 10179, 10177, 10039, 10038
Emprex	11422, 11546
Envision	10030, 10813, 11365
Epson	10833, 10840, 11290
ESA	10812, 10171, 11944, 11963

Fisher	10154
FlexVision	10710
Fujitsu	10179, 10683, 10809, 10853
Funai	10180, 10171, 10179, 11271, 11904, 11963
Futuretech	10180
Gateway	11001, 11002, 11003, 11004, 11755, 11756
GE	11447, 10047, 10051, 10451, 10178, 10021, 10027, 11347, 11917, 11919, 11922
Gibralter	10017, 10030
Go Video	10886
GoldStar	10178, 10030, 10032, 11926
Grunpy	10180, 10179
Haier	11034, 10768
Hallmark	10178
Hannspree	11348, 11351, 11352
Harley Davidson	10179, 11904
Harman/Kardon	10054
Harvard	10180
Havermy	10093
Helios	10865
Hello Kitty	10451
Hewlett Packard	11088, 11089, 11101, 11494, 11502, 11642
Hisense	10748
Hitachi	11145, 10145, 10016, 10032, 10038, 10056, 10797, 11904, 11960
HP	11088, 11089, 11101, 11494, 11502, 11642
Hyundai	10849, 11219, 11294
iLo	11286, 11603, 11990
Infinity	10054
Initial	11603, 11990
Insignia	10171, 11204, 11326, 11517, 11564, 11963, 12002
Inteq	10017
Janeil	10046
JBL	10054
JCB	10000

Jensen	10761, 10815, 10817, 11299, 11933
JVC	10053, 10731, 11253, 11923
Kaypani	10052
KDS	11498
KEC	10180
Kenwood	10030
KLH	10765, 10767, 11962
Kloss	10024, 10046
Konka	10628, 10632, 10638, 10703, 10707
Kost	11262, 11483
KTV	10180, 10030, 10039, 10280
LG	11265, 10178, 10700, 10823, 10829, 10856, 11178, 11325, 11423, 11758, 11993
Lloyd's	11904
Logik	10016
Luxman	10056
LXI	10047, 10054, 10154, 10156, 10178
MAG	11498
Magnasonic	11928
Magnavox	11454, 10054, 10030, 10706, 11990, 11963, 11944, 11931, 11904, 11525, 11365, 11254, 11198, 10802, 10386, 10187, 10179, 10096, 10024, 10020
Majestic	10016
Marantz	10054, 10030, 10704, 10854, 10855, 11154, 11398
Matsushita	10250, 10650
Maxent	10762, 11211, 11755
Megapower	10700
Megatron	10178, 10145, 10003
Memorex	10154, 10463, 10150, 10178, 10016, 10179, 11911, 11926
MGA	10150, 10178, 10030
Midland	10047, 10017, 10051, 10032, 10039

Mintek	11603, 11990
Minutz	10021
Mitsubishi	10093, 11250, 10150, 10178, 10836, 10868, 11550, 11917
Monivision	10700, 10843
Motorola	10093, 10835
Moxell	10835
MTC	10060, 10030, 10056
Multitech	10180
NAD	10156, 10178, 10056, 10866, 11156
NEC	10030, 10056, 10497, 10882, 11398, 11704
NetTV	10762, 11755
Nikko	10178, 10030, 10092
Norcent	10748, 10824, 11089, 11365, 11589, 11590, 11591
Norwood Micro	11286, 11296, 11303
Noshi	10018
NTC	10092
Olevia	11144, 11240, 11331, 11610
Olympus	11342
Onwa	10180
Optimus	10154, 10250, 10166, 10650
Optoma	10887
Optonica	10093
Orion	10236, 10463, 11463, 10179, 11911, 11929
Panasonic	10250, 10051, 10650, 11291, 11410, 11480, 11919, 11941, 11946, 11947
Penney	10047, 10156, 10051, 10060, 10178, 10030, 10003, 10018, 10021, 10027, 10032, 10039, 11347, 11919, 11926
Petters	11523
Philco	10054, 10030, 10020, 10096
Philips	11454, 10054, 10690, 11154, 11483, 11961
Pilot	10030, 10039
Pioneer	10166, 10038, 10679, 10866, 11260, 11398

Polaroid	10765, 10865, 11262, 11276, 11314, 11316, 11326, 11327, 11328, 11341, 11498, 11523, 11962, 11991, 11992
Portland	10092, 10039
Prima	10761, 10783, 10815, 10817, 11933
Princeton	10700, 10717
Prism	10051
Proscan	11447, 10047, 11347, 11922
Proton	10178, 10003, 10052, 10466
Protron	11320, 11323
Proview	10835, 11401, 11498
Pulsar	10017
Quasar	10250, 10051, 10650, 11919
RadioShack	10047, 10154, 10180, 10178, 10030, 10032, 10039, 10056, 11904
RCA	11447, 10047, 12002, 11958, 11953, 11948, 11922, 11919, 11917, 11547, 11347, 11247, 11147, 11047, 10679, 10090, 10038, 10018
Realistic	10154, 10180, 10178, 10030, 10032, 10039, 10056
Runco	10017, 10030, 10497, 10603, 11398
Sampo	10030, 10032, 10039, 10052, 10762, 11755
Samsung	10060, 10812, 10702, 10178, 10030, 10032, 10056, 10766, 10814, 11060, 11312, 11395, 11575, 11903, 11959
Samsux	10039
Sansui	10463, 11409, 11904, 11911, 11929, 11935
Sanyo	10154, 10088, 10146, 10799, 10893, 11142
Sceptre	10878, 11217, 11360, 11599
Scotch	10178
Scott	10236, 10180, 10178, 10179

Sears	10047, 10054, 10154, 10156, 10178, 10171, 10056, 10146, 10179, 11904, 11926
Sharp	10093, 10039, 10386, 10491, 10688, 10689, 10818, 10851, 11602, 11917, 11393
Sheng Chia	10093
Sherwood	11399
Signature	10016
Signet	11262
SIM2 Multimedia	11297
Simpson	10187
Sony	11100, 10000, 10834, 11317, 11685, 11904, 11925
Soundesign	10180, 10178, 10179
Sova	11320, 11952
Soyo	11520
Spectricon	10003
Spectroniq	11498
Squareview	10171
SSS	10180
Starlite	10180
Studio Experience	10843
Superscan	10093, 10864
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10870, 10871, 10872
Sylvania	10054, 10030, 10171, 10020, 10096, 11271, 11314, 11394, 11931, 11944, 11963
Symphonic	10180, 10171, 11904, 11944
Syntax	11144, 11240, 11331
Tandy	10093
Tatung	10003, 11101, 11285, 11286, 11287, 11288, 11361, 11756
Technics	10250, 10051
Technol Ace	10179
Techview	10847
Techwood	10051, 10003, 10056

Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10039, 10056, 10179
Telefunken	10702, 10056
Thomas	11904
TMK	10178, 10056, 10177
TNCi	10017
Toshiba	10154, 11256, 10156, 11265, 10060, 11945, 11936, 11935, 11918, 11704, 11656, 11635, 11524, 11356, 11343, 11325, 11306, 11156, 10845, 10832, 10650, 11971
Totevision	10039
TVS	10463
Ultra	11323
Universal	10027
US Logic	11286, 11303
Vector Research	10030
Victor	10053
Vidikron	10054, 11398
Vidtech	10178
Viewsonic	10797, 10857, 10864, 10885, 11330, 11342, 11578, 11627, 11640, 11755
Viking	10046
Viore	11207
Visart	11336
Vizio	10864, 10885, 11499, 11756, 11758
Wards	10054, 10178, 10030, 10016, 10020, 10021, 10027, 10056, 10096, 10179, 10866, 11156
Waycon	10156
Westinghouse	10885, 10889, 10890, 11282, 11577
White Westinghouse	10463, 10623
Wyse	11365
Yamaha	10030, 10769, 10797, 10833, 10839
Zenith	10017, 10463, 11265, 10178, 10092, 10016, 11904, 11911, 11929

Zonda 10003

Setup Codes for TVs (DLP)

Hewlett Packard	11494
HP	11494
LG	11265
Magnavox	11525
Mitsubishi	11250
Optoma	10887
Panasonic	11291
RCA	11447
Samsung	10812, 11060, 11312
SVA	10872
Toshiba	11265, 11306
Vizio	11499

Setup Codes for TVs (LCD)

Accurian	11803
Action	10873
Akai	11675, 11676, 11935
AOC	11365
Apex Digital	10890, 11217
Astar	11531, 11548
Audiovox	10180, 10710, 10802, 10846, 10875, 11284, 11937, 11951, 11952
BenQ	11315
Byd:sign	11309, 11311
Cadia	11283
Citizen	11935
CyberHome	10794
Dell	11080, 11178, 11264
Emprex	11422, 11546
Envision	10813, 11365
FlexVision	10710
Funai	10171
Go Video	10886
Hannspree	11348, 11351
Hewlett Packard	11088, 11642

HP	11088, 11642
Hyundai	10849, 11219, 11294
iLo	11286, 11603, 11990
Initial	11603, 11990
Insignia	11204, 11517, 11564, 12002
Jensen	11299
Kost	11262
LG	10856, 11178, 11993
Magnavox	10802, 11198, 11365, 11990
Marantz	10855
Maxent	10762, 11211, 11755
Mintek	11603, 11990
Mitsubishi	11250
NetTV	10762
Norcent	11365, 11589, 11591
Norwood Micro	11286, 11296
Olevia	11144, 11240, 11331, 11610
Panasonic	10650, 11941
Petters	11523
Philips	11454, 11483
Polaroid	11262, 11276, 11316, 11341, 11498, 11523
Protron	11320, 11323
Proview	11401
RCA	10047, 11958
Sampo	10762, 11755
Samsung	10812, 10766, 10814, 11395, 11575
Sansui	11409
Sanyo	11142
Sceptre	10878, 11217, 11360, 11599
Sharp	10093, 10818, 11602
Sherwood	11399
Signet	11262
Sony	11685
Sova	11320
Soyo	11520
Superscan	10864
SVA	10587, 10870, 10871
Sylvania	10171, 11271, 11314, 11394
Symphonic	10171

Syntax	11144, 11240, 11331
Tatung	11286
Techview	10847
Toshiba	10845, 11343, 11524, 11635, 11656
Ultra	11323
US Logic	11286
Vidikron	11398
Viewsonic	10857, 10864, 10885, 11330, 11578, 11627, 11640
Visart	11336
Vizio	10864, 10885, 11756, 11758
Westinghouse	10885, 10889, 10890, 11282, 11577
Wyse	11365
Zenith	11265

Setup Codes for TVs (Plasma)

Akai	10812, 11207, 11675
Albatron	10843
BenQ	11032
Byd:sign	11311
Daewoo	10661
Dell	11264
Electrograph	11623, 11755
ESA	10812
Fujitsu	10683, 10809, 10853
Funai	11271
Gateway	11001, 11002, 11003, 11004, 11755, 11756
Helios	10865
Hewlett Packard	11089, 11502
Hitachi	10797
HP	11089, 11502
Insignia	11564
JVC	10731
LG	10178, 10829, 10856, 11423, 11758
Marantz	10704, 11398
Maxent	11755
Mitsubishi	10836

Monivision	10843
Motorola	10835
Moxell	10835
NEC	11398, 11704
NetTV	11755
Norcent	10824, 11089, 11590
Norwood Micro	11303
Panasonic	10250, 10650, 11480
Philips	10690
Pioneer	10679, 11260, 11398
Polaroid	10865, 11276, 11327, 11328
Proview	10835
Runco	11398
Sampo	11755
Samsung	10812, 11312
Sony	10000, 11317
Studio Experience	10843
SVA	10865
Sylvania	11271, 11394
Tatung	11101, 11285, 11287, 11288, 11756
Toshiba	10650, 11704
US Logic	11303
Viewsonic	10797, 11755
Viore	11207
Vizio	11756, 11758
Yamaha	10797
Zenith	10178

Setup Codes for TV/DVD Combos

Controlled by the TV

Accurian	11803
Advent	11933
Akai	11675, 11935
Apex Digital	11943
Audiovox	11937, 11951, 11952
Axion	11937
Broksonic	11935
Cinego	11986
Citizen	11935
Diamond Vision	11997
Emerson	11394, 11963
ESA	11963
Funai	11963
Hitachi	11960
iLo	11990
Initial	11990
Insignia	11963, 12002
Jensen	11933
KLH	11962
LG	11993
Magnavox	11963, 11990
Mintek	11990
Panasonic	11941
Philips	11961
Polaroid	11962, 11991
Prima	11933
RCA	11948, 11958, 12002
Samsung	11903
Sansui	11935
Sova	11952
Sylvania	11394, 11963
Toshiba	11635, 11935

Controlled by the DVD

Advent	21016
Akai	20695
Apex Digital	20830
Audiovox	21071, 21121, 21122

Axion	21071
Broksonic	20695
Citizen	20695
Emerson	20675, 21268
ESA	21268
Funai	21268
Go Vision	21071
Hitachi	21247
Insignia	21268
Jensen	21016
Magnavox	21268
Panasonic	21490
Philips	20854, 21260
Prima	21016
RCA	21022
Samsung	20899
Sansui	20695
Sova	21122
Sylvania	20675, 21268
Toshiba	20695

Setup Codes for TV/VCR Combos

Controlled by the TV

America Action	10180
Audiovox	10180
Broksonic	11911, 11929
Citizen	11928
Curtis Mathes	11919
Daewoo	11928
Emerson	10236, 11911, 11928, 11929
Funai	11904
GE	11917, 11919, 11922
GoldStar	11926
Harley Davidson	11904
Hitachi	11904
JVC	11923
Lloyd's	11904
Magnasonic	11928
Magnavox	11904, 11931
Memorex	11926
Mitsubishi	11917
Orion	11911, 11929
Panasonic	11919
Penney	11919, 11926
Quasar	11919
RadioShack	11904
RCA	11917, 11919, 11922
Samsung	11959
Sansui	11904, 11911, 11929
Sears	11904, 11926
Sony	11904, 11925
Sylvania	11931
Symphonic	11904
Thomas	11904
Toshiba	11918, 11936
Zenith	11904, 11911, 11929

Controlled by the VCR

America Action	20278
Audiovox	20278
Broksonic	20002, 20479, 21479

Citizen	21278
Colt	20072
Curtis Mathes	21035
Daewoo	21278
Emerson	20002, 20479, 20593, 21278, 21479
Funai	20000
GE	20240, 20807, 21035, 21060
GoldStar	21237
Harley Davidson	20000
Hitachi	20000
LG	21037
Lloyd's	20000
Magnasonic	20593, 21278
Magnavox	20000, 20593, 21781
Magnin	20240
Memorex	20162, 21037, 21162, 21237, 21262
MGA	20240
Mitsubishi	20807
Optimus	20162, 20593, 21162, 21262
Orion	20002, 20479, 21479
Panasonic	20162, 21035, 21162, 21262
Penney	20240, 21035, 21237
Quasar	20162, 21035, 21162
RadioShack	20000, 21037
RCA	20240, 20807, 21035, 21060
Samsung	21014
Sansui	20000, 20479, 21479
Sanyo	20240
Sears	20000, 21237
Sony	20000, 21232
Sylvania	21781
Symphonic	20000, 20593
Thomas	20000
Toshiba	20845, 21145
Zenith	20000, 20479, 21479

Setup Codes for VCRs

ABS	21972
Admiral	20048, 20209
Adventura	20000
Aiko	20278
Aiwa	20037, 20000, 20124
Alienware	21972
America Action	20278
American High	20035
Asha	20240
Audiovox	20037, 20278
Beaumarck	20240
Bell & Howell	20104
Broksonic	20184, 20121, 20209, 20002, 20479, 21479
Calix	20037
Canon	20035
Carver	20081
CCE	20072, 20278
Citizen	20037, 20278, 21278
Colt	20072
Craig	20037, 20047, 20240, 20072
Curtis Mathes	20060, 20035, 20162, 21035
Cybernex	20240
CyberPower	21972
Daewoo	20045, 20278, 21278
Dell	21972
Denon	20042
DirecTV	20739
Durabrand	20039, 20038
Dynatech	20000
Electrohome	20037
Electroponic	20037
Emerex	20032
Emerson	20037, 20184, 20000, 20121, 20043, 20209, 20002, 20278, 20479, 20593, 21278, 21479, 21593
Fisher	20047, 20104
Fuji	20035, 20033
Funai	20000, 20593, 21593

Garrard	20000
Gateway	21972
GE	20060, 20035, 20240, 20807, 21035, 21060
Go Video	20432, 20614
GoldStar	20037, 20038, 21237
Gradiente	20000
Harley Davidson	20000
Harman/Kardon	20081, 20038
Harwood	20072
Hewlett Packard	21972
HI-Q	20047
Hitachi	20000, 20042, 20089
Howard Computers	21972
HP	21972
Hughes Network Systems	20042, 20739
Humax	20739
Hush	21972
iBUYPOWER	21972
JVC	20067
KEC	20037, 20278
Kenwood	20067, 20038
KLH	20072
Kodak	20035, 20037
LG	21037
Linksys	21972
Lloyd's	20000
Logik	20072
LXI	20037
Magnasonic	20593, 21278
Magnavox	20035, 20039, 20081, 20000, 20149, 20563, 20593, 21593, 21781
Magnin	20240
Marantz	20035, 20081
Marta	20037
Matsushita	20035, 20162, 21162
Media Center PC	21972
MEI	20035

Memorex	20035, 20162, 20037, 20048, 20039, 20047, 20240, 20000, 20104, 20209, 20479, 21037, 21162, 21237, 21262
MGA	20240, 20043
MGN Technology	20240
Microsoft	21972
Mind	21972
Minolta	20042
Mitsubishi	20067, 20043, 20807
Motorola	20035, 20048
MTC	20240, 20000
Multitech	20000, 20072
NEC	20104, 20067, 20038
Nikko	20037
Niveus Media	21972
Noblex	20240
Northgate	21972
Olympus	20035
Optimus	21062, 20162, 20037, 20048, 20104, 20432, 20593, 21162, 21262
Orion	20184, 20209, 20002, 20479, 21479
Panasonic	21062, 20035, 20162, 20225, 20614, 20616, 21035, 21162, 21262
Penney	20035, 20037, 20240, 20042, 20038, 21035, 21237
Pentax	20042
Philco	20035
Philips	20035, 20081, 20618, 20739, 21081, 21181
Pilot	20037
Pioneer	20067
Polk Audio	20081
Presidian	21593
Profitronic	20240
Proscan	20060, 21060
Protec	20072
Pulsar	20039
Quasar	20035, 20162, 21035, 21162


RadioShack	20000, 21037
Radix	20037
Randex	20037
RCA	20060, 20240, 20042, 20149, 20807, 20880, 21035, 21060
Realistic	20035, 20037, 20048, 20047, 20000, 20104
ReplayTV	20614, 20616
Ricavision	21972
Runco	20039
Samsung	20240, 20045, 20739, 21014
Sanky	20048, 20039
Sansui	20000, 20067, 20209, 20479, 21479
Sanyo	20047, 20240, 20104
Scott	20184, 20045, 20121, 20043
Sears	20035, 20037, 20047, 20000, 20042, 20104, 21237
Sharp	20048, 20807, 20848
Shintom	20072
Shogun	20240
Singer	20072
Sonic Blue	20614, 20616
Sony	20035, 20032, 20033, 20000, 20636, 21032, 21232, 21972
Stack 9	21972
STS	20042
Sylvania	20035, 20081, 20000, 20043, 20593, 21593, 21781
Symphonic	20000, 20593, 21593
Systemax	21972
Tagar Systems	21972
Teac	20000
Technics	20035, 20162
Teknika	20035, 20037, 20000
Thomas	20000
Tivo	20618, 20636, 20739, 21996
TMK	20240
Toshiba	20045, 20043, 20845, 21008, 21145, 21972, 21996
Totevision	20037, 20240

Touch	21972
Unitech	20240
Vector	20045
Vector Research	20038
Video Concepts	20045
Videomagic	20037
Videosonic	20240
Viewsonic	21972
Villain	20000
Voodoo	21972
Wards	20060, 20035, 20048, 20047, 20081, 20240, 20000, 20042, 20072, 20149
White Westinghouse	20209, 20072
XR-1000	20035, 20000, 20072
Yamaha	20038
Zenith	20039, 20033, 20000, 20209, 20479, 21479
ZT Group	21972



Setup Codes for Video Accessories

ABS	01272
Accurian	01653
Alienware	01272
CyberPower	01272
D-Link	01554, 01731
Epson	01563
Escient	01151, 01370, 01371
Gateway	01272
Hewlett Packard	01272, 01267
Howard Computers	01272
HP	01272
Hush	01272
iBUYPOWER	01272
JVC	01384
LG	01415
Linksys	01272, 01365
Media Center PC	01272
Microsoft	01272
Mind	01272
Motorola	01363

Niveus Media	01272
Northgate	01272
Panasonic	01120
Pioneer	01010
Ricavision	01272
Roku	01486
Samsung	01190, 01490
Sensory Science	01126
Sharp	01010
Sony	01272, 01324, 01364
Stack 9	01272
Sylvania	01563
Systemax	01272
Tagar Systems	01272
Toshiba	01272
Touch	01272
Viewsonic	01272, 01329
Vizio	01126
Voodoo	01272
ZT Group	01272

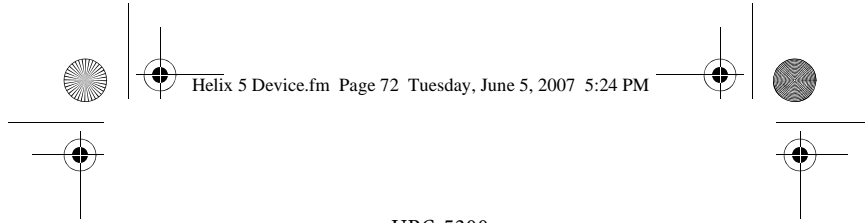 

URC-5300

  

Revision 1.0

