

Dolphin™

Water-Proof Remote Control

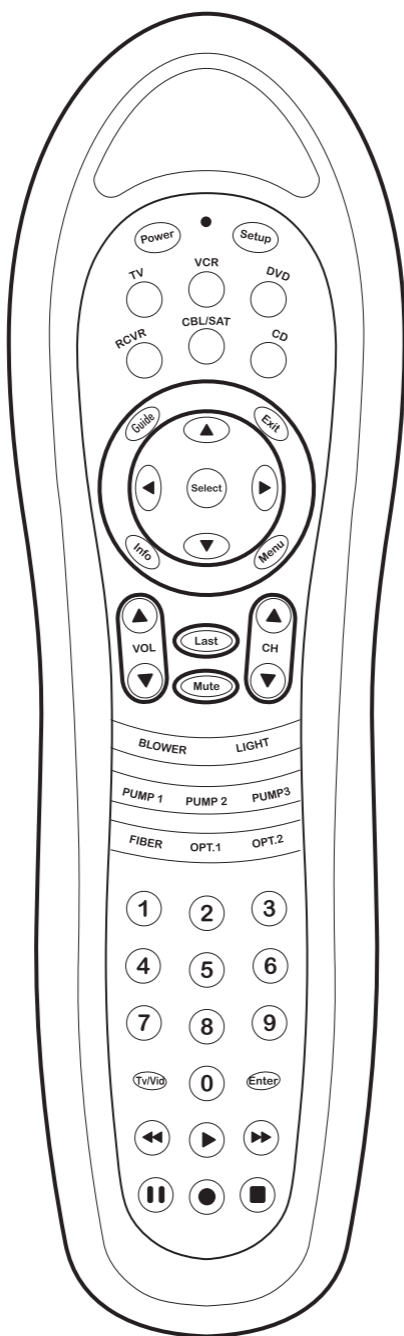


TABLE OF CONTENTS

Introduction	3
Features And Functions	4
Key Charts	5
Installing Batteries	7
Programming TV Control	8
Setup Codes for TVs	8
Programming VCR Control	12
Setup Codes for VCRs	12
Programming TV/VCR Combo Control	16
Setup Codes for TV/VCRs	17
Programming Cable Converter (or DBS Receiver) Control	18
To Unlock the Cable Key	18
To Program the Cable Key	18
To Lock the Cable Key	19
Setup Codes for Cable Converters	19
Setup Codes for DBS Receivers	20
Programming Channel Control Lock	21
To Activate Channel Control Lock	21
To De-Activate Channel Control Lock	21
Programming Audio Control	22
Setup Codes for CD Players	23
Setup Codes for DVD Players	24
Setup Codes for Stereo Receivers	24
Setup Codes for Stereo Amplifiers	25
Setup Codes for DBS Audio Services	25
Searching For Your Code	26
Checking The Codes	27
Re-Assigning Device Keys	28
Changing Volume Lock	29
To Change Volume Lock to the CABLE Mode	29
To Change Volume Lock to the TV Mode	29
To Change Volume Lock to the VCR Mode	29
To Change Volume Lock to the RCVR Mode	29
Using the Learning Feature	30
Using the IR/RF Command Center	32
Specifications	34
Compliance with FCC Rules and Regulations	35
Troubleshooting	36

INTRODUCTION


The Universal Dolphin™ Remote is Balboa's latest generation remote control. It is designed with sophisticated technology that will allow you to consolidate many of your existing remote controls along with the entertainment system in your spa. It's packed with easy-to-use features such as:

- Preprogrammed to operate the cable converter supplied by your cable system provider
- Preprogrammed technology for easy setup
- Instant "Tune-In" keys for assignment to your favorite channels
- Color-coded keys to quickly locate popular functions
- Code library for video and audio components
- Code Search to help program control of older or discontinued components
- Learning function to allow programming with another infrared (IR) remote.
- Combination IR and RF (radio frequency) capability that can send commands, through the optional RF base station, to devices in another room.

Before you can use your new remote control, you will need to program it to operate the specific home entertainment components you wish to control. Follow the instructions detailed in this manual to set up your Dolphin Remote and enjoy your new remote control.

FEATURES AND FUNCTIONS

Use the illustration below to locate the Dolphin features and study the key locations (on the next two pages) to learn how they function.

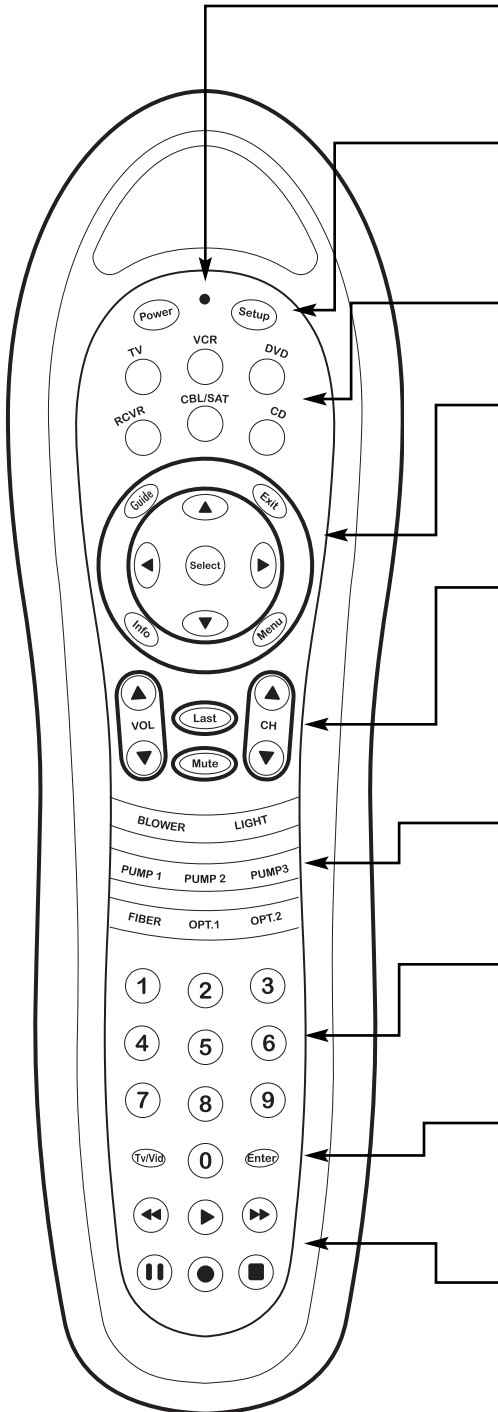

The LED (red light) blinks to show that the remote control is working and is sending signals.

Press POWER once to turn on or off the selected home entertainment component.

Use SETUP for all programming sequences.

Press AUDIO, VCR, TV, or CBL once to select a home entertainment component to control.

See next page for descriptions of the buttons in this circular area of the remote

Use volume + (or volume -) to raise (or lower) the sound volume.

Use CH + (or CH -) to select the next higher (or lower) channel.

Press MUTE once to turn sound off or on.

Press LAST once to recall the last channel and to page back one screen in the main menu.

Use the GREEN phosphorescent buttons to control available spa functions.

Use the keypad (0 ~ 9) to directly select channels (e.g., 09 or 31).

Press TV/VCR once to switch the VCR to view TV channels or tape. This key will also control the input select feature on most TVs.

Press ENTER once after entering channel numbers on some TV models.

In the VCR and TV modes, use the REW, PLAY, FF, REC, STOP, and PAUSE keys to control your VCR. To record a program, press REC twice.

Continued on next page...


FEATURES AND FUNCTIONS

...Continued

Use **GUIDE** to display the program guide.

Use **EXIT** to exit out of your cable converter's menu and guide.

Use the four directional keys to move the cursor in the program guide and menu screens.

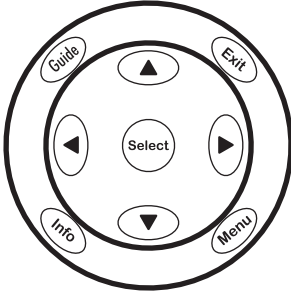

Use **SELECT/OK** to choose options, PPV events, and to tune programs from the program guide.

Use **INFO** to display current channel and program information.

Press **MENU** once to display your cable converter's screen menu.

INSTALLING BATTERIES


1. On the back of the Dolphin Remote, remove the screws that hold the battery cover in place and lift off the battery cover.
2. Obtain two (2) fully-charged AA alkaline batteries.

Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the new batteries.

3. Press the battery cover back into place, being careful to align the rubber seal.
4. Replace the screws that hold the cover by carefully starting each one without tightening it. Once they are all started, snug up one screw and then do the same to the screw on the opposite side of the door. Repeat this in a crossing pattern until all screws are snug. Do not over-tighten them. This will assure an adequate water seal around the battery door.
4. Test the unit by pressing **POWER** and any mode key (e.g. **AUDIO**, **VCR**, **TV**, or **CBL**). If the batteries are inserted correctly, the LED will blink once.

NOTE:

Whenever batteries need replacement, the Dolphin will blink twice with every key press. Simply replace the batteries and the remote will be restored to its full functionality, complete with your favorite settings.

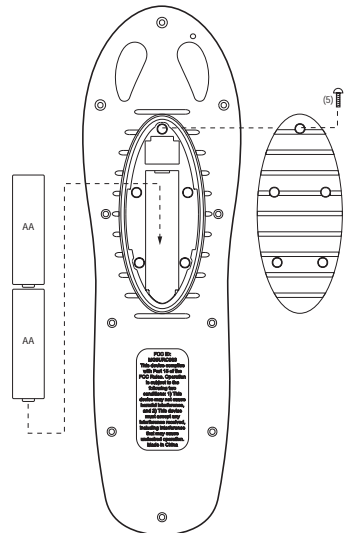

PROGRAMMING TV CONTROL

NOTE: If you own a TV/VCR combination, skip this section and perform "Programming TV/VCR Combo Control" on page 16.

Locate the brand name of your TV in the Setup Codes For TVs section below, and write it in the following space.

TV Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program the Dolphin to operate your TV:

1. Turn on the TV.

On the Dolphin, press TV once. Press and hold SETUP until the LED blinks twice, then release SETUP.

3. Enter the first four-digit code for your TV. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

4. Aim the Dolphin at your TV and press POWER once. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try searching for the code (see Searching For Your Code on page 26).

5. Write your TV code in the boxes below for future reference.

□	□	□	□
---	---	---	---

NOTE: Remember, to use the Dolphin to operate your TV, press TV first.

Setup Codes for TVs:

A-Mark	0003
AOC	0030, 0019, 0003, 0052, 0185
Abex	0032
Admiral	0093
Adventura	0046
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177
Anam	0180
Anam National	0055
Archer	0003
Audiovox	0451, 0180, 0003, 0092, 0623

Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463, 0003
CXC	0180
Candle	0030, 0056, 0046, 0186
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0030, 0056, 0039, 0046, 0092, 0186, 0280
Clairtone	0185
Concerto	0056
Contec	0180, 0185
Craig	0180
Crosley	0054
Crown	0180, 0039
Curtis Mathes	0047, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0145, 0056, 0016, 0039, 0166, 0466
Daewoo	0451, 0019, 0039, 0092, 0623, 0624
Daytron	0019
Denon	0145
Dumont	0017, 0019
Dwin	0720, 0774
Electroband	0000, 0185
Emerson	0154, 0236, 0463, 0180, 0282, 0178, 0019, 0179, 0039, 0038, 0177, 0185, 0280, 0623, 0624
Envision	0030
Fisher	0154, 0159
Fujitsu	0179
Funai	0180, 0179, 0171
Futuretech	0180
GE	0047, 0051, 0451, 0093, 0282, 0178, 0021, 0055, 0027, 0135
Gibraltar	0017, 0030, 0019
GoldStar	0030, 0178, 0019, 0056, 0001, 0032
Gradiente	0053, 0056
Grunpy	0180, 0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
Hitachi	0145, 0056, 0032, 0038, 0151
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
Janeil	0046

KEC	0180
KTV	0180, 0030, 0039, 0185, 0280
Kaypani	0052
Kenwood	0030, 0019
Kloss	0024, 0046
LG	0056
LXI	0047, 0054, 0154, 0156, 0178
Logik	0016
Luxman	0056
MEI	0185
MGA	0150, 0030, 0178, 0019
MTC	0060, 0030, 0019, 0056, 0185
Magnavox	0054, 0030, 0179, 0020, 0024, 0096, 0186, 0187, 0386
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0178, 0145, 0003
Memorex	0154, 0250, 0150, 0178, 0056, 0016
Midland	0047, 0017, 0051, 0039, 0032, 0135
Minutz	0021
Mitsubishi	0093, 0150, 0178, 0019
Motorola	0093, 0055
Multitech	0180
NAD	0156, 0178, 0166
NEC	0030, 0019, 0056, 0497
NTC	0092
Nikko	0030, 0178, 0092
Noshi	0018
Onwa	0180
Optimus	0154, 0250, 0166
Optonica	0093, 0165
Orion	0236, 0463, 0179
Panasonic	0051, 0250, 0055
Penney	0047, 0156, 0051, 0060, 0030, 0178, 0021, 0019, 0018, 0056, 0039, 0003, 0027, 0032, 0135
Philco	0054, 0463, 0030, 0145, 0019, 0020, 0096
Philips	0054
Pilot	0030, 0019, 0039
Pioneer	0038, 0166
Portland	0019, 0039, 0092
Prism	0051
Proscan	0047
Proton	0178, 0003, 0052, 0466
Pulsar	0017, 0019
Quasar	0051, 0250, 0165, 0055
RCA	0047, 0051, 0093, 0019, 0018, 0038, 0090, 0135
Radio Shack	0047, 0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039, 0032
Realistic	0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039, 0032
Rhapsody	0185
Runco	0017, 0030, 0497

SSS	0180, 0019
Sampo	0030, 0039, 0032, 0052
Samsung	0060, 0030, 0178, 0019, 0056, 0032
Samsux	0039
Sansei	0451
Sansui	0463
Sanyo	0154, 0146, 0159
Scimitsu	0019
Scotch	0178
Scott	0236, 0180, 0178, 0019, 0179
Sears	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0146, 0159, 0171
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0039, 0386
Shogun	0019
Signature	0016
Simpson	0186, 0187
Sony	0000, 0080
Soundesign	0180, 0178, 0179, 0186
Spectricon	0003
Squareview	0171
Starlite	0180
Supre-Macy	0046
Supreme	0000
Sylvania	0054, 0030, 0020, 0096
Symphonic	0171
TMK	0178, 0056, 0177
Tandy	0093
Tatung	0055, 0003
Technics	0051, 0250
Technol Ace	0179
Techwood	0051, 0056, 0003
Teknika	0054, 0180, 0150, 0060, 0019, 0179, 0056, 0016, 0039, 0092, 0186
Telefunken	0056
Toshiba	0154, 0156, 0060
Tosonic	0185
Totevision	0039
Universal	0027
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Viking	0046
Wards	0054, 0165, 0030, 0178, 0021, 0019, 0179, 0056, 0016, 0020, 0027, 0080, 0096
White-Westinghouse	0623, 0624
Yamaha	0030, 0019
Zenith	0017, 0016, 0092
Zonda	0003

PROGRAMMING VCR CONTROL

NOTE: If you own a TV/VCR combination, skip this section and perform "Programming TV/VCR Combo Control" on page 16.

Locate the brand name of your VCR in the Setup Codes For VCRs section below, and write it in the following space.

VCR Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program the Dolphin to operate your VCR:

1. Turn on your VCR and insert a video cassette.
2. On the Dolphin, press VCR once. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter the first four-digit code for your VCR. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

4. Aim the Dolphin at your VCR and press POWER once. The VCR should turn off. If your VCR remote control does not have a POWER key, press PLAY. If the VCR does not respond, repeat steps 2-3, trying each code listed for your brand until you find one that works. If the VCR still does not work, try searching for the code (see Searching For Your Code on page 26).
5. Write your VCR code in the boxes below for future reference.

--	--	--	--

NOTE: Remember, to use the Dolphin to operate your VCR, press VCR first.

Setup Codes for VCRs:

Admiral	0048
Adventura	0000
Aiko	0278
Aiwa	0037, 0000, 0307
Akai	0041, 0061, 0106
American High	0035
Asha	0240
Audiovox	0037

Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0121, 0209, 0002,
CCE	0072, 0278
Calix	0037
Canon	0035
Capelhart	0020
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0060, 0035, 0041, 0162
Cybernex	0240
Daewoo	0045, 0278, 0020, 0561
Daytron	0020
Denon	0042
Dynatech	0000
Electrohome	0037
Electroponic	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0061, 0208, 0212, 0479, 0561
Fisher	0047, 0104, 0054, 0066
Fuji	0035, 0033
Funai	0000
GE	0060, 0035, 0048, 0240, 0202
Garrard	0000
Go Video	0526
GoldStar	0037, 0038
Gradiente	0000, 0008
HI-Q	0047
Harley Davidson	0000
Harman/Kardon	0081, 0038
Harwood	0072
Headquarter	0046
Hitachi	0000, 0042, 0041, 0105
JVC	0067, 0041, 0008
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041, 0038
Kodak	0035, 0037
LXI	0037
Lloyd's	0000, 0208
Logik	0072
MEI	0035
MGA	0240, 0043, 0061
MGN Technology	0240
MTC	0240, 0000
Magnasonic	0278

Magnavox	0035, 0039, 0081, 0000, 0149
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0035, 0162
Memorex	0035, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0162, 0046, 0307
Minolta	0042, 0105
Mitsubishi	0048, 0067, 0043, 0061
Motorola	0035, 0048
Multitech	0000, 0072
NEC	0104, 0067, 0041, 0038
Nikko	0037
Nikon	0034
Noblex	0240
Olympus	0035
Optimus	0037, 0048, 0104, 0162
Optonica	0062
Orion	0184, 0002, 0479
Panasonic	0035, 0162, 0077, 0225
Penney	0035, 0037, 0240, 0042, 0038, 0054
Pentax	0042, 0105
Philco	0035, 0209, 0479
Philips	0035, 0081, 0062
Pilot	0037
Pioneer	0067
Portland	0020
Profitronic	0240
Proscan	0060, 0202
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035, 0162, 0077
RCA	0060, 0035, 0048, 0240, 0042, 0149, 0077, 0105, 0106, 0202
Radio Shack	0000
Radix	0037
Randex	0037
Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0062, 0046, 0066
Ricoh	0034
Runco	0039
STS	0042
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0067, 0041, 0271, 0479
Sanyo	0047, 0240, 0104, 0046
Scott	0184, 0045, 0121, 0043, 0212
Sears	0035, 0037, 0047, 0000, 0042, 0104, 0046, 0054, 0066, 0105
Semp	0045
Sharp	0048, 0062

Shintom	0072
Shogun	0240
Singer	0072
Sony	0035, 0032, 0000, 0033, 0034
Sylvania	0035, 0081, 0000, 0043
Symphonic	0000
TMK	0240, 0208
Tatung	0041
Teac	0000, 0041
Technics	0035, 0162
Teknika	0035, 0037, 0000
Thomas	0000
Toshiba	0045, 0043, 0066, 0212
Totevision	0037, 0240
Unitech	0240
Vector	0045
Vector Research	0038
Video Concepts	0045, 0061
Videosonic	0240
Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149, 0062, 0212
White7-	
Westinghouse	0278
XR-1000	0035, 0000, 0072
Yamaha	0038
Zenith	0039, 0000, 0033, 0034

PROGRAMMING TV/VCR COMBO CONTROL

Locate the brand name of your TV/VCR Combo in the Setup Codes For TV/VCR Combos section below, and write it in the following space.

TV/VCR Combo Brand: _____

The brands are listed in alphabetical order with popular codes listed first. You will use one of these codes to program the Dolphin to operate your TV/VCR Combo:

1. Turn on your TV/VCR Combo and insert a video cassette.
2. On the Dolphin, press VCR once. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter the first four-digit code for your TV/VCR Combo. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

4. Aim the Dolphin at your TV/VCR Combo and press POWER once. The unit should turn off. If it does not respond, repeat steps 2-3, trying each code listed for your brand until you find one that works. If it still does not work, try searching for the code (see Searching For Your Code on page 26).
5. If you've located a TV/VCR setup code that works your TV/VCR Combo and a separate TV code is also listed, you'll need to program this code into the Dolphin to access volume control (see Programming TV Control on page 8).

If there is no separate TV code listed, you will need to perform the following steps to access volume control:

- a. Press and hold SETUP until the LED blinks twice, then release SETUP.
 - b. Enter 9 - 9 - 3. The LED will blink twice.
 - c. Press VCR once. The LED will blink twice.
6. Write your TV/VCR Combo code in the boxes below for future reference.

□	□	□	□
---	---	---	---

NOTE: Remember, to use the Dolphin to operate your TV/VCR Combo, press VCR first.

Setup Codes for TV/VCR Combos:

American High	0035 (for TV use 0051)
Brocksonic	0002, 0294,
Colt	0072
Curtis Mathis	0035 (for TV use 0051)
Daewoo	0278
Emerson	0002, 0294, 0479
Funai	0000
GE	0035 (for TV use 0051), 0060 (for TV use 0047), 0048 (for TV use 0093), 0240
Hitachi	0035 (for TV use 0051), 0000
HQ	0000
Lloyds	0000
MGA	0240
Magnavox	0081 (for TV use 0054), 0035 (for TV use 0051), 0000
Magnin	0240
Memorex	0037, 0162 (for TV use 0250)
Mitsubishi	0048 (for TV use 0093)
Orion	0002, 0294, 0479
Panasonic	0035 (for TV use 0051), 0162 (for TV use 0250)
Penney	0035 (for TV use 0051), 0240, 0162 (for TV use 0250)
Quasar	0035 (for TV use 0051), 0162 (for TV use 0250)
RCA	0060 (for TV use 0047), 0035 (for TV use 0051), 0048 (for TV use 0093)
Sansui	0000, 0479
Sanyo	0240
Sears	0000, 0037
Sharp	0048 (for TV use 0093)
Sony	0032 (for TV use 0000)
Symphonic	0000
Zenith	0000

PROGRAMMING CABLE CONVERTER (OR SATELLITE RECEIVER) CONTROL

Before you program the control to operate a cable or satellite converter, you'll need to perform the following instructions to unlock the cable key, enter in a new code, and lock the cable key again.

To unlock the Cable key:

1. Turn on the Cable Converter or DBS Receiver.
2. On the Dolphin, press CBL once. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter 9 - 9 - 7. The LED will blink twice.
4. Press CH - once. The LED will blink twice.

To program the Cable key:

1. Locate the brand name of your Cable Converter (or Direct Broadcast Satellite Receiver) in the Setup Codes For Cable Converters (or Setup Codes For DBS Receivers) section starting on the next page, and write it in the appropriate space.

Cable Converter Brand: _____

or

DBS Receiver Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to reprogram the Dolphin to operate your Cable Converter or DBS Receiver.

On the Dolphin, press CBL once. Press and hold SETUP until the LED blinks twice, then release SETUP.

Enter the first four-digit code for your Cable Converter or DBS Receiver. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

Aim the Dolphin at your Cable Converter or DBS Receiver and press POWER once. The unit should turn off. If it does not respond, repeat steps 2-3, trying each code listed for your brand until you find one that works. If it still does not work, try searching for the code (see Searching For Your Code on page 26).

5. Write your Cable Converter or DBS Receiver code in the boxes below for future reference.

□	□	□	□
---	---	---	---

NOTE: Remember, to use the Dolphin to operate your Cable Converter or DBS Receiver, press CABLE first.

To lock the Cable key:

1. On the Dolphin, press CBL once. Press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 7. The LED will blink twice.
3. Press CH + once. The LED will blink twice.

Setup Codes for Cable Converters:

ABC	0003, 0008, 0017, 0013
ABC Cable	0033
Americast	0899
Contec	0019
General Instrument	0476, 0276, 0810
GoldStar	0144
Hamlin	0020, 0259
Jerrold	0003, 0012, 0476, 0276, 0810
Macom	0033
Memorex	0000
Movie Time	0063
NSC	0063
Oak	0019
Optimus	0021
Panasonic	0000, 0107, 0021
Paragon	0000
Pioneer	0144, 0533
Pulsar	0000
Quasar	0000
RCA	0021
Regal	0020, 0259
Runco	0000
Samsung	0144
Scientific Atlanta	0008, 0477, 0017, 0277, 0774, 0877
Sprucer	0021
Starcom	0003
TV86	0063
Tocom	0012, 0013
Toshiba	0000
Viewstar	0063
Zenith	0000, 0525, 0899

Setup Codes for DBS Receivers:

AlphaStar	0772
Echostar	0775
Expressvu	0775
General Instrument	0627, 0361, 0869
HTS	0775
Hitachi	0819
Hughes	0749
JVC	0775
Jerrold	0627, 0361
Magnavox	0724, 0722
Memorex	0724
Next Level	0869
Panasonic	0701
Philips	0724, 0722
Primestar	0627, 0361
RCA	0566
Sony	0639
Star Choice	0869
Toshiba	0790
Uniden	0724, 0722
Zenith	0856

PROGRAMMING CHANNEL CONTROL LOCK

By activating this feature, the Dolphin will only allow access to the channel control capabilities of your cable converter. This will guarantee that you do not inadvertently change the channel on your TV or VCR.

To Activate Channel Control Lock:

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 6. The LED will blink twice.
3. Press CH (Up) once. The LED will blink twice.
4. Now, regardless of what mode you select (i.e., TV, VCR, or CBL), only the channel control capability of your cable converter will be accessible.

NOTE: This feature does not affect the Audio mode.

To De-Activate Channel Control Lock:

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 6. The LED will blink twice.
3. Press CH (down) once. The LED will blink twice.
4. The Dolphin will again provide TV and VCR channel control capabilities while in the TV or VCR mode.

PROGRAMMING AUDIO CONTROL

Using the Dolphin's RCVR mode, you can also control an audio component, such as CD or DVD player, a stereo receiver, a stereo amplifier, or a DBS audio service.

Locate the brand name of your audio component in the one of accompanying code lists (starting on the next page). Write it in the appropriate space.

CD Player Brand: _____

or

DVD Player Brand: _____

or

Stereo Receiver Brand: _____

or

Stereo Amplifier Brand: _____

or

DBS Audio Brand: _____

The brands are listed in alphabetical order with popular codes listed first. You will use one of these codes to program the Dolphin to operate your audio component:

1. Turn on the audio component (or DBS receiver to control its audio service).
2. On the Dolphin, press AUDIO once. Press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter the first four-digit code for your audio component. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

4. Aim the Dolphin at your audio component and press POWER once. The unit should turn off. If it does not respond, repeat steps 2-3, trying each code listed for your brand until you find one that works. If it still does not work, try searching for the code (see Searching For Your Code on page 26).

5. Write your audio component code in the boxes below for future reference.

□	□	□	□
---	---	---	---

NOTE: Remember, to use the Dolphin to operate your audio component, press RCVR first.

Setup Codes for CD Players:

Aiwa	0157, 0124
Burmester	0420
California Audio Lab	0029
Carver	0157, 0179
DKK	0000
Denon	0003, 0873
Emerson	0305
Fisher	0179
Garrard	0420, 0393
Genexxa	0032, 0305
Harman/Kardon	0173
Hitachi	0032
JVC	0072
Kenwood	0028, 0037, 0190, 0826, 0681
Krell	0157
LXI	0305
Linn	0157
MCS	0029
MTC	0420
Magnavox	0157, 0305
Marantz	0029, 0157, 0180
Mission	0157
NSM	0157
Onkyo	0101, 0868
Optimus	0000, 0032, 0179, 0305, 0037, 0420, 0145, 0468
Panasonic	0029, 0303
Parasound	0420
Philips	0157
Pioneer	0032, 0305, 0468
Proton	0157
QED	0157
Quasar	0029
RCA	0179, 0305, 0053
Realistic	0179, 0420, 0180
Rotel	0157, 0420
SAE	0157
Sansui 0	157, 0305
Sanyo	0179
Scott	0305
Sears	0305
Sharp	0037, 0180
Sherwood	0180
Sony	0000, 0185, 0490
Soundesign	0145
Tascam	0420
Teac	0420, 0393, 0180
Technics	0029, 0303
Victor	0072
Wards	0157, 0053
Yamaha	0036, 0187
Yorx	0461

Setup Codes for DVD Players:

JVC	0558
Kenwood	0534
Magnavox	0503
Mitsubishi	0521
Onkyo	0503
Panasonic	0490
Philips	0503, 0539
Pioneer	0525, 0571
Proscan	0522
RCA	0522
Samsung	0573
Sony	0533
Technics	0490
Toshiba	0503
Yamaha	0490
Zenith	0503

Setup Codes for Stereo Receivers:

ADC	0531
Aiwa	0158, 0189, 0121
Capetronic	0531
Carver	0189
Curtis Mathes	0080
Denon	0004
Garrard	0463
Harman/Kardon	0110, 0189
JBL	0110
JVC	0074
Kenwood	0027, 0186
Linn	0189
MCS	0039
Magnavox	0531, 0189
Marantz	0039, 0189
Onkyo	0135
Optimus	0531, 0670, 0186
Panasonic	0039, 0309
Philips	0189
Pioneer	0531, 0014, 0150, 0630, 0080
Quasar	0039
RCA	0531
Sansui	0189
Sharp	0186
Sony	0158
Soundesign	0670
Teac	0463
Technics	0039, 0309
Victor	0074
Wards	0158, 0014, 0189, 0080
Yamaha	0176, 0186

Setup Codes for Stereo Amplifiers:

Carver	0269
Curtis Mathes	0300
Denon	0160
JVC	0331
Linn	0269
Magnavox	0269
Marantz	0269
Panasonic	0308
Philips	0269
Pioneer	0013, 0300
Sony	0689
Technics	0308
Victor	0331
Wards	0013
Yamaha	0354

Setup Codes for DBS Audio Services:

Jerrold	0459, 0520
Scientific Atlanta	0460
Starcom	0459

SEARCHING FOR YOUR CODE

If your TV, VCR, Cable Converter or Audio Component does not respond to the Dolphin after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

For example, to search for a code for your TV:

1. Turn on your TV.
2. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter 9 - 9 - 1. The LED will blink twice.
4. Aim the remote control at the the TV and slowly alternate between pressing POWER and TV. Stop when the TV turns off.

NOTE: In the search mode, the Dolphin will send IR codes from its library to the selected component, starting with the most popular code first.

5. Press SETUP once to lock in the code.
6. To search for the codes of your other components, repeat steps 1 through 5, but substitute the appropriate key (i.e., VCR, CBL, or AUDIO) for the (VCR, Cable, or Audio) component you are searching for.

CHECKING THE CODES

If you have set up the Dolphin using the "Searching For Your Code" procedure, you may need to find out which four-digit code is operating your equipment:

For example, to find out which code is operating your TV:

1. Turn on your TV.
2. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
3. Enter 9 - 9 - 0. The LED will blink twice.
4. To view the code for the first digit, press 1 once. Wait 3 seconds and count the number of LED blinks (e.g., 3 blinks = 3) and write down the number in the leftmost TV Code box below.
NOTE: If a code digit is "0", the LED will not blink.
5. Repeat step 4 three more times for remaining digits. Use 2 for the second digit, 3 for the third digit, and 4 for the fourth digit. Finish writing down the code in the TV Code boxes below.
6. To check for the codes of your other components, repeat steps 1 through 5, but substitute the appropriate key (i.e., VCR, CBL, or RCVR) for the (VCR, Cable, or Audio) component you are checking. Write down the codes in the appropriate boxes below.

TV Code

□	□	□	□
---	---	---	---

VCR Code

□	□	□	□
---	---	---	---

CABLE Code

□	□	□	□
---	---	---	---

AUDIO Code

□	□	□	□
---	---	---	---

RE-ASSIGNING DEVICE KEYS

The Dolphin can be set up to control a second TV or VCR, or any combination of four home entertainment components. For example, to have the Dolphin control a TV, a Cable Converter, and two VCRs, you will need to re-assign the unused AUDIO key to operate the second VCR as follows:

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 2. The LED will blink twice.
3. Press VCR once, then press AUDIO once.
4. The AUDIO key is now ready to be programmed for your second VCR. See Programming VCR Control on page 12.

To re-assign other device keys, repeat steps 1 through 4 by substituting the key sequence from the following chart for a desired component:

To Re-Assign	Perform Key Sequence
TV as 2nd VCR key:	SETUP - 9 - 9 - 2 - VCR - TV
TV as 2nd Audio key:	SETUP - 9 - 9 - 2 - AUDIO - TV
TV as 2nd Cable key:	SETUP - 9 - 9 - 2 - CBL - TV
TV back to TV	SETUP - 9 - 9 - 2 - TV - TV
VCR as 2nd TV key:	SETUP - 9 - 9 - 2 - TV - VCR
VCR as 2nd Audio key:	SETUP - 9 - 9 - 2 - AUDIO - VCR
VCR as 2nd Cable key:	SETUP - 9 - 9 - 2 - CBL - VCR
VCR back to VCR:	SETUP - 9 - 9 - 2 - VCR - VCR
AUDIO as 2nd TV key:	SETUP - 9 - 9 - 2 - TV - AUDIO
AUDIO as 2nd VCR key:	SETUP - 9 - 9 - 2 - VCR - AUDIO
AUDIO as 2nd Cable key:	SETUP - 9 - 9 - 2 - CBL - AUDIO
AUDIO back to AUDIO:	SETUP - 9 - 9 - 2 - AUDIO - AUDIO

Upon completion of a re-assignment, the LED will blink twice to confirm your selection. At that time, you will also need to program the Dolphin to control the new component (see previous sections on Programming TV Control, Programming VCR Control, Programming Cable Control, or Programming Audio Control).

CHANGING VOLUME LOCK

The Dolphin is set to control volume of a component through your TV while in the TV, VCR, or Cable mode. However, in the Audio mode, you have separate control of your audio component's volume.

If your TV is not remote controllable, or if you would like the volume to be controlled by a different component, you can change the Volume Lock setting to control a volume through a non-associated mode (e.g., through the cable in the TV mode).

To change Volume Lock to the CABLE mode:

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 3 and then press CBL once. The LED will blink twice.
3. Now, whenever you press Volume +, Volume -, or MUTE on the Dolphin, volume will be controlled by your Cable Converter.

To change Volume Lock to the TV mode:

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 3 and then press TV once. The LED will blink twice.
3. Now, whenever you press Volume +, Volume -, or MUTE on the Dolphin, volume will be controlled by your TV.

To change Volume Lock to the VCR mode:

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 3 and then press VCR once. The LED will blink twice.
3. Now, whenever you press Volume +, Volume -, or MUTE on the Dolphin, volume will be controlled by your VCR.

To change Volume Lock to the RCVR mode:

NOTE: Performing these steps will allow you to access the volume control of your audio component in all modes.

1. On the Dolphin, press and hold SETUP until the LED blinks twice, then release SETUP.
2. Enter 9 - 9 - 3 and then press AUDIO once. The LED will blink twice.
3. Now, whenever you press Volume +, Volume -, or MUTE on the Dolphin, volume will be controlled by your audio component.

USING THE LEARNING FEATURE

You can program the buttons to add functions that are unique to your home entertainment devices (e.g., VCR Tracking Up or Down).


NOTE: Please have your original remote controls handy before programming learning. Be sure to press each key within 10 seconds of the previous entry. If not, the remote control will exit the programming mode.

Programming A Learning Key

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 7 - 5. The LED will blink twice.
3. Press a device key once (e.g., TV) to assign a mode for learning.
4. Press an open learning key once (e.g., Jets) to store a feature to be learned. The LED will blink rapidly for 4 seconds. If the LED does not blink rapidly, go back to step 1 and start again.
5. Place your original remote control (e.g., TV remote control) head-to-head (about 2" apart) from the Dolphin Remote Control.
6. On your original remote control, press and hold the key feature to be learned until the LED on the Dolphin Remote Control blinks twice. If the LED does not blink twice, repeat steps 3 through 6.
7. To learn functions onto other learning keys, repeat steps 3 through 6.
8. To lock in new feature(s) on the Dolphin Remote Control, press and hold SET until the LED blinks twice, then release SET.
9. To test a learned feature, press a device key (e.g., TV) once where the learning mode was assigned. Then press the learning key (e.g., Jets) where the learned feature is stored.

Deleting Functions From The Learning Keys:

1. Press and hold SET until the LED (red light) blinks twice, then release SET.
2. Enter 9 - 7 - 6. The LED will blink twice.
3. Press the device key once where the learned feature is stored (e.g., TV).
4. Press the learning key (e.g., Jets) to be deleted twice. The LED will blink twice after the second press.
5. To clear additional functions stored on other learning keys, repeat steps 1 through 4 (in this section).

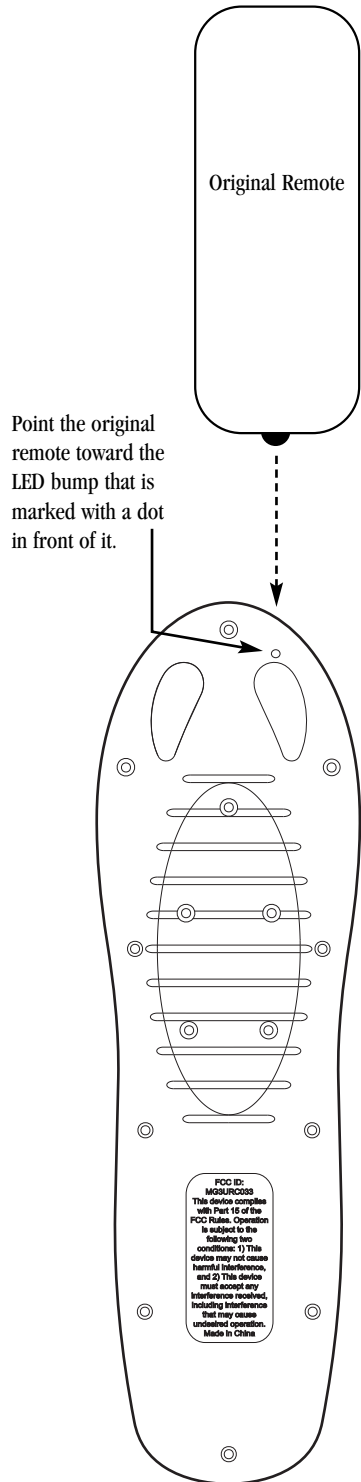

USING THE IR/RF COMMAND CENTER

The Dolphin Remote Control (URC-9811) can be used with an optional IR/RF Command Center which receives radio-frequency (RF) signals from the Dolphin, anywhere in your home, up to 100 feet away*.

Once it is set up, the IR/RF Command Center will convert the RF signals into Infrared (IR) signals to control your home theater devices.

NOTE: The Dolphin remote control transmits both an IR and an RF signal simultaneously. It is your option whether you want to install the IR/RF Command Center for extended remote control range. If you choose to do so, during testing do not aim the HT Pro Plus remote control at your home entertainment devices to verify that RF transmission is working.

NOTE: The RF signal transmitted by the Dolphin remote control, only works with the IR/RF Command Center.

Setting Up The IR/RF Command Center

1. Find a location approximately 8 feet in front of your home theater devices. It should provide (line-of sight) access to your equipment and a power outlet to plug in the IR/RF Command Center.
2. Plug in the IR/RF Command Center's power cord and raise the telescoping antenna.
3. Position the IR/RF Command Center so the black IR Lens is aimed at your home theater devices.
4. To test the IR/RF Command Center, take the Dolphin into another room in your home, up to 100 feet away. Select a device key (e.g., TV) and press it once. Then press POWER once.

The device (e.g., TV) should turn on. If it does not turn on, review the steps 1 through 3 and make any adjustments. Try step 4 again. If you continue to have a problem, perhaps there is an IR line-of sight problem. Try adding the IR Signal Extension Cord. Also review the tips in Optimizing IR/RF Command Center Reception.

Adding The IR Signal Extension Cord

Included with the IR/RF Command Center is an IR Signal Extension Cord for use with a home theater device that is not in direct line-of-sight of the IR/RF Command Center.

If you are having problems remotely controlling a

home theater device from another room, try performing the following installation:

1. Plug the 4-foot IR Signal Extension Cord into the back of the IR/RF Command Center.
2. Run the IR Signal Extension Cord to the device that is not in line-of-sight of the IR/RF Command Center.
3. Using the supplied double-sided tape, attach the IR Signal Extension Cord so that its LED is over or next to the IR sensor of your home theater device.

LED

4. Test the installation by again taking the HT Pro Plus remote control into another room in your home, up to 100 feet* away. Select a device key (e.g., TV) and press it once. Then press POWER once.

The IR/RF Command Center will convert the RF signal from the HT Pro Plus remote control into an IR signal and transmit that signal through the IR Signal Extension Cord to turn on your device (e.g., TV).

If it does not turn on, try repositioning the LED until the device can be controlled, then re-attach the LED.

Optimizing IR/RF Command Center Reception

Here are some adjustment tips for optimizing the operation of your IR/RF Command Center:

- Aim the HT Pro Plus remote control toward the room where the IR/RF Command Center is located.
- Do not position the IR/RF Command Center near metal objects, such as heat ducts. Metal can absorb RF signals.
- Make sure the batteries in the HT Pro Plus remote control are fully charged. Try replacing them if you are not sure (see Installing Batteries on page 4). Weak batteries will affect the signal range.
- Make sure that the HT Pro Plus remote control is not being affected by other RF transmissions (e.g., garage door openers, cordless telephones, etc.).

NOTE: The tests for range limits of the HT Pro Plus remote control and the IR/RF Command Center were conducted in open-air distance tests. Actual signal distance will be based on the construction of the building the unit is being used in, as well as other factors, such as outside interference.

*Distance may vary

SPECIFICATIONS

Remote Control Power

2 AAA Batteries

IR/RF Console Power

120 Vac

Remote Control to IR/RF Console Range

up to 100 Feet (30.48 m)*

IR/RF Command Console to Device Range

25 Feet (7.62 m) \pm 30°

Remote Control Dimensions (H x W x D)

9-2/16 x 2-10/16 x 1-3/16 in.

232 x 65 x 31 mm

IR/RF Command Console Dimensions

(H x W x D)

1-9/16 x 5 -1/16 x 4 in

39.7 x 128.6 x 101.6 mm

Remote Control Weight (without Batteries)

8 oz (220 g)

IR/RF Command Console Weight

10.4 oz (300 g)

NOTE: Specifications are typical. Individual units might vary.

Specifications are subject to change and improvement without notice.

COMPLIANCE WITH FCC RULES AND REGULATIONS

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiver antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate his equipment.

FCC Authorization Label

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC ID #: MG3URC033

IR/RF LCD 8-Device With Learning: Dolphin

*Distance may vary

TROUBLESHOOTING

PROBLEM: LED does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AA alkaline batteries (see page 7).

PROBLEM: LED blinks when you press a key, but home entertainment component does not respond.

SOLUTION: Make sure you are aiming the Dolphin at your home entertainment component and that you are within 15 feet of the component you are trying to control.

PROBLEM: The Dolphin does not control home entertainment components or commands are not performing properly.

SOLUTION: Try all listed codes for the component brand being set up. Make sure all components can be operated with an infrared remote control.

PROBLEM: TV/VCR combo does not respond properly.

SOLUTION: Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation (see page 16).

PROBLEM: No volume on a second TV.

SOLUTION: Follow instructions in Changing Volume Lock (see page 30).

PROBLEM: CH+ , CH- , and LAST do not work for your RCA TV.

SOLUTION: Due to RCA design (1983-1987), only the original remote control will operate these functions.

PROBLEM: Changing channels does not work properly.

SOLUTION: If original remote control required pressing ENTER to change channels, press ENTER on the Dolphin after entering a channel number.

PROBLEM: Tried "Search Method" and still could not find a working code.

SOLUTION: Try the "Search Method" again after clearing out the device key as follows: Press and hold ENTER until red light blinks twice, then release. Next enter 9 - 9 - 2. Then press and release the device key to be cleared twice.

PROBLEM: Remote control does not turn on Sony or Sharp TV/VCR Combo.

SOLUTION: For power on, these products require programming TV codes on the Dolphin. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.