

Universal Remote Control

OWNER'S MANUAL

simply MORE powerful™

RF20



MasterControl™

Congratulations!

Congratulations on purchasing Universal Remote Control's MASTERCONTROL™ RF20 Pre-programmed and Learning Remote Control! You now have the power to control your entire home entertainment system with one easy-to-use remote. The RF20 can be used with thousands of audio/video Components because of the extensive code library pre-programmed into the remote. And, the RF20's impressive lineup of special advanced features can automate and customize the operation of your system in many ways. So... get ready to sit back, relax and simplify your home entertainment experience.

The Quick Setup DVD Program Guide supplied with the RF20 will assist you in programming your remote by guiding you through an easy step-by-step process. This Owner's Manual is designed as a companion reference source to the DVD Guide, should you need to refer back to a particular section, or review certain instruction detail not covered in the DVD. However, if you are unable to watch the DVD Guide for some reason, everything you need to know about programming the RF20 is contained in this Manual.




500 Mamaroneck Avenue, Harrison, NY 10528
Phone: (914) 835-4484 Fax: (914) 835-4532

MASTERCONTROL™ RF20 Owner's Manual
© 2006 Universal Remote Control, Inc.

The information in this manual is copyright protected. No part of this manual may be copied or reproduced in any form without prior written consent from Universal Remote Control, Inc. UNIVERSAL REMOTE CONTROL, INC. SHALL NOT BE LIABLE FOR OPERATIONAL, TECHNICAL OR EDITORIAL ERRORS / OMISSIONS MADE IN THIS MANUAL. The information in this manual may be subject to change without prior notice. MASTERCONTROL, PowerBlaster, MacroPower, and SimpleSound are trademarks of Universal Remote Control, Inc. All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

LOCATION OF CONTROLS	Keypad Layout	3
GETTING STARTED	Overview	4
	Battery Installation	4
	Activating Component Commands	5
	Light Button	6
BASIC SETUP	Overview	7
	Pre-Programmed Code Method	7
	Learning Method	15
	Transmitting (Busy Signal) Icon.	19
	Child Lock Feature	19
CUSTOMIZING YOUR RF20 WITH SPECIAL ADVANCED FEATURES	Customizing the LCD Screen	20
	Favorite Channel Setup	23
	MacroPower™ Setup	26
	SimpleSound™ Setup & Other 'Punch Throughs'	30
	Setting Backlight Options	32
	Hiding & Adding Pages	33
	Recalling Pre-programmed Setup Code Numbers	35
	Cloning other RF20s	36
ERASING COMMANDS	Overview	37
	Erasing Learned Button, Macro or Favorite Channel Commands	37
	Re-setting RF20 to Original Factory Default Settings	39
THE OPTIONAL POWERBLASTER™	PowerBlaster™	41
PREPROGRAMMED CODE NOTES	Pre Programmed Code Notes	43
PRE-PROGRAMMED CODE TABLES	Pre-Programmed Code Tables	44
	TV	45
	SAT	58
	CABLE	48
	CD	59
	DVD	50
	DVR	61
	VCR	53
	AUX	62
	AUDIO	55
	NOTES	64
OTHER INFO	FAQ	65
	Warranty	66
	Specifications	66

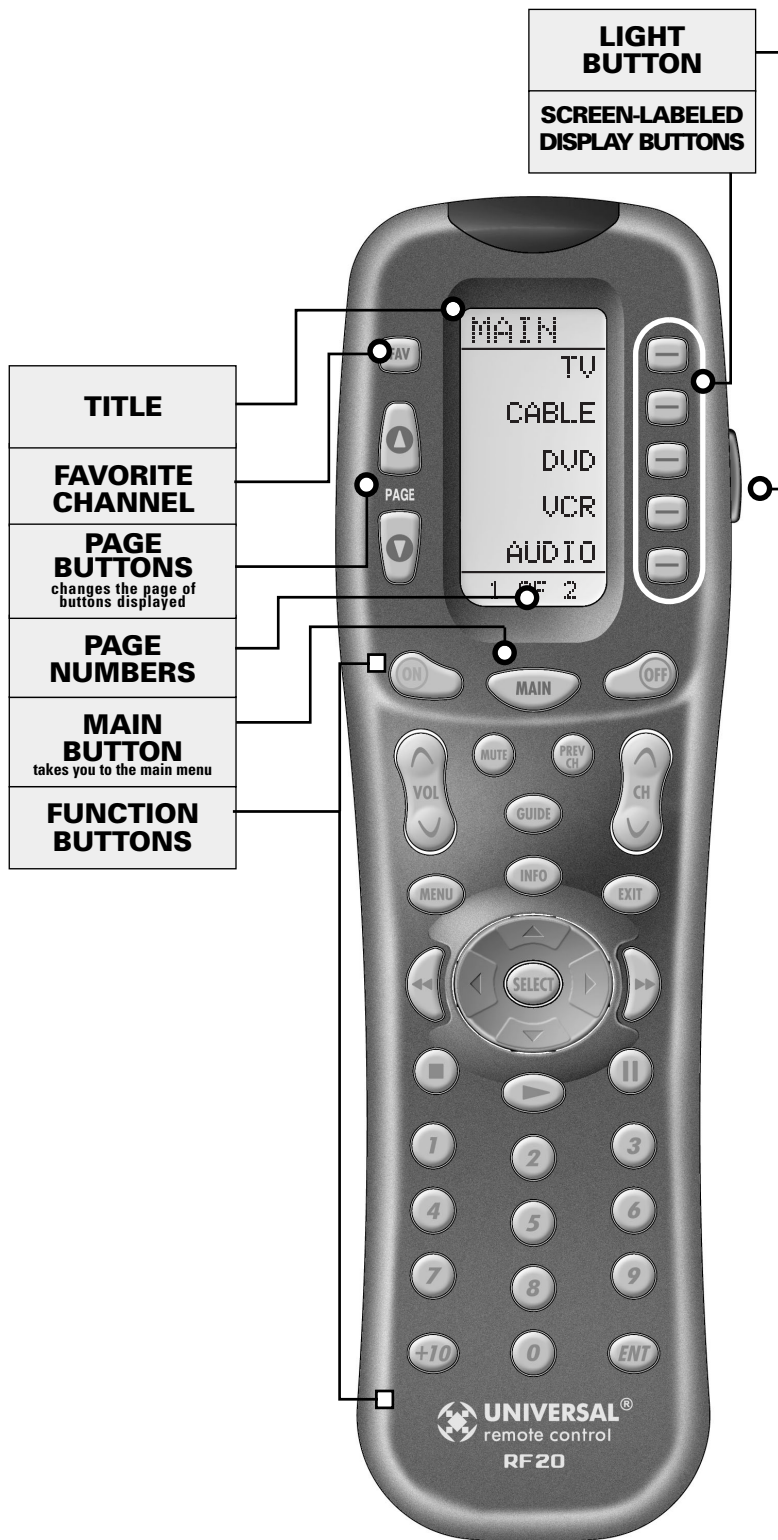

Getting Started-Overview


This is what MASTERCONTROL™ RF20 is all about!

The RF20 is designed to operate up to 10 different Audio/Video Components and is pre-programmed to operate virtually all brands of TV, VCR, DVD and CD Players, Cable Set Top Boxes, Satellite Receivers, TiVo and other DVRs, Audio Components, Tape Decks, Multimedia PCs, XM Radio, Ipod, X-Box, Lighting Controls and other custom installation products. It also offers an impressive lineup of special features designed to provide you with many time-saving conveniences and enhance your overall entertainment experience. However, we strongly recommend that you fully complete all of the Basic Setup steps before proceeding to customize your RF20 with any of the special advanced features.

Battery Installation

The very first step is to insert the four AAA batteries that are included in the package into the battery compartment located in the back of the remote. Just press the tab and lift off the cover. Please be sure to insert the batteries correctly as you see in the diagram. Remember, there is a positive and negative end to each battery and you can

tell by the + (positive) and - (negative) symbols. Once the batteries are correctly installed, replace the cover. Now you're ready to start!

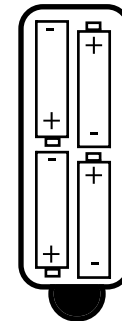


Activating Component Commands – Simple, Easy, Intuitive

Once you've programmed RF20 for your Components, all you have to do to operate a specific Component is first, press the MAIN button. This will display Page 1 of the MAIN menu on the LCD screen. Page 1 of the MAIN menu displays five Components. Then, simply select the Component you want to operate by pressing the corresponding Screen-Labeled Component Display Button on the right side of the LCD Screen. As an example, if you press the TV Display Button, the display label at the top of the screen will change from MAIN to TV, and all the buttons on RF20 will work your TV. To operate another Component, simply press the MAIN button again to return to Page 1 of the

MAIN menu and select the next Component you want to operate.

If you don't see the Component you want to control on Page 1 of the MAIN menu, just use the PAGE (▲) (▼) buttons on the left side of the screen to bring up Page 2 of the MAIN menu which displays an additional five Components.


Each Component is provided with five pages of pre-labeled command display buttons (or space for additional command display buttons). Once again, simply use the PAGE (▲) (▼) buttons to take you to the next command page, or return you to the previous command page.

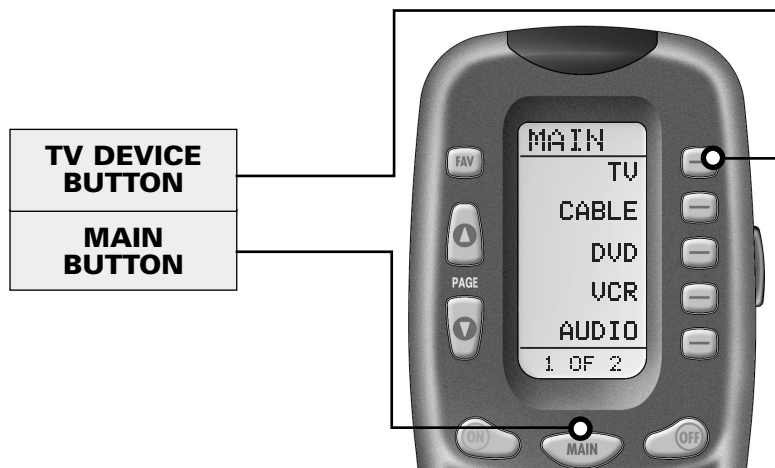

Light Button

The fully backlit keypad makes the RF20 easy to use in the dark or dim lighting conditions. Simply press the LIGHT button to backlight all the keypad buttons and LCD screen. To turn off the backlight, press the LIGHT button again, or just wait ten seconds (the backlight automatically shuts itself off). Lights out!

Try it out!

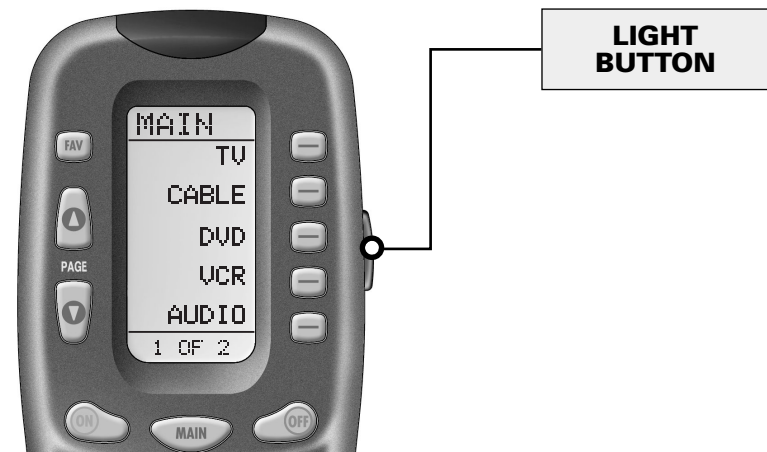

Basic Setup - Overview

There are two ways to program the RF20:

- **The Pre-Programmed Code Method**
- **The Learning Method**

The Pre-Programmed Code Method allows you to set up all the buttons at once, so it's the fastest and easiest of the two methods. The Learning Method allows you to transfer functions from other remotes (old or new), one button at a time.

Pre-Programmed Code Method

STEP 1:

The pre-programmed 3-digit codes are found in the back of this Manual on page 44. The codes are listed by Component category (i.e., TV, VCR, DVD, etc.), then by brand name. For instance, if you want to locate a code for a Sony TV, first locate the TV category, and then look for the Sony brand.

Once you have located the 3-digit code (or in some cases, several code numbers) for the Component that you want to operate with your RF20, write them ALL down on a piece of note paper. It's important that you write down all the codes because only one code is going to work for you.

STEP 2:

Now, turn on the Component you want to program... let's say your TV to start. Look up your TV's manufacturer setup code from your reference list.



STEP 3:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals that you are now in setup mode.

IMPORTANT:

You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

**MAIN
BUTTON**


**ENTER
BUTTON**

STEP 4:

Press the P-PRO display button to select the Pre-Programmed Method.

The screen will then display the five Components from Page 1 of the MAIN menu.

To display Page 2 of the MAIN menu that lists an additional five Components, simply press the PAGE (▲)(▼) buttons.

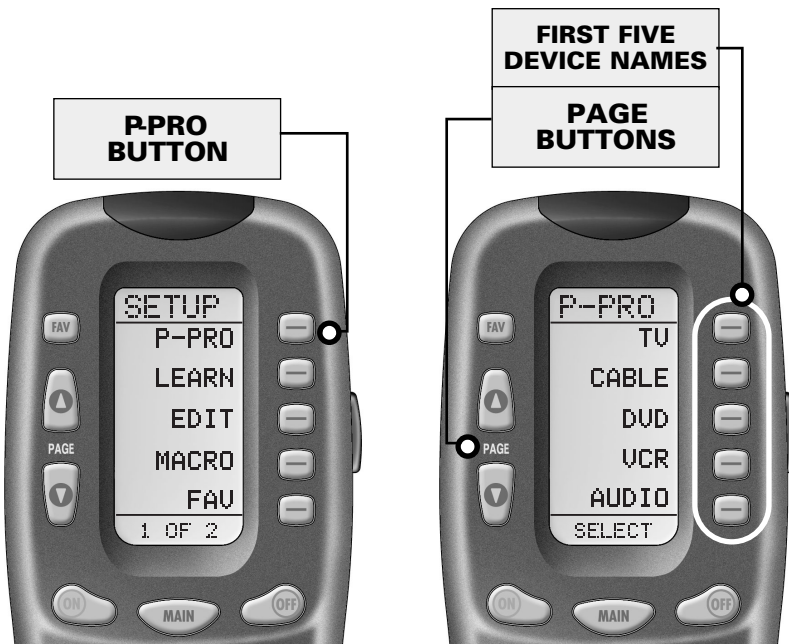**STEP 5:**

Press the Component display button you want to program. For example: If you want to setup the TV Component display button, press the TV Component display button. The display at the bottom of the LCD screen will flash "FROM - TABLE".

STEP 6:

In this step you verify the type of component you plan to operate with this component button. For example: If you plan to operate the TV component with the TV button, simply press the TV display button once again. However, if for example you are setting up AUX to operate a second DVD Player, you would first need to press AUX in Step 5, and then DVD in Step 6.



NOTE:

If the Component fails to turn off after you have entered all the code numbers listed for your brand, you can scan through all the other code numbers that are pre-loaded into the RF20 for that Component (in this case TV) by using the UP or DOWN display buttons on the screen. (There is a chance that your Component was actually manufactured by another brand.) However, most of the code tables are so large that it is usually faster to use the Learning Method on Page 15.



STEP 7:

Point the RF20 toward the Component you want to program, (in this example, TV), and punch in the 3-digit code that you wrote down for that specific Component. Use the Number buttons 0-9 on the remote to punch in the code. If the 3-digit code number that you just punched in is correct, the Component will turn off. If the Component does not turn off, continue entering code numbers from your list until the Component turns off. Some brands have several possible code numbers.

STEP 8:


When the Component turns off, press the ON button to turn the Component back on. Now you can test the Volume and Channel buttons (for TV), or PLAY and STOP (for VCR and DVD) to make sure they all work. If any of the buttons do not work properly, you need to find a new correct code. For

example, maybe your Sony TV turned off with code number 147, but the volume controls did not work properly. If this is the case, try the next code number listed for that Component until you find a perfect match.

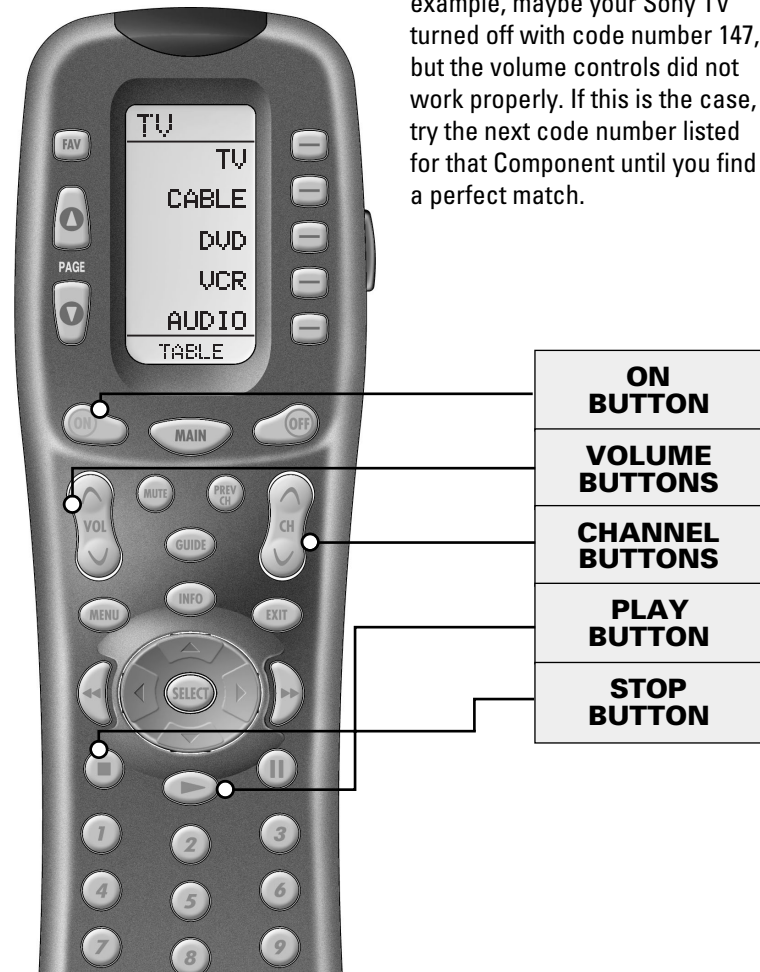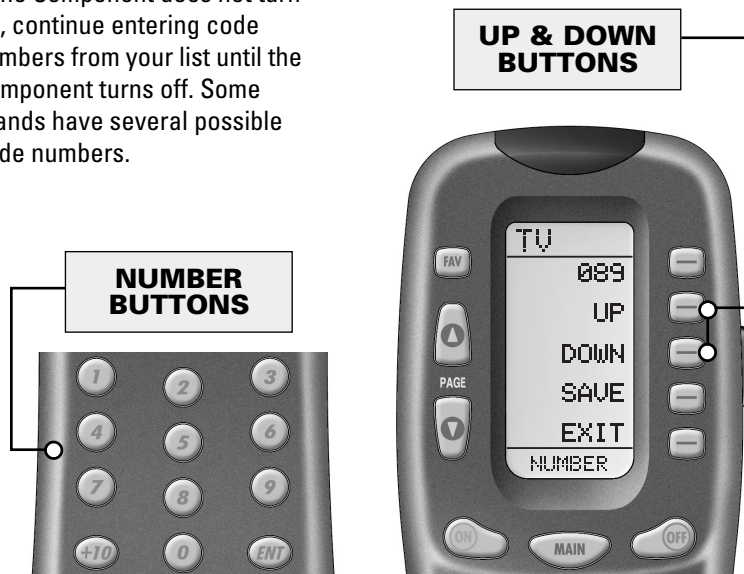

STEP 9:


Once you have found the right code, save the code number by pressing the SAVE display button that appears on the LCD screen. The LCD screen will blink "SAVED" two times, signaling that the code number has been successfully saved.

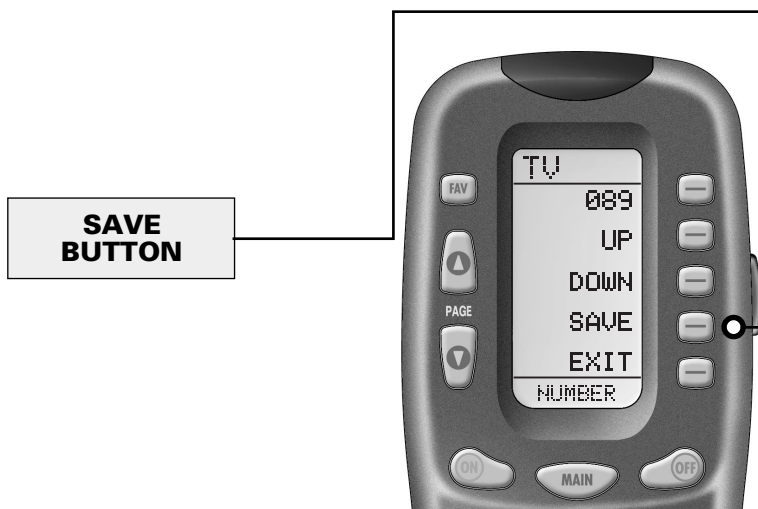**STEP 10:**

Exit SETUP mode by pressing the MAIN button two times. When the LCD screen displays MAIN, you are back in normal operating mode.

NOW, PROGRAM THE REST OF YOUR COMPONENTS BY REPEATING STEPS 1 THROUGH 9. IN MOST SYSTEMS, YOU CAN FINISH BASIC SETUP IN JUST A FEW MINUTES AND PUT ALL YOUR OLD REMOTES AWAY.

IF YOU ARE STILL MISSING COMMANDS TO CONTROL ANY OF YOUR COMPONENTS, USE THE LEARNING METHOD ON PAGE 15.

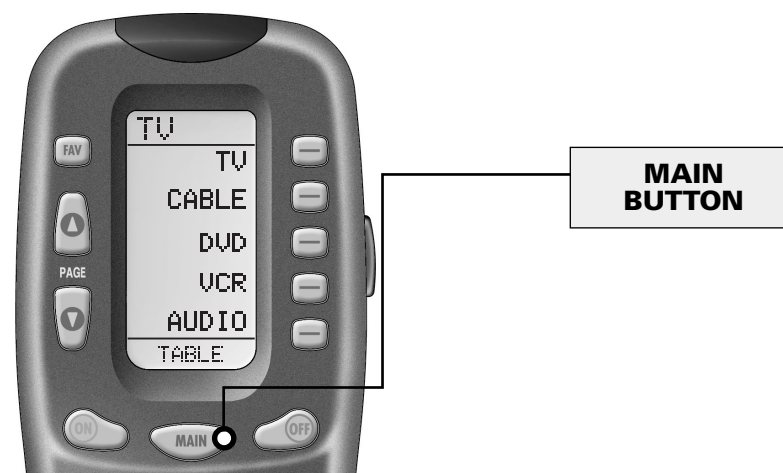

Learning Method

The RF20 can actually 'learn' commands from other remote controls (old or new), one-button-at-a-time, so it will never become obsolete. RF20 is the last remote you'll ever need! Just follow these simple steps:



STEP 1:

Line-up the RF20 with the other remote control, head-to-head, one or two inches apart.

STEP 2:

On the RF20, press and hold the MAIN and ENT (Enter) buttons at the same time for approximately three seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals you are now in SETUP mode.

IMPORTANT

You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

MAIN
BUTTON

ENTER
BUTTON



STEP 3:

Press the LEARN display button on the LCD screen. The top of the screen will change to "LEARN" and display the five Components from Page 1 of the MAIN menu.



To display Page 2 of the MAIN menu that lists an additional five Components, simply press the PAGE (▲) (▼) buttons.


STEP 4:

Select the Component you want to teach commands to by pressing that Component display button on the LCD screen (in this example, TV). The top of the TV screen will change to "TV".



NOTE: If you want to teach any command to a Component button, press the desired Component display button once the top of the screen displays "MAIN", by pressing the PAGE button. The top of the screen will change to "READY". Then go to STEP 6.

LEARN
BUTTON

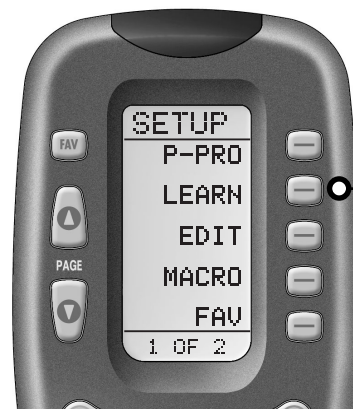

STEP 5:

Press any button on the RF20 that you want to teach a command to. The top of the screen will change to "READY" and the bottom of the screen will display the button name you pressed.



NOTE: If you don't see the display button you would like to teach on the LCD screen, use the PAGE (▲) (▼) buttons. The only buttons you can't teach are the PAGE and MAIN buttons.

STEP 6:

Press and hold the button on the other remote control that you want to 'teach' to the RF20 until the LCD display on the RF20 changes to either "GOOD" or "FAILED". If the "GOOD" label appears on top of the display, you were successful. If the "FAILED" label appears on top of the display, try 'teaching' the same button to the RF20 once again by repeating STEPS 5 and 6.

**STEP 7:**

Now, continue to teach the RF20 any other commands from your other remotes by repeating STEPS 4 through 6 (to go back to STEP 4, simply press MAIN once).

STEP 8:

Once you have completed teaching all the button commands to the RF20, return to normal operation by pressing the MAIN button twice.

NOTE: Test all your new commands. If any of them don't work, try the Learning Method again, following these suggestions:

- Move to another room. Plasma TVs, sunlight, halogen or quartz lighting can interfere with the learning process.
- Even though the old remote seems to be working fine, put in fresh alkaline batteries.
- Gradually vary the distance between the remote controls. Try 1", 2" and so on, up to 4 feet.
- Try tapping the button on your old remote instead of pressing and holding it during the learning process.

Some additional Information regarding the Learning Process:

- Learned functions override any existing pre-programmed functions on the remote control.
- All buttons can be learned except for the PAGE, MAIN and LIGHT buttons.
- Learned functions are automatically erased when a new function is learned on the same button.
- Learned functions are retained even after a different Setup Code Number is programmed into the remote.
- To return to an original pre-programmed function, a learned function must be erased.

Transmitting (Busy Signal) Icon

When a command is being transmitted, an icon will appear in the upper right corner of the LCD screen. This indicates that a signal is being sent. This is particularly useful when setting up Macros and FAVs, since it flashes with every step of a sequence of commands.



CHILD LOCK FEATURE

This 'child-lock' feature prevents the unauthorized use of the remote control by children. It blocks all operations of the remote control.

To Activate:

Press the +10 and ENT (Enter) buttons simultaneously for 3 seconds. The bottom of the LCD will blink "LOCKED" three times and then display "LOCKED".

To Return to Normal Operation:

Press the +10 and ENT (Enter) buttons simultaneously again for 3 seconds. The LCD will display the last use mode.

Customizing Your RF20 with Special Advanced Features

After you've finished all your basic setup, you can choose to make operation easier by customizing the RF20 just the way you want, using the Special Advanced Setup Features described in this section.

Customizing the LCD Screen

You can easily edit or change the name of any of the display buttons (including Favorite Channels) on the LCD screen by following these steps:

STEP 1:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals that you are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 2:

Press the EDIT display button. The LCD display will change to the EDIT menu.

STEP 3:

Press the TEXT display button. The screen will display the list of Components and "EDIT" will appear at the top of the screen.


STEP 4:

Navigate to the Component and page where there is a button label you want to EDIT, selecting between the FAV, MAIN, COMPONENT display buttons; then using the PAGE button.

NOTE: If you wish to change the name of a Component button, press the Page (▲) Up button twice. The top of the display will change to MAIN, and you can navigate to MAIN page 1 or page 2 before going on to Step 5.

STEP 5:

Press the button you wish to edit. The first character space of your button label will start to blink.

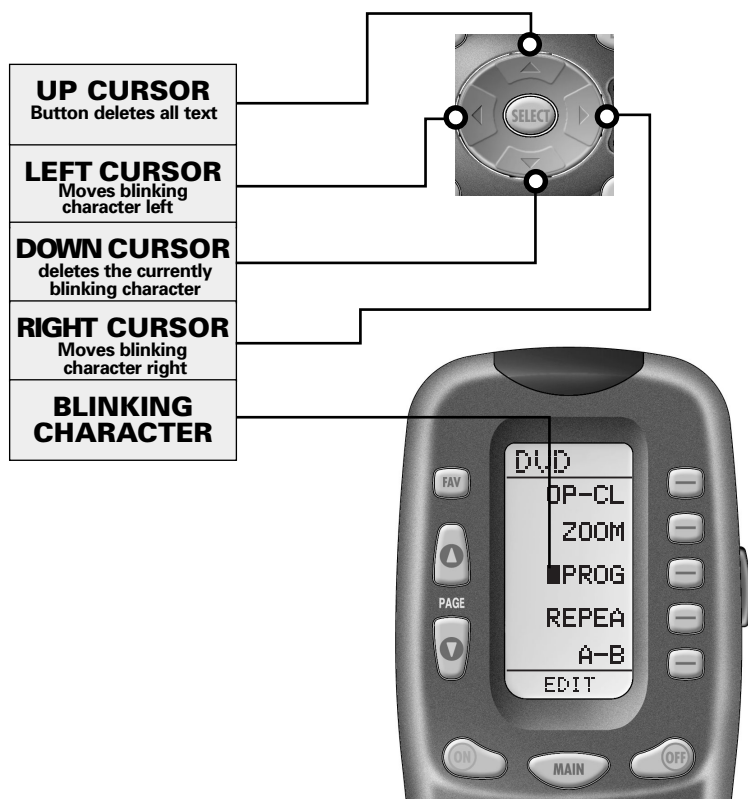**STEP 6:**

Change the character by using any of the number keys. Each press of the same number selects the next character of that number's group, as shown in the diagram below.

**STEP 7:**

Once the character you want appears, move to the next space by pressing the Right cursor button.

STEP 8:

When you are finished editing the button, press the button you edited and "SAVED" will flash at the bottom of the display.

To change any other button labels on the same Component, press the next button, then repeat steps 6-8. If you wish to edit a button on another Component, press the MAIN button once, then repeat Steps 4-8.

STEP 9:

Once you've finished editing buttons, press the MAIN button four times to return to normal operation.

Favorite Channel Setup

This is one of RF20's most desirable features. Once it's set up, you can select up to 40 favorite channels with the press of a button - without the need to remember or type in a channel number. Let the channel surfing begin!

To access Favorite Channel listings, simply press the FAV button to display Page 1 of Favorite Channel listings. There are eight pages of Favorite Channels, with five Channels on each page, for a total of 40 Channels. Just use the PAGE (▲) (▼) buttons to locate the Channel you want to setup. Each Channel can be setup to be instantly selected with the press of one button.

To setup a Favorite Channel button, follow these steps:

STEP 1:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals that you are now in setup mode.

IMPORTANT:

You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 2:

Press the FAV display button.

The top of the display will show "FAV". The bottom of the display will flash "SELECT"

STEP 3:

Use the PAGE (▲) (▼) buttons until you locate the name (i.e., ABC, CBS, NBC) of the favorite channel you want to setup.

STEP 4:

Press the favorite channel display button you want to setup. The top of the screen will change to show the channel name. The bottom of the screen displays "STEP0", indicating that you have not entered the channel number yet.

STEP 5:

Press either the TV, SAT or CABLE Component button (select the Component you use to enter channel numbers).

STEP 6:

Press each of the number buttons for the channel.

Note: If a number is repeated when setting the channel (for example, channel "33" or "522"), it is usually best to set a half second delay in between the identical numbers by pressing the (II) PAUSE button. Each press of the PAUSE button increases the delay by a half second.



**PAUSE
BUTTON**

NOTE: Some brands of television require an ENT (Enter) command after the channel numbers.

**FAV
BUTTON**



STEP 7:

Press the LIGHT button after you enter the channel number. A new screen appears displaying SAVE, UNDO or EXIT.

STEP 8:

To save the channel you entered, press the SAVE display button. The UNDO display button lets you erase the last entry. The EXIT display button erases all entries for this button.

STEP 9:

When you are finished setting up Favorite Channel buttons, press the MAIN button twice to return to normal operation.

**MacroPower™ Setup**

MacroPower™ is a unique feature that enables you to turn all of your Components ON or OFF, at the same time, simply with the press of one button.

We call that a "Macro". What would normally take multiple remotes and button pushes, the RF20 can accomplish with the press of one button. In addition to the Power ON or OFF buttons, any of the Display buttons (on any Component or Page) can be set to be Macro buttons as well. Feel the power!

To setup a Power ON macro button that will turn ON several components at the same time (for example, TV, VCR and CABLE), follow these easy steps:

STEP 1:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD touch screen. This signals that you are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 2:

Press the MACRO display button on the LCD screen. The top of the screen will display "MACRO". The bottom of the display will flash "SELECT".

STEP 3:

Press the ON button. "ON" will display at the top of the LCD screen. "STEP0" will display at the bottom of the screen indicating that no macro steps have been entered yet.

STEP 4:

Press the first component display button you want the Macro to turn on (in this example, TV) and "TV" will display at the top of the screen and "STEP 1" at the bottom.

STEP 5:

Then, press the ON button to confirm the command and "STEP 2" will display at the bottom of the screen. (NOTE: Whenever a button is pressed, another Macro step is counted and displayed at the bottom of the screen.)

STEP 6:

Now, press the MAIN button to return to the Main Component listing. ("STEP 3" will display at the bottom of the screen.)

STEP 7:

Press the second component display button that you want the Macro to turn on (in this example, VCR) and "VCR" will display at the top of the screen. ("STEP 4" will display at the bottom of the screen.)

STEP 8:

Then, press the ON button to confirm the command. ("STEP 5" will display at the bottom of the screen.)

STEP 9:

Now, press the MAIN button to return to the Main Component listing. ("STEP 6" will display at the bottom of the screen.)

STEP 10:

Press the third component display button that you want the Macro to turn on (in this example, CABLE) and "CABLE" will display at the top of the screen. ("STEP 7" will display at the bottom of the screen.)

STEP 11:

Then, press the ON button to confirm the command. ("STEP 8" will display at the bottom of the screen.)

NOTE : Don't worry about the number of steps. Each macro button can store up to 190 steps, so you are not likely to run out of steps!

You can also program delays in between commands by pressing the (II) PAUSE button. Each press adds half a second to the delay.

STEP 12:


Press the LIGHT button to end your macro. A new screen will appear:

STEP 13:

If you are satisfied with your macro, press the SAVE display button. The UNDO display button lets you erase the last step. The EXIT display button erases all the macro steps.

STEP 14:

Press the MAIN button twice to return to normal operation.

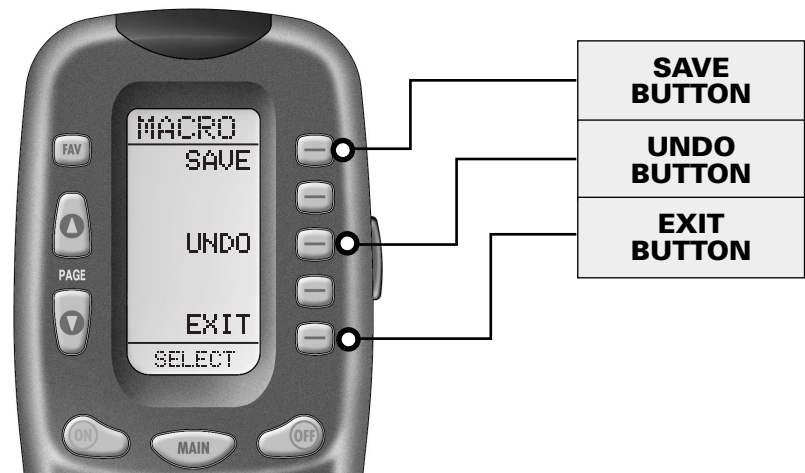

Advanced Macro Options:

SETTING UP A POWER OFF MACRO:

Simply follow the same steps as outlined above, except press the OFF button in place of the ON button.

SETTING A COMPONENT BUTTON AS MACRO:

If you wish to set one of the Component buttons as a macro, in STEP 3, press the Page Up button twice. The top of the display will change to MAIN, and you can navigate to MAIN page 1 or page 2. Press the Component button you want to set as a Macro button. The top of the screen will display the button label you selected. Select the Component and Page that has a button you want in your Macro using the MAIN, Component and Page buttons. Simply press the button(s) with the command(s) you want in your Macro. Then complete and save the Macro by following STEPs 12 and 13 as outlined above.

PROGRAMMING A "PRESS & HOLD" MACRO:

Another option for Component button macros is to only send the macro if the button is pressed and held. This is setup by entering a delay as the first step of the macro. The amount of delay determines how long the user must press the button before the macro is sent. The advantage of this option is that a normal press of the COMPONENT button will simply switch Components without sending the macro command.

SimpleSound™ Setup & Other 'Punch Throughs'

SimpleSound™ is a dynamic feature that gives you total volume control over all the Components in your system, even those without their own built-in volume control, such as TiVo, DVD and VCR... saving you the hassle and inconvenience of constantly needing to switch between Component modes on the remote. With SimpleSound™, you can set the RF20's volume control buttons to always control the sound in your system, even when you're in VCR or DVD mode, without switching back to AUDIO or TV. Even more exciting, SimpleSound™ is what is called a 'Punch Through' feature and is not limited strictly to volume control. Click and enjoy!

STEP 1:

In a basic home entertainment system, the sound may come from your TV. In a more advanced system, the sound may come from your audio Component such as a Surround Sound Receiver or Home Theatre system. So, first, you need to identify which Component you want to use in your system for sound.

STEP 2:

Press and hold the MAIN and ENT (Enter) buttons at the same

time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals that you are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 3:

Press the PAGE (▲) UP button to display Page 2 of the Setup Menu on the LCD screen. Press the PUNCH display button.

STEP 4:

Then press the VOL (Volume) display button. The screen will display "VOL" at the top. This sets up the group of three buttons (Volume Up, Volume Down and Mute) in one action!



**VOLUME
BUTTON**

The bottom of the display flashes "PUNCH TO". Press the button for the Component that doesn't have volume control commands yet (i.e., DVD). This is the Component you are going to PUNCH TO for the volume and mute commands.

NOTE: If you want to PUNCH TO the MAIN Component, press the POWER OFF button at this time.

STEP 5:

The bottom of the display will then flash "PUNCH FROM". Now select the Component that has the volume commands you want to use (i.e., TV for systems using the TV speakers, AUDIO for systems with surround sound receivers). The bottom of the display will flash "SAVED".

STEP 6:

Repeat STEPS 4-5 until all your Components operate the volume perfectly.

STEP 7:

Press the MAIN button twice to return to normal operating mode and test your SimpleSound™ settings.

NOTE: The Punch Through feature is not limited to volume and can also be applied to channel selection or other functions. If you find yourself switching to a particular Component frequently to use a group of controls, consider using Punch Through for another group, as listed here:

VOL	Volume Up, Volume Down and Mute
CH	Channel Up, Channel Down, Previous Ch and Channel (0-9) buttons.
PLAY	Play, Stop, Pause, Rewind and Fast Forward
VOD	Guide, Menu, Info, Exit, Up, Down, Left, Right, Select

Simply perform the steps outlined above, but in STEP 4, press one of the control options (CH, PLAY or VOD).

Setting Backlight Options

You can customize the backlighting feature to suit your specific preferences by following these simple steps:

Adjusting Length of Backlight Time


You can adjust the amount of time that the RF20 backlight stays on by entering the SETUP mode and proceeding to page 2 (using the PAGE (▲) UP button), then pressing the LIGHT display button on the LCD screen (not the Backlight button). Then enter the amount of time you would like the light to stay on using the number pad (0-99 seconds). After making your selection, press the SAVE display button.

Adjusting Contrast

You can make the text darker by pressing both the MAIN and cursor UP buttons at the same time. To make the text appear lighter, press both the MAIN and cursor DOWN buttons at the same time.

Turning OFF Backlighting

If you don't want backlighting at all (this extends battery life), press the ON display button that appears on the screen. The ON will change to OFF. Press the SAVE display button. Exit the setup mode by pressing the MAIN button.

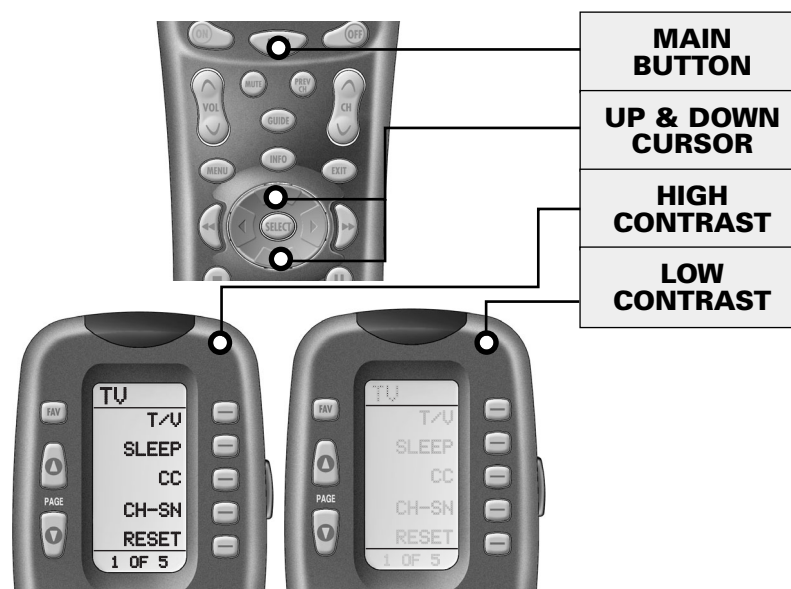

Hiding and Adding Pages

Each of your RF20 Components actually contains eight pages. However, only five pages are visible in the factory default setting. Three page are hidden in each Component. If you wish to use the hidden pages, you can ADD it. If you don't want to use some of the existing pages, you can HIDE them. You can add or hide pages on Components OR on your favorite channel pages using this simple process:

NOTE: Be sure to program your Macros before you hide pages with potential macros in them. You can't access hidden pages during macro setup. However, after you finish Macro setup, you can hide pages without affecting operation of your macros.



This page is hidden. To ADD it, press the LIGHT button.



This page is visible. To HIDE it, press the LIGHT button.

STEP 1:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals that you are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 2:

Press the EDIT display button on the LCD screen.

STEP 3:

Press the PAGE display button once the screen changes to EDIT mode.

STEP 4:

"PAGE" appears at the top of the screen. Now, you can navigate to any page, using the MAIN, COMPONENT, FAV, and PAGE display buttons.

STEP 5:


When you select a page, the top of the screen indicates whether you want to "ADD?" or "HIDE?" the page displayed. When you want to change a page's visibility (i.e., either ADD or HIDE), simply press the LIGHT button.

STEP 6:

You can continue to ADD or HIDE pages on other Components by repeating Steps 4 and 5.

STEP 7:

When you are finished adding and hiding pages, press the MAIN button four times to return to normal operation.

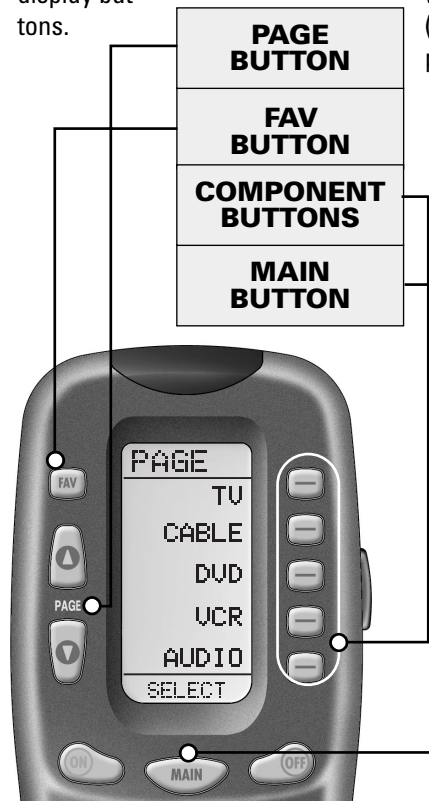

Recalling Pre-Programmed Setup Code Numbers

In case you didn't write down the Pre-Programmed Code Numbers that you used to set up your RF20, you can easily recall them using this simple process:

STEP 1:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD touch screen. This signals that you are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 2:

Go to Page 2 of the Setup Menu by pressing the PAGE (▲) button.

STEP 3:

Press the RECAL display button on the LCD screen. The display will change to the Recall screens. The screen automatically switches between four screens, alternately flashing Page 1 components and code numbers, then Page 2 components and code numbers.

STEP 4:

Write down the code numbers as they appear for future reference. Page 43 of this manual provides a convenient space for you to record your code numbers.

STEP 5:

Return to normal operation by pressing the MAIN button twice.

Cloning Other RF20s

If you are fortunate enough to own more than one RF20, you'll be happy to know that you can easily copy and transfer all the setup from one RF20 to another. Just follow these easy steps:



STEP 1:

For both the programmed RF20 that you want to clone, and unprogrammed RF20, press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of their respective LCD screens. This signals that both remotes are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

STEP 2:

Press a PAGE button on each remote to bring up Page 2 of Setup and display the CLONE button.

STEP 3:

Press the CLONE button on each remote.

STEP 4:

Align the two RF20s head-to-head, about an inch apart.

STEP 5:

Press the RECV display button on the unprogrammed RF20 that you want to setup by cloning.

STEP 6:

Press the SEND display button on the programmed RF20 that you want to clone.

STEP 7:

Press the START button on the unprogrammed RF20, and then press the START button on the programmed RF20 that you want to clone.

NOTE: Cloning typically takes about 40 seconds. After successful cloning is completed, the newly cloned RF20 will flash "GOOD".

STEP 8:

Return to normal operation by pressing the MAIN button twice.

Erasing Commands - Overview

You can erase an individual button with a learned command, a macro or a favorite channel. You can erase an ENTIRE Component's learned command or macro buttons. You can also erase ALL your learned commands on all Components or all your macros or favorite channels everywhere.


If you really want a fresh start, it is possible to reset everything to the factory default settings.

Erasing Learned Buttons, Macros or Favorite Channels

STEP 1:

Press and hold the MAIN and ENT (Enter) buttons at the same time for approximately 3 seconds, until the word "SETUP" is displayed at the top of the LCD screen. This signals that you are now in setup mode.

IMPORTANT: You now have 30 seconds to perform the next step while you are in SETUP mode. If you don't press a button within 30 seconds, SETUP will disappear from the screen, signaling that you have exited setup mode and you will need to start over.

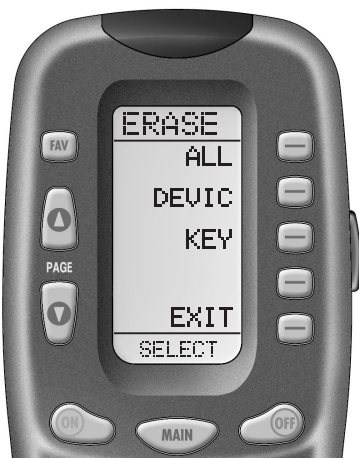

STEP 2:

Press a PAGE button to display Page 2 of Setup.

STEP 3:

Press the ERASE display button on the LCD screen.

STEP 4:

Press either the LEARN, MACRO or FAV button. The following screen appears:

ALL - Erases ALL of the specified (Learned, Macro or FAV buttons everywhere in the RF20)

DEVICE - Erases all learned or Macro buttons in a single Component (NOTE: This option is not available for FAVs.)

KEY - Erases one button only.

STEP 5:

If you press ALL, the RF20 displays a "SURE?" button. After the SURE button is pressed, all the buttons will be erased.

If you press DEVICE, a list of Components will appear. Press the Component button that you wish to erase. The bottom of the screen will flash ERASE twice, then ERASED.

If you press KEY, you'll have to navigate to the Component and Page you want using the MAIN, COMPONENT and PAGE buttons. Press a button to erase it. The bottom of the display will flash ERASE twice, then ERASED.

**SURE
BUTTON**

STEP 6:

To return to normal operating mode, press the MAIN button four times.



Re-setting RF20 to Original Factory Default Settings

If you want to start with a clean slate, you can re-set the RF20 its original factory default settings by performing the following steps.


NOTE: This process will essentially erase **EVERYTHING** you have programmed into the RF20.

STEP 1:

Press and hold both the MAIN and the STOP buttons for 10 seconds.

STEP 2:

After 10 seconds, the RESET screen appears. Press the ALL button. The RF20 will display a "SURE?" button. Press the SURE button to erase all of your settings and return to the factory default setup

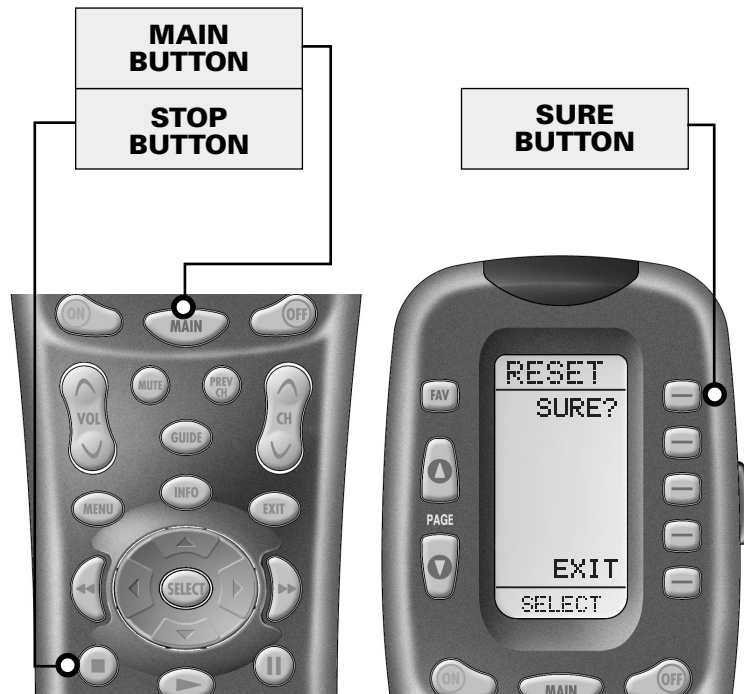

The Optional PowerBlaster™ (for 'barrier-free' RF control) [Sold separately]


Of all the fabulous RF20 features, this is probably the most exciting. When used in combination with the optional PowerBlaster™, the RF20 becomes an amazing remote control powerhouse that sends multi-directional RF (Radio Frequency) signals that pass through walls, doors and floors - both indoors and outdoors.

This changes everything! It enables you to control Components that are completely out-of-sight, up to 100' away. The PowerBlaster™ picks up RF20's radio frequency signals from any direction, regardless of distance, so RF20 doesn't need to be pointed directly at any Component. Just imagine - no more pointing! Now you can close your entertainment center doors, hide your Components, and still control them with ease. Control outdoor speakers on your patio. Control your Components anywhere!


One of the best things about this is -- nothing has to be done to the RF20 for this feature to work. Every time you press a button on the RF20, it sends both a standard IR (Infrared Command) AND an RF (Radio Frequency) signal. If you install the PowerBlaster™ kit, it will automatically receive RF20's radio signals and translate them into the infrared commands that control your Components.

NOTE: The RF20's radio signals will not control Components directly. You must have a PowerBlaster™ to receive the RF20's radio signals. Components that came with "no pointing" radio remote controls cannot be operated by the RF20 unless the Component can be switched to standard IR (Infrared Control) via its internal menus. Some remote control ceiling fans are radio only and cannot be operated by the RF20.

The RF20 sends radio signal to the PowerBlaster™, which is a radio receiver

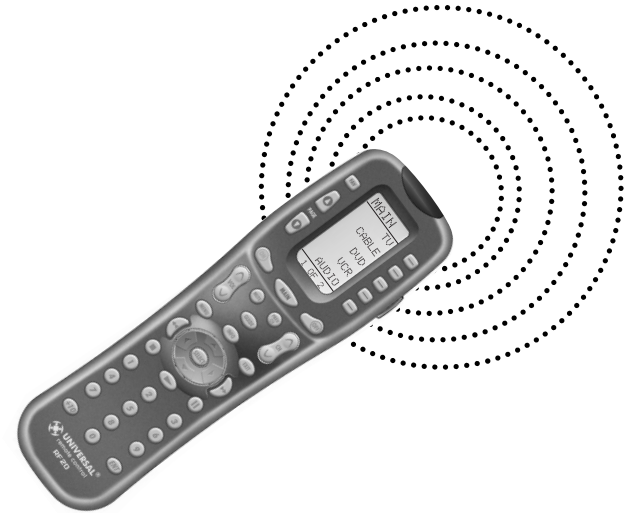

The PowerBlaster™ converts radio signals to standard infrared commands and sends them out via a built-in front blaster to Components in the same cabinet space.

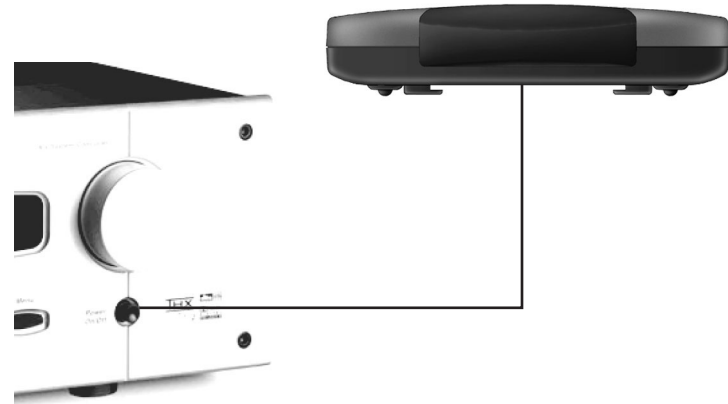

Self-adhesive "flashers" (included in the PowerBlaster™ kit) affix to the front panels of your Components. The flashers relay infrared commands to Components out-of-sight of the PowerBlaster's front blaster. The flashers plug into PowerBlaster's rear flasher line output jacks. Each flasher has a 10' cable to easily reach Components on nearby shelves.

Pre-Programmed Code Notes

Record the three digit codes for your system here

AUDIO	_____
DVD	_____
CD	_____
SAT	_____
TV	_____
VCR	_____
CABLE	_____
AUX	_____
LIGHT	_____
TAPE	_____
PHONO	_____
TV2	_____
VCR2	_____
DVR	_____
LDP	_____
XM RADIO	_____
IPOD	_____
X-BOX	_____

Pre-Programmed Code Tables

The RF20's Pre-Programmed code library is divided into categories (TV, VCR, AUX, etc.). Each category actually includes many types of Components. For example, the VCR category includes TV/VCR combo units.

Within each category, the code numbers are listed in rows by brand (Sony, Panasonic, B & K, etc.). Some brands have more than one three digit code for you to try. Just circle the correct row and refer to it while you setup (step by step instructions for using Pre-Programmed codes are found on page 7).

TV	TVs, Plasmas, Projectors and Monitors
CABLE	Cable TVs and Web TVs
DVD	DVD Players and TV/DVD Combos
VCR	VCRs and TV/VCR Combos
AUDIO	Amps, Preamps, A/V Receivers and XM Radios
SAT	Satellite Receivers
CD	CD Players and CD Changers
DVR	TiVo, Replay and other DVR's
AUX	Tape Decks, Lighting Controls, Multimedia PCs, Xbox, iPod and Custom Installation Products

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

TV

ADMIRAL	072 081 161 160
ADVENT	247
AKAI	197 146 248
A MARK	112 143
AMPRO	167 073 157 183
AMSTRAD	052
ANAM	043 054 056 080 112 131
AOC	197 004 112 058
APEX DIGITAL	006 310
AUDIOVOX	076 273
BARCO	233
BLAUPUNKT	088
BROKSONIC	238
CAIRN	201
CANDLE	197 002 003 004
CAPEHART	058
CETRONIC	043
CITIZEN	197 002 003 004 043 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 050 051
CORONADO	143
CRAIG	043 054
CROWN	043 143
CURTIS MATHES	197 101 004 143
CXC	043
DAEWOO	004 016 043 044 076 103 114 125 127 143
DAYTRON	004 143
DELL	319 320 321
DREAMVISION	235 345
DWIN	177 257
DYNASTY	043
DYNATECH	062
EIKI	187
ELECTROHOME	143 024 076 196
EMERSON	028 048 043 155 005 197 004 047 050 051 076 096 143 151 153 154
EPSON	324
ESA	323
FISHER	007 057
FUJITSU	198 246 346
FUNAI	028 043
FUTURETECH	043
GATEWAY	242 268
GE	160 144 165 073 197 008 009 034 056 074 130 155 161 004 091 157 183
GOLDSTAR	113 116 102 004 106 112 119 127 143
HALL MARK	004
HANNSPREE	381
HITACHI	011 163 166 004 009 010 012 023 075 143 158 072
HP	316 327 378
HYUNDAI	337 338
INFINITY	164
INFOCUS	230 330 333
INSIGNIA	350
JBL	164
JCPENNEY	004 024 197 008 009 030 065 101 143 156 160
JENSEN	013
JVC	038 034 070 083 145 199 210 240 241
KEC	043

KENWOOD	197 070
KLOSS	002 059
KMC	143
KTV	043 197 143 154
LG	113 116 102 004 106 112 119 127 143 243 284 363 365
LODGENET	072
LOEWE	164
LOGIK	072
LUXMAN	004
LXI	166 007 015 052 081 160 164
MAGNAVOX	164 059 197 003 060 061 004 063 064 127 022 160 094 239 226 273
MARANTZ	197 164 184
MATSUI	164
MAXENT	242
MEMOREX	007 072 004
METZ	088
MGA	197 004 024 028 042
MINERVA	088
MITSUBISHI	109 124 024 004 028 040 042 146 191
MTC	197 004 062 101
NAD	015 025
NEC	132 130 134 197 040 016 024 056 019 236 237 262 272
NIKEI	043
NUVISION	351
ONKING	043
ONWA	043
OPTONICA	019 081
OPTOMA	265 270
ORION	096
PANASONIC	034 056 080 092 164 208
PHILCO	197 003 059 060 064 164 004 024 056 063
PHILIPS	164 005 093 038 197 003 004 059 127 184 206 239 259
PIONEER	135 025 197 018 023 116 190 234 335
POLAROID	138 268 328 353 354 356 388
PORTLAND	004 143
PROSCAN	144 160 161 165 167
PROTON	004 131 058 143 171 173 193
QUASAR	034 056 092
RADIO SHACK	019 004 143 043 127
RCA	160 165 065 156 144 161 197 004 024 056 152 023 074 333
REALISTIC	007 019 043 047
ROCTEC	186
RUNCO	168 169 178 179 180 181 182 183 073 157 340
SAMPO	197 058 004 202
SAMSUNG	050 089 101 105 004 127 143 160 228 229 258
SANYO	166 007 020 053 057 082 187
SCEPTRE	276
SCOTT	028 043 004 048 143
SEARS	015 030 004 007 028 057 143 094 160 082 165 166
SELECO	189 200 205 227
SHARP	081 019 014 170 028 029 004 022 143 175 251
SIEMENS	088
SIM2	189 200 205 227
SIGNATURE	072
SOLE	231 232
SONY	070 139 147 126 185 194 085 213 277 279
SOUNDESIGN	028 004 003 043
SPECTRICON	112
SSS	004 043

TV

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

TV

SUPRE MACY 002
 SVA 328
 SYLVANIA 197 003 059 060 063 064 164 044 160 127
 SYNTAX OLEVIA 376
 TANDY 081
 TATUNG 056 062
 TECHNICS 034 080
 TECHWOOD 004
 TEKNIKA 002 003 004 024 028 043 072 101 143
 TELEFUNKEN 037 046 086 087
 TELERENT 072
 TERA 172
 TMK 004
 TOSHIBA 015 138 030 007 040 062 101 325
 TOTEVISION 143
 UNIVERSAL 008 009
 VIDEO CONCEPTS 146
 VIDIKRON 174 184 188 192 340
 VIDTECH 004
 VIEWSONIC 242
 VIZIO 386 387
 WARDS 004 008 009 019 028 060 061 063 064 072 074 143 164 034
 WESTING HOUSE 076 280
 WINBOOK 339
 YAMAHA 197 004
 YORK 004
 YUPITERU 043
 ZENITH 073 072 095 103 157 183 243 284
 ZONDA 112

ABC 004 103 003 039 042 046 053
 ADELPHIA 043 074
 ADVANCED NEWHOUSE 043
 ALTRIO 043
 AMERICAST 099
 ARCHER 005 007 014
 ARMSTONG 074
 AT&T BROADBAND 074
 ATLANTIC BROADBAND 043 074
 BELL SOUTH 099
 BLUE RIDGE 043 074
 BRESNAN 074
 BRIGHT HOUSE 043 110
 BUCKEYE COMM 074
 CABLEVISION 043 074 108
 CENTURION 092
 CENTURY 007
 CHARTER 043 074
 CITIZEN 007
 COGECO 074
 COMBANO 080 081
 COMCAST 043 074 110
 COMSAT 074
 COX DIGITAL 043 074
 DIGICABLE 101
 EAGLE 020 030 040
 EASTERN 057 066
 ECHOSTAR 106
 ELECTRICORD 032
 GEMINI 008 054
 GENERAL ELECTRIC 072
 GENERAL INSTRUMENT 074 103 104
 GNC 099
 GOLDEN CHANNEL 030
 HAMLIN 049 050 055
 HITACHI 103 055
 INSIGHT 074
 JERROLD 074 004 103 002 003 008 009 010 069
 MAGNAVOX 010 012 064 079 095 094
 MASSILLON 074
 MEDIA ONE 107
 MEDICOM 074
 MEMOREX 052
 MITSUBISHI 102
 MOTOROLA 074 110 109 111
 MOVIE TIME 028 032
 MOXI 111
 NCTC 074
 NSC 015 028 038 071
 OAK 031 037 053
 PACE 043 074
 PANASONIC 044 047
 PARAGON 052
 PHILIPS 006 012 013 020 085 095
 PIONEER 043 103 034 051 063 076 105
 PRUCER 059
 PULSAR 052
 RCA 047
 RCN 074
 RECOTON 098

CABLE / WEBTV

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

CABLE / WEBTV

REGAL 049 050
 REGENCY 057
 RODGERS 043
 SAMSUNG 030
 SCIENTIFIC ATLANTA 043 011 003 041 042 045 046
 SEREN 043
 SERVICE ELECTRIC 074
 SHAW 074
 SIGECOM 043
 SONY 096 108
 SPRUCER 047 078
 STARCOM 002 004 008 009
 STARGATE 008 030 097 104
 SUSQUEHANNA 043 074
 TIME WARNER 043 074
 TOCOM 039 040 056
 TOSHIBA 052
 UNITED CABLE 004 053
 UNIVERSAL 005 007 014 032 035
 VIDEOTRON 043
 VIEWSTAR 012 015 018 086 087 088 089
 WIDE OPEN WEST 043 099
 ZENITH 052 060 093 100

CODE TABLES

BRAND

CODE NUMBERS

DVD

AIWA 146
 ALPINE 098
 APEX DIGITAL 087 111 115 112 116
 ARCAM 122
 CAMBRIDGE AUDIO 215
 CARY AUDIO DESIGN 174
 CLASSE 167
 COBY 258
 DENON 007 080 173
 FUNAI 143
 GATEWAT 175
 GE 026 027
 GO VIDEO 137 218 220 221 222
 HARMAN KARDON 084 140
 HITACHI 101
 ILO 268
 INTEGRA 142 180
 JVC 012
 KENWOOD 151
 KISS 179 279
 KLH 135
 KRELL 104
 LEXICON 148
 LG 091 057 074
 LITEON 264 265
 MAGNAVOX 066 096
 MALATA 267
 MARANTZ 083 095
 MERIDIAN 153
 MITSUBISHI 017
 MYRYAD 102 134
 NAD 088 155
 NAKAMICHI 103
 ONKYO 076 035 180
 OPPO 266
 PANASONIC 021 042 138 139 144 150
 PHILIPS 066 083 095 105 166
 PIONEER 023 092 099 107 108 131
 POLAROID 233 234 237
 PRIMARE 193 194
 PROCEED 086
 PROSCAN 026 027
 RCA 026 027
 RJTECH 269
 ROTEL 204
 SAMSUNG 056 070 119 165 170 137 159
 SANSUI 154
 SANYO 147
 SENSORY SCIENCE 222 223
 SHARP 094
 SONY 033 118 145 126 191
 SYLVANIA 143
 SYMPHONIC 143
 TAG MCLAREN 156
 TATUNG 102
 TEAC 270
 THOMPSON 026 027
 THULE 177
 TOSHIBA 035 034 130 141 164 188
 VENTURER 149

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

DVD

VINC 161
 YAMAHA 042 089 166 195 197
 ZENITH 057 074 091

THETA DIGITAL 032
 TOSHIBA 152 106
 YAMAHA 043 129

DVD

DVD-TV/DVD Combos

AIWA 146
 FUNAI 143
 SAMSUNG 165
 SYLVANIA 143
 SYMPHONIC 143
 TOSHIBA 130

DVD-TV/DVD/VCR Combos

MAGNAVOX 143
 PANASONIC 144
 SYLVANIA 143
 TOSHIBA 164

DVD-DVD/VCR Combos

GO VIDEO 137 218
 PANASONIC 150
 PHILIPS 105 (VCR Functions for VCR 067)
 POLAROID 234
 SAMSUNG 137 159
 SANSUI 154
 SONY 145 191
 TOSHIBA 141
 ZENITH 091 (VCR Functions for VCR171)

DVD-DVD Recorder

GATEWAY 175
 GO VIDEO 220 221 222
 ILO 268
 KISS 279
 LITEON 265
 PANASONIC 139
 SENSORY SCIENCE 222
 SONY 191
 TOSHIBA 188

DVD-LD

DENON 206 207
 FUNAI 120
 KENWOOD 152 013
 MAGNAVOX 032 121
 MARANTZ 211
 MITSUBISHI 121
 NAD 121
 OPTIMUS 049 013
 PANASONIC 113
 PHILIPS 032
 PIONEER 106 117 121
 RADIO SHACK 120
 RCA 002
 REALISTIC 049
 RUNCO 127
 SANYO 075
 SHARP 152 013
 SONY 053 110
 TECHNICS 113

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

VCR

AIWA	034 161
AKAI	016 146 043 046 124 125 142
AMPRO	072
ANAM	031
AUDIO DYNAMICS	012 023 039 043
BROOKSONIC	035 037 129
CANON	028 031
CAPEHART	108
CRAIG	003 040 135
CURTIS MATHES	031 041
DAEWOO	111 116 117 119 005 007 010 065 108 110 112
DAYTRON	108
DBX	012 023 039 043
DYNATECH	034 053
ELECTROHOME	059
EMERSON	006 029 035 017 025 027 031 034 036 037 046 101 129 131 138 153 162 116
FISHER	003 010 008 009
FUNAI	034
GE	031 072 147 063 107 109 144
GO VIDEO	132 136 155 040 115
GOLDSTAR	101 106 114 013 020 012 123
HARMAN KARDON	012 045
HITACHI	004 026 150 018 034 043 063 137 160 013
INSTANTREPLAY	031
JCL	031
JCPENNEY	012 013 015 040 066 101
JENSEN	043
JVC	048 043 130 150 055 060 012 031 050 152 166
KENWOOD	014 048 034 047
LG	101 106 114 013 020 012 123
LLOYD	034
LXI	034 003 009 017 106
MAGIN	040
MAGNAVOX	067 031 034 068 041 156 164
MARANTZ	067 069 012 031 156
MARTA	101
MATSUI	027 030
MEI	031
MEMOREX	101 003 010 014 031 034 053 072 102 134 139
MGA	045 046 059
MINOLTA	013 020
MITSUBISHI	059 061 151 013 020 045 046 051 142 049 168
MTC	034 040
MULTITECH	024 034
NEC	012 023 039 043 048
NORDMENDE	043
OPTONICA	053 054
ORION	025
PANASONIC	066 070 145 083 133 140 157 163 074 167
PENTAX	013 020 031 063
PHILCO	031 034 067
PHILIPS	031 067 034 101 054 071 156
PILOT	101
PIONEER	021 013 048
PORTLAND	108
PULSAR	072
QUARTZ	002 014
QUASAR	066 145 075
RADIO SHACK	123

RCA	107 109 144 147 158 041 145 013 020 140 034 040
REALISTIC	003 008 010 014 031 034 040 053 054 101
RICO	058
RUNCO	148
SALORA	014
SAMSUNG	102 104 113 115 112 120 032 040 066 107 109 122 125
SANSUI	022 043 048 135
SANYO	003 010 007 014 134 102
SCOTT	017 037 112 129 131
SEARS	003 008 010 014 081 013 101 009 017 073 112
SHARP	149 054 031 159 165
SHINTOM	024
SIGNATURE	034
SONY	056 057 058 077 052 003 078 076 031 149 154
SOUNDESIGN	034
STS	013
SYLVANIA	031 034 059 067
SYMPHONIC	034
TANDY	010 034
TATUNG	039 043
TEAC	034 039 043
TECHNICS	031 070
TEKNIKA	031 019 034 101
THOMAS	034
TMK	006
TOSHIBA	112 131 079 008 059 047 082 013 042 081
TOTEVISION	040 101
UNITECH	040
VECTOR RESEARCH	012
VICTOR	048
VIDEO CONCEPTS	012 034 046 141
VIDEOSONIC	040
WARDS	003 013 017 024 031 034 040 053 054 131
YAMAHA	012 034 039 043
ZENITH	072 080 056 048 101 034 058

VCR-TV/VCR Combos

DAEWOO	005 117
EMERSON	153
FUNAI	034
GOLDSTAR	101 123
HITACHI	034
JCPENNEY	101
LG	101 123
LLOYD	034
MAGNAVOX	034 067
MEMOREX	101
PANASONIC	070 167
PHILIPS	034 067
RADIO SHACK	123
RCA	034
SEARS	101
SONY	057 154
SYLVANIA	067
SYMPHONIC	034
THOMAS	034
ZENITH	034

VCR

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

AUDIO

ADC	007	KENWOOD	026 066 145 146 181 190 197 192 182 199 151 222 180 005
ADCOM	082 092 225 161 269 355 356 366		280 374 550
AIWA	170 018 104 202 203 213 211 188	KINERGETICS	220 140
AKAI	138 189	KLH	331
AMC	125 126 127 128 258 281 282 038	KOSS	216 573
AMEND	054	KRELL	150 072 376 384
AMX	196	KYOCERA	007
ANGSTROM	142	LEXICON	120 235 236 237 357 358 359 360 361 362 363 364
ANTHEM	335 336 337 338 339	LINN	124 377
ARCAM	141 418 419	LUXMAN	137 139 052 165 115 004 009
ATLANTIC TECHNOLOGY	342	LXI	076 056
AUDIO ACCESS	147	MAGNAVOX	086 164 152 208
AUDIO ALCHEMY	135	MARANTZ	006 028 031 040 063 185 186 251 265 119 289 296 492
AUDIO DESIGN	194 221 011	MCINTOSH	238 286
AUDIO EASE	021 196 207	MCS	076
AUDIO FILE	071	MERIDIAN	100 012 013
AUDIO MATRIX	167	MITSUBISHI	242 243 204
AUDIO SOURCE	273	MONDIAL	157 158 042 043 081 112
AUDIO TECHNICA	134	MYRYAD	276 293
B & K	096 097	NAD	186 113 283 478 479
BOSE	070 170 224 347 409 459 460 532	NAKAMICHI	111 244 245 172 183 287
BOSTON ACOUSTICS	447	NEC	176
BRYSTON	023	NIRO	343
CAMBRIDGE AUDIO	522	NILES	403
CARVER	006 028 061 071 201 214 226 180 185 022 029 077 284	ONKYO	017 046 064 107 108 187 079 080 090 179 209 270 275 438
CASIO	076	OPTIMUS	026 041 138
CHIRO	140	OUTLAW	342
CINEMA SOUND	034 134	PANASONIC	032 195 219 177 292 383 516
CITATION	148 272	PARASOUND	129 130 132 261 294 295 333 334
CLARION	026	PHAST	196
CLASSE	537	PHILIPS	249 250 251 063 119
COMPAQ	382	PIONEER	014 033 039 044 045 050 069 159 168 116 035 078 198 480
CURTIS MATHES	076	POLKAUDIO	029 515
DELPHI	415 515	PRIMARE	464
DENON	002 034 109 215 229 230 027 037 234 259 330 340 341 349	PROCEED	144 268
	350 400 401 402 444 564	RCA	010 048 117 156 067 288
EAD	466	REALISTIC	019 056 073 075 095
EIGER	149	REQUEST	351
ELAN	057 290	REVOX	162
ENLIGHTENED AUDIO	099 098	ROTEL	074 083 085
ESCIENT	368 381 451 452 453 454	RUSSOUND	379 391 392
FANFARE	352	SAMSUNG	016 571
FISHER	047 214 180 182 297	SANSUI	040 048 110 119 065 228
FLEXTRONICS	378	SANYO	047 059
FOSGATE	062 231	SCOTT	019 091
FOSGATE AUDIONICS	342	SEARS	076
GE	056 260	SHARP	026 094 131 175 181
GOLDSTAR	008	SHERWOOD	024 038 055 102 103 105 106 051 030 447
HAFLER	174	SONY	018 093 223 247 248 160 166 015 101 184 218 271 353 369
HARMAN KARDON	231 233 254 153 154 118 121 227 277 317 318 365		372 380 417 421
HITACHI	020	SOUNDESIGN	036
IMERGE	371	SOUNDMATTERS	375
INKEL	197	SOUNDSTREAM	084 088
INTEGRA	354 438	SSI	068
JAMO	398	SUMO	171
JBL	263	SUNFIRE	344 345 346 494
JCPENNEY	076 216	TAEKWANG	138
JEFF ROWLAND	206	TEAC	005 019 049 111 212 217
JENSEN	058	TECHNICS	122 176 193 219 178 177 200 257 262
JVC	240 163 191 114 266 279 291	THETA DIGITAL	136

AUDIO

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

AUDIO

TOSHIBA	060 087 198 278
WARDS	180
YAMAHA	026 253 169 067 173 205 264 232 089 264 274 285 332 373
	432 433
ZENITH	143 210
AUDIO-XM Radios & Tuners	
BOSE	170 532
DELPHI	415 515
FANFARE	352
KENWOOD	550
POLKAUDIO	515
SONY	380

CABLEVISION / VOOM	148
DIRECTV	173
ECHOSTAR / DISH	122 167 168
EXPRESSVU	122
GENERAL ELECTRIC	151 106 150
GENERAL INSTRUMENT	148
GOI	122
HITACHI	139 140
HTS	122
HUGHES	161 162 068 154 165 166 108 117
JVC	122
LG	170
MAGNAVOX	136
MEMOREX	136
MITSUBISHI	068 154
MOTOROLA	148
NEXT LEVEL	148
PANASONIC	142 160
PANSAT	172
PAYSAT	136
PHILIPS	152 153 156 068 154 136 108 117
PROSCAN	151 106 150
RADIOSHACK	148
RCA	151 106 150
SAMSUNG	123 155 163 169 175
SKY	164
SONY	103
STAR CHOICE	148
TOSHIBA	127 068 154 157 158
UNIDEN	136
ZENITH	159

SAT

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

CD

ADCOM	062 042
AIWA	059 065 088 089 105 122 170 187
AKAI	085 195 202
AMC	231 232
AMEND	118
ARCAM	238
AUDIO ACCESS	119 147
AUDIO EASE	165
AUDIO TECHNICA	046
BSR	037 057
CALIFORNIA AUDIO	103 008
CAPETRONIC	063
CARRERA	057 080
CARVER	185 041 044 050 086 107 130 134 135 138 139 203 204 167
CASIO	111 182
CLARINETTE	182
CREEK	159
CROWN	035
DENON	002 123
EMERSON	042 069 102
FISHER	050 185 134 008
FRABA	111
GENEXXA	010 069 102
GOLDSTAR	080
HAITAI	093
HARMAN KARDON	018 033 047 208
HITACHI	042 175
INKEL	130 143 144
JCPENNEY	014 061 092 141
JENSEN	158
JVC	004 022 136 163 213 214 242 243
KENWOOD	185 007 023 055 071 072 142 137 254
KOSS	061
KRELL	241
KYOCERA	005
LOTTE	102
LUXMAN	011 028 070 076 249 252
LXI	059
MAGNAVOX	044 107
MARANTZ	027 041 044 051 077 107 209 246
MCINTOSH	212 247
MCS	014 073 092
MEMOREX	010
MISSION	044 107
MITSUBISHI	179
MITSUMI	153
MODULAIRE	182
MONDIAL	147
MYRYAD	244 155
NAD	006 005 067 178
NAKAMICHI	217 218 219 095
NEC	014 062
NIKKO	046
NSM	044 107
ONKYO	030 038 039 168 169
OPTIMUS	010 050 057 058 081 082 083 085 093 195
PANASONIC	103 201 172 008 068 248
PARASOUND	233 240
PHILIPS	041 044 107 246 253
PIONEER	010 020 025 056 174 175 176

PROCEED	239
PROTON	044 107 228
QUASAR	103 008
RADIO SHACK	182
RCA	017 042 150
REALISTIC	042 050 051 102 181 182 187
ROTEL	044 107 161 178 250
SAE	044 107
SANSUI	044 069 107 128 171 190 125
SANYO	050
SCOTT	069 102
SHARP	026 031 051 066
SHERWOOD	003 019 051 096 112 115 119 166
SIGNATURE	033
SONY	048 081 097 126 133 177 225 226 164
SOUNDESIGN	251
SUMO	155
SYLVANIA	044 107
SYMPHONIC	052 181
TAEKWANG	195 085
TANDY	010
TEAC	015 034 036 051 052 101 131 140 079
TECHNICS	060 103 200 172 184 008 068
TECHWOOD	076
THETA DIGITAL	234 235
TOSHIBA	006 067 091 160 148
VECTOR RESEARCH	080
VICTOR	004 022 114 124
WARDS	185 033
YAMAHA	024 046 054 186 183 245
YORX	182

CD

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

BRAND

CODE NUMBERS

DVR

DISH 122
 ECHOSTAR 122
 HUGHES 108 117
 HUMAX 117
 JVC 122
 PHILIPS 108 090 117
 RCA 109
 REPLAY NETWORKS 075
 SONY 104 105
 TIVO 090 117
 TOSHIBA 117

3M 152
 AIWA 164
 APPLE/iPod 401
 ARCHER 155
 AURORA MULTIMEDIA 220
 AUTON 191
 BOSE 409
 CELADON 221
 CRESTRON 213 214 215 216 217 218
 DELL 261 262
 DMX 156
 DRAPER SCREEN 204
 DREAMVISION 097
 DWIN 080 253
 EVERQUEST 206
 EXTRON 151
 FAROUDJA 184
 FUJI 209
 GATEWAY 261 262
 HAUPPAUGE 294 295
 HP 261 262
 HUNTERDOUGLAS 219
 JERROLD 153
 JVC 185
 KENWOOD 185
 KENSINGTON 406
 KEYSpan 297
 LITE-TOUCH 208 257
 LUTRON 158 159 077
 MAKITA 186 201
 MICROSOFT/XBOX 408 107
 MINDPATH 205
 NILES 160 187
 NSM 161
 PIANO DISC PLUS 085
 POLKAUDIO 162
 RUSSOUND 081
 SCIENTIFIC ATLANTA 163 156
 SIMA 082
 SOLO ELECTRONICS 207
 SOMFY 078 079
 SONY 164 165 166 261 262
 STARCOM 153
 TURBOSCAN 167
 VELODYNE 203
 X-10 183 093
 XANTECH 168 169 170 171 172 188 189

AUX-TAPE

AIWA 015 071 100 114
 CARVER 006 008 027 024 036
 DENON 105 227 229
 FISHER 064
 GOLDSTAR 011
 HARMAN KARDON 233
 JVC 106 116 239 240
 KENWOOD 005 013 023 026 064 145 146 181 190
 LINN 124
 LUXMAN 035 137 139
 MAGNAVOX 027

AUX

CODE TABLES

CODE TABLES

BRAND

CODE NUMBERS

NOTES

AUX

MARANTZ	014 027 056 065 087
MCINTOSH	238
MITSUBISHI	242 243
NAD	029 048
NAKAMICHI	244 245 025
ONKYO	002 012 016 017 018 019 115
OPTIMUS	026 054 055
PANASONIC	007 010 032 088 195
PHILIPS	027 087
PIONEER	003 039 047 050 066 098 222
QUASAR	007 088
SANSUI	027 113 119 224
SHARP	026 057 131 175 181
SHERWOOD	038 004 028 030 033 034
SONY	020 022 052 084 089
TEAC	009 059 212
TECHNICS	007 010 076 088 109 122 193
TOSHIBA	112
VICTOR	106
YAMAHA	021 026 031 067 040

AUX-Media PC Controls

DELL	261 262
GATEWAY	261 262
HAUPPAUGE	294 295
HP	261 262
KEYSPAN	297
SONY	261 262
TOSHIBA	261 262
WINBOOK	261 262

AUX - XBox Controls

MICROSOFT/XBOX	408 107
----------------	---------

AUX-iPod Controls

APPLE/iPod	401
BOSE	409
KENSINGTON	406

CODE TABLES

NOTES

NOTES

Frequently Asked Questions

What is a “macro” button?

A “macro” is a button on the RF20 that you setup to make a lot of things happen when you press it. For example, to watch a DVD in most home theaters requires several remote controls and many button presses (power up the TV, power up the surround sound, power up the DVD player, set the TV to the correct video input, set the surround sound to the correct audio input and finally; press play on the DVD player remote control).

Instead of pressing all of those buttons one at a time, the RF20 enables you to setup one button that does all those steps automatically with one press. For more information on how and why you should setup macro buttons, watch the Quick Setup DVD Program Guide or refer to pages 26-29 in this Manual.

If the batteries run out, will I lose my settings?

No. The RF20 stores all of your settings in non-volatile FLASH memory. You could remove the batteries for months, replace them at your convenience, and the RF20 would still remember your settings.

Who can I call for more answers?

The Universal Remote Control Technical Support and Customer Service staff are ready to answer any questions you might have.

Call us at 1-914-835-4484
Monday - Friday, 9AM to 6PM (EST)

Warranty

Universal Remote Control’s Mastercontrol™ RF20 is covered against any manufacturers defects or workmanship for a period of one year from the date of purchase if purchased from an authorized Universal Remote Control dealer. Units purchased from online auction sites or other unauthorized resellers have no warranty. This warranty does not cover the following items:

- Damage from misuse, neglect, or acts of nature
- Products that have been modified or incorporated into other products
- Products purchased more than 12 months ago
- Units purchased from unauthorized dealers or companies

Specifications

Learning Capability - 825 IR commands at standard frequencies (15kHz to 100kHz)

Macro Capability - 453 Macros of up to 190 steps each

IR Range (Line of Sight via Infrared): 30-50 feet, depending on the environment

RF Range (radio frequency): 50 to 100 feet, depending upon the environment

RF Frequency: 418MHz

Weight: 7.1 oz. (with batteries)

Size: 8.5” x 2.5” x 1”

Batteries: Four AAA Alkaline batteries included

LCD Size: 0.88” x 1.88”

RF20

MasterControl™

OWNER'S MANUAL

simply MORE powerful™



UNIVERSAL®
remote control

500 Mamaroneck Avenue
Harrison, NY 10528
Phone: 1-914-835-4484
FAX: 1-914-835-4532

www.universalremote.com
OCE-0046B_rev01