

**5.1 SoundBar System with  
2.4Ghz Wireless Subwoofer  
SB2160**



---

EN User manual

**AFFINITY**

## Important

Read and understand all instructions before you use your SoundBar. If damage is caused by failure to follow instructions, the warranty does not apply.

### Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact nearest service centre to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the SoundBar!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. The producer or dealer bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Never place the product or any objects on power cords or on other electrical equipment.

- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

#### Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Remove battery if it is exhausted or if the remote control is not to be used for a long time.
- Battery contains chemical substances, it should be disposed of properly.

### Hearing safety

#### Listen at a moderate volume

- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

#### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear comfortably and clearly without distortion.

#### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally safe levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

### Product care

Only use microfiber cloth to clean the product.

### Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

### Service



#### Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

 
If you have problems using this product, please contact your dealer. You will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No. ....

Serial No. ....


# AFFINITY

## Front side

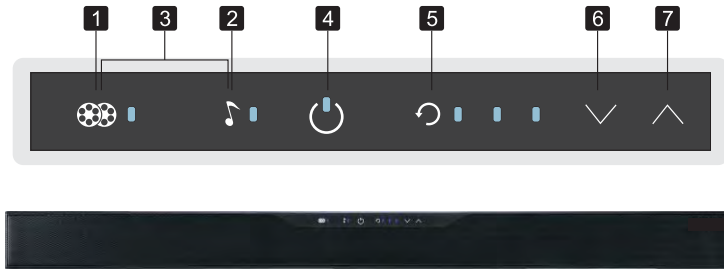

- 1 Movie sound mode
- 2 Music sound mode
- 3 TV sound (Dual sound mode)
- 4 Press :ON/standby; Hold: to connect with subwoofer
- 5 Audio input option
- 6 Volume-
- 7 Volume+


## Back side

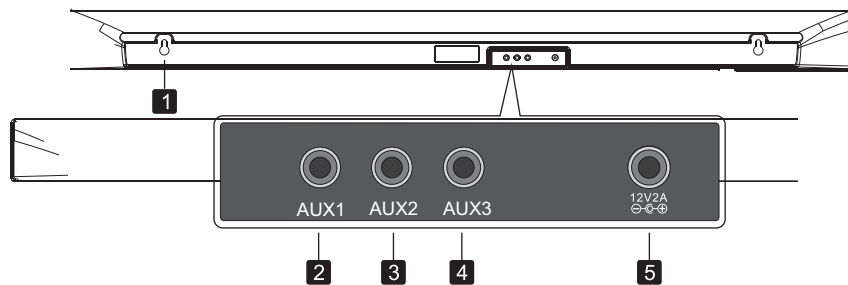 

- 1 Mounting brackets
- 2 AUX1
- 3 AUX2
- 4 AUX3
- 5 Power Input (DC12V2A)

# AFFINITY
 
## Subwoofer

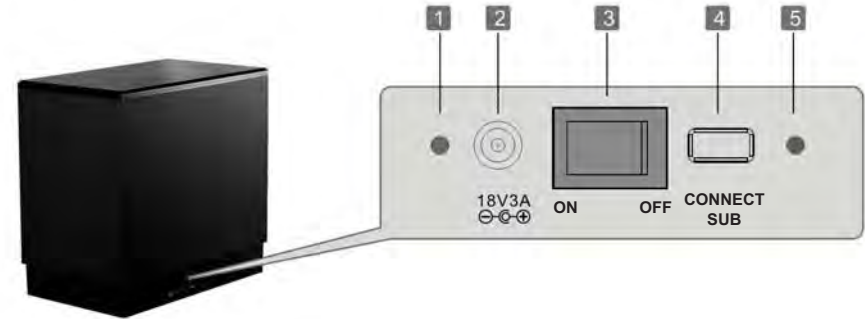

- 1 Power Indicator (Red)
- 2 Power Input
- 3 Power Switch
- 4 Connect Subwoofer
- 5 Subwoofer indicator light

1) When subwoofer is connected properly, both red and blue lights will be lit under normal operation.


2) Press and hold "Connect Sub" button for 10 seconds. When subwoofer indicator light blinks, pair with soundbar.

## Remote control

 - 1 Power Switch
- 2 Mute
- 3 Sound mode selector
- 4 Source (AUX 1-3)
- 5 Subwoofer connection pairing
- 6 Subwoofer level
- 7 Volume level



## Instructions for use

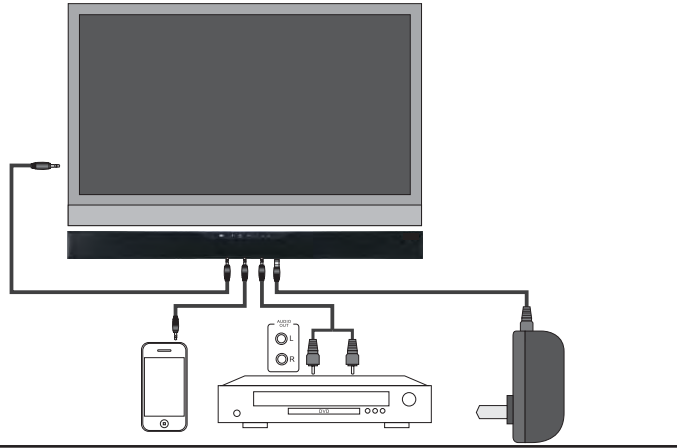

1. Follow the installation guide for assembly
2. Switch on TV or other sources, use remote control or directly control the soundbar to select the input source.
3. According to the source selected, select a sound mode tone (Movie, Music, TV)

## Subwoofer connection

For first time use, the subwoofer will need to be paired with the soundbar.

1. Press and hold subwoofer "connect" button for 10seconds. The blue indicator light will flash and start pairing.
2. Then press and hold "Power" button of soundbar or press and hold "Connect Sub" button on remote control, the power indicator will flash (other indicator off) and connect start.

## Specifications

Power	Main unit	30W × 2(83dB) THD=10%
	Woofer	60W(73dB) THD=10%
Input sensitivity		400mv
S/N(Main unit)		80dB
Frequency response		40 ~ 20kHz
Woofer transmit frequency		2.4GHz
Remot control system		Infrared
Power adaptor	Main unit	12V2A
	Woofer	18V2.3A
Weight	Main unit	1.25Kg
	Woofer	4.3Kg
Size(L*D*H)	Main unit	890x50x70mm ( L*D*H )
	Woofer	307x182x295mm ( L*D*H )
Standby power		≤0.5W
Operating temperature		0°C ~ 35°C
Operating humidity		10% ~ 85%

## Troubleshooting

- **Subwoofer does not function after connection**

*Retry pairing the soundbar and subwoofer and power is plugged and “ON”.*

- **The soundbar indicator is on but still not working?**

*Press “Source” button on the remote control as it may be switched to a different source.*

- **There is a pause when switching sound tone modes?**

*The is normal due to a large amount of audio data which needs to be refreshed and may cause a pause in sound output.*

- **How do I use the remote control to power off the subwoofer?**

*For normal use, there is no need to power off the subwoofer. The subwoofer will go to “Standby” mode if there is no signal after 60 seconds when the soundbar is powered off.*

## Warranty

### Limited North American Warranty

**For peace of mind and valuable services, please take a moment to register your product at [www.kcpi.us](http://www.kcpi.us)**

Kith Consumer Product Inc. (KCPI) expresses the following limited warranty on AFFINITY products. This warranty extends to a new product purchased from an authorized reseller/retailer within the U.S. by the original purchaser or consumer who received the product as a gift. Retain and provide the original bill of sale (or photocopy) as proof of purchase. It is also recommended that you retain original box and foam packaging.

#### **Limited One (1) Year Warranty on Parts and Ninety (90) Days Labor**

KCPI warrants the parts in this product against defects in material or workmanship for a period of one (1) year from the date of original purchase from authorized retailers.

#### **Your Responsibility**

Warranty service shall be provided when a return authorization number (RMA#) is provided to you. Warranty extends to defects in materials or workmanship and does not cover cosmetic imperfections, damages incurred during shipment to KCPI, misuse, natural disasters or accidents.

#### **How to Obtain Warranty Service**

If after following the user manual, quick start and troubleshooting guide, should you find it necessary to contact Customer Service directly, call 888-777-0450 from 7am-11pm Mon-Fri (Central Time) and 7am-6pm Sat-Sun (Central Time). Have your date of purchase, serial number, and a full understanding of the issue ready for your call center representative.

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.