

appbot LINK

Wi-Fi CONTROLLED ROBOT THROUGH THE INTERNET

User Manual Guide

E-mail : master@appbot.co.kr / Homepage : www.appbot-link.com

appbot LINK



Copyright©2015 Varram System Co., Ltd. All rights reserved.

Trademark

The model name of this product is a registered trademark of Varram System Co Ltd.

Besides, any trademark described in this document is the company's own registered trademark.

Restriction

Copyright of this document belongs to Varram System Co Ltd. No part of this document may be duplicated, distributed, reproduced and changed at will without an official permission from Varram System Co Ltd.

Disclaimer

Varram System Co Ltd made a maximum effort to verify completeness and accuracy of the information mentioned in this document, however, we don't guarantee this. A user is entirely responsible for the result of the document used. Contents of this document are subject to change without prior notice from Varram System Co Ltd.

A use guide and warranty

This instrument suitable for electromagnetic waves for home use (B class) aims to use primarily at home and can be used at any area.

As corresponding wireless equipment has the possibility of radio waves jamming, human safety-related services cannot be given.

A guide and warranty

Manufacturer does not assume the responsibility of loss or radio/TV interference caused by remodeling of this product without permission.

Such remodeling without permission invalidates not only the right of using of a user but also quality warranty on the product.

Warning

- This product should be installed by an adult without fail.
- Please read carefully every guide of this Instruction Manual prior to use and observe the operating guide and warning described on this Instruction Manual and product.
- Particularly the power supply cord should carefully be installed to a place where children do not reach.
- Do not use the product in much humid environment such as bathtub, sink, washing machine and wet basement, etc.
- This product was designed for indoor use.
- To prevent the product from overheating, neither expose the product to direct sunlight nor install it near a stove, radiator and cooking utensils like a microwave oven or oven and other radiating appliances such as audio amplifier, TV, etc.
- Be careful upon installation lest a building pillar or furniture intercept ventilation of the product.
- Use the power supply adaptor provided. Using an uncertified adaptor would damage the product. A rated power supply for home use should be connected, used for the power supply adaptor.
- Do not put a sharp and pointed object around the adaptor cable. The cable can be damaged.
- In case of inserting the adaptor in a wall outlet or pulling out, never hold the cable-exposed part.
- Do not use an extension cable for the adaptor power supply cord. The cable can be entangled.
- Using other adaptor or power supply cable than provided cannot guarantee performance of the product.
- This product needs a wireless router and the wireless router should have the internet connected.

Get started 4

Product features	4
Product and accessories	5
Each part name and function	6
Power supply	7

Installation and network connection 8

Installation	8
Caution	8
Installation of smartphone application	9
Execution	9
Caution	9
Product registration	10
Get connected	15
Change Password	16

Application function explanation 17

Function confirmation	17
Setting On/Off / Mobile image saving	18
Still shot saving / Battery state	19
Change of screen quality / App information	20
Face recognition / Gallery	21
Change password/ Alarming of motion detection	22
Automaticre charging	23
Joy stick activation/non-activation	24
Full-duplex audio	25
Stand up upon overturn /LED Light On/Off	26

Appendix 27

Product specification	27
Specification	27
Product's external appearance	28
Problem settlement	29

- In case of protecting, observing children with this product, be careful the product keeps away from the children hands.
- This product partially includes a component which has the possibility of inducing difficulty in breathing.
- Keep the product's peripheral device and small-sized components out of reach of children.
- This product cannot substitute human supervision duty on children.
- This product does not accompany function to notify the adult of the children's accidental and sudden movement and needs a regular check and supervision control by a staff-member.
- This product should be used with an antenna or operated with other antenna or a transmitter. To meet RF exposure specification, at least 20cm of distance between the antenna and user on this product should be maintained.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

- Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

Get started

Product features

Product and accessories

Each part name and function

Product features

(1) Remote real time viewer

- It can be monitored through a smartphone anytime any where.
(All of WIFI, 3G/4G are possible)

(2) Convenient network setting

- Search a wireless router around after connecting the product with smartphone and enter password then network setting is done. any extra installation program and setting is not necessary.

(3) Still shot saving

- An image transmitted can be saved as a photo.

(4) Video saving

- An image transmitted can be saved as a video.

(5) Full-duplex audio

- Full-duplex voice communication can be done with a built-in speaker and microphone.

(6) Real time alarm

- Once movement is sensed, an alarm rings on a real time.

(7) One-touch standing up function

- When fallen, it can stand up only by touching the icon.

(8) Image recognition function

- It has function to recognize a face to be tracked.

(9) Night Vision

- An image can be seen even in dark spot through a light.

(10) Automaticre recharging function

- Once place a charging order, AppBot moves to a charging station automatically through image treatment then recharges itself.

Product and accessories

When buying the product, confirm whether all the items are contained in the product package.



appbot LINK



Recharger Station



Adapter (5V 1A)

 
 


Quick guide



5 pin power cable

Descriptions

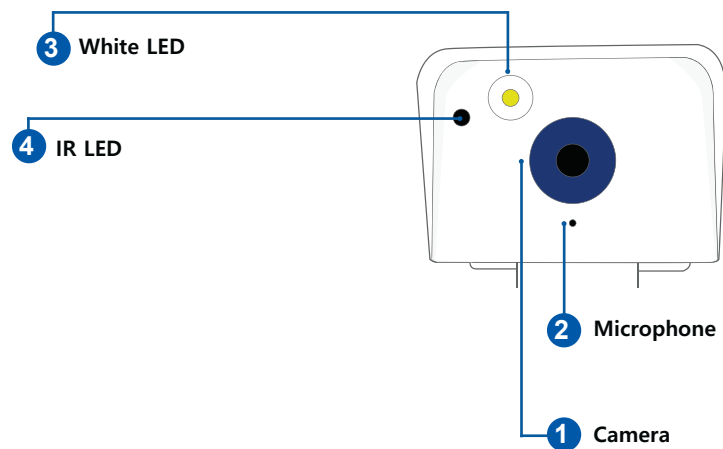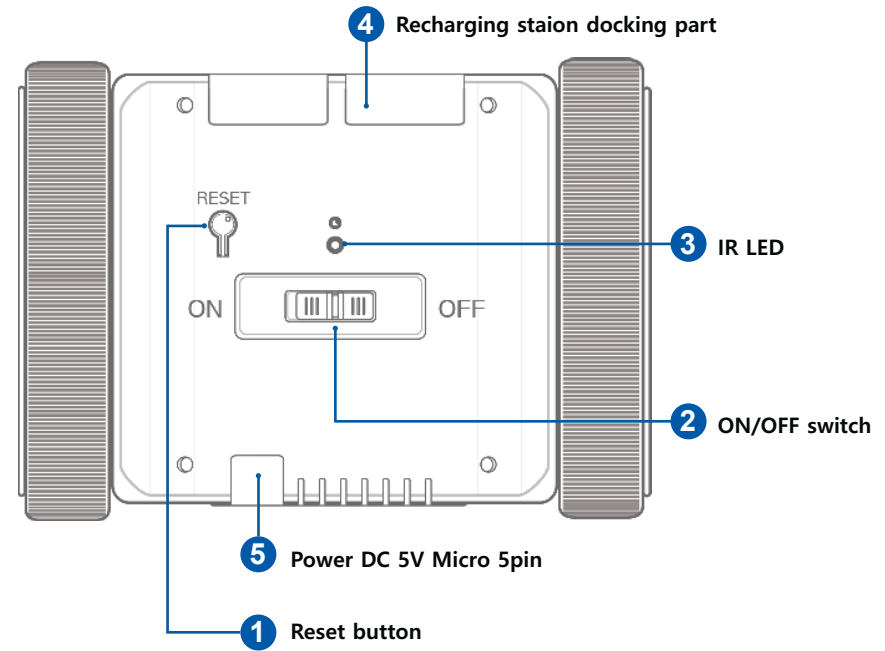


Power supply

- (1) Insert the power supply adaptor of appbot LINK in to a wall outlet and connect like the illustration then charge.
- (2) Power on after charging sufficiently.
- (3) It takes about 20secs to turn on completely.
- (4) While turning on, the head part moves up and down 1 times.
- (5) Once completely turned on, you can hear the voice, "I'm ready" and LED color on the robot body part is changed into blue.

Charging cable



 Blue LED on the robot body part

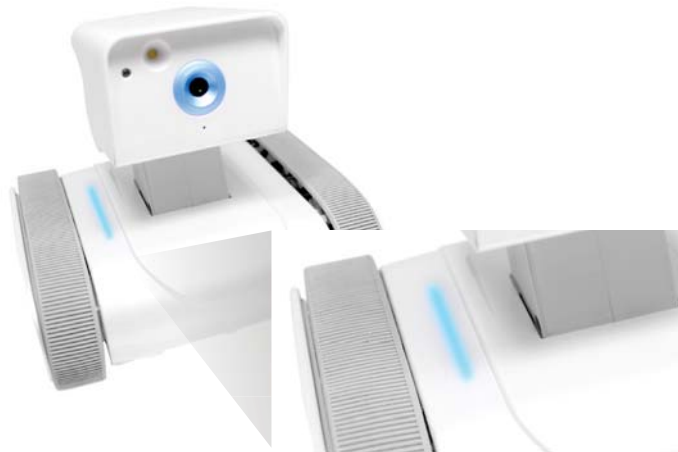

Station



CHAPTER 02

Installation and execution

Installation

Caution
Installation of smartphone
application

Execution

Caution
Product registration
Get connected

 
Change Password

Installation


(1) Caution

- Install a camera to a place where Wi-Fi signal is received and is free from interference.
- Avoid a moist place like where a humidifier is close to.
- Install to a place where there is no direct sunlight, strong light or dust and sight is clear.
- Do not install to a place where there are many obstacles.
- Use a piece of soft cloth when clean dust.

(2) Installation of AppBot-LINK smartphone app

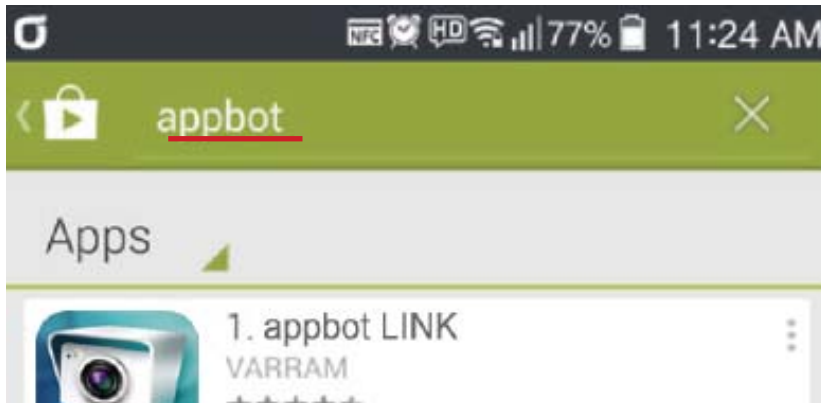

 01 Search "appbot" at the Apple Store of Google.

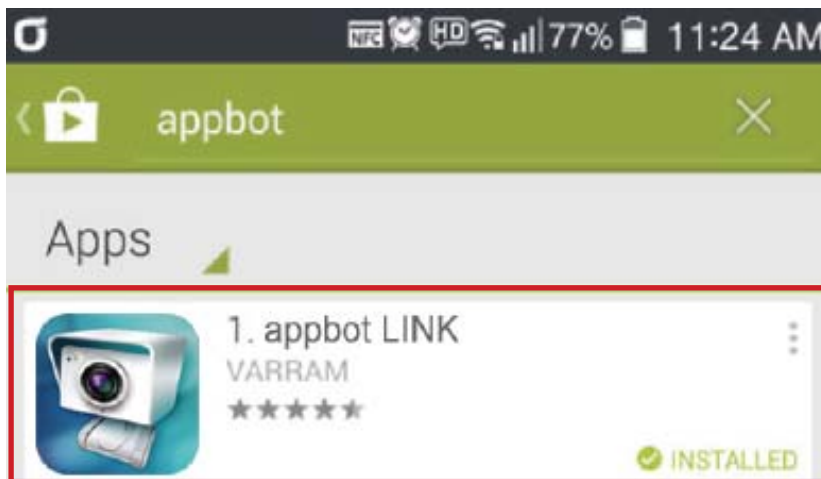

02 Install appbot LINK.



03 App like the picture above is installed.

04 In a place where you cannot download it at the corresponding store, refer to the homepage.

* This application is provided for free.

Execution

 
(1) Caution

- Connection to a wireless network may fail owing to communication environment.
- To look for detailed information on the network setting and password, please inquire of the network administrator or service provider.
- In case of a specific internet service that needs a user authentication, this service may not be provided. In this case, please contact the service provider.
- Do not approach to a network not certified.
- The more it becomes distant from the wireless router the longer becomes , the waiting time to connect a network.
- In case that access to the selected wireless network has failed, try to approach other wireless network.
- To look for detailed information on the wireless router or wireless connection, refer to the router explanation or contact the router manufacturer.
- Network delay or suspension can happendepending on not only the above situation but also network situation.
- Same routers can cause a compatibility problem.

(2) Product registration



01 Once execute the app, the above registered screen appears.
Press NEXT button.

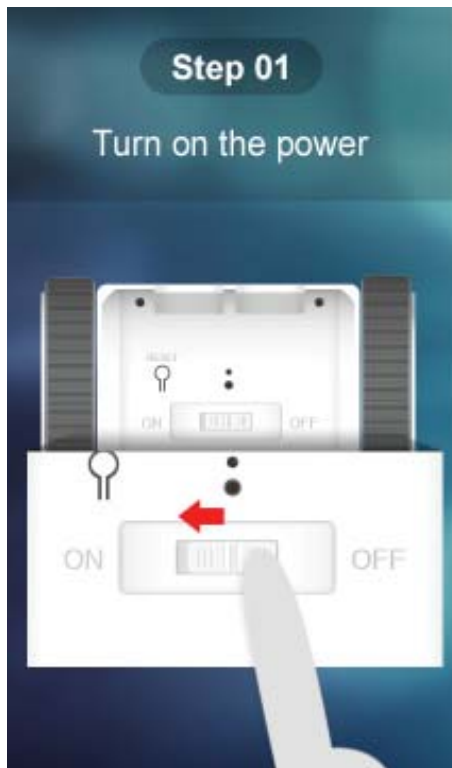

02 Turn on the power supply located at the bottom of the robot



03 Press Reset for about 1 second.

 


04 The head part moves up and down.

05 Once booting is completed, you can hear the voice, "I'm ready" and blue LED on the body part turns on.
(It takes about 20 secs to turn on completely.)



06 Press HOME key to get out of the app.

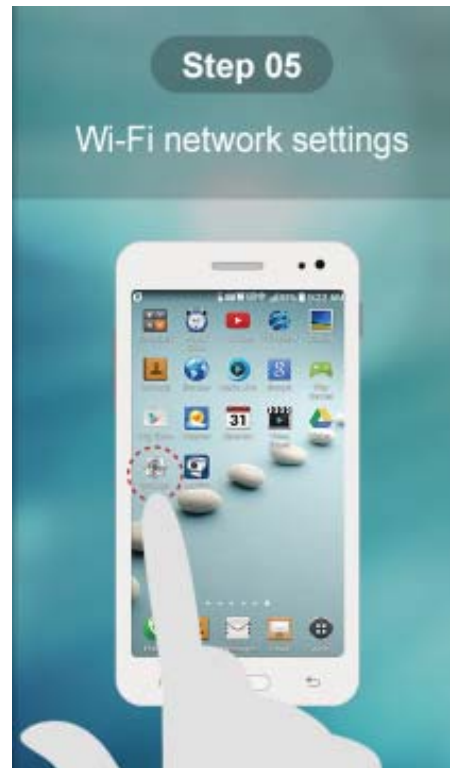


07 Enter Wi-Fi setting.




08 Search WI-FI and select APPBOT-XXXXXX. Password is "link2014".



 
09 When you run the app again, the screen above appears, then press NEXT button.

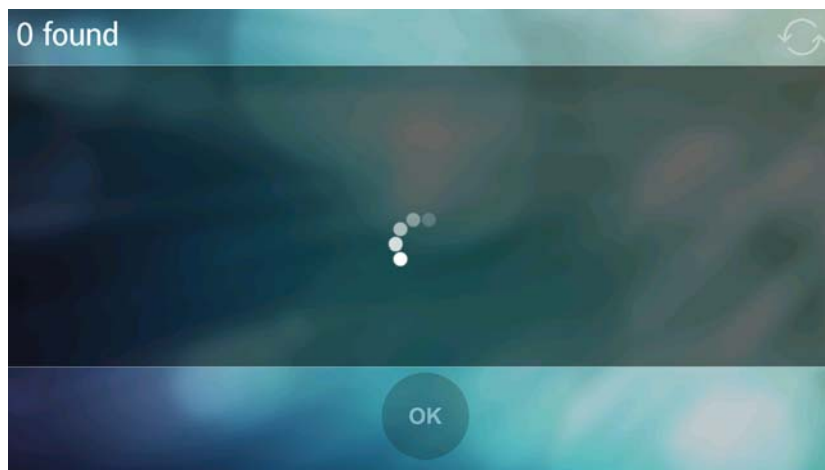

 
10 The screen above appears and search around Wi-Fi.

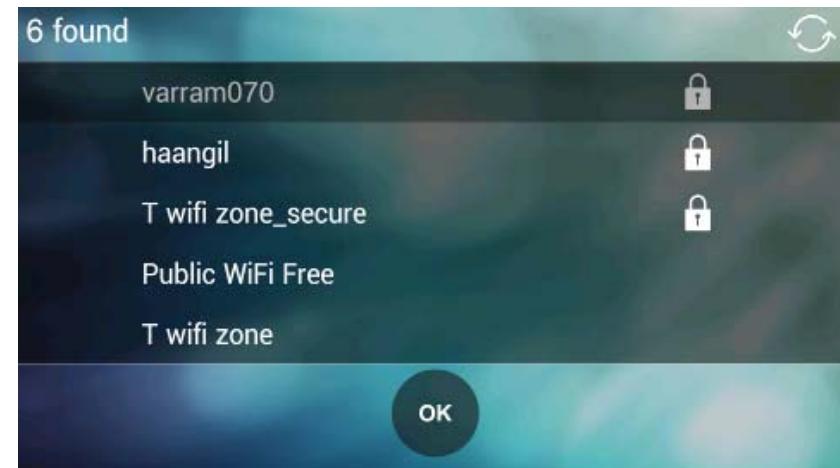

 
11 Select the Wi-Fi to use and press OK button. A list of the neighboring Wi-Fi among.
(Select a wireless router used at home or office.)

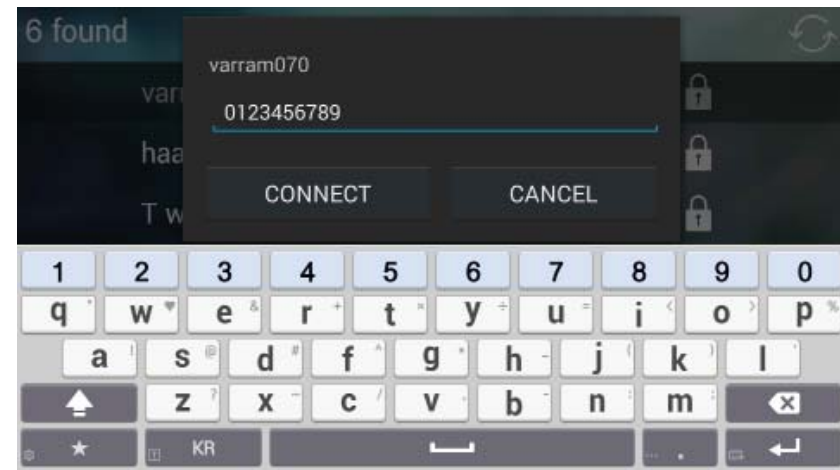

 
12 Enter the password of the wireless router accurately and press CONNECT button. When there is no password, press CONNECT button right away.

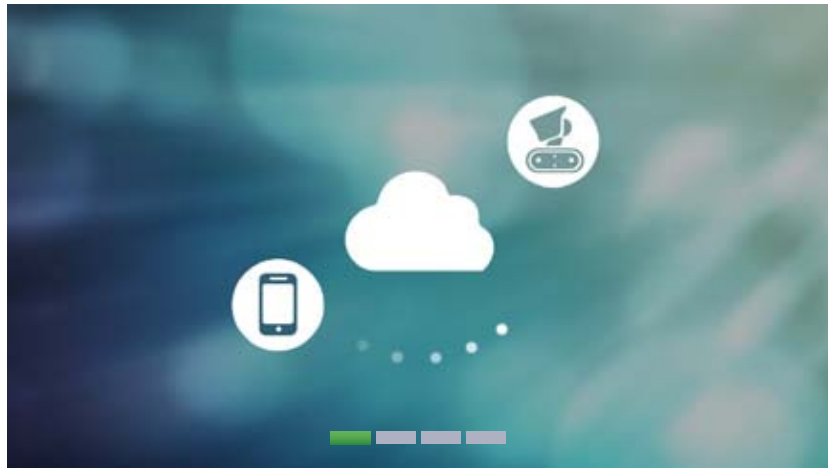

 13 Following the picture above, network connection get started though the wireless routen.

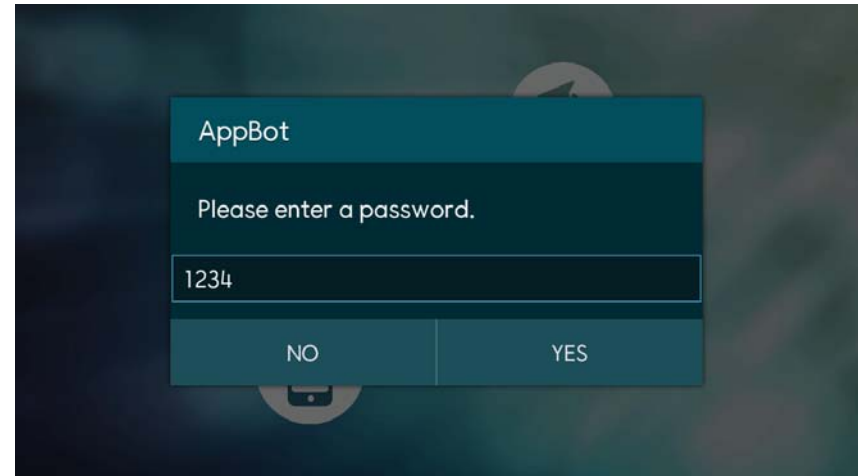


 14 Enter the password for the robot. The default password is "1234".

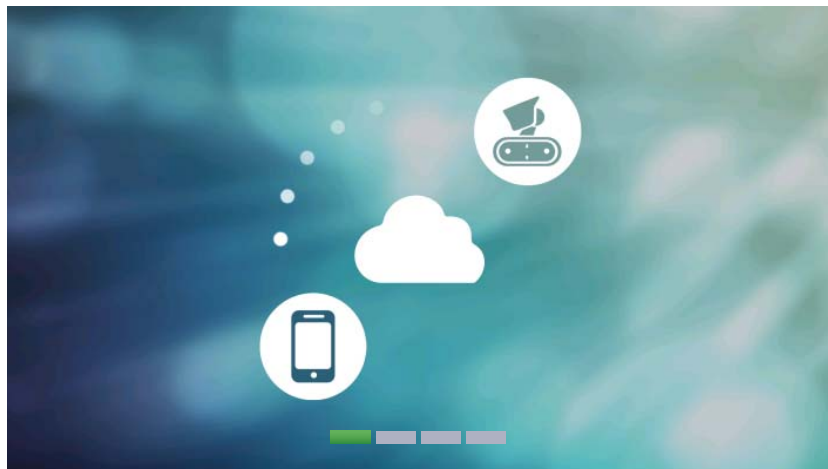


15 If connected to internet normally, a voice by "I'm Ready" is produced and the robot's image is seen on the smartphone on a real time.

 (3) Get connected

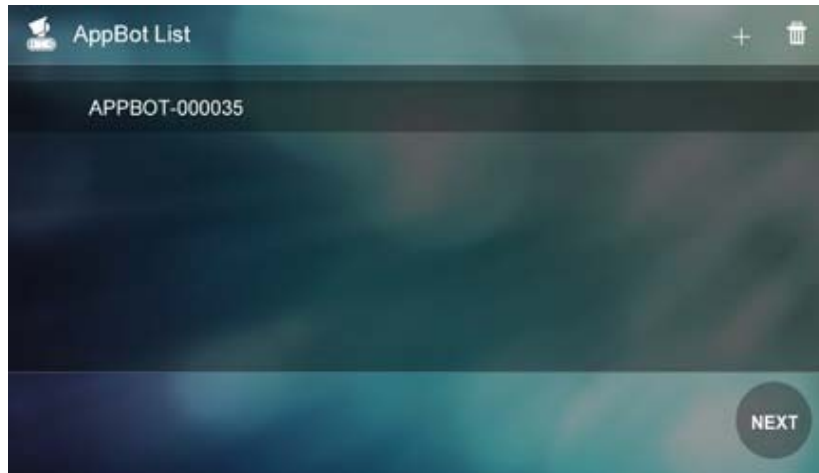


01 Once re-execute the app, the registered robot appears like the picture.

 
* If you register the product more, it will be added to the list.

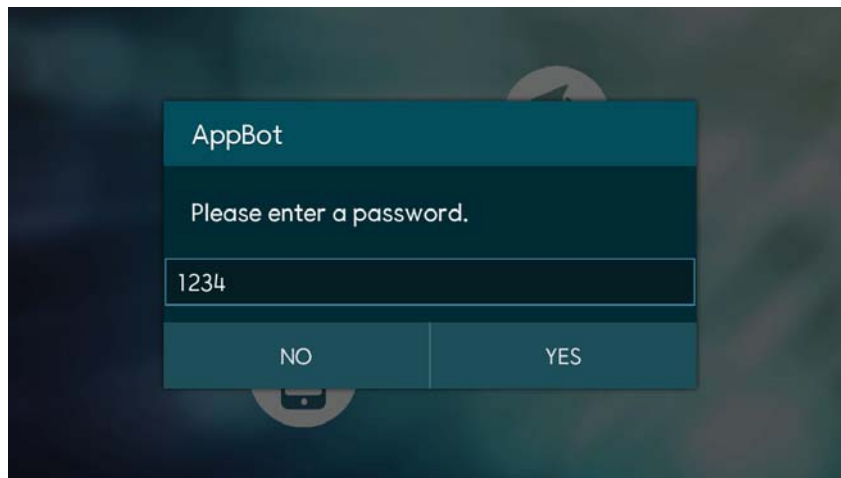

 02 Enter the password for the robot. (The default password is "1234".)

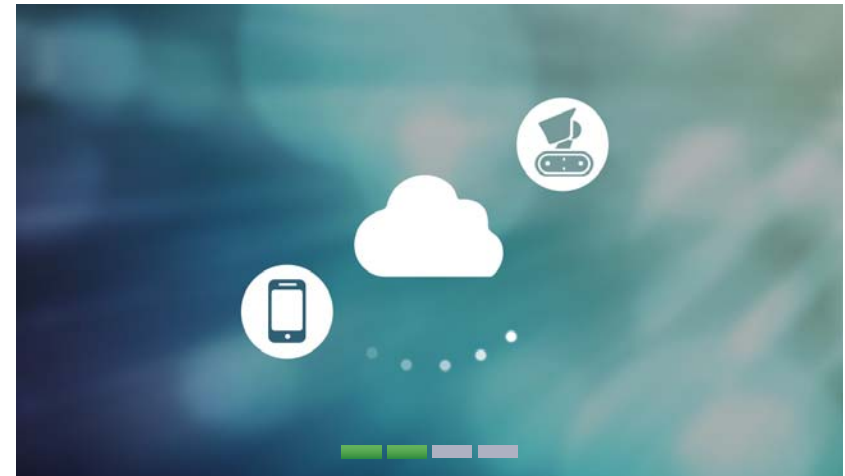

 03 Once select the corresponding robot on the list and press NEXT button, the following picture appears on the connection screen.

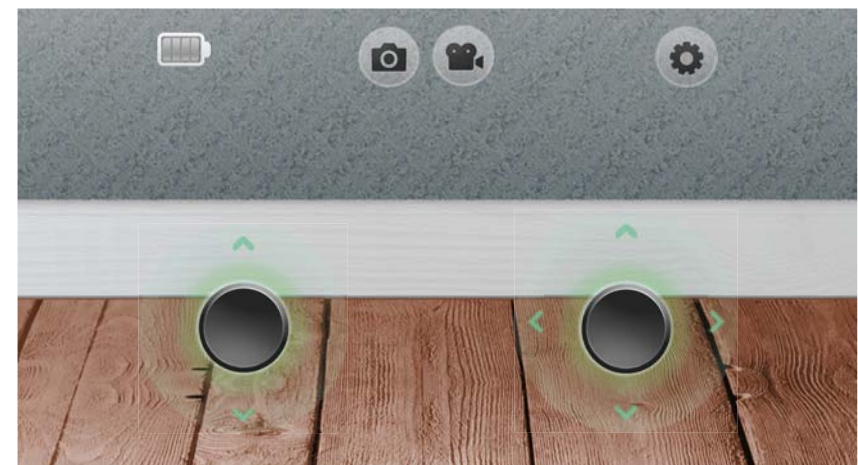

04 Once connected, a real time image appears.

* When using 3G and 4G (LTE) data communication, an excessive bill can be charged and data delay and loss can occur. Hence, use of Wi-Fi is recommended.

 
(4) Change Password



01 Once press the setting icon and then click password icon in the menubar.



03 Your password has been changed complete.

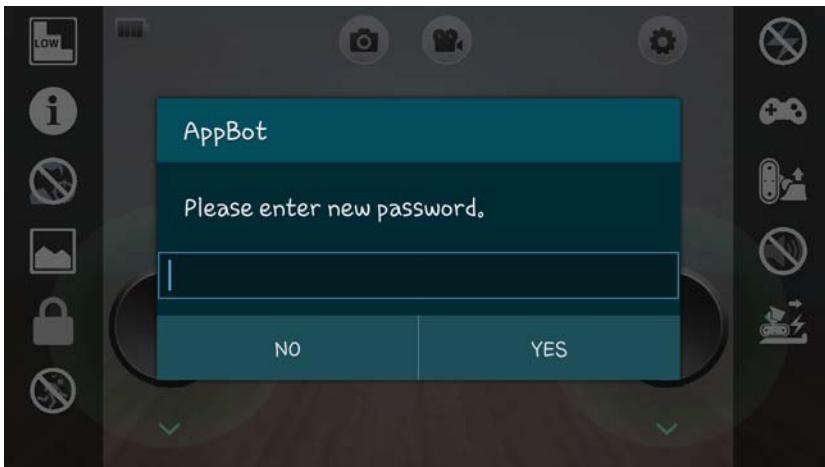

02 Enter the new password.


CHAPTER 03

Application function explanation

App Function

- Setting
- Mobile image saving
- Still shot saving
- Battery state
- Change of screen quality
- App information
- Face recognition
- Gallery
- Change password
- Alarming of motion detection
- Automatic charging
- Joy stick activation/non-activation
- Audio
- Stand up upon overturn
- LED Light On/Off

 
App Function

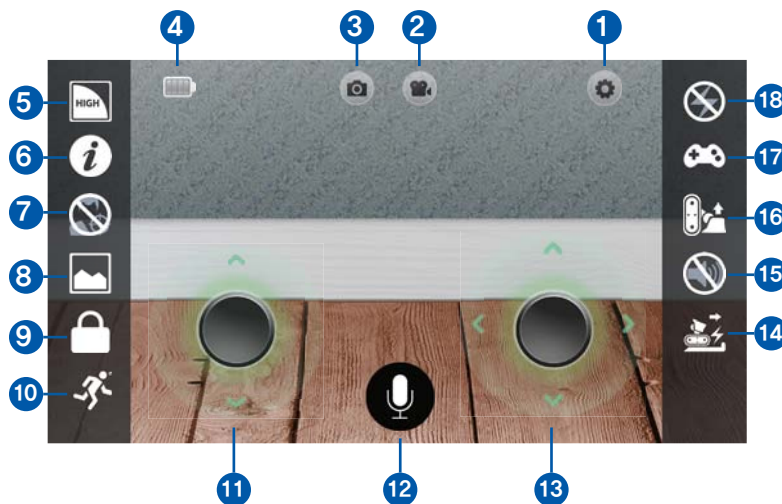


NO.	Command	Explanation
1	Setting window On/Off	Setting window is opened and closed.
2	Mobile image saving	A screen is saved into a mobile image.
3	Still shot saving	An image on the screen is saved to smartphone as a photo.
4	Battery state	A battery's state is indicated.

NO.	Command	Explanation
5	Change of screen quality	Screen quality to be received is changed.
6	App information	App information is verified.
7	Face recognition	Face recognition function is executed.
8	Gallery	Identify the image and video.
9	Change password	Password changed of robot
10	Alarming of motion detection	Function to alarm to user when detecting motion.
11	Head joy stick	The head part of appbot LINK is manipulated up and down.
12	Voice transmission	A voice is transmitted to appbot LINK.
13	Mobile joy stick	appbot LINK is manipulated before and behind, right and left.
14	Automatic charging	Function to automatically dock with a charging station.
15	Both directions audio	Function that a voice is transmitted, received.
16	Stand up upon overturn	Stand up upon overturn Automatic return function when falling forward.
17	Joy stick activation	Activation and non-activation of the joy stick image.
18	Night lighting	LED ON/OFF

 
(1) Setting window On/Off

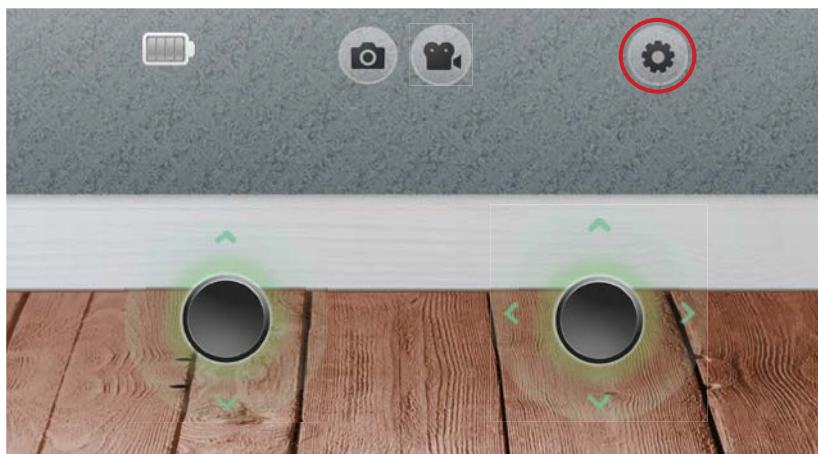



Icon	Explanation
	<p>Setting Icon</p> <p>* Once press this setting icon, the setting window appears like the image below.</p>

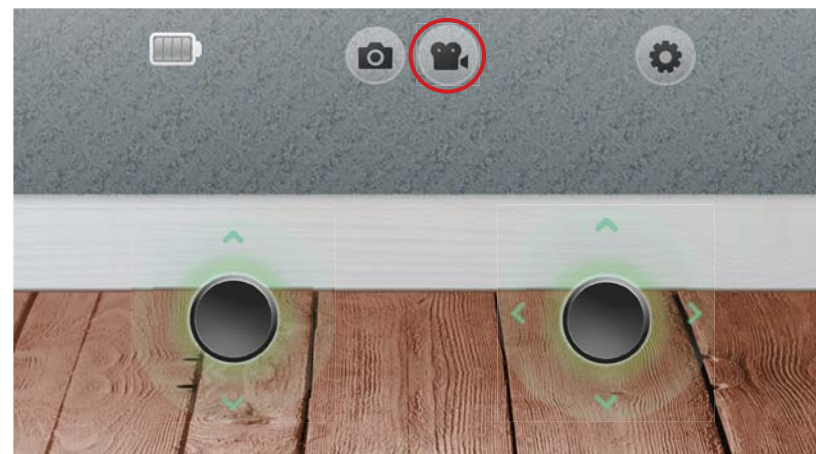 


(2) Mobile image saving




Icon	Explanation
	<p>Icon to start video recording</p> <p>* Once press this video recording icon, the icon turns red and video recording begins. Once press the video recording icon once more time, the video recording ends.</p>
	<p>Icon under video recording</p> <p>* The saved mobile image can be found in APPBOT folder of the smartphone gallery.</p>

 (3) Still shot saving






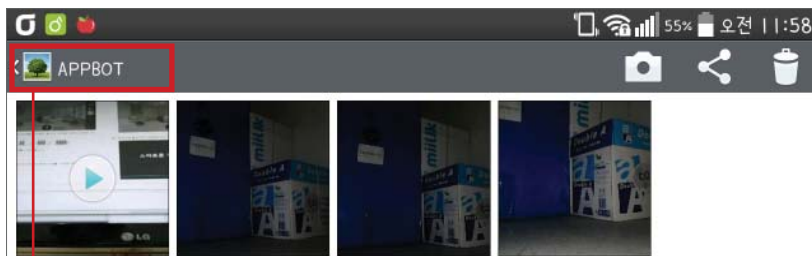

Icon	Explanation
	Icon to save a still shot * Once press this icon, the still shot is saved into smartphone as PNG file.

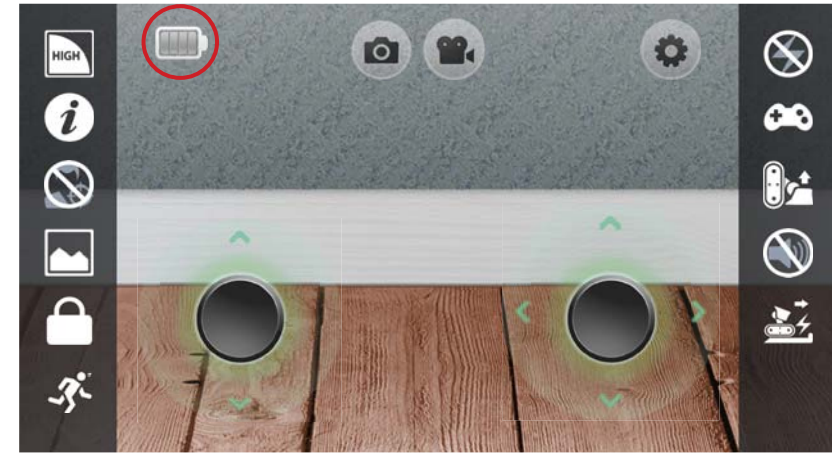 

• Once enter a gallery, the photo saved in the folder called APPBOT can be seen.

(4) Battery state



Icon	Explanation
	Icon that shows a state on charging
	A state that is lack of battery the robot says "low battery" on battery low. * If the battery capacity is lacking, a voice by "Low Battery " is produced from the robot.
	It shows a battery's charging state. *The state by stages is as follows. 

(5) Screen quality setting



01 It is an icon that can set the screen quality to transmit to smartphone.

Icon	Explanation
	Low screen quality, but transmission speed is relatively fast
	High screen quality, but transmission speed is relatively slow

* Once press this screen quality setting icon, the screen quality is changed gradually.

(6) App information





01 It is an icon to verify information about the app.

Icon	Explanation
	<p>App information icon</p> <ul style="list-style-type: none"> - The following information can be verified. • App version information • Network connection information • Connection state information

(7) Face recognition tracking



01 It is an icon to recognize and track a face.

Icon	Explanation
	Face recognition tracking function turned off
	Face recognition tracking function turned on


* Once press this icon, the face tracking begins. It recognizes a face so the robot will follow.

* This function recognizes a human face but does not distinguish a human face.

(8) Gallery




01 It is an icon to identify the captured image and video.

Icon	Explanation
	Icon to identify the image and video

(9) Change password





01 Password changed of robot.

Icon	Explanation
	Password setting icon


(10) Alarming of motion detection






01 Function to alarm to user when detecting motion.

Icon	Explanation
	Alarm OFF
	Alarm ON

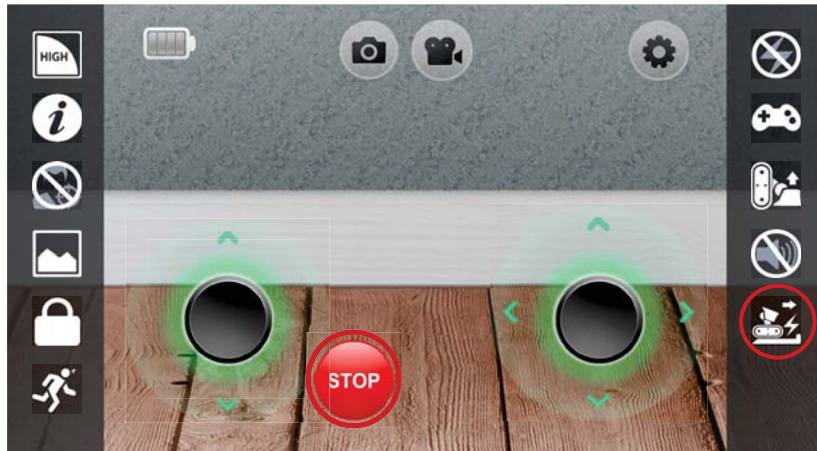 (11) Automatic charging function




- 01 It is function to automatically dock on the charging station In case there is a charging station (option)
- 02 Once the automatic charging function begins, STOP icon will activate like the above image. Once touch STOP icon, the automatic charging can be cancelled.



Icon	Explanation
	Automatic charging icon * Once press this icon, it moves to the charging station and docks automatically.
	Stop charging Icon * Once press this icon, the charging process is cancelled.
	Moving down Icon * Once press this icon, it stops the charging and move down from the station.

 - * The robot will alarm on when to charge through screen.
- * The recommended distance between the robot and the charging station is less than 1m .

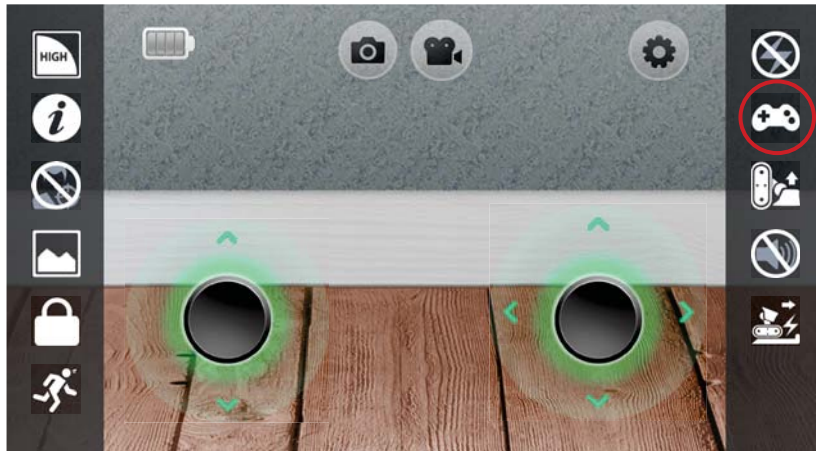(12) Joy stick activation/ non-activation




01 It is an icon to activate and non-activate the joy stick function.

Icon	Explanation
	Non-activated
	Activated

How to manipulate joy stick



 
01 It is a joy stick to manipulate the product's head part up and down. Once move up and down in the pressed state, the product's head moves up and down.

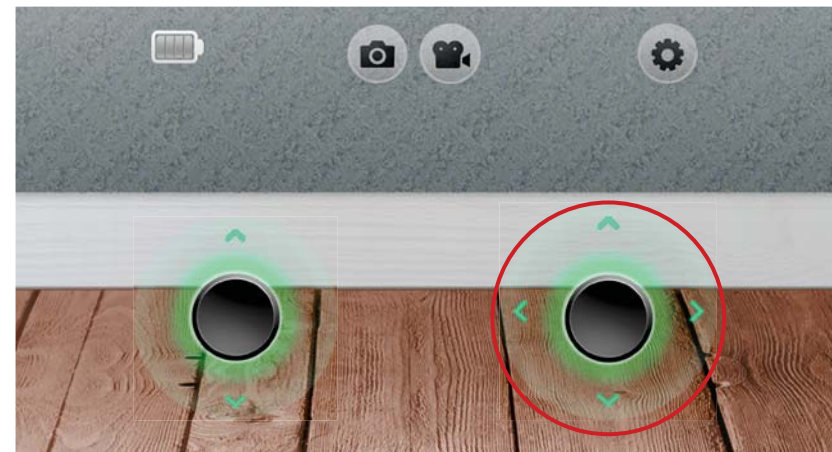

02 It is a joy stick to manipulate the product's mobile part back and forth, right and left. Once touch the part of the desired direction in the robot moves in that way.

(13) Both directions audio

 
① Audio reception

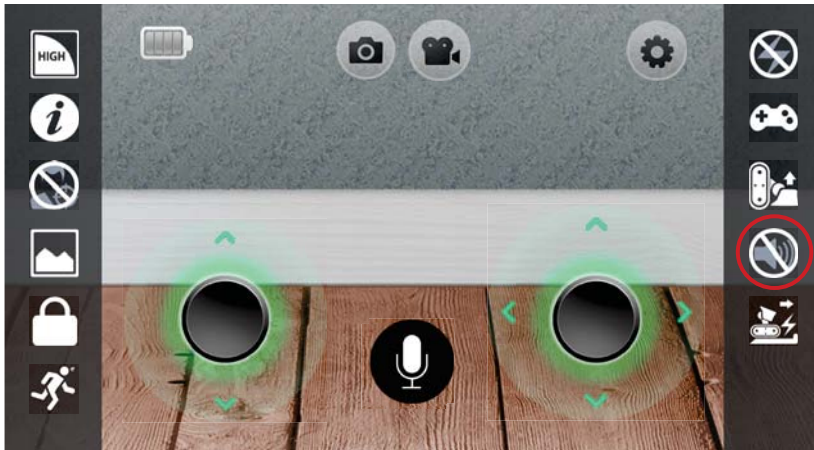

- 01** Tap the speaker icon ok the setting window.
Once tap, a mike-shaped icon appears in the central lower end like the picture.

Icon	Explanation
	Audio function has been turned off, Voice of the robot is not received.
	Audio function has been turned on, Voice of the robot is received.

 ② Audio transmission

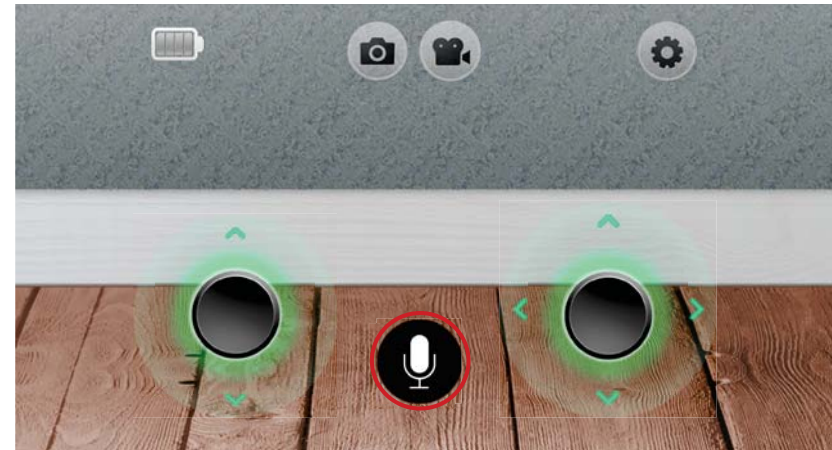


- 01** Once say after pressing the mike icon was pressed, a voice is produced through the mike in the robot.
02 It is only possible to use with audio function was turned on.
03 Audio transmitted from the robot is not received in a state the mike was pressed.

Icon	Explanation
	Voice transmission icon * It is an icon to transmit audio from smartphone to robot. * Voice can be delayed or cut depending on communication environment.

(14) Stand up from overturn





01 It is function to make him stand up when the robot falls backwards.

Icon	Explanation
	Icon to stand up from falling forwards

(15) LED Light On/ Off



01 It is function to turn on LED of the robot in the dark.

Icon	Explanation
	LED off
	LED on

Appendix

Product specification

Specification
Product's external appearance

Problem settlement

 
Product specification

(1) Specification

Specification & Components

- Image Sensor : Full HD
- Capture Image : Full HD
- Resolution : HD(MAX)
- Light : White LED, Luminauns Intensity(12,000 mcd)
- Neck Tilt angle : 120 degree
- Battery : Lithium-ion polymer battery (1,200mAh)
- Wireless usb adapter : 2.4Ghz, IEEE 802.11b/g/n, 150Mbps
- Support OS : Android 4.1 and later, IOS v6 or higher
- Operating Temperature : 0~ 45 °C
- Operating Conditions : For indoor use only

(2) Product's external appearance

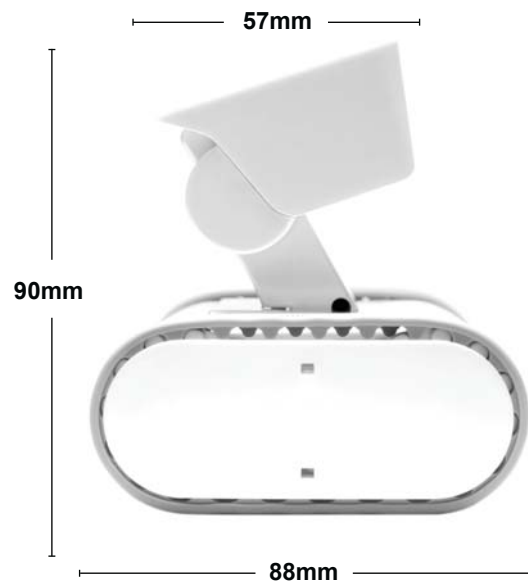

Problem settlement

In case of a problem on the system, solve the problem ASAP referring to the table below. Please follow the guide below.

NO.	Problem	Measures
1	Power supply of appbot LINK is not turned on.	<ul style="list-style-type: none"> - Sufficient charging is necessary before turning on the power supply. - Charge over 30 minutes then turn on the power supply again.
2	When booting initially, APPBOT-XXXXXX network is not searched.	<ul style="list-style-type: none"> - Re-boot the product and press Reset then try again.
3	When connecting to a network, appbot LINK is not connected to the internet.	<ul style="list-style-type: none"> - Confirm whether the wireless router to connect appbot LINK works with the internet. - Try again after confirming the password of the wireless router.
4	It is not connected after moving to an installation place.	<ul style="list-style-type: none"> - It is not connected if the connected wireless router is not around there. - It should be installed again in the same way of the initial product installation.
5	No sound even if turning on the both directions audio function.	<ul style="list-style-type: none"> - Modulate the volume of in smart device.
6	Camera's image disappears momentarily.	<ul style="list-style-type: none"> - Camera image transmission can be delayed on account of a network delay. - Confirm whether the product was installed to a place where wireless internet communication works properly.
7	cannot to smartphone connect while in use after the network registration.	<ul style="list-style-type: none"> - Confirm whether the power supply of the connected wireless router has been turned on. - If the power supply is on, confirm whether it is connected to the internet.



Varram System Co., Ltd.

Head Office [306-230] Rm 205 Venture Town, 105, Sinildong-ro, Daedeok-gu, Daejeon, Korea
E-mail master@appbot.co.kr
Tel +82-70-8797-8925
Homepage www.appbot.co.kr