

SKBM2010: User Guide

slickK In the box

Wireless Keyboard & Mouse

Model: SKBM2010

Wireless Keyboard

Mouse

USB Receiver

4 (AAA) Batteries

User Guide

Installing the batteries

- Open the battery covers of the keyboard and mouse.

Wireless Keyboard

Mouse

- Insert two (2) AAA alkaline batteries with the (+) and (-) poles correctly aligned into the battery compartment of the keyboard and two (2) AAA alkaline batteries into the battery compartment of the mouse.
- Close the battery covers.

NOTE: When the low voltage indicator light flashes, it is time to replace the batteries.

Connecting to a computer

- Insert USB receiver into an available USB port on your computer. (The USB receiver is stored in the mouse)
- Push the **[POWER]** switch on the mouse to the on position.
- Press the **[CONNECT]** button on the mouse.
- Press the **[CONNECT]** button on the keyboard.
- Do not exceed 30 feet between the keyboard/mouse and the USB receiver.

Hot Key Functions

	Power	Power off computer
	Last Page	Go back to last web page
	Next Page	Go forward to next web page
	Stop	Stop loading web page
	Refresh	Refresh web page
	Search	Search computer files
	Favorite	Opens "Favorites" list
	Home	Opens your home page
	E-mail	Opens your e-mail program

	Calculator	Opens calculator
	Computer	Opens "My Computer"
	Back	Previous track (hold for fast rewind)
	Stop	Stop current track
	Play/Pause	Play a track or pause a track
	Next	Next track (hold for fast forward)
	Mute	Mute audio
	Volume down	Hold to decrease volume
	Volume up	Hold to increase volume

FRONT

Troubleshooting

- Turn off your computer's power management feature before charging the mouse so that your computer doesn't enter sleep mode, which temporarily halts the charging process.
- Place the receiver at least 8" inches away from all electrical devices such as your monitor, speakers, or external storage devices.
- If necessary, use a USB extension cable to keep the receiver away from the computer.
- Avoid using the mouse on a metal surface. Metals, such as iron, aluminum or copper shield the radio frequency transmission and may slow down the mouse's response time or cause the mouse to fail.
- The keyboard/Mouse combo will enter a suspended mode at the same time your computer does. To activate the keyboard/mouse press any button.
- Never use the mouse on a glass or mirrored surface, as these surfaces will cause the mouse to fail.
- To maximize battery life, use the mouse on a white or light colored surfaces. Dark surfaces cause the mouse's light emitter diode (LED) light to glow brighter, which causes the battery to discharge more rapidly.

FCC Information

FCC Part 15
This equipment has been tested and found to comply with the requirements for a [Class B] Computing device pursuant to sub Part "J" of part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the USB receiver.
- Increase the separation between the equipment and receiver.

Do not attempt to repair or modify this equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation."

Safety Precautions & Warranty

Important Battery Precautions

- Use only the type of battery specified in this user manual.
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery(ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- Discard any leaky or deformed battery immediately. Leakage from battery acid can cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

i If your system has any problems detecting the wireless keyboard and mouse, turn off your computer before following the battery installation section. With your computer turned off, connect the USB receiver to an available USB port, then power on your computer. During boot up the system should detect the wireless keyboard/mouse combo and install all necessary drivers automatically.

BACK

90 Day Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within 90 days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

1-877-768-8483 (Toll Free)
Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)
or
Via e-mail at
cs@southern telecom.com

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM, INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Slick is a registered trademark of Southern Telecom Inc. Brooklyn, NY USA
Made in China • Designed in USA
Distributed by: Southern Telecom, Inc. Brooklyn, NY 11232
© 2010 Southern Telecom, Inc. All Rights Reserved.