

Integrative Mini Presenter

User's Manual



Be sure to carefully read this user manual first for the proper use of the Integrative Mini Presenter and keep it for future reference.

Table of Contents

Introduction.....	2
I. Operation system	2
II. Functions	3
III. Operating Hints.....	3
IV. Battery installation	4
V. Technical parameters.....	5
VI. Safety Measures	5

Instruction

It is a great tool for PowerPoint presentations! With it, you don't need to stand beside your computer or have an additional person click the slide for you!

It contains two parts: transmitter and USB receiver.

Features:

1. Easy carry

The transmitter and receiver are integrated into one unit to easy carry!

2. Easily control the pace of your presentation

Advanced radio frequency (RF) technology that works through walls and control distance is 10-meters / 32-feet away, so you never need to stand at beside of your computer.

3. Multifunctional presenter

It combines the functions of a laser pointer and hotkeys.


4. Easy to use

It is USB plug-and-play. No driver required. Just plug the receiver into the USB port on a PC and it works within seconds.

I. Operation System

Windows 98, Se, Me, 2000, XP, Mac OS, Linux, Vista, Win 7
(Attention : you may need Win98 disk if your computer runs under Win98/SE operating system.

II. Functions:

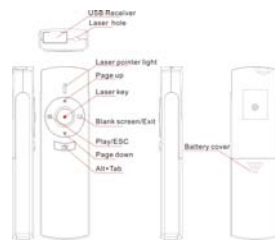

Function table:


▲	Page Up
▼	Page Down
▶ ESC	Play PowerPoint, Press again to exit (For PowerPoint only)
□	Blank Screen (For PowerPoint play only)
⏮	Alt+Tab
✳	Laser Pointer

III. Operating Hints

For optimal performance and RF reception place the receiver at least 15cm away from all electrical devices, such as your monitor, speakers or external storage devices.

IV. Battery installation

- The product is powered by 2x AAA battery.
- Push and remove the battery cover.
- Insert 2x AAA battery into the battery holder.
- Put the battery cover back into position.

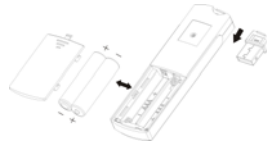

Note

1. Do not insert battery into the device in the wrong direction.
2. Do not leave bad or exhausted battery in the device
3. If you do not use the device for a long period of time, remove the battery to avoid possible damage from battery corrosion.
4. If the device does not function correctly or if the operating range becomes reduced, try to replace the battery with new one.

V . Technical parameters

Transmitter	
RF Frequency	2.4GRF
Control distance	10 meters
Laser distance	Up to 200M
Battery	AAA X2
Working voltage	2.4-3.0V
Sleep current	< 10uA
Dimension	105.0X30.0X14.0MM
Weight	44.7g (Include receiver)

Receiver

Operation system	Windows 98/Se/Me/2000/XP/ Mac OS/ Linux/ Windows Vista /Win 7
Interface	USB1.1 , Compatible with USB2.0
Working voltage	USB electricity supply (4.5-5.5V)
Dimension	21.7X14.5X7.4MM
Weight	2g

VI. Safety Measures

- To avoid possible eye damage, never point the presenter at people especially their faces, or look directly into the presenter's laser beam.
- Avoid pointing the presenter's laser beam at a mirror or other highly reflective surface.
- Keep the presenter away from children.
- Never view the presenter's laser beam using telescopic devices, such as a microscope or binoculars.
- Any attempt to disassemble, adjust or repair the presenter may result in exposure to laser light or other safety hazards.

NOTE

The product adopts advance RF technology, the USB receiver will identify the first transmitter which is used. If you want to use different transmitters with the same receiver, please pull off the receiver and plug it again, after 6 seconds, press any key of the transmitter you want to use. Then it can work successfully.

Warning sticker:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.