

VTIN

POPER

Wireless Speaker
USER MANUAL

 **TECH SUPPORT**
support@ivtin.com

www.ivtin.com

MODEL:VNBS010B

Thank you for purchasing this product! Please
carefully read this instruction manual before use.

English

SPECIFICATION

Input Voltage	DC-5V/1A
Output Power	5W RMS
Battery	3.7V/800mAh
Speaker	45mm 4Ω/5W
SNR	≥80dB
Pairing Range	up to 10 meters
Playing Time	more than 7 hours at 70% volume (depends on different music)
Standby Time	1688 hours
Charging Time	3~4 hours
Material	ABS / aluminium mesh / silicone
Product Dimension	82.3mm(W)×94.9mm(D)×39.5mm(H)
Net Weight	145g

ACCESSORIES

 


Wireless Speaker ×1




User manual ×1

01

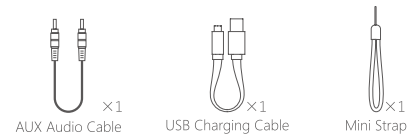

PRODUCT DIAGRAM

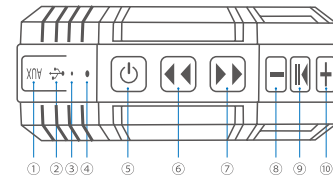 


- ① AUX Input(external input)
- ② USB Charging Socket
- ③ LED Indicator
- ④ Microphone
- ⑤ Power on/off
- ⑥ Previous Track
- ⑦ Next Track
- ⑧ Volume Down
- ⑨ Play/Pause/Hands-free
- ⑩ Volume Up

CHARGE THE SPEAKER

You must charge the speaker fully before using this product for the first time or when the sound begin to trail off or distort.

 02

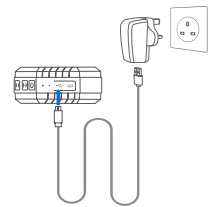

3-4 hours

Charging light:

Note: In order to prolong the battery life, please do not use it while it is being charged.

1. Connect the USB charging cable to the USB charging socket on the speaker.
2. The indicator light is red when the speaker is being charged.
3. Full charge takes about 3~4 hours.
4. The red indicator light will go out when charging completed.

 
POWER ON/OFF

1. **Power on:** long press the button "⏻" for 3 seconds to turn on the speaker.
2. **Power off:** long press the button "⏻" for 3 seconds again to turn off the speaker.


03

BLUETOOTH PAIRING

- 1 Long press the power button "⏻" for 3 seconds to turn on the speaker, the blue indicator light will flash fast.



2

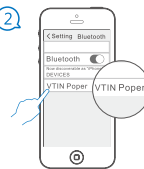 

Turn on the Bluetooth function on your phone. Search for Bluetooth devices and select "VTIN Paper". (Enter code "0000" if needed.)

3

- 3 You will hear sound prompt when it is connected.



Remark: The speaker has memory function. When you turn on the speaker next time, it will automatically connect to pre-paired phone if the Bluetooth function on your phone is on. (Please make sure your phone is in the range of pairing.)

04

BLUETOOTH PLAYING

1. Hands-free function: short press the button "▶" to answer a call, short press again to end a call, long press the button for 3 seconds to reject an incoming call.
2. Redialling: double press the button "■" to redial the last called number. And short press it again when you finish a call.
3. Volume control: long/short press the button "+" to increase volume; long/short press the button "-" to decrease volume.
4. Song switching: short press the button "◀" to switch to previous track; short press the button "▶" to switch to next track.

AUX PLAYING

Some devices (such as MP3, MP4) have no Bluetooth function, so you can use the 3.5mm AUX audio cable to connect your device to the speaker to play music.

Note: After the speaker is on and without any operation for 10 minutes, it will turn off automatically.

CAUTIONS & WARNINGS

1. It is normal that the speaker will produce slight heat when it is working or being charged.



2. DO NOT disassemble, dismantle, repair, modify, open, incinerate, paint, or insert foreign objects into the speaker without approval. Such actions may result in damage.
3. DO NOT expose your speaker to extremely high or low temperatures.
4. DO NOT leave your speaker in direct sunlight for extended periods of time.
5. DO NOT leave your speaker near open flames such as cooking burners, candles, or fireplaces.
6. DO NOT put the speaker on high places such as shelves. For safety, please put the speaker out of reach of children.
7. DO NOT make your speaker to be in contact with any sharp objects. It could cause scratches and damage.

CLEANING & MAINTENANCE

1. If you need to clean the speaker, please turn off the speaker and disconnect it with all external devices before cleaning.
2. Please use dry and clean cloth to clean the speaker.
3. DO NOT use alcohol, benzene or other chemicals to clean the speaker.
4. If your speaker has malfunction, please turn to professional personnel. Wrong operation may lead to damage to the speaker.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.