

- The following prompt message will be displayed if there is no message.



Figure 3-5 The 'NO MESSAGE' prompt

3.4 Duplicate Message

- A '■' would be displayed to indicate that the message is already stored in the memory.



Figure 3-6 A duplicate message

3.5 Erroneous Message

- Any message containing transmission error, the erroneous contents will be displayed by underscores.



A fragment that cannot be received correctly

Figure 3-7 An erroneous message

3.6 Message Removal

- Recall the unprotected message to be deleted.
- Press the Func key (●) during message viewing to evoke the following screen.



Figure 3-8 The message removal confirmation screen

- Press the Read key (▶) to delete the current message.
- Press the Func key (●) to abort the function.

3.7 Message Protection

- Up to 5 messages can be protected.
- Recall a message to be protected.
- Press the Func key (●) **twice** during message viewing to evoke the following screen.



Figure 3-9 The message protection confirmation screen

- 'UNPROTECT PAGE?' will be displayed if the current viewing message is already protected.
- Press the Read key (▶) to protect/unlock the message.
- A '🔒' or '🔒' (for duplicate protected message) icon would be indicated the message is protected.

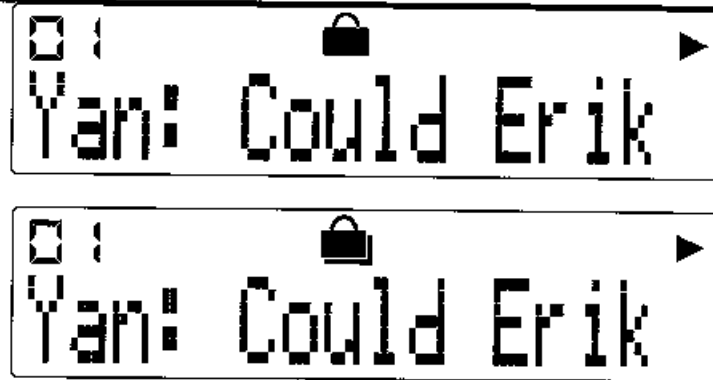


Figure 3-10 A protected message (upper) and a protected duplicate message (lower)

- Press the Func key (●) to abort the function.

3.8 Accessing News Message

- Press the Func key (●) to evoke the following screen



Figure 3-11 The news reading initiation screen

- Press the Read key (▶) read the latest news message.
- Fast message scrolling can be invoked by holding the Read key (▶) for 2 seconds or more (all *unread* news messages will be displayed first).
- Press any key to stop message scrolling and press the Read key (▶) again to resume.
- A '▶' icon will be displayed at the top right hand corner of the screen if the message is too long to be displayed in one screen.
- The following prompt message will be displayed if no news message is in the memory.

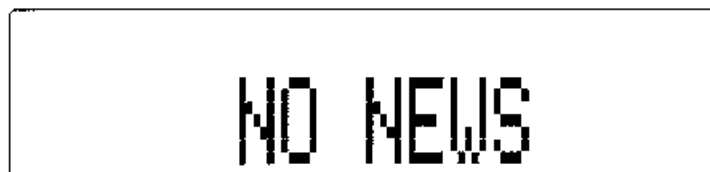


Figure 3-12 The 'NO NEWS' prompt

3.9 Enable/Disable News Alarm

- User can also set a news message alarm for each of the 4 mailboxes.
- Press the Func key (●) to evoke the following screen.



Figure 3-13 The news alerting initiation screen

- 'NEWS ALERT OFF?' will be displayed if the alarming function is already enabled.
- Press the Read key (▶) to enable/disable the alarming function.

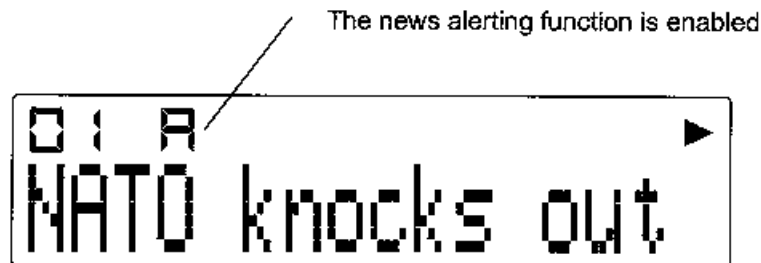


Figure 3-14 The news alert enabling screen

3.10 Alert Mode Setting

- Press the Func key (●) to evoke the following screen.



Figure 3-15 The alert mode setting screen

- Press the Read key (▶) to display the current alert mode
- Press Func key (●) to select an alert mode among the options - 'TONE', 'MELODY 1' to 'MELODY 8', 'SILENT', 'VIBRATE' (optional) and 'EXIT' (return to the status screen without updating the setting).
- Press the Read key (▶) to confirm the setting and return to the status screen.

3.11 User Name Entry

- Press the Func key (●) to evoke the following screen.



Figure 3-16 The user name entry initiation screen

- Press the Read key (▶) to evoke the user name adjustment and move along the user name field (16 characters).
- Press the Func key (●) to select the characters
- Press the Read key (▶) to confirm the setting and return to the status screen.
- Or select the special character '☐', to confirm the setting and jump to the status screen immediately without having to enter all sixteen characters.

Note: The 'User Name Entry' function would be unavailable if the pager is in the low battery state.

3.12 Scrolling Rate/Mode Setting

- Press the Func key (●) to evoke the following screen.



Figure 3-17 The scrolling setting screen

- Press the Read key (▶) to display the current scrolling rate/mode.
- Press Func key (●) to select an alert mode among the options - 'SLOW', 'MEDIUM', 'FAST' and 'LINE BY LINE'.
- Press the Read key (▶) to confirm the setting and return to the status screen.

3.13 Low Battery Alert

- An hourly low voltage alert will be generate and screen display when the battery voltage drops below a certain level.



Figure 3-18 The low battery notification screen

- Stop the alert by pressing any key.
- Power off the pager and replace the battery.

3.14 Illumination

- Press the Func key (●) for 2 seconds to activate the back-lighting during message reading or from the status screen.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions. (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.