

vtech[®]

User's Manual

Remote Racer Smart Car™



© 2011 VTech
Printed in China
91-002602-000

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

 
Sincerely,

Your friends at VTech®

To learn more about **Preschool Learning™** series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Remote Racer Smart Car™!** Hit the road of learning fun with the **VTech Remote Racer Smart Car™** from **VTech®!** This basic remote control car for preschoolers features a remote control sized steering wheel, just right for little hands. Through interactive play, your child will learn about directions (forwards, backwards, left, right) colors, shapes, logic and memory. For added learning fun, the headlights double as turning signals to help teach left and right directions. Fun theme songs about driving and traffic lights also play to engage your child through racing fun!

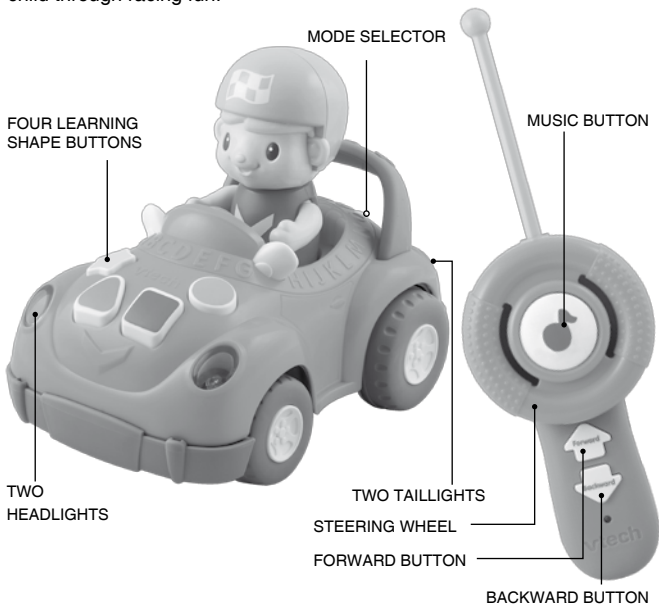

INCLUDED IN THIS PACKAGE

One VTech® Remote Racer Smart Car™

One Remote Controller

One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please remove the demo cable from the unit to activate normal play mode.

NOTE: Please keep instruction manual as it contains important information.

Unlock the packaging locks:


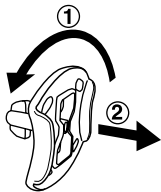


- ① Rotate the packaging lock counter-clockwise for 90 degrees
- ② Pull out the packaging lock

GETTING STARTED

BATTERY INSTALLATION

  1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Install 4 new “AA” size (LR6/AM-3) batteries following the diagram inside the battery box for RF Vehicle. Install 3 new “AAA” size (LR03/AM-4) batteries following the diagram inside the battery box for remote controller. Check Signal Lamp to indicate “Battery installed successfully” and “input received”.
3. The use of new alkaline batteries is recommended for maximum performance.
4. Replace the battery cover.

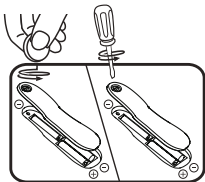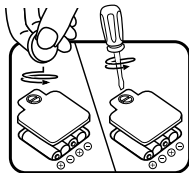

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance;
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

 
WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

On the Remote Racer Smart Car™:

1: MODE SELECTOR

Slide the **Mode Selector** from “off” to any mode to turn the unit on and choose one activity.

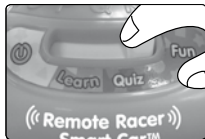


2: LEARNING SHAPE BUTTONS

Press the **Learning Shape Buttons** to learn the colors, shapes and road safety.



3: VOLUME SWITCH

 Slide the **Volume Switch** on the bottom of the car to adjust the volume. There are 3 volume levels to choose from.

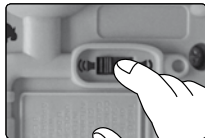

4: SPEED SWITCH

The **Speed Switch** is on the bottom of the car. Slide it to choose fast or slow speed.



 
Tip: If you find the car is not rolling straight, you can use the fine-tune control to adjust.



On the Remote Controller:


5: MUSIC BUTTON

Press the **Music Button** to hear the songs.

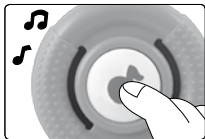


6: FORWARD/BACKWARD BUTTONS

 Press the **Forward** or **Backward Buttons** to make the car go forward or backward. The driver will move left and right when the car is going forward or backward.

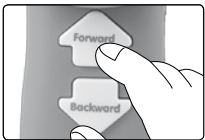

7: STEERING WHEEL

 Turn the **Steering Wheel** to turn left or right. When the car is turning left or right, the driver will turn his body to match the direction of the car.

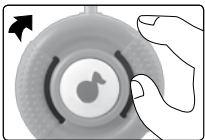

8: SIGNAL LAMP

The signal light will be on to indicate "Battery installed successfully" and "input received".



9: AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Remote Racer Smart Car™** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the Shape Buttons or moving the Mode Selector.

ACTIVITIES

Learn Mode

1. Press any learning shape button to learn about colors, shapes and road safety.

Quiz Mode

1. You will be asked a question about colors or shapes.
2. Press a shape or color button to hear a reward response for a correct answer, or an encouraging response for an incorrect answer.
3. After three incorrect tries, you will be asked a new question.

Fun Mode

1. Let's jam to some music! Press any of the learning shape buttons after a song starts to add in fun horn sounds.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech® preschool learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

THIS DEVICE COMPLIES WITH INDUSTRY CANADA LICENCE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION OF THE DEVICE.

CET APPAREIL EST CONFORME AUX NORMES RSS EXEMPTES DE LICENCES D'INDUSTRIE CANADA. SON FONCTIONNEMENT EST SOUMIS AUX DEUX CONDITIONS SUIVANTES :

(1) CET APPAREIL NE DOIT PAS CAUSER D'INTERFÉRENCES NUISIBLES ET (2), IL DOIT POUVOIR ACCEPTER LES INTERFÉRENCES, INCLUANT CELLES POUVANT NUIRE À SON FONCTIONNEMENT NORMAL.

CARRIER FREQUENCY: 27.145MHz

MEASUREMENT DISTANCE: 3M

FIELD STRENGTH: 61.8dB μ V/m

FRÉQUENCE PORTEUSE: 27.145MHz

DISTANCE DE MESURE: 3M

INTENSITÉ DE CHAMP MAGNÉTIQUE: 61.8dB μ V/m

**CLASS 1
LED PRODUCT**