

vtech[®]


User's Manual

SWITCH & GO DINOS[®]

ANGUS THE RC T-REX



© 2016 VTech[®]
All rights reserved
Printed in China
91-003281-003 (US)



Hi Friend,

You're about to embark on a "dino-mite" adventure with me, **Angus the RC T-Rex**, and my **GeoRider™** Brody.

I'm the king of the dinos, and Brody is my amazing rider. Together we charge forward to gather the lava stones our city needs to survive. The **CyberRiders™** can't stop us!

Insert Brody or any other rider into the driver's seat and press a button to hear us talk or make cool sounds! You might even learn a little about the most awesome dino that ever lived—me.

For more fun, be sure to check out the rest of the **VTech® Switch & Go Dinosaurs®** crew (each sold separately).

 
Remember, with me, the **GeoRiders™** and the **CyberRiders™**, you're in for some dino-stomping, road-racing fun! Who will get to the lava stones first?

GeoRiders™ are rock solid!

Angus the RC T-Rex

INTRODUCTION

Ride into action with me, **Angus the RC T-Rex**. Not only can you transform me with the push of a button, but you can help me do other cool things, too! Try using the **FORWARD/BACKWARD BUTTON** and **STEERING WHEEL** on my remote control and you can control my every move. With my rider Brody, we can roll out and show everyone why the T-rex is the king of the dinosaurs!

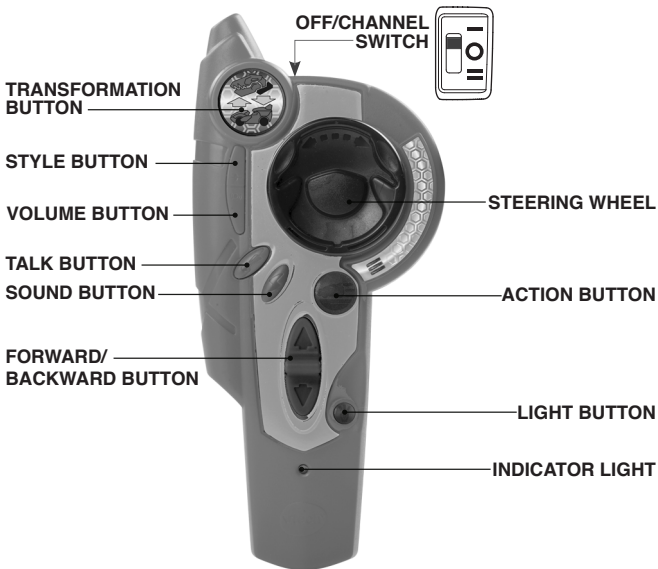



BRODY THE GEORIDER™



ARMOR



TOOL

RECOGNITION POINT
(Place rider here.)

**TRANSFORMATION
BUTTON**

LCD SCREEN

TALK BUTTON
(Hold for a few seconds to
turn the unit off.)

**LED
LIGHTS**

SOUND BUTTON
(Hold for a few seconds
to turn the unit off.)

**ALIGNMENT
DIAL**

SLOTS

(Any Lava Force™ rider's tools from
this or other playsets and dinosaurs
can be placed in the slot.)

LED LIGHTS

Inside



**OFF/CHANNEL
SWITCH**



INCLUDED IN THIS PACKAGE

- One **Angus the RC T-Rex**
- One **Brody the GeoRider™**
- One remote control
- One suit of armor
- One tool
- User's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep this user's manual as it contains important information.



WARNING :

CHOKING HAZARD - small parts.
Not for children under 3 years.



 
ATTENTION :

DANGER D'ÉTOUFFEMENT - Petits éléments.
Ne convient pas aux enfants de moins de 3 ans.


GETTING STARTED

BATTERY INSTALLATION


1. Make sure the unit and the remote control are turned **OFF**.
2. Locate the battery covers on the top of the unit and on the bottom of the remote control. Use a screwdriver to loosen the screws.
3. First, install 6 new “AA” size (LR6/AM-3) batteries following the diagram inside the battery box in the main unit. Then, install 2 new “AA” size (LR6/AM-3) batteries following the diagram inside the battery box in the remote control. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the covers of the battery compartments (For the main unit, you will need to press down firmly on the cover to close it.), then tighten the screw.

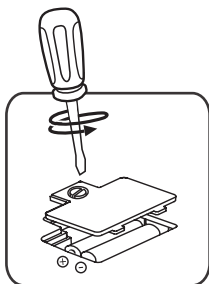

Remote Control

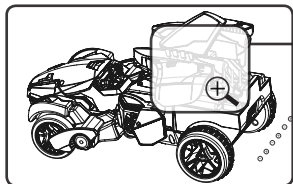 

Angus the RC T-Rex

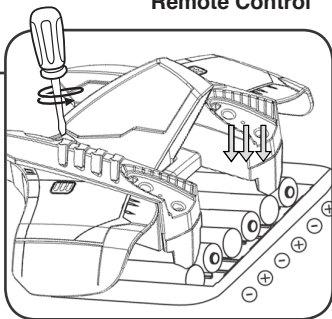 


Note: When the batteries run low, the toy will no longer respond. If this happens, please replace the batteries.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are to be charged only under adult supervision.

IMPORTANT NOTE:

 1. For optimal performance, please use the remote-controlled device on a flat, smooth surface.
2. When exposed to electrostatic discharge and radio interference, the unit may sometimes malfunction. Please turn both the device and controller off to reset them.
3. For your child's safety, do not put **Angus the RC T-Rex** in either configuration on your clothing, body or hair.

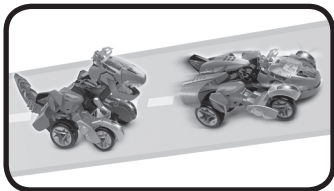

PRODUCT FEATURES

1. TURNING THE UNIT ON

Slide the **REMOTE CONTROL OFF/CHANNEL SWITCH** to the **I** or **II** position to turn the **REMOTE CONTROL ON**.



Slide the **OFF/CHANNEL SWITCH** on **Angus the RC T-Rex** to the same position (**I** or **II**) as the **REMOTE CONTROL**. The **REMOTE CONTROL** and **Angus the RC T-Rex** must be on the same channel (**I** or **II**) to send and receive signals.



2. INDICATOR LIGHT FOR REMOTE SIGNAL

The **INDICATOR LIGHT** will illuminate anytime a button is pressed or the **STEERING WHEEL** is turned. The light indicates a signal is being sent to **Angus the RC T-Rex**.



3. TRANSFORMATION BUTTON

Press the **TRANSFORMATION BUTTON** on the **REMOTE CONTROL** or **Angus the RC T-Rex** to transform **Angus the RC T-Rex** from dino to vehicle or from vehicle to dino remotely.



4. FORWARD/BACKWARD BUTTON

 
By pressing the **FORWARD/BACKWARD BUTTON** on the **REMOTE CONTROL** up or down, **Angus the RC T-Rex** will move forward or backward.



Note: If **Angus the RC T-Rex** is not moving straight, use the **ALIGNMENT DIAL** to improve.

5. STEERING WHEEL

Turn the **STEERING WHEEL** on the **REMOTE CONTROL** to make **Angus the RC T-Rex** turn left or right.

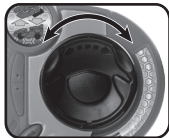


6. ACTION BUTTON

Press the **ACTION BUTTON** on the **REMOTE CONTROL** to hear **Angus the RC T-Rex** make cool sound effects and to see him perform trick moves.



7. LIGHT BUTTON

 Press the **LIGHT BUTTON** on the **REMOTE CONTROL** to see the two headlights illuminate and hear fun sounds.

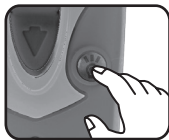


8. TALK BUTTON

Press the **TALK BUTTON** on the **REMOTE CONTROL** or **Angus the RC T-Rex** to learn fun dinosaur facts or hear the conversation between **Angus the RC T-Rex** and his rider.




9. SOUND BUTTON

 Press the **SOUND BUTTON** on the **REMOTE CONTROL** or **Angus the RC T-Rex** to hear cool sound effects.

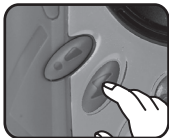

10. RECOGNITION POINT

 Place a rider on the **RECOGNITION POINT** on **Angus the RC T-Rex** to hear conversations between the dino and the rider. Angus will recognize whether the inserted rider is a **GeoRider™** or **CyberRider™** (sold separately). Angus's eyes will change when a different team's rider is inserted.

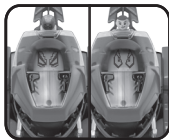

11. STYLE BUTTON



Press the **STYLE BUTTON** on the **REMOTE CONTROL** to change Angus's eyes in dino mode, or select the dashboard function in vehicle mode.



12. VOLUME BUTTON



Press the **VOLUME BUTTON** on the **REMOTE CONTROL** to adjust the volume.



13. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF


Slide the **OFF/CHANNEL SWITCH** on the **REMOTE CONTROL** to the middle position to turn it **OFF**.



Slide the **OFF/CHANNEL SWITCH** on **Angus the RC T-Rex** to the middle position to turn it **OFF**.



To preserve battery life, **Angus the RC T-Rex** will automatically power off after several minutes without input. The unit can be turned on again by inserting or removing a rider, by toggling the **OFF/CHANNEL SWITCH** or by pressing any of the following buttons: **TALK BUTTON**, **SOUND BUTTON** or **TRANSFORM BUTTON** on **Angus the RC T-Rex**.

Note: The unit and **REMOTE CONTROL** will automatically turn off when their respective batteries are low. For the unit, a low battery indicator  will be shown as a reminder.

CARE & MAINTENANCE

1. Keep the unit and the remote control clean by wiping it with a slightly damp cloth.
2. Keep the unit and the remote control out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit and the remote control are not in use for an extended period of time.
4. Do not drop the unit or the remote control on hard surfaces and do not expose either to moisture or water.

TROUBLESHOOTING

If for some reason the unit or the remote control stops working or malfunctions, please follow these steps:

1. Please turn the unit and the remote control **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit and the remote control stand for a few minutes, then replace the batteries.
4. Turn the unit and the remote control **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with FCC radiation exposure limits set forth for general population (uncontrolled exposure). This device must not be collocated or operating in conjunction with any other antenna or transmitter.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

THIS DEVICE COMPLIES WITH INDUSTRY CANADA LICENCE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION OF THE DEVICE. LE PRÉSENT APPAREIL EST CONFORME AUX CNR D'INDUSTRIE CANADA APPLICABLES AUX APPAREILS RADIO EXEMPTS DE LICENCE. L'EXPLOITATION EST AUTORISÉE AUX DEUX CONDITIONS SUIVANTES : (1) L'APPAREIL NE DOIT PAS PRODUIRE DE BROUILLAGE, ET (2) L'UTILISATEUR DE L'APPAREIL DOIT ACCEPTER TOUT BROUILLAGE RADIOÉLECTRIQUE SUBI, MÊME SI LE BROUILLAGE EST SUSCEPTIBLE D'EN COMPROMETTRE LE FONCTIONNEMENT.



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.