

vtech®

User's Manual

Kidi★Star DANCE™



91-003674-000^{US}

INTRODUCTION

Thank you for purchasing the **VTech® KidiStar Dance!**

KidiStar Dance is a dance speaker for kids, kids can learn dancing and play with rhythm games with two motion wristbands. Kids can also dance with their own music with cool music-synchronized LED effect.

INCLUDED IN THIS PACKAGE

- 1 **VTech® KidiStar Dance** main unit
- 2 Wristbands(with CR2025 battery preinstalled)
- 1 Audio cable
- 1 Instruction manual
- 4 AA batteries for demo purpose only

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION :


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

The toy is only to be connected to equipment of Class II (marked on the marking plate with a ) symbol.)

Unlock the packaging locks:

- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

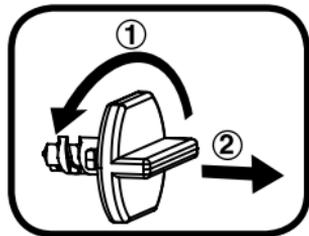

PRODUCT FEATURES





GETTING STARTED

BATTERY INSTALLATION

KidiStar Dance uses 4 AA size batteries or a VTech® 6V adapter.

- Make sure the main unit is turned OFF or in Standby mode.
- Locate the battery cover on the back of the main unit.
- Open the battery cover.
- Install 4 new AA batteries as illustrated. (The use of new alkaline batteries is recommended for maximum performance).
- Replace the battery cover.

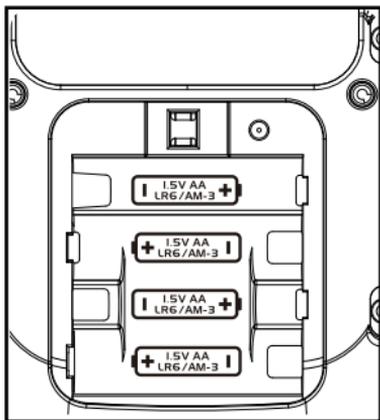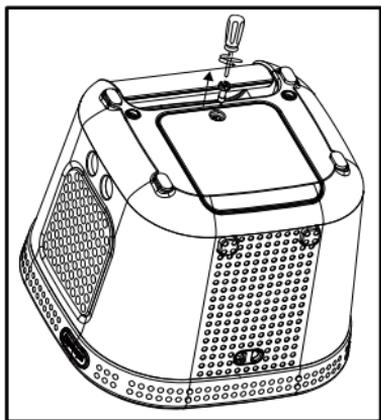

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

POWER ADAPTER CONNECTION

You may purchase a **VTech**® 3.5mm DC 6V power adapter by visiting our website at vtechkids.com. Hover over the “Support” option on the top menu bar and choose “Order Replacement Parts” from the menu that appears below. Or call our Consumer Services Department at 1-800-521-2010 in the US or 1-877-352-8697 in Canada.

To connect the adapter to the unit, follow the instructions below.

- Make sure the unit is **OFF** and ensure no batteries remain inside the unit.
- Locate the 3.5mm DC Jack on the back of the unit.
- Connect a power adaptor (not included) into the unit's DC Jack.
- Insert the other end of the power adaptor into a plug socket.
- Turn the unit **ON**.


TRANSFORMER SAFETY NOTICE

- Using a 3.5mm/1.3mm (positive centre) 6V/800mA DC output AC adaptor is recommended.
- This toy shall only be used with a transformer for toys.
- The transformer is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged-in toy with liquid.
- Please regularly examine the transformer, checking for damage to the cord, plug, transformer or other parts. Do not use the transformer if it is damaged.

MEMORY CARD INSTALLATION

KidiStar Dance is compatible with microSD/microSDHC memory cards up to 32GB.

- Make sure the main unit is in Standby Mode.
- Locate the memory card slot inside the battery compartment of the main unit.
- Insert the memory card (not included) as illustrated.
- To remove the memory card from the slot, push the card once and it will eject.

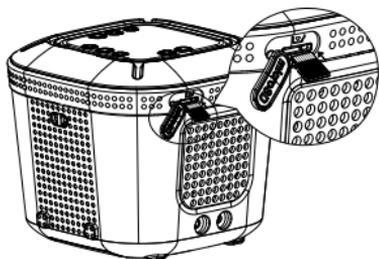

Note: To prevent accidental data loss, make sure you have backed up all important data from your memory card before using.

⚠ WARNING:

This product contains a button or coin cell battery. A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


⚠ ATTENTION !

Ce jouet contient une pile bouton ! L'ingestion d'une pile bouton peut causer des brûlures internes pouvant provoquer la mort dans un délai de 2 heures. Jeter les piles usées immédiatement après les avoir retirées du jouet. Garder les piles neuves hors d'atteinte des enfants. Si vous remarquez qu'une pile bouton a été avalée, consultez immédiatement un médecin.

BATTERY INSTALLATION

NOTE: For best performance, remove the factory-installed battery from the **KidiStar Dance** and use a new battery.

1. Locate the battery cover on the back of the unit and open it with a screwdriver (not included).
2. Remove the battery cover and insert a CR2025 battery as illustrated.
3. Replace the battery cover and fasten the screw.

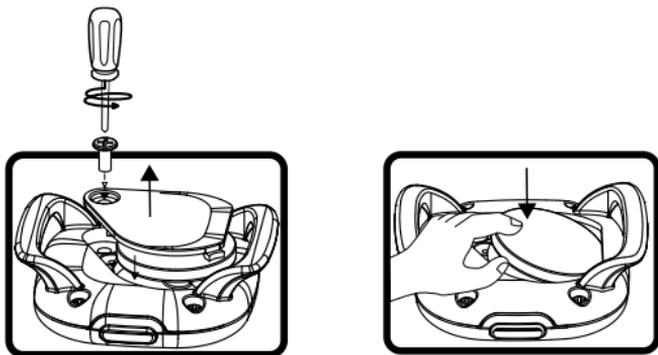

BATTERY NOTICE

- Use one CR2025 Lithium coin battery only for this toy. Do not use rechargeable Lithium ion battery LIR2450. This toy is not compatible with LIR2450.
- The coin battery used with this product should be kept away from small children who might still put things in their mouths. If the coin battery is swallowed, consult a doctor immediately.
- Insert the coin battery with the correct polarity.
- Do not use a damaged coin battery.
- Do not short-circuit the coin battery terminals.
- Remove exhausted coin battery from the product.
- Remove coin battery during long periods of non-use.
- Do not dispose of coin battery in fire.
- Do not charge non-rechargeable coin battery.
- Rechargeable batteries are to be removed from the toy before being charged. (if removable)
- Rechargeable batteries are only to be charged under adult supervision.

TO BEGIN USING KIDISTAR DANCE

POWER UP

Press the **HOME button**  to turn on the unit, if you've just taken the **KidiStar Dance** out of the packaging for the first time, you will be asked to pair the wristbands before playing.

STANDBY MODE

To preserve battery life, **KidiStar Dance** will automatically shut down if there is no operation for a short period of time.

VOLUME CONTROL

Press the volume button and press the **LEFT**  or **RIGHT**  button to adjust the volume .

Home Menu

1. Dancing Academy

Select a dance move and the dancer will show you the dance move step by step. Follow the dancer and practice for the dance moves!



2. Dancing Challenge

Select a song and start a dancing challenge with your friends. Follow the dancer and see who is the best dancer!



3. Free Dance

Select a music style and dance with your own style, the light will follow your beat.



4. Freeze Dance

Select a music and play an exciting party game with your friends. Follow the instruction, dance when the music plays and freeze when music stops! Who last until the end is the winner!



5. My Dancing Trophies

Here you can check the Dance Stars collected when playing the dancing games and see what Dancing Trophies you have got!



6. System Setup

Wristbands Pairing

Pair the wristbands with the main unit. Follow the instructions to pair your main units with the wristbands.



Band A SFX

Set the sound effect response for wristband A in Music Modes

Band B SFX

Set the sound effect response for wristband B in Music Modes

Music Playtime

Set the maximum number of hours for music playback.

Factory Reset

This will reset your KidiStar Dance to the factory defaults, please use only when you experience fatal problems with your KidiStar Dance.

Music Menu

1.MP3 Player

In this mode you can play all the MP3 files in the memory card(not included) you installed to KidiStar Dance. When no memory card is inserted, the built-in dance songs from Dancing Challenge will be played instead.

Press the LEFT  /RIGHT  button to select the function icon and press the OK button  to confirm.



 Play or pause the music

 Play last or next music

 Option Menu

Play All – play all the memory card music in sequence

Repeat All – play all the memory card music in sequence and loop again

Repeat One – play and loop the current music

Shuffle One – play all the memory card music randomly

Play Folder – play the music stored in a selected folder(not include sub-folders)

NOTE: The maximum Music Play Time is 2 hours by default and can be adjusted in Setup Menu.

When music is playing, screen saver animations will show with system time displayed at the bottom, you can press the LEFT/RIGHT buttons to change the Light Effect, or press OK to return to the last screen.



2.Audio-in Connection


In this mode you can listen to your music with an external music device such as mobile phone or music player connected to the Audio-in Jack



Game Menu

1. Beat Jam

Play this game to see if you are a good beat catcher! You will use the two wristbands to control two different instruments. See the falling icon on each instrument, and shake the left & right wristband when the icons reach the bottom of the screen to jam the beats into the music!

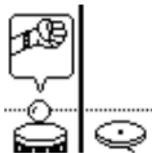

2. Music Bubble

Help the mermaid to send the music to the world! You will use the two wristbands to control the moving direction of the music bubble, try to push the bubble up to the air within the time limit. Beware of obstacles along the way!



3. Funny Conductor

Ever imagine to be a musical conductor? In this game, you will use the wristband to conduct the music, wave your hand following the music score shown on the screen and conduct the music in the best rhythm!



4. Magic Moves

Select an object and shake your wristbands to make funny sound!



5. Motion Challenge

Select a challenge and play with your friend or the computer. Follow the instruction and perform the action as quickly as possible within the time limit, and see who is the winner!



IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CLASS 1
LED PRODUCT**

Supplier's Declaration of Conformity

Trade Name: VTech®
Model: 5205
Product name: KidiStar Dance
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

THIS DEVICE COMPLIES WITH INDUSTRY CANADA'S LICENCE-EXEMPT RSSS. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE; AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION OF THE DEVICE.

LE PRÉSENT APPAREIL EST CONFORME AUX CNR D'INDUSTRIE CANADA APPLICABLES AUX APPAREILS RADIO EXEMPTS DE LICENCE. L'EXPLOITATION EST AUTORISÉE AUX DEUX CONDITIONS SUIVANTES : (1) L'APPAREIL NE DOIT PAS PRODUIRE DE BROUILLAGE, ET (2) L'UTILISATEUR DE L'APPAREIL DOIT ACCEPTER TOUT BROUILLAGE RADIOÉLECTRIQUE SUBI, MÊME SI LE BROUILLAGE EST SUSCEPTIBLE D'EN COMPROMETTRE LE FONCTIONNEMENT."

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

