

**vtech**<sup>®</sup>

**Instruction Manual**

# **Sandy Snacks-a-Lot™**



# INTRODUCTION

Thank you for purchasing **Sandy Snacks-a-Lot™** Pet, feed and interact with Sandy to hear fun reactions of 8 different play pieces and watch her react to different foods, flavors and sensations with fun phrases, songs, sound effects and color changing lights.

Head Touch  
Sensor

Play Piece  
Recognize  
Sensor

Mouth Open  
Sensor

Moody Light

OFF/Low/High  
Volume Switch

Learning  
Button

Play Pieces  
Storage Cover

Song Button



8 Play Pieces

# INCLUDED IN THIS PACKAGE

- One Sandy Snacks-a-Lot™
- 8 Food Play Pieces
- One Parents Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.


**NOTE:** Please save this Instruction Manual as it contains important information.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

**NOTE :** Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Lock

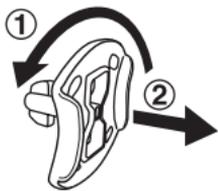

- ① Rotate the packaging lock counterclockwise 90 degrees.
- ② Pull out the packaging lock and discard.

# ACTIVATING NORMAL PLAY MODE

The first time the Sandy Snacks-a-Lot™ is used, you will need to exit Try-Me mode and activate Normal Play mode.

1. Slide the OFF/Low/High switch to turn the unit on.
2. Except for the green pepper, feed Sandy other food pieces. You will hear three 'du' sounds as an indication that the normal mode is activated. You will hear three "du" sounds indicating that the unit is in Normal Play mode.

## GETTING STARTED

### Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Find the battery cover located at the bottom of Sandy and use a screwdriver to loosen the screw and open the battery cover
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new "AA" batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.



### IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## PRODUCT FEATURES

### 1. OFF/Low/High Volume Switch

Slide the **OFF/Low/High Volume Switch** to turn on the unit and choose low and high volume.



## 2. Head Touch Sensor

Touch the head ( the location shown in the picture) to hear different fun sounds.



## 3. Learning Button

Press the Learning Button to hear interactive phrases about colors and food.



## 4. Song Button

Press the Song Button to hear fun songs.



## 5. 8 Play Pieces

Put a play piece in front of Sandy's mouth to make Sandy's mouth open. Then you can place the play piece on its tongue or directly in its mouth to see how Sandy reacts.



Note: Please only feed Sandy the 8 play pieces provided by this toy, others are not recommended.



## 6. Mouth Open Sensor

The sensor is located the lower part of Sandy's mouth. Put anything in front of the sensor to make Sandy open its mouth.



## 7. Play Piece Recognize Sensor

When a play piece is in Sandy's mouth, she can recognize which food she is eating. Let's see how she reacts.

Sandy will respond to the play piece and tell you how it tastes.



## 8. Play Pieces Storage

Open the storage cover for the play pieces located at Sandy's tail and place the play pieces into the compartment.




## 9. Moody Light

Different light's color reflects Sandy's feeling. It will also light up when Sandy sings.




## 10. How to open and close the storage

To open the storage, hold Sandy's tail with one hand and pull the locking buckle upwards at the same time, the storage will fall off itself.

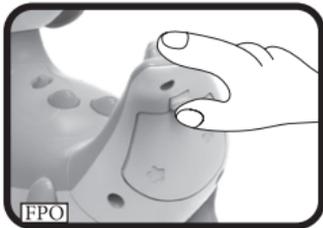

To close the storage, put and align the storage cover with the right place, then press the cover, you will hear a "click" sound.

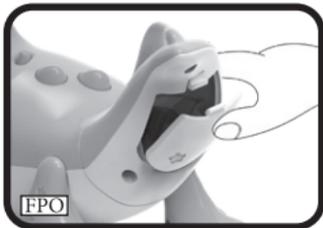

## 9. Automatic Shut-Off

To preserve battery life, the **Sandy Snacks-a-Lot™** will shut off automatically after several minutes without input. The unit can be turned on again by sliding the **OFF/Low/High Switch**. Sandy's belly will flash in red three times and then automatically turn off when the batteries are very low.

Note:

1. Opening and closing Sandy's mouth with hands forcibly are not recommended.
2. Do not grab Sandy's tongue when it sticks into the mouth.
3. Do not put the toy under water.

# ACTIVITIES

1. Press the **Learning Button** to learn color facts or hear Sandy talk about food.
2. Press the **Song Button** to hear Sandy's sings, with moody light.
3. Touch **Sandy's head** to comfort her and show her affection. When Sandy is singing, touch her head will hear fun sounds jammed in the song.
4. Feed Sandy with one of the 8 **Play Pieces** to see how she reacts. Please be mindful! Sandy will feel full (and hiccup) for yummy food or get angry (and give you a fart) for disliked food if you feed it too much!

Note: Please only feed Sandy the 8 play pieces provided by the toy, others are not recommended.

## SONG LYRICS

### Song 1

My gills are really cool and  
people love my smiling face.  
They help me breathe in water,  
as I move from place to place.

### Song 2

Sour and spicy,  
cold and sweet.  
So many things to try,  
so many things to eat.

### **Song 3**

I am a walking fish.  
Axolotl is my name.  
I swim or walk on land!  
Would you like to play a game?

### **Song 4**

I love food and I am hungry.  
I'm ready for a snack.  
SFX - Bleah!  
What is that you fed me?  
You better take it back!

### **Song 5**

Sleeping, playing, hiding,  
I come out at night.  
My home is in the rocks,  
hiding from the light.

### **Song 6**

I love all the colors in my yummy food.  
Red strawberries, yellow lemons.  
Pink ice cream is tasty too.

### **Song 7**

Humming to the tune of the song "If you're happy and you know it"

### **Song 8**

Humming to the tune of the song "Bingo"

### **Song 9**

Humming to the tune of the song "Alouette"

### **Song 10**

Humming to the tune of the song "Entertainer"

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be used for an extended period of time.
4. Do not drop the unit on hard surfaces or expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of new batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

### 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5601  
Product Name: Marble Rush™ Corkscrew Rush Set™  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200,  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

