Go to www.vtechphones.com

to register your product for enhanced warranty support and latest VTech product news.

VC9511 VC9511-2 VC9511-3 VC9511-11 VC9511-21

Full HD Pan & Tilt Camera with Alarm





# **vtech** Installation guide

# **Congratulations**

on purchasing your new VTech product. Before using this camera, please read Important safety instructions.


For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com. In Canada, visit www.vtechcanada.com.

# equirements


Make sure your system includes the following components, and they meet the minimum requirement.

Smartphones/tablets	<ul> <li>Android ® or iOS devices with 3G/4G mobile communication.</li> <li>Android 4.4 or later; or iOS 8.0 or later.</li> </ul>
Network	Wi-Fi
Wi-Fi router	2.4GHz IEEE 802.11 b/g/n
Internet connection	1.5 Mbps @ 720p or 2.5 Mbps @1080p upload bandwidth per camera
Video codec	H.264
Micro SD card (optional)	Support Class 4 or higher, with storage capacity up to 64GB



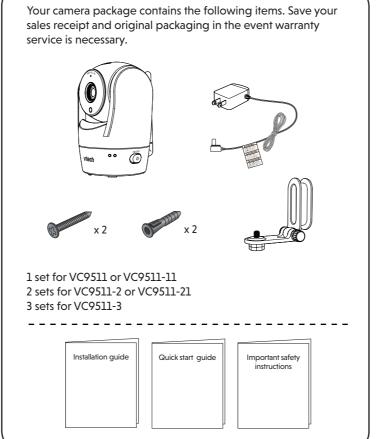



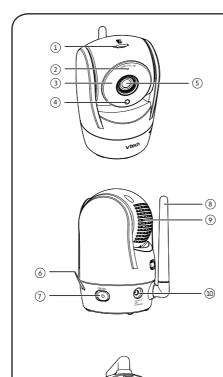

- micro SD card slot
- Microphone
- Infrared LEDs
  - Allow you to see clearly in a dark surrounding.
- Light sensor
- Wide-angle camera lens

# **LED** indicators

- Flash orange and blue alternately when the camera unit is in pairing
- · Orange is steady on when the camera unit is connecting to the Internet.
- · Orange and blue are steady on when the camera unit is idle. · Flash orange and blue slowly during
- video streaming. · Flash orange and blue quickly and alternately when the camera unit is updating its firmware.

## 兴 TIP

· You can turn off the camera unit's LEDs if you find them too bright. Read the Online LED Indication section under Camera settings in the online app manual for instructions.

 
# () ON/OFF switch

## Antenna

· Connect to router with Wi-Fi.

# Speaker

# (!) CAUTION




# 10 Power jack


## Threaded socket

## 12 Pair button

 
- · Press and hold for 3 seconds to enter
- Press and hold for 20 seconds to reset the camera settings to factory




The Wi-Fi router (not included) provides Internet connectivity to your camera. It serves as a communicating channel between your camera and MyVTech Cams mobile app, allowing you to monitor and/or control your camera through the app wherever you are.

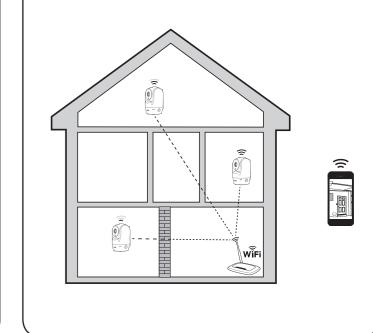

  Document order number: 91-011552-020-100 All rights reserved. 10/18. VC9511X-X\_IG\_V2.0 © 2018 VTech Communications, Inc.





## Output: 5V DC 1500mA Camera unit power adapter: Power requirement environmental conditions at the time of use. Actual operating range may vary according to Nominal effective range Maximum power allowed by FCC and IC.

slənneh	π
-edneucλ	Camera unit: 2412 - 2462 MHz

# **IECHNICAL SPECIFICATIONS**

# PROTECT YOUR PRIVACY AND ONLINE SECURITY

VTech cares about your privacy and peace of mind. That's why we've put together a list of industry-recommended best practices to help keep your wireless connection private and your devices protected when online. We recommend you carefully review and consider complying with the following tips.

Ensure your wireless connection is secure.

• Before installing a device, ensure your router's wireless signal is encrypted by selecting the "WPA2-PSK with AES" setting in your router's wireless security menu.

Change default settings.

- Change your wireless router's default wireless network name (SSID) to something unique.
- Change default passwords to unique, strong passwords. A strong password:
- Is at least 10 characters long.
- Is complex.
- Does not contain dictionary words or personal information.
- Contains a mix of uppercase letters, lowercase letters, special characters and numbers.

Keep your devices up to date.

- Download security patches from manufacturers as soon as they become available. This will ensure you always have the latest
- If the feature is available, enable automatic updates for future releases.

Disable Universal Plug and Play (UPnP) on your router.

• UPnP enabled on a router can limit the effectiveness of your firewall by allowing other network devices to open inbound ports without any intervention or approval from you. A virus or other malware program could use this function to compromise security for the entire network.

For more information on wireless connections and protecting your data, please review the following resources from industry

- 1. Federal Communications Commission: Wireless Connections and Bluetooth Security Tips www.fcc.gov/consumers/guides/how-protect-yourself-online.
- 2. U.S. Department of Homeland Security: Before You Connect a New Computer to the Internet www.us-cert.gov/ncas/tips/ST15-003.
- 3. Federal Trade Commission: Using IP Cameras Safely https://www.consumer.ftc.gov/articles/0382-using-ip-<u>cameras-safely</u>.
- 4. Wi-Fi Alliance: Discover Wi-Fi Security http://www.wi-fi.org/discover-wi-fi/security.

\_\_\_\_\_\_

# CONNECT AND POWER ON THE CAMERA

## NOTES

- · Use only the power adapter(s) supplied with this product.
- Make sure the camera is not connected to an electric outlet that is controlled by a switch.
- · Connect the power adapter in a vertical or floor mount position only. The adapter's prongs are not designed to hold the weight of the camera unit, so do not connect it to any ceiling, under-thetable, or cabinet outlet. Otherwise, the adapter may not properly connect to the outlet.
- Make sure the camera unit and the power adapter cord are out of reach of children.


# Connect the camera

# Wi-Fi connection


### ■ Notes

- Before you connect the camera unit, make sure you have Internet access and a Wi-Fi router (IEEE 802.11 b/g/n). Charges apply and service plan may vary for Internet access. Router is not
- · To maintain compliance with the FCC's RF exposure guidelines, place the camera unit at least 20cm from nearby persons.


1. Connect the power adapter to the camera unit and a power supply.

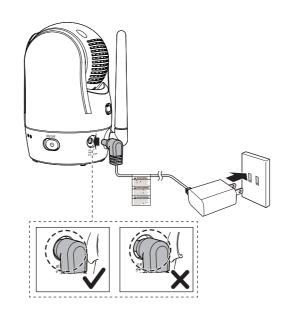

2. Slide the ON/OFF switch leftward to power on your camera.

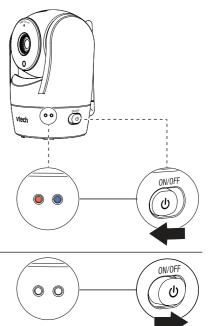

3. Place the camera unit at a desired place.

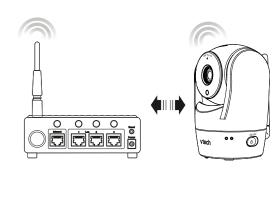

• Slide the  $\bigcirc$  ON/OFF switch rightward to power off your camera.



After you have connected the HD camera, refer to the Quick start guide included in your package to set up your camera.


# Camera setup:

- Install MyVTech Cams mobile app
- Create camera account
- Add camera

# **TEST THE LOCATION FOR CAMERA**

Before you install your camera unit, you need to test which of your selected monitoring areas within the house have good Wi-Fi signal strength. You can use your mobile device's Wi-Fi signal strength indicator to assist in checking. Once you have identified the suitable location, you can install your camera unit. Adjust the distance between your camera unit and the Wi-Fi router if needed.

Depending on surroundings and obstructing factors, such as the effect distance and internal walls have on signal strength, you may experience reduced Wi-Fi signal. To improve the Wi-Fi signal strength, adjust the distance or direction of your mobile device. Check with your mobile device again.

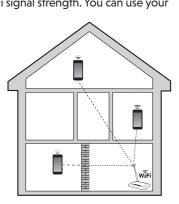

# INSERT MICRO SD CARD (OPTIONAL)

Your camera can capture videos of the monitoring area when motion is detected. The videos will be automatically saved in the camera's internal memory\*. You can choose to save the videos to a micro SD card.

## ■ Note

Your camera unit supports Class 4 or higher micro SD card, with storage capacity up to 64GB.

# ① CAUTION

Prior to inserting or ejecting the micro SD card installed in your camera, the camera must be powered off. To power off, slide the  $\bigcirc$  ON/OFF switch rightward.



The camera can store approximately 160 events, based on 10-second video clips at 720p HD resolution. Total number of events will increase or decrease based on the video

# MOUNT THE CAMERA UNIT (OPTIONAL)

## ■ Notes ■ Notes

- Check for reception strength and camera angle before drilling the holes. • The types of screws and anchors you need depend on the composition of the wall. You may need to purchase the screws and anchors separately to mount your camera units.
- 1. Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

2. If you drill the holes into a stud, go to


If you drill the holes into an object

anchors into the holes. Tap gently on

the ends with a hammer until the wall

other than a stud, insert the wall

anchors are flush with the wall.

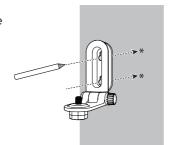

4. Place the camera unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the camera unit.

3. Align the wall mount bracket and

screws with the holes in the wall

as shown. Tighten the screw in the

middle hole first, so that the wall

mount bracket position is fixed. You

can tighten the other screw in the top



3. Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.




4. Place the camera unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the camera unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.





5. You can maximize your camera unit's viewing angles by tilting the wall mount bracket. Hold the camera unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your camera unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.

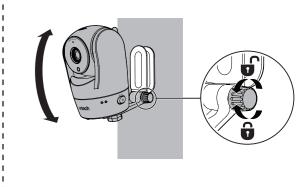

# PAIR NEW CAMERA

You can add or replace any cameras.

The Wireless Monitoring family includes cameras VC931, VC9411 and **VC9511**, which can be purchased separately. They can be paired to your camera account with the MyVTech Cams mobile app, for example, you can have a combination of **VC931**, **VC9411** and **VC9511**. You can pair a maximum of 10 cameras to your camera account.

For more details, refer to the online app manuals of VC931, VC9411 and VC9511 in the Help page of the mobile app.

# ✓ GENERAL PRODUCT CARE

To keep this product working well and looking good, follow these

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- · Clean with a soft cloth.
- DO NOT immerse the camera unit in water and do not clean it under
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the camera unit is dry before you connect it to the mains



# STORAGE

When you are not going to use the camera for some time, store the camera unit and the adapter in a cool and dry place.

# Q Frequently asked questions Limited Warranty

Below are the questions most frequently asked about the camera. If you cannot find the answer to your question in the below table, visit our website at www.vtechphones.com, or call 1-844-848-8324 (1-844-84-VTECH) for customer service. In Canada, go to www.vtechcanada.com or call 1-888-211-2005.

them off?

The LEDs on the You can turn off the LEDs of your camera. Read the camera are too **LED online indicator** section under **Camera settings** bright. Can I turn in the online app manual for instructions.

not respond normally?

Why does camera Try the following (in the order listed) for common

- Disconnect the power to the camera unit.
- 2. Wait a few minutes before connecting power back to the camera unit.
- 3. Turn on the HD camera. 4. Run the mobile app again.

in black and white?

Why is my screen The camera has a light sensor that measures the ambient light. When the ambient light is dim, such as during nighttime or in a dark room, the camera activates its infrared LEDs, and displays the camera view in black and white

Why does my camera show offline? Why is the connection lost every now and then?

The camera unit may lose the Internet connection. Check your network and the router setting.

Other electronic products may cause interference with your camera. Try installing your camera as far away from these electronic devices as possible.

### What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

# What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

# How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer

# What is not covered by this limited warranty?

This limited warranty does not cover.

- 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling. neglect, inundation, fire, water or other liquid intrusion; or
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- 4. Product to the extent that the problem is caused by use with non-VTech 5. Product whose warranty/quality stickers, product serial number plates or

- electronic serial numbers have been removed, altered or rendered illegible; or
- purposes (including but not limited to Products used for rental purposes); or 7. Product returned without a valid proof of purchase (see item 2 on the following part); or

6. Product purchased, used, serviced, or shipped for repair from outside the

United States of America or Canada, or used for commercial or institutional

- 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.
- How do you get warranty service?

# To obtain warranty service in the USA, please visit our website at

OR

www.vtechphones.com or call 1-844-848-8324 (1-844-84-VTECH). In Canada, o to www.vtechcanada.com or call 1-888-211-2005. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this

# What must you return with the Product to get warranty service?

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or
- 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- 3. Provide your name, complete and correct mailing address, and telephone

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply

Please retain your original sales receipt as proof of purchase.



VC9511-2 VC9511-3 VC9511-11 VC9511-21

## Important safety instructions

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Follow all warnings and instructions marked on the product.
- 2. Adult setup is required.
- This camera is intended as an aid. It is not a substitute for home security supervision and should not be used as such.
- 4. This product is not intended for use as a medical monitor.
- Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Power adapter: Output: 5V DC 1500mA.
- The power adapters are intended to be correctly oriented in a vertical or floor mount position.
   The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-thetable or cabinet outlet.
- For pluggable equipment, the socket-outlet (power adapter) shall be installed near the equipment and shall be easily accessible.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 10. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- 11. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
- 12. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.

- 13. Do not overload wall outlets or use an extension cord.
- 14. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 15. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- 16. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- 17. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 18. You should test the sound reception every time you turn on the units or move one of the components.
- 19. Periodically examine all components for damage.
- 20. Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc.
- 21. Children should be supervised to ensure that they do not play with the product.
- 22. The small parts of this camera can be swallowed by babies or small children. Keep these parts out of reach of children.
- 23. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### **SAVE THESE INSTRUCTIONS**

### **Cautions**

- Use and store the product at a temperature between 32°F and 104°F.
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- Other electronic products may cause interference with your camera. Try installing your camera as far away from these electronic devices as possible: wireless routers, radios,

cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

# Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

#### **Pacemaker patients**

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

### Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

# **FCC and IC regulations**

#### FCC Part 15

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a

- circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The camera unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more.

This Class B digital apparatus complies with Canadian requirement:
CAN ICES-3 (B)/NMB-3(B)

### **Industry Canada**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

#### RF radiation exposure statement

The camera unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The camera unit should be installed and operated with a minimum distance of 8 in (20 cm) between the main unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-247 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

# For cETL compliance only

#### Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont ceux qui suivent:

- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- 2. L'installation par un adulte est requise.
- Ce moniteur résidentiel est conçu à titre d'aide seulement. Il ne remplace pas les systèmes de surveillance résidentiels et ne doit pas être utilisé comme tel.
- 4. Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical.
- 5. N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soussol humide ou une douche.
- 6. N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. Adaptateur secteur de la caméra :
  - Adaptateur secteur de la caméra Sortie : 5 V CC 1500 mA.
- 7. Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une table ou dans un meuble.
- Pour les appareils raccordés, la prise de courant (de l'adaptateur secteur) doit être installée près de l'équipement et doit être facilement accessible.
- Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer.
- Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.
- Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piétiner.

- 12. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité.
- 13. Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- 14. Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelants.
- 15. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air.
- 16. N'enfoncez jamais d'objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit.
- 17. Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution.
- 18. Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction.
- 19. Examinez les composantes afin de vérifier si cellesci ne sont pas endommagées.
- 20. Soyez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanneurs, etc.
- 21. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.
- 22. Les petites pièces de ce moniteur peuvent être avalées par les bébés ou les petits enfants. Veuillez tenir ces pièces hors de portée des enfants.

23. Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

### **CONSERVEZ CES INSTRUCTIONS**

### Mises en garde

- Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104°F).
- N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage.
- D'autres produits électroniques peuvent causer des interférences auprès de votre caméra. Essayez d'installer votre caméra le plus loin possible de ces dispositifs électroniques: routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs de pièces, téléviseurs, ordinateurs personnels, appareils électriques de cuisine et téléphones sans fil.

# Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil):

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

#### Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

## Champs électromagnétiques (EMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.



