



 
User Manual (Part 2)

# 5.8 GHz Cordless Speakerphone/ Answering System 5865

---

with Caller ID & Call Waiting

---

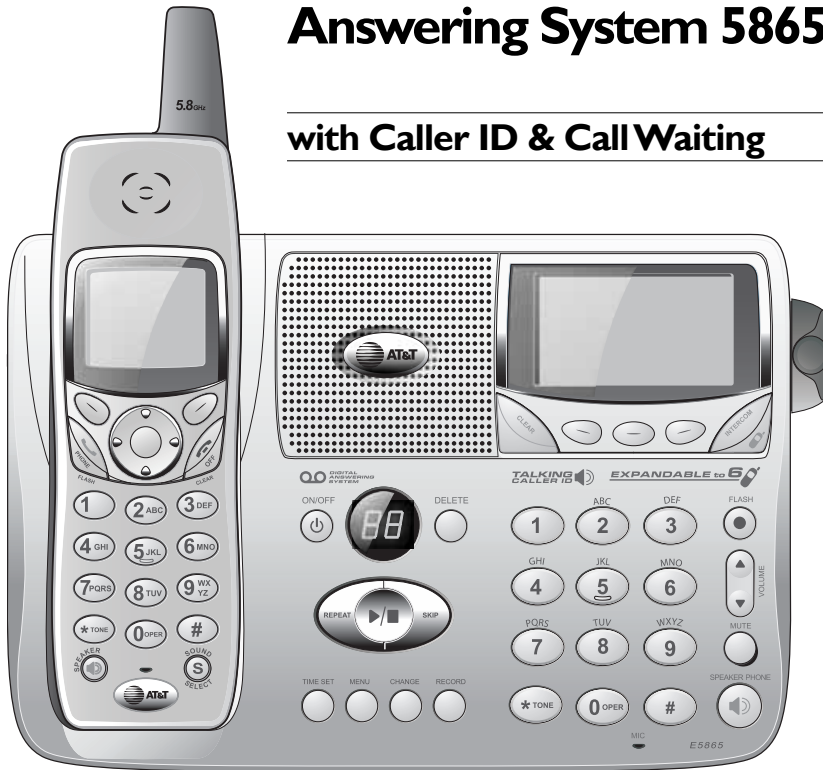

You must install and charge the battery before using the telephone

**STOP!**

See page 7 for easy instructions



For customer service or product information, visit our web site at [www.telephones.att.com](http://www.telephones.att.com) or call 1-800-222-3111

Please also read **Important Product Information** Enclosed in product package

**Add new handsets to make your phone more versatile (see page 46)**

Your telephone can accommodate up to six cordless handsets. You can add new handsets (sold separately) at any time. Up to four handsets at a time can be used.

The handset provided with your telephone is automatically registered as Handset 1. Additional handsets will be assigned numbers in the order they are registered (2, 3, 4, etc.) up to a maximum of six handsets.



Handset 1



Handset 2



Handset 3



User Manual (Part 2)

**5.8 GHz Cordless Speakerphone/ Answering System 5865**



**Table of contents**

**Getting Started**

- Quick reference .....2
- Parts checklist.....4
- Before you begin .....5
- Telephone base installation.....6
- Battery installation & charging .....7
- Wall mounting .....8
- Belt clip & optional headset.....9

**Telephone Operation**

- Basic handset operation .....10
- Basic base operation .....11
- Options during calls .....12
- Intercom calls .....13
- Handset screen images .....14
- Handset sounds & alerts .....15
- Handset settings .....16
- Base settings.....17

**Handset Phonebook**

- New phonebook entries .....19
- Phonebook search .....20
- To dial, edit or delete a listing .....21

**Base Phonebook**

- New phonebook entries .....23
- Phonebook search .....24
- To dial, edit or delete a listing .....25

**Handset Calls Log**

- To review voice messages .....27
- To review Caller ID log .....28
- To dial a Caller ID entry .....29
- To review redial log .....30

**Base Caller ID & Redial**

- To review Caller ID log .....32
- To dial a Caller ID entry .....33
- To review redial log .....34

**Answering System Operation**

- Answering system operation .....35
- Day and time announcements .....36
- Outgoing announcements .....37
- Announce Only mode .....38
- Changing feature options .....39
- Message playback .....40
- Recording and playing memos .....41
- Message window displays .....42
- Remote access .....43

**Appendix**

- Display screen status icons .....44
- Alert tones & indicator lights .....45
- Adding new handsets .....46
- Charging spare batteries .....47
- In case of difficulty .....48
- INDEX .....50

- Spare remote access card .....53

# Quick reference guide

## Handset

### Softkeys

Press a softkey to select a menu item displayed just above the key.

 
### Phone/Flash

Press to begin a call, then dial a number.

During a call, press to receive an incoming call, if Call Waiting is activated (see page 12).

### Speaker

Press to activate handset speakerphone. Press again to hang up.

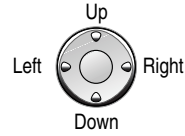

### Joystick

Press center button to display menus. Press arrow buttons to navigate through menus. Press center button to select menu item highlighted.

### Off/Cancel

 





During a call, press to hang up.

While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.







### Sound Select

Press to customize speaker sound for clear speakerphone conversations.







## Main menu

-   
 Intercom  
 See page 13
-   
 Phonebook  
 See page 18
-   
 Calls Log  
 See page 26
-   
 Pictures  
 See page 14
-   
 Sounds/Alerts  
 See page 15
-   
 Settings  
 See page 16

## Sounds & Alerts menu

- Vibrate 
- Ringer Control 
- Ringers 
- Low Batt Tone 
- Keypad Tone 
- Range Tone 

## Settings menu

- Appearance 
- Set Time 
- Contrast 
- Register 
- Language 
- Reset Settings 

# Quick reference guide

 
## Base/Speakerphone

### Answering system controls

Swivel antenna fully upright for best results



### Telephone function keys

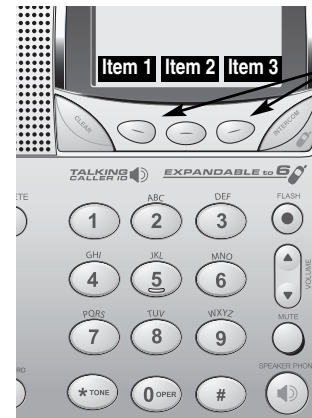

### Telephone function keys (see pages 11-13)

 
- SOFTKEYS** ..... Press to select menu item displayed just above the key
- FLASH** ..... During a call, press to receive an incoming call, if Call Waiting is activated
- VOLUME** ..... Press to adjust speakerphone listening volume
- MUTE** ..... Press to silence microphone; press again to resume
- SPEAKERPHONE** .. Press to turn speakerphone on or off (begin or end a call)



### Answering system controls (see pages 35-43)

Press to repeat message. Press twice to hear previous message.

Press to skip to next message.

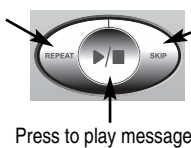

Press to play messages


- ON/OFF** ..... Press to turn answering system on or off
- DELETE** ..... Press to delete message currently playing
- TIME SET** ..... Press to set date and time
- MENU** ..... Press to review or change answering system options
- CHANGE** ..... Press to change a menu option
- RECORD** ..... Press to record a memo or outgoing announcement

## Parts checklist

Remember to save your sales receipt and original packaging in case you ever need to ship your telephone for warranty service. Check to make sure the telephone package includes the following:



Telephone base

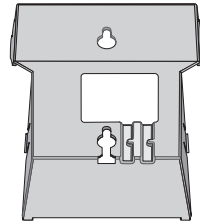


Wall mount bracket



Telephone handset



 Batteries

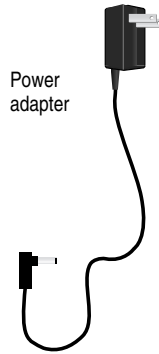

Power adapter



Long line cord



Short line cord



Belt clip

## Before you begin

### About Caller Identification

Caller ID with Call Waiting features in this telephone let you see who's calling before you answer the phone, even when you're on another call. These features require services provided by your local telephone company.

Contact your telephone service provider if:

- You have both Caller ID and Call Waiting, but as separate services (you may need combined service)
- You have only Caller ID service, or only Call Waiting service
- You don't subscribe to any Caller ID or Call Waiting services.

You can use this phone with regular Caller ID service, and you can use its other features without subscribing to either Caller ID or combined Caller ID with Call Waiting service. There may be fees for these services, and they may not be available in all areas.

Caller ID features will work only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

See Caller ID Operation, beginning on page 28, for more details about how these features work.

### Telephone operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and base can communicate over only a certain distance — which can vary with the locations of the base and handset, the weather, and the construction of your home or office. For best performance, keep the base antenna fully upright.

**If you receive a call while you are out of range**, the handset might not ring — or if it does ring, the call might not connect when you press **PHONE**. Move closer to the base, then press **PHONE** to answer the call.

**If you move out of range during a phone conversation**, you might hear noise or interference. To improve reception, move closer to the base.

 
**If you move out of range without pressing OFF**, your phone will be left “off the hook.” To hang up properly, walk back toward the telephone base, periodically pressing **OFF** until the call is disconnected.

## Telephone base installation

Install the speakerphone base as shown below. Choose a location away from electronic equipment, such as personal computers, television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.


**i** **NOTE:** Use only the power cord supplied with this product. If you need a replacement, call 1 800 222-3111.

Be sure to use an electrical outlet not controlled by a wall switch.

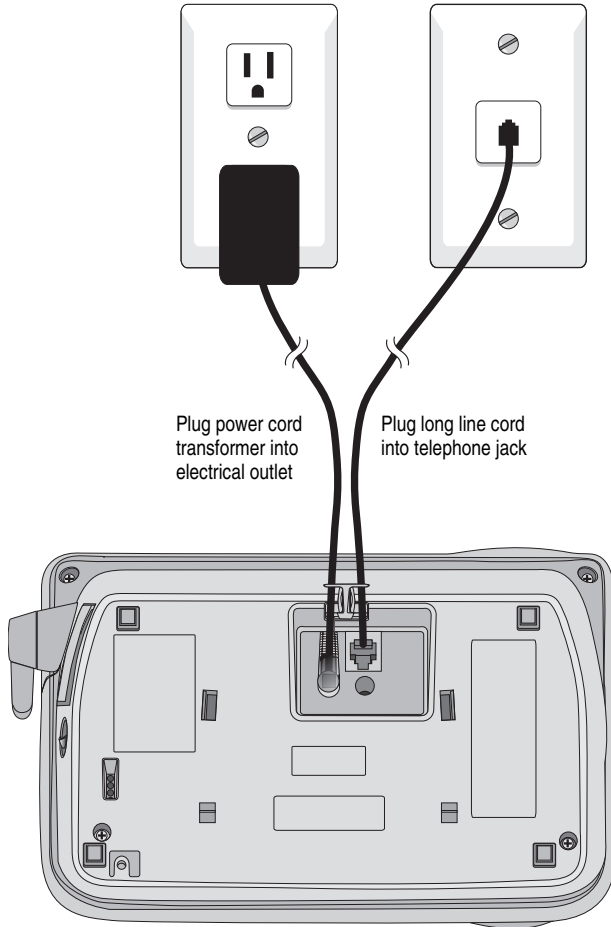

## Battery installation & charging

 After installation, place the handset in the base and allow the battery to charge for 12 hours before use. You can keep the battery charged by returning the handset to the base after each use. When battery power is fully depleted, a full recharge takes about 8 hours.

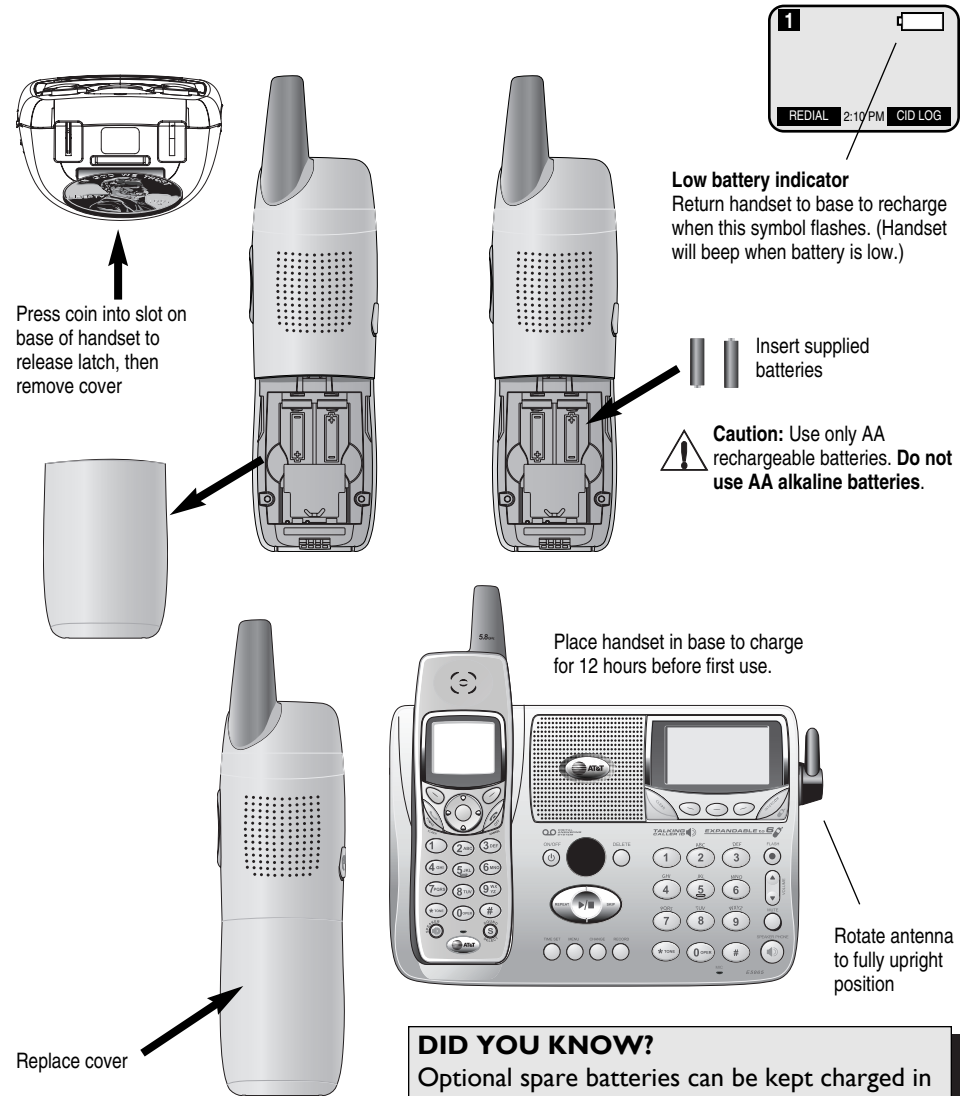

**DID YOU KNOW?**  
Optional spare batteries can be kept charged in the base, for quick replacement when handset batteries become depleted (see page 47).