



at&t

User's manual

**5.8 GHz Cordless  
telephone/speakerphone  
answering system with  
Bluetooth® functions  
EP5632/EP5632-2**

with caller ID & call waiting



# Congratulations

on your purchase  
of this AT&T product.

Before using this AT&T product, please  
read the **Important safety instructions**  
on pages 47-50 of this manual.

Please thoroughly read this user's  
manual for all the feature operations  
and troubleshooting information necessary  
to install and operate your new  
AT&T product. You can also visit our  
web site at [www.telephones.att.com](http://www.telephones.att.com)

Model #: EP5632/EP5632-2

Type: 5.8GHz cordless telephone/answering system

Serial #: \_\_\_\_\_  
(found on the bottom of the telephone base)

Purchase date: \_\_\_\_\_

Place of purchase: \_\_\_\_\_

You must install and charge the battery before using the telephone.



See page 8 for easy instructions.

For customer service or product information, visit our website at [www.telephones.att.com](http://www.telephones.att.com)

Please read and follow these instructions carefully:

- Use only the supplied rechargeable battery or replacement battery.
- Do not dispose of the battery in a fire. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Observe proper polarity orientation between the battery and battery charger.
- Do not disassemble your telephone. There are no user-serviceable parts inside. Refer to qualified service personnel for servicing.

## Add new handsets to make your telephone more versatile (see page 65)

---

Your telephone can accommodate up to twelve cordless handsets. You can add new handsets (AT&T EP562, purchased separately) at anytime, but each must be registered with the telephone base before use.

The handset provided with your telephone is automatically registered as handset 1. Additional handsets will be assigned numbers in the order they are registered (2, 3, 4, etc.). You can register a maximum of 12 handsets.



Telephone base



Handset 1



Handset 2



Handset 3



Handset 4



Handset 5



Handset 6



Handset 7



Handset 8



Handset 9



Handset 10



Handset 11



Handset 12



### NOTES:

1. A maximum of four handsets and the telephone base can be connected to the same external call at the same time.
2. The EP5632 has one pre-registered handset. You can purchase and register eleven additional handsets (EP562) to the telephone base of EP5632.
3. The EP5632-2 has two pre-registered handsets. You can purchase and register ten additional handsets (EP562) to the EP5632-2 system.

# User's manual

## 5.8 GHz Cordless telephone/speakerphone answering system with Bluetooth® functions EP5632/EP5632-2

with caller ID & call waiting



### Table of contents

#### Getting started

- Quick reference guide..... 2
- Parts checklist..... 5
- Before you begin ..... 6
- Telephone base installation ..... 7
- Battery installation & charging... 8
- Wall mounting..... 9
- Belt clip & optional headset..... 10

#### Telephone setup

- Handset screen images ..... 11
- Handset sounds..... 12
- Handset messages..... 14
- Handset settings..... 15
- Base settings ..... 19

#### Telephone operation

- Basic handset operation ..... 23
- Basic base operation ..... 25
- Options while on calls ..... 27
- Intercom calls..... 28

#### Handset directory

- New directory entries..... 30
- Directory search..... 32
- Editing or deleting an entry..... 33

#### Base directory

- New directory entries..... 36
- Directory search..... 38
- Editing or deleting an entry..... 39

#### Handset call log and redial

- Reviewing your call log..... 42
- Dialing a call log entry ..... 44
- Reviewing your redial log..... 45
- Reviewing voice messages ..... 47

#### Base call log & redial

- Reviewing your call log..... 49
- Dialing a call log entry ..... 51
- Reviewing your redial log..... 52

#### Answering system operation

- Setting answering system ..... 55
- Outgoing announcements..... 58
- Message playback ..... 59
- Recording & playing memos..... 60
- Message window displays..... 61
- Remote access..... 62

#### Appendix

- Display screen status icons..... 63
- Alert tones & indicator lights ... 64
- Adding new handsets..... 65
- Replacing a handset ..... 66
- Charging spare battery pack .... 68
- Troubleshooting ..... 69
- Important safety information... 75
- FCC Part 68 and ACTA..... 78
- FCC Part 15 ..... 80
- Limited warranty ..... 81
- Index ..... 84
- Technical specifications..... 86
- Remote access wallet card..... 87

# Quick reference guide

## Handset

### STATUS LIGHT

Blinks slowly when there is a new voicemail or a new message in the answering system.

### SOFTKEYS

Press to select a menu item displayed just above the key.

### HOME/FLASH

Blinks when there is an incoming call.

Press to make and answer a call.

Press to receive an incoming call if call waiting is activated (page 27).

Flashes when a call is on hold.

During a call, press to receive an incoming call if call waiting is activated.

### SPEAKER

 
Press to activate the handset speakerphone. Press again to resume normal handset use (page 23).

### CELLULAR

Press to pick up an incoming call or make an outgoing call on the cellular line.

If two cellular phones are on the active device list, press to select the desired cellular line.

Press to switch to the designated cellular line after a Bluetooth paired cellular phone is paired.

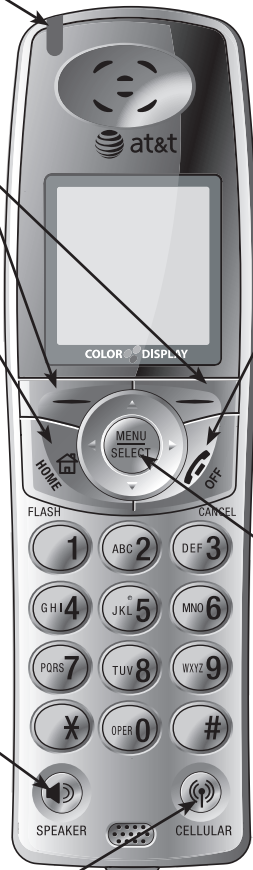

### VOLUME

Press to increase or decrease handset listening volume.

### OFF/CANCEL

During a call, press to hang up.

 
While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

### NavKey

Press the **CENTER** NavKey to display menus or select a high-lighted item.










Press the **UP** or **DOWN** NavKey to navigate through menus (see page 3).

Press the **CENTER** NavKey to select a highlighted menu item.

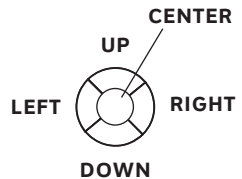

# Quick reference guide
         
## Main menu

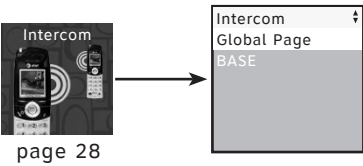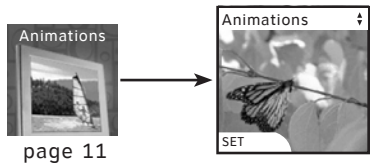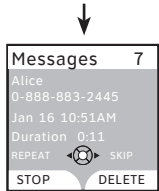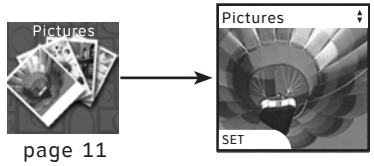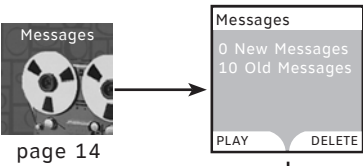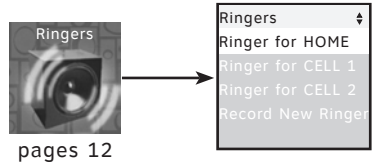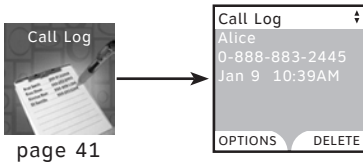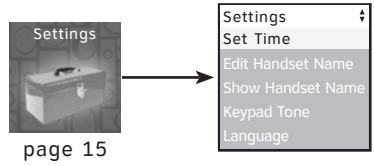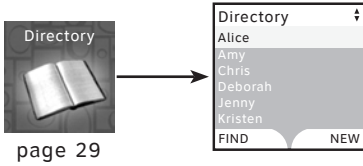

## Quick reference guide

### Telephone base

**Telephone function keys**



**Answering system function keys**

**Telephone function keys** (see pages 25-28)

**INTERCOM**.....Press to locate handset(s) or to initiate an intercom conversation.

 
**CANCEL**.....Press to cancel an operation, back up to the previous menu, or exit the menu display.

Press to make corrections when entering digits in the dialing screen.

**FLASH**.....During a call, press to receive an incoming call if call waiting is activated.

**Answering system controls** (see pages 54-62)

Press to delete a recorded message.

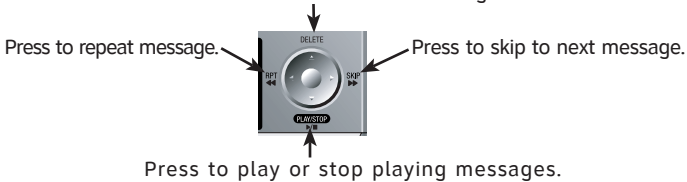

**VOLUME**.....Press to adjust listening volume on the speakerphone and on the Bluetooth head set.

**HOME** .....Press to turn speakerphone on or off (begin or end a call).

**CELLULAR** .....Press to pick up an incoming call or make an outgoing call on the cellular line. If two cellular phones are on the active device list, press to select the desired cellular line.

Press to switch to the designated cellular line after a Bluetooth paired cellular phone is paired.