

CLARITY

USER GUIDE

D613™

Amplified Cordless DECT

Telephone with CID and Digital Answer Machine

Clarity, a Division of Plantronics, Inc.

4289 Bonny Oaks Drive, Suite 106
Chattanooga, TN 37406
1-800-426-3368

www.clarityproducts.com

 


© 2007 Clarity, a division of Plantronics, Inc. All rights reserved. Amplifying your life. Clarity, the amplification device, Clarity and the amplification device combined, Clarity, D613, Digital Clarity Power and DCP are trademarks or registered trademarks of Plantronics, Inc. Rev.A (4-09)

CONTENTS & PARTS CHECKLIST


Your package includes all the items as shown here. If there is anything missing, please contact our Customer Care Department immediately.

NOTE: PLEASE RETAIN A COPY OF PROOF OF PURCHASE FOR YOUR RECORDS.

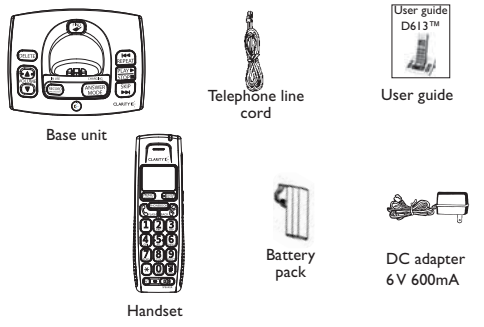

INSTALLING YOUR D613

 - Connect one end of the telephone cord into the (square) LINE port on the bottom of the base; connect the other end of the phone cord into our wall telephone outlet. See Figure 1.
- Connect the DC adapter cord into the DC 6V 600mA port on the bottom of the base; plug the adapter into your wall outlet. See Figure 1.
- Slide open the battery compartment door and connect the rechargeable battery into the battery compartment. See Figure 2.
- Put the handset on the base to charge for at least 24 hours before first use. Subsequent charging time should be 6-8 hours a day.

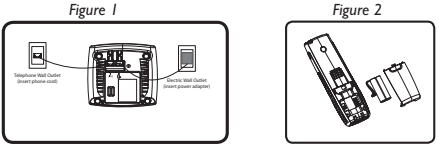


Battery Performance

The battery icon will blink on the menu screen when the battery is low. A fully charged battery will provide an estimated 10 hours of talk time and 100 hours of standby time.

To keep your battery pack in the best condition, leave the handset off the base for a few hours at a time. Running the battery pack down at least once will help it last as long as possible. The charge capacity of rechargeable battery pack will reduce with time as it wears out, giving the handset less talk/standby time. Eventually it will need to be replaced.

Note: Battery pack and handset may become warm during charging. This is normal.

 FEATURE LIST AND OVERVIEW

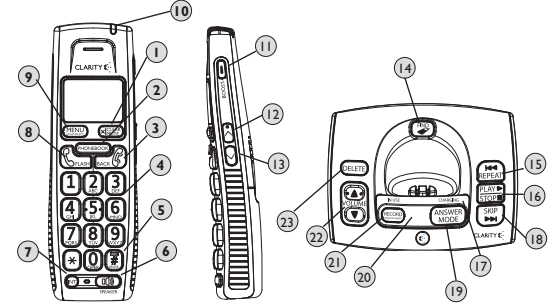

- X/CLEAR/MUTE** button (Mute/Clear/Delete/Answering Machine main menu): (Idle mode): Press to access the main menu of the answer machine and listen to the voice prompts. (Pre-dial/Editing mode): Press once to delete a character or digit. Press and hold to delete all characters/digits. (During a call): Press this button to mute a call; press again to unmute call. (Calls List/Phonebook entry): Press this button to delete the entry. (Answering Machine mode): Press this button or the "0" key to delete the current message playback.
- PHONEBOOK** button: press this button to access the phonebook. (Editing Mode): Press to move the cursor to the left. **Note:** The phonebook will hold up to 30 name and numbers.
- BACK** button: Press to end a call. (Menu Mode): Press to move back a menu level.
- Dial pad/Alphanumeric keypad:** Enter the desired number you wish to call or characters when typing a name into the phonebook entry. (* button (Tone): During a call, press this button to switch from pulse to tone dialing (temporarily). After the call has ended, the dial mode will resume pulse.) **Note:** you can predial (dial before pressing Talk) or press Talk and dial after hearing the dial tone.
- #/PAUSE/ABC/FORMAT** Button: (Idle/Pre-dial/During a call mode): Press to insert a # symbol. (In number editing mode): Press once to insert the # symbol and hold # key to insert a pause. (In name editing mode): Toggle between ABC/Abc/abc. (In calls list entry): Press to toggle the Caller ID display format among 7, 8, 10 and 11 digits.
- SPEAKER** Button: Press the SPEAKER button to engage the speakerphone function; press again to turn the feature off.
- INT. (Intercom):** This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.
- (Talk)/FLASH** button: Press to make a call, answer an incoming call or to engage the Call Waiting/Caller ID function (feature provided by local telephone company).
- MENU/HOLD/SELECT** button: Press to access the menu list and to confirm/save settings in the menu. (During a call): Press to place the call on hold.
- Top Handset Light:** The light will flash during an incoming call; the light will remain on when you are on a call and the BOOST is on.

SCREEN ICONS (HANDSET AND BASE)

Menu Screen on Handset

- Speakerphone is ON
- Answering Machine is ON; blinks for new messages.
- New calls are received; turns off after new calls are reviewed.
- Ringer volume is turned off.
- New voice mail, not yet listened to. (from your local telephone company)
- Level of charge in your battery; flashes when it needs recharging.

Screen on Base

The following symbols will appear on the base LCD screen to indicate the following:

- :Will be displayed when the answer machine is turned off.
- 00 :Indicates no new messages.
- 09 :Indicates how many messages are on the answering machine. (Example: There are 9 answering machine messages in total.) Symbol will flash when you play a message.
- f :Will flash when the answering machine memory is full. **Note:** The answering machine will hold up to 15 minutes of recorded messages with a limit of 59 messages.
- LA/09: Symbols will blink back and forth when recording a personalized announcement or memo. The numbers (example: 09) indicate the total number of messages in answering machine when playing announcement.

In Flashing mode: Answering an incoming call / recording an incoming call.

- An :Represents announce only mode.
- LA :Line remote access is in progress.
- LA/09 :Symbol will blink back and forth when remote access is in progress. The number indicates the total number of new messages.
- L3 :Indicates the base speaker volume level. (Example: Volume level is set at level 3. (Note: The speaker level symbol will disappear after three seconds.)

FEATURE LIST AND OVERVIEW

- BOOST On/Off:** Press BOOST to engage the extra amplification (screen briefly displays BOOST ON). In BOOST OFF mode, the phone has a volume range of up to 16dB of amplification. In BOOST ON mode, the phone has a volume range of up to 30 dB of amplification.
- UP: Scroll up/Volume up/Call lists:** (Idle mode): Press to access calls list. (Menu Mode): Press to scroll up. (Editing Mode): Press to move cursor to the left. (During a call/Answer machine mode): Press to increase volume.
- DOWN: Scroll down/Volume down/Redial list:** (Idle Mode): Press to access the redial list. (up to 32 digits, up to 5 calls) (Menu Mode): Press to scroll down. (Editing Mode): Press to move cursor to the right. (During a call/Answering Machine Mode): Press to decrease volume. (Call List/phonebook/redial list entry): Press to scroll down the list.
- FIND:** Press to find /page all registered handsets.
- REPEAT (Backward):** Press once to replay current message from the beginning. Press twice to playback the previous message.
- PLAY/STOP:** Press to play a message; press again to stop playing message.
- CHARGING** light (Red): Light will turn on red when the handset is in the cradle base charging.
- SKIP (Forward):** Press to skip a message and move forward to the next message.
- ANSWER MODE** button: Press this button to toggle between the following answering machine modes: ANSWER OFF; ANNOUNCE & RECORD; ANNOUNCE ONLY.
- Answering Machine screen:** See section on ICONS for details.
- RECORD ANNOUNCEMENT:** Short press to play current outgoing message. Press and hold to record your outgoing message and release to stop recording.
- VOLUME UP/DOWN:** Controls the answering machine volume (levels 0 to 9).
- DELETE:** To delete message, press this button while message is playing; press and hold to delete all reviewed messages. New messages cannot be deleted before being reviewed.

ADDITIONAL HANDSETS

Register Additional Handsets

The original handset is pre-registered for use. Up to 5 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

- Place the unregistered handset on the charger.
- Press and hold the FIND button for 4 seconds on the base.
- Release the FIND button once the IN USE light starts to flash.
- A confirmation tone will sound when registration is successful. Handset X is displayed where X denotes the number of handsets. The phone will then go back to idle.

De-register All Handsets

- Unplug the power from the base.
- Press and hold the FIND button on the base for 10 seconds.
- Plug back in the power of the base.
- Release once the IN USE light starts to flash rapidly.
- Within 2 seconds, press and release the FIND button on the base again. This will de-register all handsets. The IN USE light on the base will be OFF and NOT REGISTERED will display on each handset menu screen.

Reset All Settings

This will reset all the personalized settings to the default settings.

Note: All entries in the Phonebook, Redial List and Call List will be cleared.

- Press the MENU button and use the UP/DOWN buttons to select Reset Settings.
- Next, press the MENU button and use the UP/DOWN buttons to select All Settings.
- Press the MENU button to select Yes.

RESET SETTINGS

MENU OPTIONS

There are six main menu options on the D613: Date & Time, Phonebook, Setup HS, Setup BS, Answer Machine and Reset Settings.

To navigate through the menu:

- Press the MENU button;
- Press the UP/DOWN arrow buttons to scroll through the menu;
- Press the MENU button to open a sub menu or to select an option. Press the (Talk Off)/BACK button to go back to the previous menu level or to cancel an option.

Note: If you do not press any button on the handset for 30 seconds the display will automatically return to standby.

Main Menu	Date & Time	Phone-book	Setup HS	Setup BS	Answer Machine	Reset Setting
Sub Menu	Year	View	Ringer Tone	Ringer Tone	Answer Machine	CLR Voice Mail
	Date	Add	Ringer Volume	Ringer Volume	Message Alert	All Settings
	Time	Edit	Key Tone	Ringer Volume	Number of Rings	
		Delete	Low Batt Tone	Dial Mode	Announcement	
		Delete All	Out Range Tone	Area Code	Record Memo	
		PB Capacity	Handset Name	Language	Call Screening	
	Speed Dial	Language	LCD Contrast	Remote Access		
				Security Code		

CALL LIST (CID)

This is a service provided through your local telephone company. The D613 will automatically display the incoming callers name and number along with the date and time for the call. It will record up to 30 calls.

Note: The time and date will automatically register after receiving your first call.

Call List (CID)

The call list contains the missed and received calls. Entries are displayed in chronological order with the most recent call at the top of the list. When there is a missed call that has not been answered, NEW will be displayed on the menu screen.

Note: When the call list is full, a new call replaces the oldest in the list. If you receive more than one call from the same number, only the most recent call is kept in the call list.

View Call List

To View the Call List information press the UP button while your phone is in idle mode, the most recent number will be displayed. Press the UP/DOWN buttons to scroll through the call list.

Formatting Call List Information

When reviewing an entry from the call list, press the # button repeatedly to display the number in different formats. For example, if the call number is displayed as 800-426-3738, the various formats will be: 426-3738, 1-426-3738, 800-426-3738 and 1-800-426-3738.

Save Number from Call List to Phonebook

- Use the UP/DOWN buttons to scroll to the CID entry you would like to save.
- Press the MENU button and enter the name, using your dial pad.
- Press the MENU button once again to edit the number.
- Press the MENU button and use the UP/DOWN buttons to select your desired melody.
- Press the MENU button to save to the Phonebook.

Note: Up to 30 names and number can be stored into the phonebook. Numbers can be stored up to 24 digits long and names can be up to 16 characters long. Entries will be stored in alphabetical order.

Delete a Call List Entry

- Press the UP button to enter the call list.
- Press the UP/DOWN buttons to your desired entry.
- Press the CLEAR/DELETE button to delete the entry.

Delete Entire Calls List

- Press the UP button to enter the call list.
- Press and hold the CLEAR/DELETE button until "DELETE ALL CALL LOG ENTRIES?" is displayed.
- Press the MENU to confirm and delete all entries.

BOOST FUNCTION AND VOLUME CONTROL

Boost Function - Amplify Incoming Sounds

- While on a call, press the BOOST button to engage the amplifier. The D613 has a BOOST button that controls the loudness of the receiver. Once the BOOST button is pressed, an extra level of amplification is added over the entire range of the Volume Control. During a call, the BOOST button can toggle the Clarity Power function On or Off according to the user's needs. The BOOST button will reset automatically every time the phone is hung up for at least 5 seconds. The top light will illuminate (Red) while the BOOST function is activated.
- During a call, press UP/DOWN buttons to adjust the volume to the desired sound level (up to 30 dB of amplification) on the earpiece or loudspeaker. The Volume Control adjusts the level of volume in the handset and speaker in both BOOST or non-BOOST modes. The volume control provides up to 16 dB of volume before the BOOST button is activated.

CAUTION: VOLUME MAY BE LOUD. PROCEED WITH CARE.

MENU OPTIONS

Setup BS (Base) (Main Menu)

Submenu settings allows you to select your personalized settings for the base: Ringer Tone (Melody settings 1-3), Ringer Volume (1-5), Dial Mode and Area code.

Answer Machine (Main Menu)

Submenu settings allows you to set the following: Answer Machine (Answer Off/Announce & Record/Announce Only), Message Alert (On/Off), Set Number of Rings before the Answer Machine picks up, Announcement (Announce & Record/Announce Only), Record Memo, Call Screening, Remote Access (On/Off) and set your own security code for remote access (default security code is 123).

Reset Setting (Main Menu)

Submenu settings allows you to Clear your Voice Mail (service provided by your local telephone company) or to reset All Settings to the default settings.

Date and Time (Main Menu)

The submenu will allow you to manually input the Year, Date and Time. If you have CID service (service provided by your local telephone company), this information will automatically register during your first call.

Phonebook (Main Menu)

Submenu settings allows the following options: View, Add, Edit, Delete, Delete All, Check your Phonebook Capacity and Set your Speed Dial for keys 1-9.

Setup HS (Handset) (Main Menu)

Submenu settings allows you to select your own personalized settings for the handset: Ringer Tone (Melody settings 1-3), Ringer Volume (Off, Vol. 1-5), Key Tone (On/Off), Low Batt Tone (On/Off), Out of Range (On/Off), Tone, Handset Name and Language (English/FRANCOIS/ Español).

CLARITY **USER GUIDE**

D603™
Amplified Cordless DECT
Telephone with CID

Clarity, a Division of Plantronics, Inc.
4289 Bonny Oaks Drive, Suite 106
Chattanooga, TN 37406
1-800-426-3368

www.clarityproducts.com

 


© 2007 Clarity, a division of Plantronics, Inc. All rights reserved. Amplifying your life. Clarity, the amplification device, Clarity and the amplification device combined, Clarity, D603, Digital Clarity Power and DCP are trademarks or registered trademarks of Plantronics, Inc. Rev. A (4-09)

CONTENTS & PARTS CHECKLIST

Your package includes all the items as shown here. If there is anything missing, please contact our Customer Care Department immediately.

NOTE: PLEASE RETAIN A COPY OF PROOF OF PURCHASE FOR YOUR RECORDS.

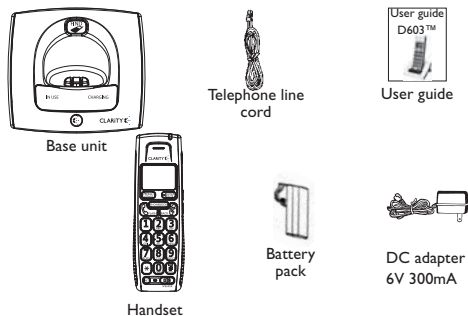

INSTALLING YOUR D603

1. Connect one end of the telephone cord into the (square) LINE port on the bottom of the base; connect the other end of the phone cord into our wall telephone outlet. See Figure 1.
2. Connect the DC adapter cord into the DC 6V 300mA port on the bottom of the base; plug the adapter into your wall outlet. See Figure 1.
3. Slide open the battery compartment door and connect the rechargeable battery into the battery compartment. See Figure 2.
4. Put the handset on the base to charge for at least 24 hours before first use. Subsequent charging time should be 6-8 hours a day.

Figure 1


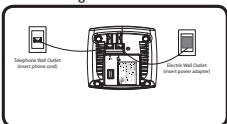 


Figure 2

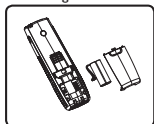 


Battery Performance

The battery icon will blink on the menu screen when the battery is low. A fully charged battery will provide an estimated 10 hours of talk time and 100 hours of standby time.

To keep your battery pack in the best condition, leave the handset off the base for a few hours at a time. Running the battery pack down at least once will help it last as long as possible. The charge capacity of rechargeable battery pack will reduce with time as it wears out, giving the handset less talk/standby time. Eventually it will need to be replaced.


Note: Battery pack and handset may become warm during charging. This is normal.

 FEATURE LIST AND OVERVIEW

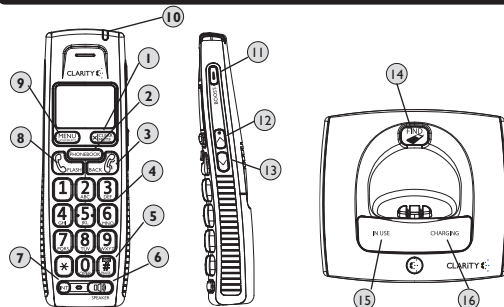

1. **X/CLEAR/MUTE** button (Mute/Clear/Delete): (Pre-dial/Editing mode): Press once to delete a character or digit. Press and hold to delete all characters/digits. (During a call): Press this button to mute a call; press again to unmute call. (Calls List/Phonebook entry): Press this button to delete the entry.
2. **PHONEBOOK** button: Press this button to access the phonebook. (Editing Mode): Press to move the cursor to the left. **Note:** The phonebook will hold up to 30 name and numbers.
3. **(End)/BACK** button: Press to end a call. (Menu Mode): Press to move back a menu level.
4. **Dial pad/Alphanumeric keypad:** Enter the desired number you wish to call or characters when typing a name into the phonebook entry. (* button (Tone): During a call, press this button to switch from pulse to tone dialing (temporarily). After the call has ended, the dial mode will resume to pulse.) **Note:** you can predial (dial before pressing Talk) or press Talk and dial after hearing the dial tone.
5. **#/Pause/ABC/FORMAT** button: (Idle/Pre-dial/During a call mode): Press to insert a # symbol. (In number editing mode): Press once to insert the # symbol and hold # key to insert a pause. (In name editing mode): Toggle between ABC/Abc/abc (In calls list entry): Press to toggle the Caller ID display format among 7, 8, 10 and 11 digits.
6. **SPEAKER** button: Press the SPEAKER button to engage the speakerphone function; press again to turn the feature off.
7. **INT (Intercom):** This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.
8. **(Talk)/FLASH** button: Press to make a call, answer an incoming call or to engage the Call Waiting/Caller ID function (feature provided by local telephone company).

 Menu Screen on Handset



- Speakerphone is ON
- New calls are received; turns off after new calls are reviewed.
- Ringer volume is turned off.
- New voice mail, not yet listened to. (from your local telephone company)
- Level of charge in your battery; flashes when it needs recharging.

FEATURE LIST AND OVERVIEW

9. **MENU/HOLD/SELECT** button: Press to access the menu list and to confirm/save settings in the menu. (During a call): Press to place the call on hold.
10. **Handset Top Light:** The light will flash during an incoming call; the light will remain on when you are on a call and BOOST is on.
11. **BOOST On/Off:** Press BOOST to engage the extra amplification (screen briefly displays BOOST ON). In BOOST OFF mode, the phone has a volume range of up to 16dB of amplification. In BOOST ON mode, the phone has a volume range of up to 30 dB of amplification.
12. **UP: Scroll up/Volume up/Call list:** (Idle mode): Press to access calls list. (Menu Mode): Press to scroll up. (Editing Mode): Press to move cursor to the left. (During a call): Press to increase volume.
13. **DOWN: Scroll down/Volume down/Redial list:** (Idle Mode): Press to access the redial list. (up to 32 digits, up to 5 calls) (Menu Mode): Press to scroll down. (Editing Mode): Press to move cursor to the right. (During a call): Press to decrease volume. (Call List/Phonebook/Redial list entry): Press to scroll down the list.
14. **FIND:** Press to find /page all registered handsets.
15. **IN USE light:** Turns on green when the phone is on a call.
16. **CHARGING light:** Turns on red when the handset is charging in the cradle.

ADDITIONAL HANDSETS

Registering Additional Handsets

The original handset is pre-registered for use. Up to 5 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

1. Place the unregistered handset on the charger.
2. Press and hold the FIND button for 4 seconds on the base.
3. Release the FIND button once the IN USE light starts to flash.
4. A confirmation tone will sound when registration is successful. Handset X is displayed where X denotes the number of handsets. The phone will then go back to idle.

De-register All Handsets

1. Unplug the power from the base.
2. Press and hold the FIND button on the base for 10 seconds.
3. Plug back in the power of the base.
4. Release once the IN USE light starts to flash rapidly.
5. Within 2 seconds, press and release the FIND button on the base again. This will de-register all handsets. The IN USE light on the base will be OFF and NOT REGISTERED will display on each handset menu screen.

RESET SETTINGS

Reset All Settings

This will reset all the personalized settings to the default settings.

Note: All entries in the Phonebook, Redial List and Call List will be cleared.

1. Press the MENU button and use the UP/DOWN buttons to select Reset Settings.
2. Next, press the MENU button and use the UP/DOWN buttons to select All Settings.
3. Press the MENU button to select Yes.

MENU OPTIONS

There are five main menu options on the D603: Date & Time, Phonebook, Setup HS, Setup BS and Reset Settings.

To navigate through the menu:

1. Press the MENU button;
2. Press the UP/DOWN arrow buttons to scroll through the menu;
3. Press the MENU button to open a sub menu or to select an option. Press the (Talk Off)/BACK button to go back to the previous menu level or to cancel an action.

Note: If you do not press any button on the handset for 30 seconds the display will automatically return to standby.

Main Menu	Date & Time	Phonebook	Setup HS	Setup BS	Reset Setting
	Year	View	Ringer Tone	Ringer Tone	CLR Voice Mail
	Date	Add	Ringer Volume	Ringer Volume	All Settings
	Time	Edit	Key Tone	Dial Mode	
		Delete	Low Batt Tone	Area Code	
Sub Menu		Delete All	Out Range Tone		
		PB Capacity	Handset Name		
		Speed Dial	Language		
			LCD Contrast		

CALL LIST (CID)

This is a service provided through your local telephone company. The D603 will automatically display the incoming callers name and number along with the date and time for the call. It will record up to 30 calls.

Note: The time and date will automatically register after receiving your first call.

Call List (CID)

The call list contains the missed and received calls. Entries are displayed in chronological order with the most recent call at the top of the list. When there is a missed call that has not been answered, NEW will be displayed on the menu screen.

Note: When the call list is full, a new call replaces the oldest in the list. If you receive more than one call from the same number, only the most recent call is kept in the call list.

View Call List

To View the Call List information press the UP button while your phone is in idle mode, the most recent number will be displayed. Press the UP/DOWN buttons to scroll through the call list.

Formatting Call List Information

When reviewing an entry from the call list, press the # button repeatedly to display the number in different formats. For example, if the call number is displayed as 800-426-3738, the various formats will be: 426-3738, 1-426-3738, 800-426-3738 and 1-800-426-3738.

Save Number from Call List to Phonebook

1. Use the UP/DOWN buttons to scroll to the CID entry you would like to save.
2. Press the MENU button and enter the name, using your dial pad.
3. Press the MENU button once again to edit the number.
4. Press the MENU button and use the UP/DOWN buttons to select your desired melody.
5. Press the MENU button to save to the Phonebook.

Note: Up to 30 names and number can be stored into the phonebook. Numbers can be stored up to 24 digits long and names can be up to 16 characters long. Entries will be stored in alphabetical order.

Delete a Call List Entry

1. Press the UP button to enter the call list.
2. Press the UP/DOWN buttons to your desired entry.
3. Press the CLEAR/DELETE button to delete the entry.

Delete Entire Calls List

1. Press the UP button to enter the call list.
2. Press and hold the CLEAR/DELETE button until "DELETE ALL CALL LOG ENTRIES?" is displayed.
3. Press the MENU to confirm and delete all entries.

BOOST FUNCTION AND VOLUME CONTROL

Boost Function - Amplify Incoming Sounds

1. While on a call, press the BOOST button to engage the amplifier. The D603 has a BOOST button that controls the loudness of the receiver. Once the BOOST button is pressed, an extra level of amplification is added over the entire range of the Volume Control. During a call, the BOOST button can toggle the Clarity Power function On or Off according to the user's needs. The BOOST button will reset automatically every time the phone is hung up for at least 5 seconds. The handset top light will illuminate (Red) while the BOOST function is activated.

2. During a call, press UP/DOWN buttons to adjust the volume to the desired sound level (up to 30 dB of amplification) on the earpiece or loudspeaker. The Volume Control adjusts the level of volume in the handset and speaker in both BOOST or non-BOOST modes. The volume control provides up to 16 dB of volume before the BOOST button is activated.

CAUTION: VOLUME MAY BE LOUD. PROCEED WITH CARE.

MENU OPTIONS

Setup BS (Base) (Main Menu)

Submenu settings allow you to select your personalized settings for the base: Ringer Tone (Melody settings 1-3), Ringer Volume (1-5), Dial Mode and Area code.

Reset Setting (Main Menu)

Submenu settings allow you to Clear your Voice Mail (service provided by your local telephone company) or to reset All Settings to the default settings.

Date and Time (Main Menu)

The submenu will allow you to manually input the Year, Date and Time. If you have CID service (service provided by your local telephone company), this information will automatically register during your first call.

Phonebook (Main Menu)

Submenu settings allows the following options: View, Add, Edit, Delete, Delete All, Check your Phonebook Capacity and Set your Speed Dial for keys 1-9.

Setup HS (Handset) (Main Menu)

Submenu settings allows you to select your own personalized settings for the handset: Ringer Tone (Melody settings 1-3), Ringer Volume (Off, Vol. 1-5), Key Tone (On/Off), Low Batt Tone (On/Off), Out of Range (On/Off), Tone, Handset Name and Language (English/Francois/Espanol).

CLARITY



GUIDE D'UTILISATION

D603™

Téléphone amplifié sans fil

DECT avec CID

Clarity, a Division of Plantronics, Inc.
4289 Bonny Oaks Drive, Suite 106
Chattanooga, TN 37406
1-800-426-3368

 
www.clarityproducts.com

© 2007 Clarity, a division of Plantronics, Inc. Tous droits réservés. Amplifying your life, Clarity, the amplification device, Clarity and the amplification device combined, Clarity, D603, Digital Clarity Power and DCP sont des marques déposées ou des marques déposées de Plantronics, Inc. Rev. A (4-09)

CONTENU DE PIÈCES DE LA LISTE DE VÉRIFICATION


Liste de vérification du contenu et des pièces. Votre emballage comprend toutes les pièces illustrées ici. Si une pièce s'avère manquante, veuillez immédiatement communiquer avec notre service à la clientèle.

REMARQUE: VEUILLEZ CONSERVER UNE COPIE DE LA PREUVE D'ACHAT DANS VOS DOSSIERS À TITRE DE RÉFÉRENCE.

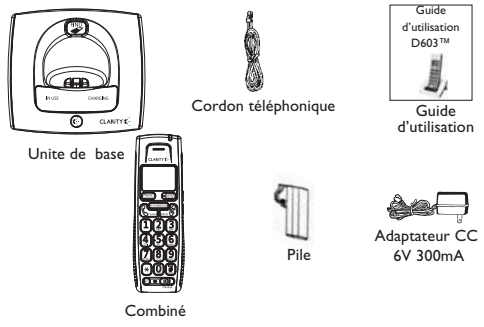


INSTALLATION DE VOTRE D603

 - 1. Branchez une extrémité du cordon téléphonique dans le port LINE (carré) sous la base, puis l'autre extrémité dans la prise téléphonique murale.
2. Branchez le cordon de l'adaptateur CC dans le port 6V 300 mA sous la base, puis branchez l'adaptateur dans la prise de courant murale. Voir Figure 1.
3. Faites glisser le couvercle du logement des piles et insérez-y la pile rechargeable. Voir Figure 2.
4. Placez le combiné sur la base de manière à le charger pendant au moins 24 heures avant la première utilisation. Par la suite, les chargements devraient prendre de 6 à 8 heures par jour.

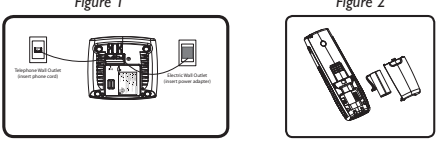

Rendement de la pile
L'icône de la pile clignotera sur l'écran principal lorsque le niveau de la pile est bas. Une pile entièrement chargée peut être utilisée pendant environ 10 heures en mode de conversation et 100 heures en mode d'attente.
Pour optimiser le rendement de votre pile, ne laissez pas le combiné sur la base pour plusieurs heures. Le fait de vider entièrement la pile une fois la semaine permettra d'en assurer une plus grande autonomie. La capacité de charge de la pile rechargeable diminuera au fil du temps en raison de l'usure, offrant par le fait même des temps de conversation et d'attente plus courts. Il sera éventuellement nécessaire de la remplacer.
Remarque : La pile et le combiné peuvent devenir chauds lors du chargement. Cela est tout à fait normal.

 
LISTE ET VUE D'ENSEMBLE DE DISPOSITIF

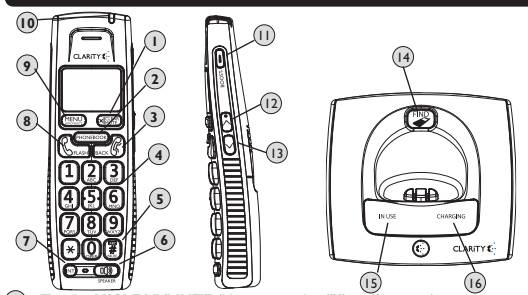

- 1 Touche X/CLEAR/MUTE (Mise en sourdine/Effacer/Supprime): (Avant de composer/Mode Édition): Appuyez à une reprise pour supprimer un caractère ou un chiffre. Appuyez et maintenez la touche enfoncée pour supprimer tous les caractères/chiffres.
2 Touche PHONEBOOK (Répertoire): Appuyez sur cette touche pour accéder au répertoire.
3 Touche (Off)/BACK (Fin d'appel/Retour): Appuyez pour mettre fin à un appel.
4 Clavier de numérotation/alphanumérique: Saisissez le numéro que vous souhaitez appeler ou les lettres d'un nom à ajouter au répertoire.
5 Touche #/PAUSE/ABC/FORMAT:
6 Touche SPEAKER (Haut-parleur): Appuyez sur la touche Speaker (Haut-parleur) pour activer la fonction haut-parleur; appuyez de nouveau pour la désactiver.
7 INT. (Interphone): Cette fonction n'est disponible que lorsque vous disposez de 2 combinés enregistrés ou plus. Elle vous permet d'effectuer des appels internes, de transférer des appels externes d'un combiné à l'autre et d'utiliser l'option Conférence.
8 Touche (Appel/Commuteur)/FLASH: Appuyez pour effectuer un appel, répondre à un appel entrant ou activer les fonctions d'appel en attente et d'identification de l'appelant (fournies par votre compagnie de téléphone locale).
9 MENU/HOLD/SELECT (Menu/Sélection): Appuyez pour accéder aux éléments du menu et confirmer/enregistrer les paramètres du menu.
10 Lumière supérieure: La lumière supérieure clignotera au moment de recevoir un appel entrant; il s'allumera en continu lorsque vous effectuez un appel et que l'amplificateur (BOOST) est activé.

ICÔNES

 ÉCRAN PRINCIPAL du combiné

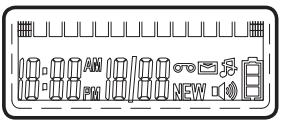

- Haut-parleur est activé.
Répondeur est activé; l'icône clignote un nouveau message.
Un nouvel appel a été reçu. Disparaît lorsque le nouvel appel a été affiché.
Nouvel appel vocal a été enregistré et qu'il n'a pas encore été écouté.
Indique le niveau de charge de votre pile. Si le niveau est bas et qu'il est temps de la charger.

LISTE ET VUE D'ENSEMBLE DE DISPOSITIF

- 11 BOOST (ON/OFF) (Activation/Désactivation de l'amplificateur): Appuyez sur l'amplificateur (BOOST) pour activer la fonction d'amplification supplémentaire.
12 Défilement vers le haut/Volume +/Liste d'appels:
13 Défilement vers le bas/Volume -/Liste de reconstitution:
14 FIND (Repérer): Appuyez pour repérer/appeler tous les combinés enregistrés.
15 La lumière IN USE (En cours d'utilisation) (vert):
16 La lumière CHARGING (Chargement) (rouge):

COMBINÉS SUPPLÉMENTAIRES

Enregistrement de combinés supplémentaires
Le combiné d'origine est préenregistré pour un usage immédiat. Jusqu'à 5 combinés peuvent être enregistrés par station de base.
Désenregistrer tous les combinés
1. Débranchez la source d'alimentation de la base.
2. Appuyez sur le bouton FIND (Repérer) de la base pendant 10 secondes.
3. Rebranchez la source d'alimentation de la base.
4. Relâchez le bouton FIND; la lumière IN USE se met à clignoter rapidement.
5. Dans les 2 secondes suivantes, appuyez et relâchez de nouveau le bouton FIND de la base.

RÉTABLIR LES PARAMÈTRES

Rétablir tous les paramètres
Remarque: Toutes les entrées du répertoire, de la liste de reconstitution et de la liste d'appels seront effacées.
1. Appuyez sur la touche MENU et utilisez les boutons HAUT/BAS pour sélectionner Rétablir les paramètres.
2. Appuyez ensuite sur la touche MENU et utilisez les boutons HAUT/BAS pour sélectionner Tous les paramètres.
3. Appuyez sur la touche MENU pour sélectionner Oui.

OPTIONS DE MENU

Le D603 comporte cinq principales options de menu: Date et heure, Répertoire, Config combiné, Config. base et Rétablir param.
Pour naviguer dans le menu:
1. Appuyez sur la touche MENU;
2. Appuyez sur les flèches vers le HAUT/BAS pour parcourir le menu;
3. Appuyez sur la touche MENU pour ouvrir un sous-menu ou sélectionner une option.
Remarque: Si vous n'appuyez sur aucune touche du combiné pour plus de 30 secondes, l'écran passe automatiquement au mode Attente.
Configuration de base (Menu principal)
Rétablir param (Menu principal)

OPÉRATIONS D'IDENTIFICATION DE L'APPELANT

Il s'agit d'un service offert par votre compagnie de téléphone locale. Le D603 affichera automatiquement le nom et le numéro de l'appelant, ainsi que la date et l'heure de l'appel.
Remarque: L'heure et la date se régleront automatiquement lors de votre premier appel.
Liste d'appels (ID appelant)
Remarque: Lorsque la liste d'appels est pleine, un appel récent remplace le plus ancien message dans la liste.
Afficher l'identification de l'appelant
Remarque: Vous pouvez enregistrer dans le répertoire jusqu'à 30 noms et numéros.
Enregistrer un numéro de la liste d'appel dans le répertoire
1. Utilisez les boutons HAUT/BAS pour accéder à l'ID de l'appelant que vous souhaitez enregistrer.
2. Appuyez sur la touche MENU et saisissez le nom à l'aide du clavier de numérotation.
3. Appuyez sur la touche MENU de nouveau pour modifier le numéro.
4. Appuyez sur la touche MENU et utilisez les boutons HAUT/BAS pour sélectionner la sonnerie désirée.
5. Appuyez sur la touche MENU pour enregistrer l'entrée dans le répertoire.
Remarque: Vous pouvez enregistrer dans le répertoire jusqu'à 30 noms et numéros.
Supprimer une entrée de la liste d'appels
1. Appuyez sur le bouton HAUT pour accéder à la liste d'appels.
2. Appuyez sur les boutons HAUT/BAS pour sélectionner l'entrée désirée.
3. Appuyez sur la touche CLEAR/DELETE (Effacer/Supprimer) pour supprimer votre entrée.
Supprimer toute la liste d'appels
1. Appuyez sur le bouton HAUT pour accéder à la liste d'appels.
2. Appuyez sur la touche CLEAR/DELETE (Effacer/Supprimer) et maintenez-la enfoncée jusqu'à ce que le message (Supprimer toutes les entrées du journal des appels) s'affiche.
3. Appuyez sur la touche MENU pour confirmer et supprimer toutes les entrées.

FONCTION DE POUSSÉE AMPLIFIEZ LES BRUITS ENTRANTS

Fonction d'amplification (Boost) - Amplification des sons d'entrée
1. Lors d'un appel, appuyez sur le bouton BOOST pour activer l'amplificateur.
2. Au cours d'un appel, appuyez sur les flèches vers le HAUT/BAS pour régler le volume de l'oreillette ou du haut-parleur au niveau désiré.
Avertissement: le niveau sonore peut être très élevé.

OPTIONS DE MENU

Date et heure (Menu principal)
Le sous-menu vous permet de saisir manuellement l'année, la date et l'heure.
Répertoire (Menu principal)
Les paramètres du sous-menu vous donnent accès aux options suivantes:
Afficher;
Ajouter;
Modifier;
Supprimer;
Supprimer tout;
Vérifier capacité du répertoire;
Configurer la composition abrégée pour les touches 1 à 9.
Configuration de combiné (Menu principal)
Les paramètres du sous-menu vous permettent de personnaliser les réglages du combiné:
Sonnerie (paramètres 1 à 3);
Volume sonnerie (Vol. 1 à 5)/Désactivé;
Tonalité touches (Activé/Désactivé);
Tonalité décharge pile (Activé/Désactivé);
Tonalité hors portée (Activé/Désactivé);
Nom combiné;
Langue (English/Français/Español).

