

CS6529 CS6529-2
 CS6529-14 CS6529-25
 CS6529-15 CS6529-26
 CS6529-16 CS6529-3
 CS6529-17 CS6529-4
 CS6529-19 CS6529-4B
 CS6529-5



Scan the QR code for support information

 


vtech

Abridged user's manual

WHAT'S IN THE BOX


Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.



- 1 set for CS6529-2/CS6529-25/CS6529-26 | 2 sets for CS6529-2/CS6529-25/CS6529-26 | 3 sets for CS6529-3 | 4 sets for CS6529-4/CS6529-4B | 5 sets for CS6529-5
- 1 set for CS6529-14/CS6529-15/CS6529-16/CS6529-17/CS6529-19 | 2 sets for CS6529-2/CS6529-25/CS6529-26 | 3 sets for CS6529-3 | 4 sets for CS6529-4/CS6529-4B | 5 sets for CS6529-5
- 1 set for CS6529-2/CS6529-25/CS6529-26 | 2 sets for CS6529-2/CS6529-25/CS6529-26 | 3 sets for CS6529-3 | 4 sets for CS6529-4/CS6529-4B | 5 sets for CS6529-5


INSTALL AND CONNECT | MOUNT (OPTIONAL)

Install the battery

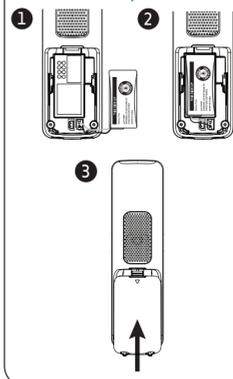


Connect and charge

Connect the telephone base. If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.

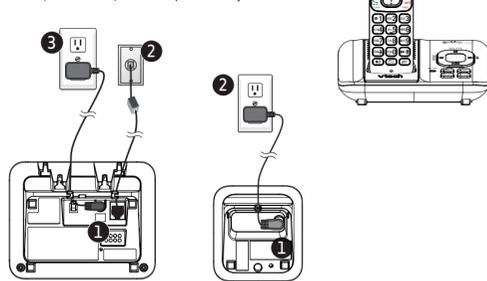

Mount (optional)

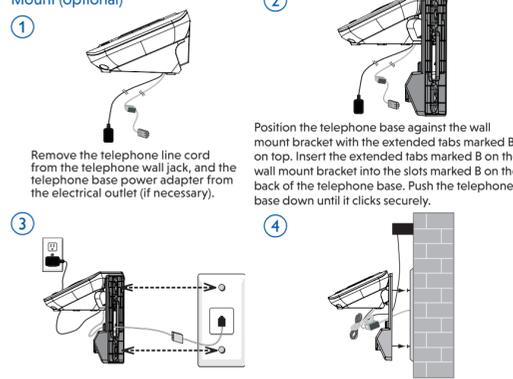

IMPORTANT SAFETY INSTRUCTIONS

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
 - Read and understand all instructions.
 - Follow all warnings and instructions marked on the product.
 - Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
 - CAUTION:** Do not install the telephone base at a height above 2 meters.
 - Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
 - Do not place this product on an unstable table, shelf, stand or other unstable surface.
 - Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
 - Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
 - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
 - Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
 - Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
 - To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
 - Do not overload wall outlets and extension cords.
 - Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Only put the handset of your telephone next to your ear when it is in normal talk mode.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries for the handset. Do not dispose of batteries in a fire. They may explode. Disposed of used batteries according to the instruction.
 - Do not use the battery in following conditions:
 - High or low extreme temperature during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
- Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- The angled nameplate is located at the bottom or rear of the product.

SAVE THESE INSTRUCTIONS

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call 1 (800) 247-337.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released

electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.

- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers
 Cardiac pacemakers (applies only to digital cordless telephones):

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES


- Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.

Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.

- Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.


OVERVIEW

Telephone base

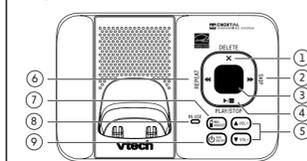

- X/DELETE**
 - Press to delete the message currently playing.
 - When the phone is not in use, press twice to delete all previously reviewed messages.
- SKIP**
 - Press to skip to the next message.
- Message window**
 - Shows the number of messages, and other information of the answering system or telephone base.
- PLAY/STOP**
 - Press to play messages.
 - Press to stop message playback.
- VOL+ / VOL-**
 - Press to adjust the volume during message playback.
 - When the phone is not in use, press to adjust the telephone base ringer volume.
- REPEAT**
 - Press to repeat the playing message.
 - Press twice to play the previous message.
- FIND HANDSET**
 - Page all system handsets.
- IN USE light**
 - Steady on in red when the line is in use or when a flashing is being registered.
 - Flashes in red when there is an incoming call or when handsets are being deregistered.
 - Refer to the **Bluetooth** section for the **IN USE** light indications when pairing and using a Bluetooth headset.
- ANS ON/OFF**
 - Press to turn the answering system on or off.

Handset

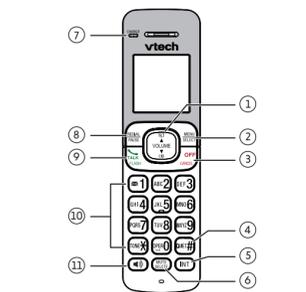

- VOLUME**
 - Review the directory when the phone is not in use.
 - Scroll up while in a menu, or in the directory, caller ID log or redial list.
 - Move the cursor to the right when entering numbers or names.
 - Increase the listening volume during a call or message playback.
- MENU/SELECT**
 - Show the menu.
 - While in a menu, press to select an item, or save an entry or setting.
- OFF/CANCEL**
 - Hang up a call.
 - Return to the previous menu.
 - Press and hold to exit menu display without making changes.
 - Delete digits while predialing.
 - Silence the handset ringer temporarily while the phone is ringing.
 - Press and hold to erase the missed call indicator while the handset is not in use.

- QUIET #**
 - Press and hold to turn on or off the quiet mode.
 - Press repeatedly to show other dialing options when reviewing a caller ID log entry.
- INT**
 - Press to start an intercom conversation or transfer a call (for multi-handset models only).
- MUTE/DELETE**
 - Mute the microphone during a call.
 - Silence the handset ringer temporarily while the phone is ringing.
 - Delete the displayed entry while reviewing the directory, caller ID log, or redial list.
 - Delete digits or characters when entering numbers or names.
- CHARGE light**
 - On when the handset is charging.
- REDIAL/PAUSE**
 - Review the last 10 numbers dialed.
 - Press and hold to insert a dialing pause while dialing or entering numbers into the directory.
- TALK/FLASH**
 - Make or answer a call.
 - Answer an incoming call when you receive a call waiting alert.
- Dialing keys**
 - Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.
 - Press and hold to set or dial your voicemail number.
 - Switch to tone dialing temporarily during a call.
 - Press to add a space when entering names.
- MUTE**
 - Make or answer a call using the handset speakerphone.
 - During a call, press to switch between the speakerphone and the handset earpiece.

Display icons

	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
	The handset ringer is turned off.
	There are new voicemail received from your telephone service provider.
NEW	The entry you are reviewing is new in the caller ID log.
ANS ON	The answering system is turned on.
	The message number currently playing and the total number of messages.

Use the handset menu

- Press **MENU** when the phone is not in use.
 - Press **▼** or **▲** until the screen displays the desired feature menu.
 - Press **SELECT**.
 - Press **CANCEL** to return to the previous menu.
 - Press and hold **CANCEL** to exit completely.
- Make a call**
- Press **TALK** or **OFF**, and then dial the telephone number.
- Answer a call**
- Press **TALK** or any dialing keys.
- End a call**
- Press **OFF** or put the handset back in the telephone base or charger.

Speakerphone

- During a call, press **MUTE** on the handset to switch between speakerphone and handset earpiece.

Volume

- During a call, press **▲**/VOLUME/**▼** to adjust the listening volume.

Mute

The mute function allows you to hear the other party to another other party cannot hear you.

- During a call, press **MUTE**. The handset displays **Muted**.
- Press **MUTE** again to resume the conversation. The handset displays **Microphone ON** briefly.

Join a call in progress (for two-handset models only)

You can use up to two handsets at a time on an outside call.

- When a handset is already on a call, press **TALK** or **OFF** on another handset to join the call.
- To exit the call, press **OFF** on the handset or place it in the telephone base or charger. The call continues until all handsets hang up.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call.

- Press **FLASH** to put the current call on hold and take the new call.
- Press **FLASH** at any time to switch back and forth between calls.

SETUP

After the telephone is installed or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time.

Date and time

When the handset prompts, follow the steps below to set the date and time.

- Use the dialing keys **(0-9)** to enter the month and year (MM), date (DD) and year (YY). Then press **SELECT**.
- Use the dialing keys **(0-9)** to enter the hour (HH) and minute (MM). Then press **▼** or **▲** to choose AM or PM.
- Press **SELECT** to save.

NOTE: If you have skipped the prompt, you can set up again by pressing **MENU**. Scroll to choose **Set date/time** and press **SELECT**. Then, follow the steps above.

Change LCD language settings

You can select English, French, or Spanish to be used in all screen displays:

- Press **MENU** when the handset is not in use.
- Press **▼** or **▲** to scroll to **Settings** and then press **SELECT**.
- Press **SELECT** to choose **LCD language**.
- Press **▼** or **▲** to choose **English, Français, or Español**, and then press **SELECT** twice to save.

NOTE: If you accidentally set the LCD language to Spanish or French, press **MENU** and then enter ***364#** to change the handset LCD language back to English while the handset is not in use.

Find handset

Use this feature to find the system handset.

To start paging:

- Press **FIND HANDSET** on the telephone base when not in use. All idle handsets ring and display "Paging".

To end paging:

- Press **FIND HANDSET** at the telephone base.
- Press **TALK**, **OFF** or any dialing keys on the handset.
- Place the handset in the telephone base or charger.

NOTE: Do not press and hold **FIND HS** for more than 4 seconds. It may lead to handset deregistration.

BLUETOOTH®

Your telephone system is enhanced with Bluetooth feature. You can pair a Bluetooth headset to your telephone system, try turning off the Bluetooth feature of the nearby devices that your Bluetooth headset has previously paired.

NOTES:

- Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device. If you have trouble pairing your Bluetooth headset to your telephone system, try turning off the Bluetooth feature of the nearby devices that your Bluetooth headset has previously paired.
- Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet) from the telephone base. Keep connected headset within this range.
- For more details about the Bluetooth feature, read the online Complete user's manual.

Pair and connect a Bluetooth headset

- Set your Bluetooth headset to pairing mode. Refer to your Bluetooth headset user's manual to learn how.
- Press **TALK** or **OFF** on the handset.
- Press and hold **FIND HANDSET** on the telephone base for 4 seconds.

Pair and connect a Bluetooth headset

The telephone then enters pairing mode.

- The **IN USE** LED flashes in purple and red alternately.
- To cancel pairing, press **FIND HANDSET** on the telephone base.

- When successfully paired and connected to the Bluetooth headset, the **IN USE** LED becomes steady on in purple.
- Press **OFF** on the handset or place the handset in the telephone base or charger after pairing. The **IN USE** LED becomes steady on in blue.

Bluetooth headset connection status:

- Pairing** - while pairing to a Bluetooth headset, the **IN USE** LED flashes in purple and red alternately.
- Connected** - when successfully paired and connected to a Bluetooth headset, the **IN USE** LED becomes steady on in blue when the telephone is not in use.

NOTE: When there is an incoming call, you hear a ringing tone on your Bluetooth headset and the **IN USE** LED flashes in red. You can answer the incoming call with your Bluetooth headset.

- Bluetooth headset in use** - when the connected Bluetooth headset is in use, the **IN USE** LED flashes in purple and blue alternately.
- Both telephone and Bluetooth headset are in use** - when both the telephone and the connected Bluetooth headset are in use, the **IN USE** LED becomes steady on in purple.
- No connection** - the **IN USE** LED turns off.

Remove paired Bluetooth headset

- Press **TALK** or **OFF** on the handset.
- Press and hold **FIND HANDSET** on the telephone base for 4 seconds. The paired Bluetooth headset will be removed.

NOTES:

- You can use your connected Bluetooth headset to answer calls or end the call.
- If you fail to connect your Bluetooth headset to the telephone, re-try the pairing steps above.
- To pair another Bluetooth headset to the telephone, perform the pairing steps above and the current paired headset will be replaced by the new Bluetooth headset.
- While on a call using your Bluetooth headset, keep your headset closer to the telephone base (within 15 feet) and make sure that there are no physical obstacles such as large furniture or thick wall in between.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, Vtech Holdings Limited, is under license. Vtech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

CS6529-X-RT-H55V95SD-B566VSD-US-CA-ACIB-VL.231214

© 2023 Vtech Communications, Inc. All rights reserved. 22.72.127.1214

Specifications are subject to change without notice.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, Vtech Holdings Limited, is under license. Vtech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Go to www.vtechphones.com (US) to register your product for enhanced warranty support and latest Vtech product news.

Go to phones.vtechcanada.com (Canada) for the latest Vtech product news.

REDIAL LIST

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

Review and dial a redial list entry

- Press **REDIAL** when the handset is not in use.
- Press **▼**, **▲** or **REDIAL** repeatedly until the desired entry displays.
- Press **TALK** or **OFF** to dial.

Delete a redial list entry

- When the desired redial entry displays, press **DELETE**.

TRANSFER A CALL

While on an outside call, you can transfer the call from one handset to another.

- Press **MENU** on your handset during a call.
- Press **▼** or **▲** to scroll to **Transfer**, and then press **SELECT**.
- If you have three or more handsets, use the dialing keys to enter a destination handset number.
- To answer the intercom call, press **TALK**, **OFF** or any dialing key on the destination handset.

INTERCOM

Use the intercom features for conversations between two handsets.

- Press **INT** on your handset when not in use. If you have three or more handsets, use the dialing keys to enter a destination handset number.
- To answer the intercom call on the destination handset, press **TALK**, **INT** or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
- From this intercom call, you have the following options:
 - You can let the destination handset join you on the outside call in a three-way conversation. Press and hold **INT** on the originating handset.
 - You can transfer the call. Press **OFF**, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.
 - You can press **INT** to switch between the outside call (Outside call displays) and the intercom call (Intercom displays).
 - The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

Answer an incoming call during an intercom call

If you receive an incoming call during an intercom call, there is an alert tone.

- To answer the outside call, press **TALK**. The intercom call ends automatically.
- To end the intercom call without answering the outside call, press **OFF**. The telephone continues to ring.

Call transfer using intercom

While on an outside call, you can use the intercom feature to transfer the call from one handset to another.

- Press **INT** on your handset during a call. The current call is put on hold.

- If you have three or more handsets, use the dialing keys to enter a destination handset number.
- To answer the intercom call on the destination handset, press **TALK**, **INT** or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
- From this intercom call, you have the following options:
 - You can let the destination handset join you on the outside call in a three-way conversation. Press and hold **INT** on the originating handset.
 - You can transfer the call. Press **OFF**, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.
 - You can press **INT** to switch between the outside call (Outside call displays) and the intercom call (Intercom displays).
 - The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

DIRECTORY

The directory can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a directory entry

- Enter the number when the phone is not in use. Press **MENU**, then go to Step 3.
 - OR-** Press **MENU** when the phone is not in use. Scroll to **Directory** and then press **SELECT**. Press **SELECT** again to choose **Add contact**.
- Use the dialing keys to enter the number.
 - OR-** Copy a number from the redial list by pressing **REDIAL** and then press **▼**, **▲** or **REDIAL** repeatedly to select a number. Press **SELECT** to copy the number.
- Press **SELECT** to move on to enter the name.
- Use the dialing keys to enter the name. Additional key presses show other characters of that particular key.
- Press **SELECT** to save.

While entering names and numbers, you can:

- Press **DELETE** to backspace and erase a digit or character.
- Press and hold **DELETE** to erase the entire entry.

- Press **▼** or **▲** to move the cursor to the left or right.
- Press and hold **PAUSE** to insert a dialing pause (for entering numbers only).
- Press **0** to add a space (for entering names only).

Review a directory entry

Entries are sorted alphabetically.

- Press **REDIAL** when the phone is not in use.
- Scroll to browse through the directory, or use the dialing keys to start a name search.

-OR-

- Press **MENU** when the phone is not in use.
- Scroll to **Directory**, and then press **SELECT**.
- Scroll to **Review**, and then press **SELECT**.
- Scroll to browse through the directory.

Delete a directory entry

- When the desired entry displays, press **DELETE**.
- When the handset displays **Delete contact?**, press **SELECT**.
- Press **SELECT** to save.

Edit a directory entry

- Search for or review the directory entries (see **Review a directory entry**).
- When the desired entry displays, press **SELECT**.
- Use the dialing keys to edit the number, then press **SELECT**.

- Use the dialing keys to edit the name, then press **SELECT**.

Dial a directory entry

- Search for or review the directory entries (see **Review a directory entry**).
- When the desired entry appears, press **TALK** or **OFF** to dial.

SPEED DIAL

You can copy up to 9 directory entries into the speed dial locations **(0 and 2-9)** so that you can dial these numbers using fewer keys than usual.

The speed dial memory locations are stored in the telephone base and are shared by all handsets. Changes made to the speed dial entries on one handset apply to all.

Assign a speed dial entry

- Press **MENU** when the phone is not in use.
- Scroll to **Directory**, and then press **SELECT**.
- Scroll to **Speed dial**, and then press **SELECT**.
- Press **▼** or **▲** or the dialing keys **(0 or 2-9)** to choose the desired speed dial location.
- Press **SELECT**. The screen displays **Copy from DIR...** and then the first entry in the directory.
- Scroll to browse to the desired entry.

-OR-

Use the alphabetical search to find the desired entry.

- Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters) appears in the selected speed dial location.

NOTES:

- If the directory is empty, when you press **SELECT** in Step 5, the screen displays **Directory empty**.
- If the speed dial location you selected is occupied, the new directory entry you selected replaces the old one. Take caution not to replace entries you do not wish to delete from the speed dial locations.

Reassign a speed dial entry

- Press **MENU** when the phone is not in use.
- Scroll to **Directory**, and then press **SELECT**.
- Scroll to **Speed dial**, and then press **SELECT**.
- Press **▼** or **▲** or the dialing keys **(0 or 2-9)** to choose the desired speed dial location, then press **DELETE**. The screen displays **Clear SD #X?**
- Press **SELECT** to confirm. You hear a confirmation tone.

NOTE: Deleting the speed dial entries does not affect the entries in the directory.

Use the alphabetical search to find the desired entry.

- Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters) appears in the selected speed dial location.

Dial a speed dial number

- Press and hold a dialing key **(0 or 2-9)** to dial the number stored in the corresponding speed dial location.

When the speed dial location is empty, the screen displays the speed dial list. See **Assign a speed dial entry** to add a new entry.

Delete a speed dial entry

- Press **MENU** when the phone is not in use.
- Scroll to **Directory**, and then press **SELECT**.
- Scroll to **Speed dial**, and then press **SELECT**.
- Press **▼** or **▲** or the dialing keys **(0 or 2-9)** to choose the desired speed dial location, then press **DELETE**. The screen displays **Clear SD #X?**
- Press **SELECT** to confirm. You hear a confirmation tone.

NOTE: Deleting the speed dial entries does not affect the entries in the directory.

