



User Guide

BT914 Amplified Big Button Cordless Phone with Bluetooth Connectivity



IMPORTANT SAFETY INSTRUCTIONS

Congratulations on purchasing your new Clarity product. Before using this telephone, please read **Important Safety Instructions**.

WARNINGS: PRIVACY OF COMMUNICATIONS MAY NOT BE ENSURED WHEN USING THIS PHONE.

To maintain the compliance with the FCC's RF exposure guideline, place the base unit at least 20 cm from nearby persons. To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the telephone.
3. Avoid contact with liquids. Do not locate base unit or handset near water, for example, near a bathtub, wash basin, sink or laundry tub, in a wet basement or near a swimming pool.
4. Avoid using a telephone (other than a cordless type) during a storm. There may be a remote risk of electrical shock from lightning.
5. Do not use the telephone to report a gas leak in the vicinity of the leak.

IMPORTANT SAFETY INSTRUCTIONS

6. Unplug this telephone from the wall outlets before cleaning. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.
7. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
8. Do not cover the slots and openings on this telephone. This telephone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
9. Operate this telephone using the electrical voltage as stated on the base unit or the owner's manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
10. Do not allow anything to rest on the power cord or locate this product in an area where the power cord is likely to be damaged by furniture or foot traffic.
11. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
12. Never push any objects through the slots in the telephone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the telephone.

IMPORTANT SAFETY INSTRUCTIONS

13. To reduce the risk of electrical shock, do not take this phone apart. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
14. Unplug this product from the wall outlet and refer servicing to the manufacturer under the following conditions: when the power supply cord or plug is frayed or damaged; if liquid has been spilled into the product; if the telephone has been exposed to rain or water; if the telephone has been dropped or the case has been damaged; if the telephone exhibits a distinct change in performance; if the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician to restore the telephone to normal operation; if the telephone does not operate normally by following the operating instructions.
15. Never install telephone wiring during a lightning storm.
16. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
17. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

IMPORTANT SAFETY INSTRUCTIONS

18. Use caution when installing or modifying telephone lines.
19. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your local power company.
20. Do not attempt to open the AC adapter. There are potentially dangerous voltages inside, and there are no serviceable parts.
21. Discontinue use of product and contact Clarity if the product overheats, has a damaged cord or plug, if the product has been dropped or damaged or if the product has come into contact with liquids.
22. Use only the AC adapter provided with this product or a replacement AC adapter provided by Clarity.
23. This phone amplifies sound to loud volumes. To prevent hearing damage, all users of the phone should be informed of the high volume capability of the phone and children should only use the phone when supervised by an adult.
24. Exposure to high volume sound levels or excessive sound pressure may cause temporary or permanent damage to your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your telephone with the volume set at moderate levels

IMPORTANT SAFETY INSTRUCTIONS

and avoid prolonged exposure to high volume sound levels. The louder the volume, the less time is required before your hearing could be affected. If you experience hearing discomfort, you should have your hearing checked by a doctor. To protect your hearing, you should:

- A) Set the volume control in a low position and gradually increase the volume as needed. Before pressing the BOOST button, reduce the volume to the lowest level. Use the phone on the lowest volume setting as possible.
 - B) Limit the amount of time you use the telephone at high volume levels.
25. If you experience a skin irritation after using this product, discontinue use and contact Clarity.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

BATTERY SAFETY INSTRUCTIONS

WARNING: Dispose of used batteries according to the instructions.

1. Do not dispose of the battery in a fire as it may explode. Check with local codes for possible special disposal instructions.
2. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
3. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conduction material may over-heat and cause burns.
4. Remove batteries when they are discharged and when the equipment will not be used for an extended period of time. Dispose of batteries according to local environmental laws.
5. Do not disassemble, heat, crush, deform or puncture batteries.
6. Do not attempt to charge non-rechargeable batteries.
7. Keep batteries out of the reach of children.

PACKAGING CONTENTS LOCATION

Package contains the following items:

- Answering Machine base station
- AC power adapter for Answering Machine base station
- Telephone line cord for Answering Machine base station
- Cordless Handset
- (2) Rechargeable batteries for cordless handset
- User Manual
- Warranty/FCC Requirements booklet

Installation Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- Place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- Place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- Avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- Avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.


CONNECTING THE BASE

If the reception for a base unit location is not satisfactory, move it to another location for better reception. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

CONNECTING THE ANSWERING MACHINE BASE STATION

- 1 – Plug the telephone line into the jack located on the back of the base station. Plug the other end of the telephone line into a phone wall outlet.
- 2 – Plug the power supply cord into the jack located on the back of the base station. Plug the other end of power supply line cord into an electrical outlet.

Always use the cables provided in the box.

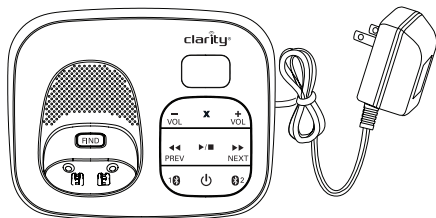

CONNECTING THE BASE


WARNINGS: Use only the power adapter provided for the base station.

Always use the cables provided in the box, others may not be compatible.

NOTE: The base unit needs mains power for normal operation, and the cordless handset will not work without it.

- Use only the power adapters supplied with this product.
- Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see Bluetooth), and use the cell line alone without plugging in a telephone line cord.
- If you subscribe to telephone service from a cable company or a VoIP service provider, contact your cable/VoIP service provider for more information.

INSTALLING THE BATTERIES

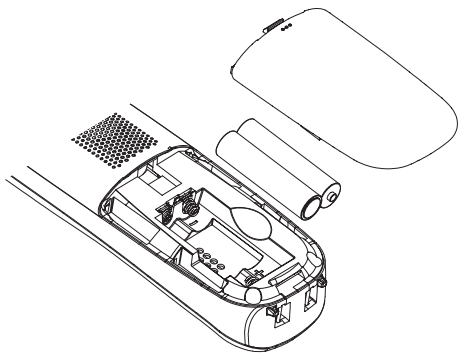

Note:

- Use only the batteries provided or equivalent.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.
- To purchase replacement batteries, go to any store that sells batteries: **NiMH AAA 1.2V 500mAh.**

Charge the batteries

Once you have installed the batteries, the screen indicates the battery status.

Note:

- For best performance, keep the handset in the telephone base or charger when not in use.
- The batteries are fully charged after 12 hours of continuous charging.

BATTERY DETAILS

Battery indicators	Battery status	Action
The screen is blank, or shows Put in charger and the battery symbol flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes)
The screen shows Low Battery and the battery symbol flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes)
The screen shows Handset X .	The battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

Note: If you place the handset in the telephone base or charger without inserting the batteries, the screen displays No battery.

BATTERY DETAILS

When it is fully charged, you can expect the following performance:

Operations	Operating Time
While in handset use (talking*)	Seven hours
While in speakerphone mode (talking*)	Three hours
While not in use (stand-by**)	Five days

*Operating times vary depending on your actual use and the age of the battery

**Handset is not charging or in use.

IMPORTANT:

- Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

BEFORE USE

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time, and the answering system through voice guide.

If you choose to set up the date and time, and the answering system at a later stage, you can do it manually.

Set date and time

1. Use the dialing keys (0-9) to enter the month, date, and year, and then press **SELECT**.
2. Use the dialing keys (0-9) to enter the hour and minute.
3. Press the **UP** or **DOWN** arrow keys to choose AM or PM, and then press **SELECT** to save.
 - To skip setting, press the **Red phone** button.

After the setting for the date and time, the handset will display **Voice guide to...** and set up **Ans sys?** alternatively.

Set answering system through voice guide

This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

BEFORE USE

1. Press **MENU** to start the voice guide for the answering system setup. You hear the voice prompt *“Hello! This voice guide will assist you with the basic setup of your answering system.”*
2. Setup your answering system by inputting the designated numbers as instructed in the voice guide.
 - To skip setting, press the Red phone button.

IMPORTANT:

Check for a dial tone by pressing **Green phone/Flash** button. If you hear a dial tone, the installation is successful.

If you do not hear a dial tone:

- Make sure the installation procedures described above are properly done.
- It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information.

Operating range


This cordless telephone operates with the maximum power allowed by the Federal Communications Commis-

BEFORE USE

sion (FCC). Even so, this handset and telephone base can communicate over only a certain distance- which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office. When the handset is out of range, the handset displays Out of range or and no pwr at base alternately.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press the **Green phone/Flash** button or **Cell phone** button. Move closer to the telephone base, and then press the **Green phone/Flash** button or **Cell phone** button to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

GETTING TO KNOW YOUR HANDSET

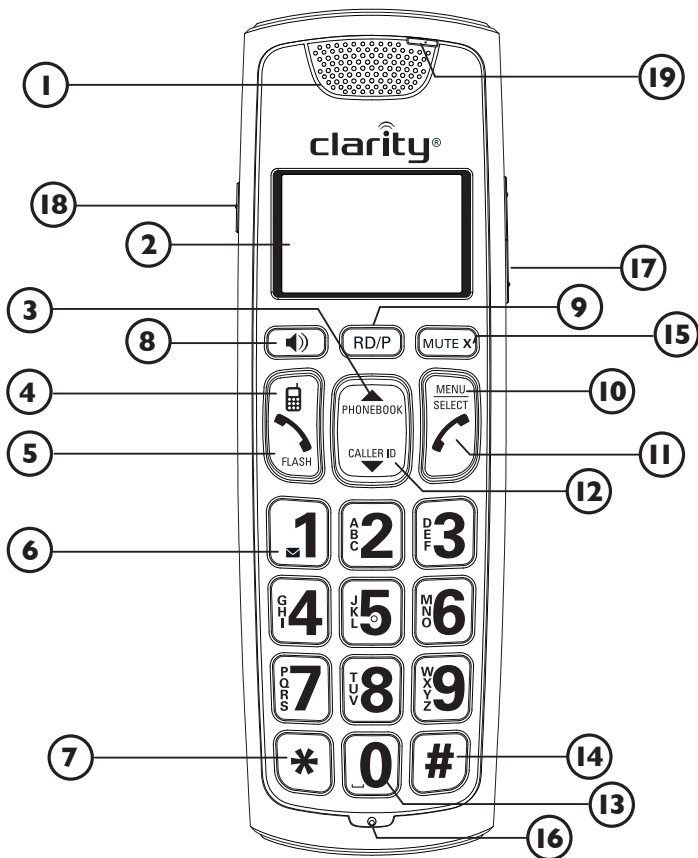

GETTING TO KNOW YOUR HANDSET

1	Handset earpiece
2	LCD Display
3	UP Arrow key/Phonebook <ul style="list-style-type: none">• Review the phone book when the phone is not in use.• Increase the listening volume during a call or message playback.• Scroll up while in a menu, or in the phonebook, caller ID log, or media list.• Move the cursor to the right when entering numbers or names.
4	Cell phone button <ul style="list-style-type: none">• Make or answer a cell call.• Answer an incoming cell call when you hear a call waiting alert.
5	Green Phone/Flash button <ul style="list-style-type: none">• Make or answer a home call.• Answer an incoming home call when you hear a call waiting alert.

GETTING TO KNOW YOUR HANDSET

6	I key/Voicemail <ul style="list-style-type: none">• Press repeatedly to add or remove “I” in front of the caller ID log entry before dialing or saving it to the phonebook.• Press and hold to set or dial your voicemail number.
7	*/Tone key <ul style="list-style-type: none">• While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.
8	Speakerphone button <ul style="list-style-type: none">• Make or answer a call using the handset speakerphone.• During a call, press to switch between the speakerphone and the handset.
9	Redial/Pause (RD/P) <ul style="list-style-type: none">• Press repeatedly to review the redial list.• Press and hold to insert a dialing pause while entering a number.
10	Menu/Select <ul style="list-style-type: none">• Show the menu.• While in a menu, press to select an item, or save an entry or setting.

GETTING TO KNOW YOUR HANDSET


11	Red Phone button <ul style="list-style-type: none">• Hang up a call.• Silence the ringer temporarily while the handset is ringing.• Press and hold to erase the missed call indicator while the phone is not in use.• Press to return to the previous menu, or press and hold to return to idle mode, without making changes.
12	Down Arrow key/CID <ul style="list-style-type: none">• Review the caller ID log when the phone is not in use.• Decrease the listening volume during a call or message playback.• Scroll DOWN while in a menu, or in the phonebook, caller ID log, or redial list.• Move the cursor to the left when entering numbers or names.
13	0 key <ul style="list-style-type: none">• Press to add a space when entering names.

GETTING TO KNOW YOUR HANDSET

14	# key <ul style="list-style-type: none">• Press repeatedly to show other dialing options when reviewing a caller ID log entry.
15	Mute/X <ul style="list-style-type: none">• Mute the microphone during a call.• Delete digits or characters while using the dialing keys.• Silence the ringer temporarily while the handset is ringing.
16	Microphone
17	Volume Up and Down Arrows <ul style="list-style-type: none">• These buttons can increase and decrease the volume during a call.
18	Boost Button <ul style="list-style-type: none">• This button gives a boost of volume. This button in conjunction with the Volume UP Arrow key, can make the phone amplified up to 40 db.
19	Visual Indicator <ul style="list-style-type: none">• This light will flash for an incoming call and will also be on during a call if Auto Boost activated.

Note: *Idle mode* is when the phone is on but it is not being used.

GETTING TO KNOW YOUR BASE

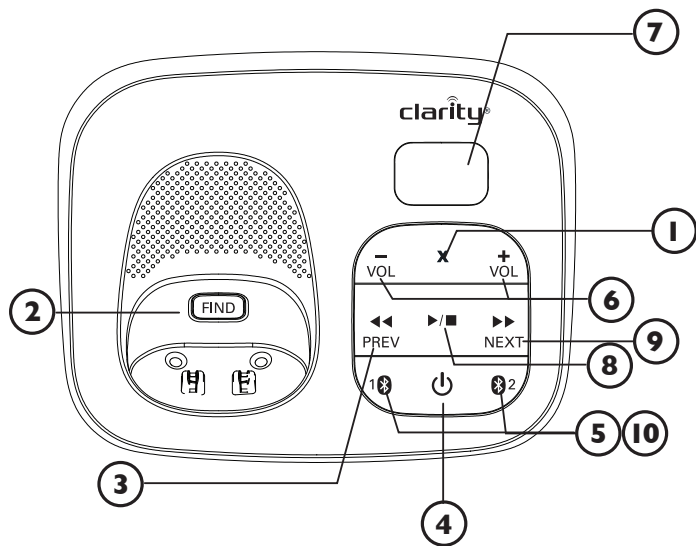

GETTING TO KNOW YOUR BASE

1	X <ul style="list-style-type: none">• Delete the playing message.• Press twice to delete all previously reviewed messages when the phone is not in use.
2	Find <ul style="list-style-type: none">• Press to page all system handsets.
3	Prev <ul style="list-style-type: none">• Press to repeat a message.• Press twice to play the previous message.
4	Power button <ul style="list-style-type: none">• Turn the answering system on or off
5	Bluetooth 1 and Bluetooth 2/Headset <ul style="list-style-type: none">• Press to connect the paired Bluetooth device.• Press and hold to add or replace a Bluetooth device.
6	<ul style="list-style-type: none">• -Vol/+Vol• Adjust the volume during message playback.• Adjust the telephone base ringer volume when the phone is not in use.

GETTING TO KNOW YOUR BASE

7	Message window <ul style="list-style-type: none">• Shows the number of messages, and other information of the answering system or telephone base.
8	Play/Stop <ul style="list-style-type: none">• Play messages.• Stop playing messages.
9	Next <ul style="list-style-type: none">• Skip to the next message.
10	Bluetooth 1 and Bluetooth 2/Headset Lights <ul style="list-style-type: none">• On when the telephone base is paired and connected with a Bluetooth device.• Flashes when the telephone base is in discoverable mode

About cordless telephones


• **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this

GETTING TO KNOW YOUR BASE

reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.

- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- **Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.

BLUETOOTH FUNCTIONS

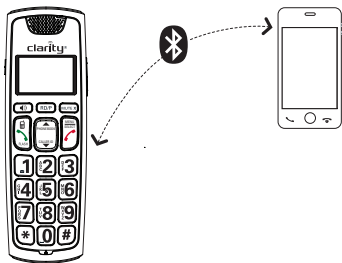

Pair and connect your Bluetooth enabled cell phone

To use a Bluetooth enabled cell phone with your BT914, you must first pair and connect your Bluetooth cell phone(s) with the telephone base. All BT914 handsets can be used to make or answer calls on the cell line. Your cell line is the telephone line associated with your cell phone service.

Bluetooth wireless technology operates within a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength. For optimal performance, keep your cell phone within 15 feet of the telephone base while using the cell line.

1. Choose a slot to pair the cell phone. Press and hold Bluetooth 1 or Bluetooth 2/Headset on the telephone base

BLUETOOTH FUNCTIONS

until you hear a confirmation tone, and the Bluetooth I or Bluetooth 2/Headset light flashes.

2. Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your Clarity Phone (Clarity BT914), press the appropriate key on your cell phone to continue the pairing process.
 - Your cell phone may prompt you to enter the PIN of the telephone base. The default PIN of the telephone base is **0000**.

When the cell phone is connected to the telephone base, the corresponding status icon (Bluetooth I or Bluetooth 2) displays. The corresponding device light (Bluetooth I or Bluetooth 2/Headset) turns on.

If the pairing fails, turn off the Bluetooth feature on your cell phone and on the BT914 by pressing Bluetooth I or Bluetooth 2/Headset. Then repeat the steps above to pair and connect again. In some cases, it may take you a few attempts to complete the pairing process.

Pair and connect your Bluetooth enabled headset

1. Press **MENU** on the phone when it is not in use.
2. Press the UP or DOWN arrow keys to scroll to **Bluetooth**, and then press **SELECT**.
3. Press the UP or DOWN arrow keys to scroll to **Add BT headset**, and then press **SELECT**. The screen displays

BLUETOOTH FUNCTIONS

Search headset...

4. Set your headset to discoverable mode. Once your handset finds your headset, press **SELECT**.
 - Enter the PIN of your headset if required. The PIN for most Bluetooth devices is 0000 (refer to the user's manual of your headset), and then press **SELECT**.

When the headset is successfully paired and connected to the telephone base, the Bluetooth 2 icon displays. The Bluetooth 2/Headset light turns on.

Download contacts from your Bluetooth cell phone

1. Press **MENU** when the phone is not in use.
2. Scroll to **Bluetooth**, and then press **SELECT**.
3. Scroll to **Download PB**, and then press **SELECT**.
4. Scroll to select the desired cell phone, and then press **SELECT**.

Note:

- For certain cell phones, you may need to press a key on your cell phone to confirm the phonebook downloaded.
- The performance of the phonebook download feature depends on the compatibility of your Bluetooth cell phone. Refer to the user's manual of your cell phone for more

BLUETOOTH FUNCTIONS

information about how that device uses Bluetooth connectivity.

- Certain cell phones do not support SIM card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first. Then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.
1. Press **MENU** when the phone is not in use.
 2. Press the UP or DOWN arrow keys until the screen displays the desired feature menu.
 3. Press **SELECT** to enter that menu.
- To return to the previous menu, press the **Red phone** button.
 - To return to the idle mode, press and hold the **Red phone** button.

HANDSET MENU

Telephone settings

Default settings are indicated by asterisks (*).

Settings menu	Description	Options
LCD language	Set the screen display language.	English*, Français, Español
Voicemail #	Save the speed dial voicemail number to key 1.	Voicemail # _
Clr voicemail	Turn off the voicemail indicators (see the note below).	N/A
Key tone	Turn an audible beep on or off whenever a key is pressed.	On* Off
Home area code	Enter your home area code if you dial only seven digits for local calls.	Home area code ---
Dial mode	Set the telephone to be touch-tone or pulse dialing.	Touch-tone* Pulse

HANDSET MENU

Equalizer	Set the best audio tone for your hearing needs.	Natural*, Treble1, Treble2, Bass
Auto Boost	Auto boost keeps the boost button activated at all times. This eliminates the need to press the “Boost” button for each call.	Off* On

Note:

Use the **Clr voicemail** feature when the telephone indicates there is a new voicemail but there is none. For example, when you have accessed your voicemail while away from home. The Clr voicemail feature only turns off the indicators; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal that turns on the indicators.

TELEPHONE OPERATIONS

The following are some of the telephone features you may wish to set.

Ringer volume (handset)

You can adjust the ringer volume level, or turn the ringer off.

1. Press **MENU** when the handset is not in use.
2. Scroll to **Ringers**, and then press **SELECT**.
3. Scroll to choose **Home volume** or **Cell volume**, and then press **SELECT**.
4. Press the **UP** or **DOWN** arrow keys to adjust the volume, and then press **SELECT** to save.

Note: if the handset ringer volume is set to off, that handset is silenced for all incoming calls except paging tone.

Ringer tone (handset)

You can choose from ten different ringer tones.

1. Press **MENU** when the handset is not in use.
2. Scroll to **Ringers**, and then press **SELECT**.
3. Scroll to choose **Home ringtone** or **Cell ringtone**, and then press **SELECT**.
4. Press the **UP** or **DOWN** arrow keys to sample each ringer tone, and then press **SELECT** to save.

Note: if you turn off the ringer volume, you will not hear ringer tone samples.

TELEPHONE OPERATIONS

Set date and time

If you subscribe to caller ID service, the day, month, and time are set automatically with each incoming call. You can also set the date and time manually.

1. Press **MENU** when the handset is not in use.
2. Scroll to **Set date/time**, and then press **SELECT**.
3. Use the dialing keys (0-9) to enter the month, date, and year, and then press **SELECT**.
4. Use the dialing keys (0-9) to enter the hour and minute.
5. Press the **UP** or **DOWN** arrow keys to choose **AM** or **PM**, and then press **SELECT** to save.

Make a home call

- Press the **Green Phone/Flash button** or the **Speakerphone** button, and then dial the telephone number.

Make a cell call

- Press the **Cell phone** button. Enter the telephone number and then press the **Cell phone** button to dial.
- OR-
- Enter the telephone number and then press the **Cell phone** button to dial.

TELEPHONE OPERATIONS

Note:

- After first pressing the **Cell phone** button, you may need to choose a cell device. Scroll to select the desired cell device when necessary, and then press **SELECT**.
- While using the cell line, place your cell phone closer to the telephone base, and make sure that there are no physical obstacles between the telephone base and the cell phone, such as large furniture or thick walls.

Answer a home/cell call

- Press the **Green Phone, Cell phone, speakerphone** button, or any dialing key.

End a home/cell call

- Press the **Red Phone** button, or put the handset to the telephone base or charger.

Speakerphone

- During a call, press the **Speakerphone** button to switch between speakerphone and normal handset use.

Volume

- During a call, press the **Volume UP** or **DOWN** arrow keys to adjust the listening volume for amplification of up to 40dB.

TELEPHONE OPERATIONS

Note:

The handset earpiece volume setting and speakerphone volume setting are independent.

Boost

- During a call, press the **Boost** button to give added amplification of the listening volume. The handset displays **Audio Boost**. Press the **Boost** button again to turn the Boost off.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

1. During a call, press **MUTE**. The handset displays **Muted**.
2. Press **MUTE** again to resume the conversation. The handset displays **Microphone on**.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

Call waiting on the home line:

- Press **FLASH** to put the current call on hold and take the new call.

TELEPHONE OPERATIONS

- Press **FLASH** to switch back and forth between calls.

Call waiting on the cell line:

- Press the **Cell phone** button to put the current call on hold and take the new call.
- Press the **Cell phone** button to switch back and forth between calls.

Temporary ringer silencing

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the present volume. The base will still ring unless you have turned the base ringer off.

- Press the **Red Phone** button or **MUTE** on the handset. The handset displays a bell with a line through it.

Note: The base will still ring even if you temporarily silence the handset. The base will not ring if you turned the base ringer off.

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to dialing temporarily during a call.

1. During a call, press *.
2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

TELEPHONE OPERATIONS

Find handset

Use this feature to find all system handsets.

To start paging:

- Press **FIND** on the telephone base. All idle handsets ring and display ****Paging****.

To end paging:

- Press **FIND** again on the telephone base.

-OR-

- Press the **Green Phone** button, **Cell phone** Button, **Speakerphone** button, **Red Phone** button, or any dialing key on the handset.

-OR-

- Place handset in the telephone base or charger.

Note:

Do not press and hold **FIND** for more than four seconds. It may lead to handset deregistration.

Redial list

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

To review and dial a number from the redial list:

1. Press **REDIAL** when the handset is not in use.

TELEPHONE OPERATIONS

2. Press the **UP** or **DOWN** arrow keys or **REDIAL** repeatedly until the desired entry displays.
3. Press the **Green phone** button, **Cell phone** button or **Speakerphone** button to dial.

To delete a redial entry:

When the desired redial entry displays, press **MUTE X**.

Join a call in progress

You can use up to two system handsets at a time on a home line call. You can buy additional extension handsets (BT914HS) for this telephone base. You can register up to five handsets to the telephone base.

- When a handset is on a home call, press the **Green phone** button or **Speakerphone** button on another handset to join the call.
- Press the **Red phone** button to exit the call. The call continues until all handsets hang up.

Intercom

Use the intercom feature for conversations between two devices.

1. Press **MENU** on your handset when not in use.
2. Press the **UP** or **DOWN** arrow keys to scroll to Intercom, and then press **SELECT**. Use the dialing keys to enter a destination device number.

TELEPHONE OPERATIONS

3. To answer the intercom call, press the **Green phone** button, **Cell phone** button, **Speakerphone** button or any dialing key on the destination handset.
4. To end the intercom call, press the **Red phone** button or place the handset back in the telephone base or charger.

Transfer a call

While on an outside call, you can use the intercom feature to transfer the call from one handset to another.

1. Press **MENU** on your handset during a call.
2. Press the **UP** or **DOWN** arrow keys to scroll to Intercom, and then press **SELECT**. The current call is put on hold. Use the dialing keys to enter a destination device number.
3. To answer the intercom call, press the **Green phone** button, **Cell phone** button, **Speakerphone** button, or any dialing key on the destination handset. You can now have a private conversation before transferring the call.
4. To transfer the call, press the **Red phone** button on the initiating handset or place the initiating handset back in the telephone base or charger.
5. To end the call, press the **Red phone** button on the destination handset or place the destination handset back in the telephone base or charger.

TELEPHONE OPERATIONS

Answer an incoming call during an intercom call

If you receive an incoming call during an intercom call, there is an alert tone.

- To answer a home call, press the **Green phone** button. The intercom call ends automatically.
- To end the intercom call without answering the outside call, press the **Red phone** button. The intercom call ends and the telephone continues to ring.
- To answer a cell call, press the **Red phone** button to end the intercom call. The telephone continues to ring. Then press the **Cell phone** button.

Phonebook

The phonebook can store up to 100 entries and are shared by all system handsets.

To add a phonebook entry:

1. Press **MENU** when the phone is not in use.
2. Scroll to **Phonebook** and then press **SELECT**.
3. Press **SELECT** again to choose Add new entry.
4. Enter the number.
 - Use the dialing keys to enter the number (up to 30 digits).
5. Press **SELECT** to move to the name.

TELEPHONE OPERATIONS

6. Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.
7. Press **SELECT** to save.

While entering numbers and names, you can:

- Press **MUTE X** to erase a digit or character.
- Press and hold **MUTE X** to erase the entire entry.
- Press the **UP** or **DOWN** arrow keys to move the cursor to the left or right.
- Press and hold **RD/P** to insert a dialing pause (for entering phone numbers only).
- Press 0 to add a space (for entering names only).
- Press * to add * or # to add # (for entering phone numbers only).
- Press | to enter punctuation (for entering names only).

To review and dial from the phonebook:

Entries are sorted alphabetically.

1. Press the **UP** arrow key when the phone is not in use.
2. Scroll to browse through the phonebook, or use the dialing keys to start a name search (you can enter up to 3 characters for the search).

TELEPHONE OPERATIONS

3. When the desired entry appears, press the **Green phone** button, **Cell phone** button or **Speakerphone** to dial.

To edit a phonebook entry:

1. When the desired entry displays, press **MENU**.
2. Use the dialing keys to edit the number, and then press **SELECT**.
3. Use the dialing keys to edit the name, and then press **SELECT** to save.

To delete a phonebook entry:

1. When the desired entry displays, press **MUTE X**.
2. When the screen displays Delete entry?, press **SELECT**.

To delete all phonebook entries:

1. Press **MENU** when the phone is not in use.
2. Scroll to **Phonebook**, and then press **SELECT**.
3. Scroll to **Delete all**, and then press **SELECT**.
4. When the screen displays **Delete all?**, press **SELECT**.

Caller ID

This product supports caller ID services provided by most telephone service providers. Depending on your service subscription, you may see the caller's name, number, date and

TELEPHONE OPERATIONS

time of calls that are sent by your telephone service provider after the first or second ring.

Caller ID log

The caller ID log stores up to 50 entries. If you answer a call before the caller information appears, it will not be saved in the caller ID log.

- The handset displays **XX missed calls** when there are calls that have not been reviewed in the caller ID log.
- If you want to erase the missed call indicator, press and hold the **Red phone** button on the idle handset.

To review and dial a number in the caller ID log:

1. Press the **DOWN** arrow key when the phone is not in use.
2. Scroll to browse through the caller ID log. When the desired entry appears:
 - Press # repeatedly to show different dialing options
 - Press I repeatedly if you need to add or remove I in front of the phone number.
3. Press the **Green phone** button, **Cell** phone button or **Speakerphone** button to dial the displayed number.

TELEPHONE OPERATIONS

To save a caller ID log entry to the phonebook:

1. When the desired caller ID log entry displays, press **MENU**.
2. Scroll to **To Phonebook** then press **SELECT**.
3. Use the dialing keys to modify the number, and then press **SELECT**.
4. Use the dialing keys to modify the name, and then press **SELECT** to save.

To delete a caller ID log entry:

- When the desired caller ID long entry displays, press **MUTE X**.

To delete all caller ID log entries:

- Press **MENU** when the phone is not in use. Scroll to **Caller ID log** and then press **SELECT**. Scroll to **Delete all** and then press **SELECT** twice.

About answering system and voicemail service

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fees may apply).

TELEPHONE OPERATIONS

The main differences between them are as follows:

Category	Built-in answering system	Voicemail from telephone service
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service.
Maximum number of messages	This depends on the design of telephone base. You cannot change the maximum number of messages that can be recorded.	This may vary with your telephone service plan (fee may apply). Contact your telephone service provider for more information.
Method to retrieve messages	Usually, there are two ways to retrieve messages: <ul style="list-style-type: none">• Press a button on the telephone base;or• Access remotely with an access code	To retrieve messages, you need an access number and/or a secret code provided by your service provider.

TELEPHONE OPERATIONS

Set your built-in answering system

Your answering system has various features, read below for the basic settings. Default settings are indicated by asterisks (*).

Menu	Description	Options
Announcement	Play, record, or delete an announcement for incoming calls.	Play [2]; Del [3]; Rec [7]
Delete all old	Delete all old (reviewed) messages.	N/A
Record memo	Record a memo as reminders for yourself or others using the answering system.	N/A
Answer on/off	Turn on or off the answering system.	On Off
Voice guide	Follow audio instructions to set basic features.	N/A

TELEPHONE OPERATIONS

<p>Ans sys setup</p> <ul style="list-style-type: none"> • Call screening • # of rings • Remote code • Msg alert tone • Voice language 	<p>Change the settings of call screening, number of rings, remote code, or message alert tone.</p> <p>Set whether you hear the callers while they are leaving messages to you.</p> <p>Set the number of times the telephone rings before the answering system answers.</p> <p>Set a two-digit security code to access the answering system remotely from any touch tone-telephone.</p> <p>Set to alert you when you have new messages.</p> <p>The language the answering system speaks to you.</p>	<p>On*</p> <p>Off</p> <p>3*;2;Toll saver; 6;5;4</p> <p>19*</p> <p>On</p> <p>Off*</p> <p>English*</p> <p>Français</p>
--	--	--

TELEPHONE OPERATIONS

Record your own announcement with a handset

You can use the preset announcement to answer calls, or replace it with your own recorded announcement. It can be up to 90 seconds in length.

1. Press **MENU** when the phone is not in use.
2. Scroll to **Answering sys** and then press **SELECT** twice.
3. The handset announces, “*Announcement, press play or press record.*”
4. Press 7 to record. The handset announces, “*Record after the tone. Press STOP when you are done.*” After the tone, speak towards the handset microphone. Press 5 when done.

Set number of rings

You can set the answering system to answer an incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If you choose toll saver, the answering system answers a call after 2 rings when you have new messages, or after 4 rings when you have no new messages.

1. Press **MENU** when the phone is not in use.
2. Scroll to **Answering sys** then press **SELECT**.
3. Scroll to **Ans sys setup** then press **SELECT**.
4. Scroll to # of rings then press **SELECT**.
5. Press the **UP or DOWN** arrow key to choose 2, 3, 4, 5, 6 or Toll saver and then press **SELECT**.

TELEPHONE OPERATIONS

Message alert tone

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off.

1. Press **MENU** when the phone is not in use.
2. Scroll to **Answering sys** then press **SELECT**.
3. Scroll to **Ans sys setup** then press **SELECT**.
4. Scroll to **Msg alert tone** then press **SELECT**.
5. Press the **UP** or **DOWN** arrow key to choose **On** or **Off**.
6. Press **SELECT** to save and you hear a confirmation tone.

Use your built-in answering system

Turn the answering system on or off

The answering system must be turned on to answer and record messages.

- Press the **Power** button on the telephone base to turn the built-in answering system on or off.

Message playback at the telephone base

When you have received a message on your answering system, you will see that the message window on the telephone base flashes. Your handset displays **XX new messages**. To

TELEPHONE OPERATIONS

retrieve, press the Play/Stop button when the phone is not in use.

Note: It can record up to 99 messages, depending on the length of each message. Each message can be up to three minutes in length. The total recording time is approximately 25 minutes.

Options during playback:

- Press **-Vol** or **+Vol** to adjust the speaker volume.
- Press **Next** to skip to the next message.
- Press **Prev** to repeat the message currently playing. Press **Prev** twice to listen to the previous message.
- Press **X** to delete the message playing. The system advances to the next message.
- Press **Play/Stop** to stop.

Delete all old messages at the telephone base

Press **X** twice when the phone is not in use.

Call intercept

If you want to talk to the person whose message is being recorded, press the **Green phone** button or **Speakerphone** button on the handset.

TELEPHONE OPERATIONS

Use the built-in answering system and voicemail service

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact your telephone service provider.

If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Retrieve voicemail from telephone service

Retrieve voicemail

When you received a voicemail, the handset displays an envelope and New voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and

EXPAND YOUR SYSTEM

then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

Add and register a handset

You can add new cordless handsets (BT914HS) to your telephone system (purchased separately). Your telephone system supports a maximum of five handsets.

Additional handsets must be registered before they will operate.

Additional handsets registered to the telephone system are assigned numbers in the sequential order. Register each device with the base before use.

When first purchased and properly charged, each expansion handset shows **To register HS...** and **see manual** alternately. Charge the handset before registering it to the telephone base.

To register a handset:

- Place the new/non-registered handset in the telephone base. The handset shows **Registering...**
 - **Do not place the handset in the charger.**

EXPAND YOUR SYSTEM

The handset shows **Registered** and you hear a beep when the registration process completes. The registration process takes about 90 seconds to complete.

Deregister all devices

To replace a handset or reassign the designated handset number of a registered handset, you must deregister all devices and then individually register each handset.

To deregister all devices:

1. Press and hold **FIND** on the telephone base for about 10 seconds.
2. Immediately press **FIND** again.

All handsets show **To register HS...** and **... see manual** alternately when the deregistration process completes. The deregistration process takes about 10 seconds to complete.

If you have difficulty with your telephone, please try the suggestions below. If you cannot find the answer to your question, contact customer service by visiting our website at www.clarityproducts.com or calling 1 (800) 426-3738.

FREQUENTLY ASKED QUESTIONS

I cannot add and connect my cell phone or headset to the telephone base.

- Make sure you have cellular coverage and the Bluetooth function of your cell phone or headset is turned on. See the user's manual of your cell phone or headset for more information.
- Make sure that the telephone base is in discoverable mode.
- Carefully follow the pairing instructions. Make sure that your Bluetooth cell phone or headset is not connected to any other Bluetooth device, and is connected to the telephone base and active on the device list.
- Remove Clarity BT914 from your cell phone's hands free device history list (see the user's manual of your cell phone for more information).
- Turn off your cell phone or headset, and then turn it on again.
- For some cell phones, you must authorize Clarity BT914 device in your cell phone's Bluetooth feature. See the user's manual of your cell phone for more information.
- Most cell phones have the Bluetooth feature in the connection or setup menus. Please refer and then look for the Bluetooth menu in the settings or connection menu. In the Bluetooth menu, select the option to search for or add new devices.

FREQUENTLY ASKED QUESTIONS

- Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, and then plug it back in. Repeat the above suggestions.

The PIN on the telephone base does not work.

- Make sure you enter the correct PIN. The default PIN is 0000.

Can the BT914 help the poor cell phone reception in my house?

- If your cell phone has poor reception in your home, the BT914 cannot improve the reception. However, if there is a location in your house with better reception, you can leave your cell phone at that location while you use the BT914 cell line. In order for this to work, the telephone base must be within 30 feet of the cell phone.

My telephone does not work at all.

- Make sure the batteries are installed and charged correctly. For optimum daily performance, return the handset to the telephone base or charger after use.
- Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.
- Make sure the telephone line cord is plugged firmly into the telephone base and the wall jack.

FREQUENTLY ASKED QUESTIONS

- Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, and then plug it back in. Allow up to one minute for the cordless handset and telephone base to synchronize.
- Charge the batteries in the handset for up to 12 hours.
- If the batteries are completely depleted, charge the handset for at least 30 minutes before use.
- Remove the batteries and then install them again. If that still does not work, it may be necessary to purchase new batteries.
- Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or telephone service. Contact your telephone service provider.
- Make sure there is a dial tone before dialing. It is normal if the handset takes a second or two to synchronize with the telephone base before producing a dial tone. Wait an extra second before dialing.
- Eliminate any background noise. Mute the cordless handset before dialing, or dial from another room in your home with less background noise.
- If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the

FREQUENTLY ASKED QUESTIONS

telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your service provider for more information.

The answering system does not answer after correct number of rings or does not record messages.

- Make sure the answering system is on. When the answering system is on, the handset shows ANS ON.
- If toll saver is selected, the number of rings changes to two when there are new messages.
- If the memory is full or the answering system is off, the answering system answers after 10 rings. In some cases, the answering system is affected by the ringing system used by the telephone service provider.
- Make sure the memory of the answering system is not full. When the answering machine memory is full, it does not record new messages until some old messages are deleted.
- If you subscribe to voicemail service, change the number of rings so that your answering machine system answers before your voicemail answers. To determine how many rings activate your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try disconnecting the fax machine. If that solves the problem, consult your fax machine documentation for infor-

FREQUENTLY ASKED QUESTIONS

mation on compatibility with answering systems.

The messages on the answering machine are incomplete.

- If a caller leaves a very long message, part of it may be lost when the answering system disconnects the call after the preset recording time.
- If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call.
- If the caller's voice is very soft, the answering system may stop recording and disconnect the call.

I accidentally changed the LCD language to French or Spanish, and I don't know how to change it back to English.

- While the phone is not in use, press MENU, and then enter * 364 # to reset the LCD language to English.
- While the phone is on a call, press MENU, and then enter * 364 # to reset the LCD language to English. Then the call ends.

Common cure for electronic equipment.

- If the telephone is not responding normally, put the cordless handset in the telephone base. If this does not fix the

FREQUENTLY ASKED QUESTIONS

problem, do the following (in the order listed):

1. Disconnect the power to the telephone base.
2. Disconnect the batteries on the cordless handset.
3. Wait a few minutes before connecting power to the telephone base.
4. Install the batteries again and place the cordless handset in the telephone base.
5. Wait for the cordless handset to synchronize with the telephone base. Allow at least one minute for this to take place.

ECO mode

- This power conserving technology reduces power consumption for optimal battery performance.
- The ECO mode activates automatically whenever the handset is synchronized with the telephone base.
- The handset shows ECO when the ECO mode activates.

Energy-saving charging mode

When this mode is activated, all telephone functions, except the handset batteries charging, will be disabled.

To activate the energy-saving charging mode:

1. Unplug the telephone base power adapter from the power

ENERGY SAVING

outlet. Make sure all handsets are plugged with charged batteries before proceeding.

2. While you press and hold FIND, plug the telephone base power adapter back to the power outlet.
3. After about 20 seconds, release the FIND button and then press it again within 2 seconds.

When the phone successfully enters the energy-saving mode, the handsets display To register HS... and ...see manual alternately.

When the phone fails to enter this mode, repeat Step 1 through 3 above. The telephone base will be powered up as normal if you fail to press FIND within 2 seconds in Step 3.

To deactivate the energy-saving charging mode:

1. Unplug the telephone base power adapter from the power outlet, and then plug it back in. Then the telephone base is powered up as normal.
2. Register your handsets back to the telephone base.

Note:

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORD FROM THE WALL.** Then

GENERAL PRODUCT CARE

remove the telephone by the unplugged cords.

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the handset **DOWN** gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or mild soap. Do not use excess water or cleaning solvents of any kind.

TECHNICAL DETAILS

Transmit frequency	DECT frequency: 1921.536-1928.448 MHz Bluetooth frequency: 2402.000-2480.000 MHz
Channels	DECT: 5 Bluetooth: 79
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.
Power requirements	Handset: Two 1.2V Ni-MH 500 mAh rechargeable batteries Telephone base: 6V DC @ 450mA Charger: 6V DC @ 450mA
Memory	Phonebook: 100 memory locations (shared between home and cell lines); up to 30 digits and 15 characters Caller ID log: 50 memory locations; up to 24 digits and 15 characters

TECHNICAL DETAILS

Ordering additional handsets: Handset model number: **BT914HS™** (sold separately) Your system can accommodate up to 5 cordless handsets. To register additional handsets, follow directions in the **EXPANDING YOUR SYSTEM** section.

The *Bluetooth®* word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Clarity, a division of Plantronics, is under license. Clarity, a division of Plantronics, is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Specifications are subject to change without notice.



Clarity, a Division of Plantronics, Inc.
6131 Preservation Drive
Chattanooga, TN 37416

Tel: 800-426-3738 Fax: 800-325-8871
E-mail: claritycs@plantronics.com
Website: www.clarityproducts.com

©2014 Clarity, a Division of Plantronics, Inc. All rights reserved. Clarity, BT914, BT914HS, Smart for Seniors, are trademarks or registered trademarks of Plantronics, Inc.

Rev. C (9-14)
Printed in China



User Guide

BT914HS Amplified Big Button Cordless Phone - Additional Handset for BT914

(sold separately)



IMPORTANT SAFETY INSTRUCTIONS

Congratulations on purchasing your new Clarity product. Before using this telephone, please read **Important Safety Instructions**.

WARNINGS: PRIVACY OF COMMUNICATIONS MAY NOT BE ENSURED WHEN USING THIS PHONE.

To maintain the compliance with the FCC's RF exposure guideline, place the base unit at least 20 cm from nearby persons. To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the telephone.
3. Avoid contact with liquids. Do not locate base unit or handset near water, for example, near a bathtub, wash basin, sink or laundry tub, in a wet basement or near a swimming pool.
4. Avoid using a telephone (other than a cordless type) during a storm. There may be a remote risk of electrical shock from lightning.
5. Do not use the telephone to report a gas leak in the vicinity of the leak.

IMPORTANT SAFETY INSTRUCTIONS

6. Unplug this telephone from the wall outlets before cleaning. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.
7. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
8. Do not cover the slots and openings on this telephone. This telephone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
9. Operate this telephone using the electrical voltage as stated on the base unit or the owner's manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
10. Do not allow anything to rest on the power cord or locate this product in an area where the power cord is likely to be damaged by furniture or foot traffic.
11. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
12. Never push any objects through the slots in the telephone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the telephone.

IMPORTANT SAFETY INSTRUCTIONS

13. To reduce the risk of electrical shock, do not take this phone apart. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
14. Unplug this product from the wall outlet and refer servicing to the manufacturer under the following conditions: when the power supply cord or plug is frayed or damaged; if liquid has been spilled into the product; if the telephone has been exposed to rain or water; if the telephone has been dropped or the case has been damaged; if the telephone exhibits a distinct change in performance; if the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician to restore the telephone to normal operation; if the telephone does not operate normally by following the operating instructions.
15. Never install telephone wiring during a lightning storm.
16. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

IMPORTANT SAFETY INSTRUCTIONS

17. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
18. Use caution when installing or modifying telephone lines.
19. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your local power company.
20. Do not attempt to open the AC adapter. There are potentially dangerous voltages inside, and there are no serviceable parts.
21. Discontinue use of product and contact Clarity if the product overheats, has a damaged cord or plug, if the product has been dropped or damaged or if the product has come into contact with liquids.
22. Use only the AC adapter provided with this product or a replacement AC adapter provided by Clarity.
23. This phone amplifies sound to loud volumes. To prevent hearing damage, all users of the phone should be informed of the high volume capability of the phone and children should only use the phone when supervised by an adult.
24. Exposure to high volume sound levels or excessive sound pressure may cause temporary or permanent damage to

IMPORTANT SAFETY INSTRUCTIONS

your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your telephone with the volume set at moderate levels and avoid prolonged exposure to high volume sound levels. The louder the volume, the less time is required before your hearing could be affected. If you experience hearing discomfort, you should have your hearing checked by a doctor. To protect your hearing, you should:

- A) Set the volume control in a low position and gradually increase the volume as needed. Before pressing the BOOST button, reduce the volume to the lowest level. Use the phone on the lowest volume setting as possible.
 - B) Limit the amount of time you use the telephone at high volume levels.
25. If you experience a skin irritation after using this product, discontinue use and contact Clarity.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

BATTERY SAFETY INSTRUCTIONS

WARNING: Dispose of used batteries according to the instructions.

1. Do not dispose of the battery in a fire as it may explode. Check with local codes for possible special disposal instructions.
2. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
3. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conduction material may over-heat and cause burns.
4. Remove batteries when they are discharged and when the equipment will not be used for an extended period of time. Dispose of batteries according to local environmental laws.
5. Do not disassemble, heat, crush, deform or puncture batteries.
6. Do not attempt to charge non-rechargeable batteries.
7. Keep batteries out of the reach of children.

PACKAGING CONTENTS LOCATION

Package contains the following items:

- Handset Charger
- AC power adapter for Charger
- Cordless Handset
- (2) Rechargeable batteries for cordless handset
- User Manual
- Warranty/FCC Requirements booklet

Installation Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- Place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- Place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- Avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- Avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.

If the reception for a base unit location is not satisfactory, move

CONNECTING CHARGER

it to another location for better reception. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

CONNECTING THE CHARGER

Plug the power supply cord into the jack located on the back of the base station. Plug the other end of power supply line cord into an electrical outlet.

Always use the cables provided in the box.


WARNINGS: Use only the power adapter provided for the base station.

Always use the cables provided in the box, others may not be compatible.

NOTE: *The base unit needs mains power for normal operation, and the cordless handset will not work without it.*

- Use only the power adapters supplied with this product.
- Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see Bluetooth), and use the cell line alone without plugging in a telephone line cord.
- If you subscribe to telephone service from a cable company or a VoIP service provider, contact your cable/VoIP service

INSTALL THE BATTERIES

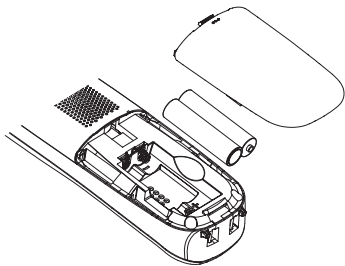

Note:

- Use only the batteries provided or equivalent.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.
- To purchase replacement batteries, go to any store that sells batteries:

NiMH AAA 1.2V 500mAh.

Charge the batteries

Once you have installed the batteries, the screen indicates the battery status.

Note:

- For best performance, keep the handset in the telephone base or charger when not in use.
- The batteries are fully charged after 12 hours of continuous charging.

BATTERY STATUS

Battery indicators	Battery status	Action
The screen is blank, or shows Put in charger and the battery symbol flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes)
The screen shows Low Battery and the battery symbol flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes)
The screen shows Handset X .	The battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.

Note: If you place the handset in the telephone base or charger without inserting the batteries, the screen displays No battery.

BATTERY STATUS

When it is fully charged, you can expect the following performance:

Operations	Operating Time
While in handset use (talking*)	Seven hours
While in speakerphone mode (talking*)	Three hours
While not in use (standby**)	Five days

*Operating times vary depending on your actual use and the age of the battery

**Handset is not charging or in use.

IMPORTANT:

- Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

REGISTERING THE HANDSET

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time, and the answering system through voice guide.

Register your handset to BT914 *(purchased separately)*

You can add new cordless handsets (BT914HS) to your telephone system (purchased separately). Your telephone system supports a maximum of five handsets.

Additional handsets must be registered before they will operate.

Additional handsets registered to the telephone system are assigned numbers in the sequential order. Register each device with the base before use.

When first purchased and properly charged, each expansion handset shows **To register HS...** and **see manual** alternately. Charge the handset before registering it to the telephone base.

REGISTERING THE HANDSET

To register a handset:

- Place the new/non-registered handset in the telephone base. The handset shows **Registering...**
 - o **Do not place the handset in the charger; place it in the telephone base.**

The handset shows **Registered** and you hear a beep when the registration process completes. The registration process takes about 90 seconds to complete.

Deregister all devices

To replace a handset or reassign the designated handset number of a registered handset, you must deregister all devices and then individually register each handset.

To deregister all devices:

1. Press and hold **FIND** on the telephone base for about 10 seconds.
2. Immediately press **FIND** again.

All handsets show **To register HS...** and **... see manual** alternately when the deregistration process completes. The deregistration process takes about 10 seconds to complete.

For further information on the operation of this handset, please refer to the user guide provided with your BT914 system.

TECHNICAL DETAILS

Transmit frequency	DECT frequency: 1921.536-1928.448 MHz Bluetooth frequency: 2402.000-2480.000 MHz
Channels	DECT: 5 Bluetooth: 79
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.
Power requirements	Handset: Two 1.2V Ni-MH 500 mAh rechargeable batteries Charger: 6V DC @ 450mA
Memory	Phonebook: 100 memory locations (shared between home and cell lines); up to 30 digits and 15 characters Caller ID log: 50 memory locations; up to 24 digits and 15 characters

TECHNICAL DETAILS

The *Bluetooth*® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Clarity, a division of Plantronics, is under license. Clarity, a division of Plantronics, is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Specifications are subject to change without notice.



Clarity, a Division of Plantronics, Inc.
6131 Preservation Drive
Chattanooga, TN 37416

Tel: 800-426-3738 Fax: 800-325-8871
E-mail: claritycs@plantronics.com
Website: www.clarityproducts.com

©2014 Clarity, a Division of Plantronics, Inc. All rights reserved. Clarity, BT914, BT914HS, Smart for Seniors, are trademarks or registered trademarks of Plantronics, Inc.

Rev. C (9-14)
Printed in China



6131 Preservation Drive • Chattanooga, TN 37416

Tel: 800-426-3738 • Fax: 800-325-8871

E-mail: claritycs@plantronics.com • Website: www.clarityproducts.com

RevG (3-2014)

PRINTED IN CHINA



Regulatory Compliance and Warranty Information

**Conformité réglementaire et
renseignements relatifs à la
garantie**

**Conformidad con los reglamentos e
información sobre la garantía**

REGULATORY COMPLIANCE

PARTY RESPONSIBLE FOR REGULATORY COMPLIANCE:

Clarity, a Division of Plantronics, Inc.
6131 Preservation Drive
Chattanooga, TN 37416
Phone: 800-426-3738

Part 68 of FCC Rules Information

- a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- b) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug, RJ11 C USOC, is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- c) The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

REGULATORY COMPLIANCE

For earlier products, the REN is separately shown on the label.

d) If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

e) The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

f) If trouble is experienced with this telephone equipment, for repair or warranty information, please contact Clarity, 800-426-3738. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

g) This telephone equipment is not intended to be repaired and it contains no repairable parts. Opening the equipment or any attempt to perform repairs will void the warranty. For service call 800-426-3738.

h) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

i) If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this telephone equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

2) j) This telephone equipment is hearing aid compatible.

REGULATORY COMPLIANCE

Customer-Owned Coin/Credit Card Phones

To comply with state tariffs, the telephone company must be given notification prior to connection. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

Part 15 of FCC Rules Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20cm (8 inches) or more.

Your equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

REGULATORY COMPLIANCE

on, you are encouraged to try to correct the interference by one of the following measures:

1. Where it can be done safely, reorient the receiving television or radio antenna.
2. To the extent possible, relocate the television, radio or other receiver with respect to the telephone equipment. (This increases the separation between the telephone equipment and the receiver.)
3. Connect the telephone equipment into an outlet on a circuit different from that to which the television, radio, or other receiver is connected.
4. Consult the dealer or an experienced Radio/TV Technician for help.

WARNING: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Industry Canada Technical Specifications

This product meets the applicable Industry Canada technical specifications.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone. This Class B digital apparatus complies with Canadian ICES-3 (B)/NMB-3(B).

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment

WARRANTY SERVICE INFORMATION

should be made by an authorized Canadian maintenance facility designated by the supplier.

Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

WARNING: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

This Class B digital apparatus complies with Canadian requirement ICES-3(B)/NMB-3(B).

This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

(The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.)

Incidental or Consequential Damages: Neither Clarity nor your retailer dealer or selling distributors has any responsibility for any incidental or consequential damages including without limitation, commercial loss or profit, or for any incidental expenses, expenses, loss of time, or inconvenience. Some states do not allow exclusion or

WARRANTY SERVICE INFORMATION

limitation of incidental or consequential damage, so the above limitation or exclusion may not apply to you.

Other Legal Rights: This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service, please prepay shipment and return the unit to the appropriate facility listed below.

Clarity Service Center

6131 Preservation Drive
Chattanooga, Tennessee 37416
Tel: 423-629-3500 or 800-426-3738
Fax: 423-622-7646 or 800-325-8871

Plantronics Service Centre

151 Hymus
Pointe Claire, Quebec H9R 1E9
Tel: 800-540-8363 or 514-956-8363
Fax: 514-956-1825

Please use the original container, or pack the unit(s) in a sturdy carton with sufficient packing material to prevent damage. Include the following information:

- A proof-of-purchase indicating model number and date of purchase;
- Bill-to address;
- Ship-to address;
- Number and description of units shipped;
- Name and telephone number of person to call, should contact be necessary;

WARRANTY SERVICE INFORMATION

- Reason for return and description of the problem.

Damage occurring during shipment is deemed the responsibility of the carrier, and claims should be made directly with the carrier.

The following warranty and service information applies only to products purchased and used in the U.S. and Canada. For warranty information in other countries, please contact your local retailer or distributor.

Limited Warranty: Clarity, a division of Plantronics, Inc. (“Clarity”) warrants to the original consumer purchaser that, except for limitations and exclusions set forth below, this product shall be free from defects in materials and workmanship for a period of one (1) year from the date of original purchase (“Warranty Period”). The obligation of Clarity under this warranty shall be at Clarity’s option, without charge, of any part or unit that proves to be defective in material or workmanship during the Warranty Period.

Exclusions from Warranty: This warranty applies only to defects in factory materials and factory workmanship. Any condition caused by accident, abuse, misuse or improper operation, violation of instructions furnished by Clarity, destruction or alteration, improper electrical voltages or currents, or repair or maintenance attempted by anyone other than Clarity or an authorized service center, is not a defect covered by this warranty. Telephone companies manufacture different types of equipment and Clarity does not warrant that its equipment is compatible with the equipment of a particular phone company.

Implied Warranties: Under state law, you may be entitled to the benefit of certain implied warranties. These implied warranties will continue in force only during the warranty period. Some states do allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

CONFORMITÉ RÉGLEMENTAIRE

PARTIE RESPONSABLE DE LA CONFORMITÉ RÉGLEMENTAIRE :

Clarity, une division de Plantronics, Inc.
6131 Preservation Drive
Chattanooga, TN 37416
Téléphone : 800-426-3738

Renseignements sur la section 68 du règlement FCC

- a) Cet équipement est conforme à la section 68 des lois et règlements du FCC et aux exigences adoptées par l'ACTA. Sous cet équipement se trouve une étiquette indiquant, entre autres informations, le code d'identification du produit au format américain : AAAEQ##TXXXX. S'il est requis, ce numéro doit être fourni à la compagnie de téléphonie.
- b) Les fiches et les prises utilisées pour connecter cet équipement au câblage et au réseau téléphonique des lieux doivent être conformes à la section 68 des exigences et règlements applicables du FCC et aux exigences adoptées par l'ACTA. Un cordon téléphonique et une fiche modulaire, RJ11C USOC, conformes sont fournis avec ce produit. Il est conçu pour être branché à une prise modulaire compatible qui soit aussi conforme. Consultez les instructions d'installation pour plus de détails.
- c) L'IES est utilisé afin de déterminer le nombre d'appareils qui peuvent être connectés à une ligne téléphonique. Un IES excessif sur une même ligne téléphonique peut empêcher les appareils de sonner lors de l'entrée d'un appel. Dans la plupart mais pas dans toutes les régions, la somme des IES ne doit pas excéder cinq (5,0). Pour connaître avec certitude le nombre d'appareils pouvant être connectés à une ligne comme déterminé par l'IES total, contactez la compagnie de téléphonie locale. Pour les produits approuvés après le 23 juillet 2001, l'IES du produit fait partie du code d'identification du produit qui est au format américain : AAAEQ##TXXXX. Les chiffres représentés par ## correspondent à l'IES sans virgule décimale (par ex. 03 correspond à un IES de 0,3). Pour les produits plus récents, l'IES est affiché séparément sur l'étiquette.

CONFORMITÉ RÉGLEMENTAIRE

- d) Si cet équipement téléphonique endommage le réseau téléphonique, la compagnie de téléphonie vous informera à l'avance du besoin possible de procéder à une interruption temporaire du service. Dans l'éventualité où il s'avèrerait impossible d'aviser le client à l'avance, la compagnie de téléphonie informera ce dernier dès que possible. Vous serez également informé(e) de votre droit de déposer une plainte auprès du FCC si vous le jugez nécessaire.
- e) La compagnie de téléphonie peut apporter des modifications à ses installations, son équipement, ses opérations ou ses procédures qui peuvent affecter le fonctionnement de l'équipement. Si cela se produit, la compagnie de téléphonie vous avisera à l'avance afin que vous puissiez prendre les mesures nécessaires pour garantir un service ininterrompu.
- f) Veuillez contacter Clarity au 800-426-3738 si vous rencontrez des difficultés avec cet équipement téléphonique ou pour obtenir des renseignements sur les réparations et la garantie. Si l'équipement est à l'origine de dommages sur réseau téléphonique, la compagnie de téléphonie peut exiger que vous le débranchiez jusqu'à ce que le problème soit résolu.
- g) Cet équipement téléphonique n'est pas destiné à être réparé et contient des pièces irréparables. L'ouverture de l'équipement ou toute tentative de procéder à des réparations rendront nulle la garantie. Pour un entretien ou des réparations, appelez le 800-426-3738.
- h) Le branchement à un service de lignes partagées est sujet aux tarifs provinciaux. Contactez la commission provinciale ou nationale de services publics ou la commission des sociétés pour plus de renseignements.
- i) Si votre domicile est équipé d'un système d'alarme câblé connecté à votre ligne téléphonique, assurez-vous que l'installation de cet équipement téléphonique ne désactive pas votre alarme. Si vous avez des questions sur ce qui désactive le système d'alarme, consultez votre compagnie de téléphonie ou un installateur qualifié.
- j) Cet équipement téléphonique est compatible avec les prothèses auditives.

CONFORMITÉ RÉGLEMENTAIRE

Téléphones privés à pièces de monnaie/cartes de crédit

Afin de se conformer aux tarifs provinciaux, la compagnie de téléphonie doit être avisée à l'avance de toute connexion. Dans certaines provinces, la commission provinciale ou nationale des services publics ou la commission des sociétés doit approuver la connexion au préalable.

Renseignements sur la section 15 du règlement FCC

Cet équipement est conforme à la section 15 du règlement FCC. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil ne doit provoquer aucune interférence nuisible et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant causer un fonctionnement indésirable. L'intimité des communications ne peut être assurée à l'aide de ce téléphone.

Pour assurer la sûreté des utilisateurs, la FCC a établi des critères pour la quantité d'énergie de radiofréquence qui peut être sans risque absorbée par un utilisateur ou un spectateur selon l'utilisation prévue du produit. Ce produit a été examiné et avéré pour être conforme aux critères de FCC. Le combiné peut être sans risque tenu contre l'oreille de l'utilisateur. La base de téléphone sera installée et a employé tels que des parties du corps d'utilisateur autre que les mains sont maintenues à une distance approximativement de 20cm (8 pouces) ou davantage.

Votre équipement a été vérifié et jugé conforme aux limites s'appliquant aux appareils numériques de Classe B, conformément à la section 15 de la réglementation FCC. Ces limites ont été établies de manière à fournir une protection raisonnable contre les interférences nuisibles lors d'une installation en milieu résidentiel.

Cet équipement génère, utilise et peut émettre de l'énergie de radiofréquence. S'il n'est pas installé et utilisé conformément aux instructions fournies, il peut provoquer des interférences qui affecteront

CONFORMITÉ RÉGLEMENTAIRE

les communications radio. Il est toutefois impossible de garantir qu'aucune interférence ne surviendra dans une installation donnée. Si cet appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en allumant l'appareil, vous êtes encouragé à essayer de corriger l'interférence au moyen d'une des mesures suivantes :

1. S'il est possible de le faire en toute sécurité, réorientez ou déplacez l'antenne de réception du téléviseur ou de la radio.
2. Dans la mesure du possible, déplacez le téléviseur, la radio ou tout autre récepteur par rapport à l'équipement téléphonique. (Cela permet d'accroître la distance entre l'équipement téléphonique et le récepteur.)
3. Branchez l'équipement téléphonique sur une prise de courant faisant partie d'un circuit différent de celui sur lequel est branché le téléviseur, la radio ou tout autre récepteur.
4. Obtenez l'aide du détaillant ou d'un technicien expérimenté en radio/télévision.

AVERTISSEMENT : Les changements ou modifications non autorisés expressément par le fabricant responsable de la conformité peuvent annuler le droit de l'utilisateur à se servir de cet équipement.

Spécifications techniques d'Industrie Canada

Ce produit satisfait aux spécifications techniques applicables d'Industrie Canada.

Cet appareil de classe B est conforme avec les normes canadiennes ICES-3 (B)/NMB-3(B).

Cet équipement est conforme aussi avec Industrie Canada RSS-102 par rapport au code de la santé du Canada 6 pour l'exposition de personnes à des champs de radiofréquences.

Avant d'installer cet équipement, l'utilisateur doit s'assurer qu'il lui est permis de se raccorder aux installations de l'entreprise de

CONFORMITÉ RÉGLEMENTAIRE

télécommunication locale. L'équipement doit également être installé en suivant une méthode acceptable de raccordement. Dans certains cas, le câblage interne de l'entreprise associé à un service de ligne particulier peut être prolongé au moyen d'un connecteur homologué (cordon prolongateur téléphonique). L'abonné doit être conscient que la conformité aux conditions stipulées précédemment ne peut empêcher une dégradation éventuelle du service dans certaines circonstances. Les réparations effectuées sur l'équipement homologué doivent être confiées au centre canadien d'entretien autorisé ayant été désigné par le fournisseur.

L'entreprise de télécommunications pourrait exiger que l'utilisateur déconnecte l'équipement suite à des réparations ou modifications apportées par celui-ci ou tout mauvais fonctionnement de l'équipement.

Pour sa propre protection, l'utilisateur doit s'assurer que les fils de mise à la terre du secteur, des lignes téléphoniques et les canalisations métalliques internes d'eau, le cas échéant, soient raccordées ensemble. Cette précaution est particulièrement importante dans les zones rurales.

AVERTISSEMENT : Les utilisateurs ne doivent pas tenter de procéder eux-mêmes à de tels raccordements, mais doivent contacter le service d'inspection des installations électriques ou à un électricien, selon le cas.

L'Indice d'Équivalence de la Sonnerie est une indication du nombre maximum de dispositifs autorisés à être branchés à une interface téléphonique. Le raccordement d'une interface peut être constitué d'une combinaison de dispositifs, à la seule condition que la somme des indices d'équivalence de la sonnerie de l'ensemble des dispositifs ne dépasse pas cinq.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-3 (B)/NMB-3(B).

RENSEIGNEMENTS RELATIFS À LA GARANTIE

(Les lettres « IC: » apparaissant devant le numéro de certification/ d'enregistrement signifient seulement que les spécifications techniques d'Industrie Canada sont respectées.)

Domages accessoires ou indirects : Ni Clarity, ni votre détaillant ou distributeur ne peut être tenu responsable des dommages accessoires ou indirects, y compris, mais sans s'y limiter, les pertes commerciales ou de profit, les frais accessoires, les dépenses, les arrêts de travail ou les inconvénients. Certaines provinces ne permettent pas l'exclusion ou la limitation des dommages accessoires ou indirects, la limitation ou l'exclusion stipulée ci-dessus peut donc ne pas s'appliquer dans votre cas.

Autres droits reconnus par la loi : La présente garantie vous confère des droits juridiques particuliers et vous pouvez également avoir d'autres droits selon la province.

Pour faire réparer l'appareil dans le cadre de la présente garantie, veuillez l'envoyer au centre de réparation approprié indiqué ci-dessous en veillant à prépayer les frais d'expédition.

Centre de réparation Clarity

6131 Preservation Drive
Chattanooga, TN 37416
Tél. : (423) 629-3500 ou (800) 426-3738
Télec. : (423) 622-7646 ou (800) 325-8871

Centre de réparation Plantronics

151 Hymus
Pointe Claire, Québec H9R 1E9
Tél. : (800) 540-8363 ou (514) 956-8363
Télec. : (514) 956-1825

Veuillez utiliser l'emballage original ou placer le(s) unité(s) dans une boîte robuste en carton et le(s) emballer de manière à prévenir tout dommage.

RENSEIGNEMENTS RELATIFS À LA GARANTIE

Veillez fournir les renseignements suivants :

- Une preuve d'achat stipulant le numéro de modèle et la date d'achat ;
- L'adresse de facturation ;
- L'adresse d'expédition ;
- Le nombre et la description des unités envoyées ;
- Le nom et le numéro de téléphone de la personne à contacter, le cas échéant ;
- La raison du retour et la description du problème.

Tout dommage survenu au cours de l'expédition relève de la responsabilité du transporteur et les réclamations à ce sujet devront lui être envoyées directement.

La garantie et les informations de service suivantes s'appliquent uniquement aux produits achetés et utilisés aux États-Unis et au Canada. Pour les informations relatives à la garantie dans d'autres pays, veuillez contacter votre détaillant ou distributeur local.

Garantie limitée : Clarity, une division de Plantronics, Inc. (« Clarity ») garantit à l'acheteur original qu'à l'exception des limitations et exclusions énoncées ci-dessous, ce produit sera exempt de tout défaut matériel et de fabrication pour une période d'un (1) an à partir de la date d'achat initiale (« Période de garantie »). Clarity sera tenue aux fins de la présente garantie à remplacer ou réparer sans frais et à sa seule discrétion, toute pièce ou unité présentant un défaut matériel ou de fabrication au cours de la période de garantie.

Exclusions de la garantie : Cette garantie ne s'applique qu'aux défauts matériels et de fabrication en usine. Toute condition résultant d'un accident, d'un abus, d'une utilisation inappropriée, d'une violation des instructions fournies par Clarity, d'une destruction ou d'une altération, de tensions ou courants inadéquats ou d'une tentative de réparation ou

RENSEIGNEMENTS RELATIFS À LA GARANTIE

d'entretien effectuée par une autre personne qu'un employé de Clarity ou un centre de réparation autorisé, ne sera pas couverte par cette garantie.

Les compagnies de téléphonie fabriquent différents types d'équipement et Clarity ne peut garantir que son équipement sera compatible avec l'équipement d'une compagnie de téléphonie particulière.

Garanties implicites : Vous pourriez être en droit de bénéficier de certaines garanties implicites en vertu d'une loi provinciale. Ces garanties implicites ne demeureront en force que pour la durée de la période de garantie. Certaines provinces permettent de limiter la durée d'une garantie implicite, la limitation ci-dessus pourrait donc ne pas s'appliquer dans votre cas.

CONFORMIDAD CON LOS REGLAMENTOS

EMPRESA RESPONSABLE DEL CUMPLIMIENTO DE LAS NORMAS:

Clarity, una División de Plantronics, Inc.
6131 Preservation Drive
Chattanooga, TN 37416
Teléfono: 800-426-3738

Información sobre la Parte 68 de los reglamentos de la FCC (Comisión Federal de Comunicaciones)

- a) Este equipo cumple con las normas y requisitos establecidos en la Parte 68 de la FCC, adoptada por la Asociación de Operadores de Telecomunicaciones de los Estados Unidos (ACTA, por sus siglas en inglés). En la parte inferior de este equipo se encuentra una etiqueta que provee, entre otras informaciones, un identificador de producto con el formato US:AAAEQ##TXXXX. Debe proporcionar este número a la compañía telefónica si se lo solicitan.
- b) El enchufe y tomacorriente utilizados para conectar este equipo al cableado del edificio y a la red telefónica deben cumplir con las normas y requisitos correspondientes de la Parte 68 de la FCC, adoptada por la ACTA. Con este producto se suministran un cable de teléfono y un enchufe modular RJ1 IC USOC, que cumple con los requisitos. Está diseñado para ser conectado a un tomacorriente modular compatible, que también cumpla con los requisitos. Vea las instrucciones de instalación para obtener más detalles.
- c) El REN (Número de Equivalencia de Timbres) se utiliza para determinar la cantidad de aparatos que pueden conectarse a una línea telefónica. Una cantidad excesiva de REN en una línea telefónica puede hacer que los dispositivos no suenen cuando se reciba una llamada entrante. En la mayoría de las áreas, no en todas, la suma del REN no debería superar el número cinco (5.0). Contacte a su compañía telefónica local para estar

CONFORMIDAD CON LOS REGLAMENTOS

seguro de la cantidad de aparatos que puede conectar a una línea, según el total del REN. Para los productos aprobados después del 23 de julio de 2001, el REN forma parte del identificador del producto bajo el formato US:AAAEQ##TXXXX. Los dígitos representados por ## corresponden al REN sin el punto decimal (por ejemplo, 03 significa un REN de 0.3). En los productos más antiguos, el REN aparece en la etiqueta por separado.

d) Si este equipo de teléfono provoca daños a la red telefónica, la compañía le notificará con anticipación que es necesario efectuar una interrupción temporal del servicio. En caso de que no sea posible avisar con anticipación, la compañía telefónica lo notificará al cliente lo más pronto posible. Además, le avisarán de sus derechos de presentar una queja ante la FCC si lo considera necesario.

e) La compañía telefónica puede realizar cambios en sus instalaciones, equipos, operaciones o procedimientos que podrían afectar el funcionamiento del equipo. Si esto ocurriera, la compañía telefónica avisará con anticipación para que usted realice las modificaciones necesarias para mantener el servicio sin interrupciones.

f) Si se presentara algún problema con este equipo, necesita alguna reparación o recibir información sobre la garantía, contacte con Clarity al 800-426-3738. Si el equipo está provocando daños en la red telefónica, la compañía de teléfonos puede pedirle que desconecte su aparato hasta que se solucione el problema.

g) Este equipo telefónico no está diseñado para ser reparado y, por tanto, no contiene partes reparables. La apertura del equipo o cualquier intento de realizar reparaciones invalidarán la garantía. Para comunicarse con el servicio de reparaciones, llame al 800-426-3738.

h) La conexión a servicios de línea compartida está sujeta a las tarifas estatales. Para más información, póngase en contacto con la comisión de empresas de servicios públicos, la comisión de servicios públicos o la comisión de corporaciones.

i) Si tiene instalado un equipo de alarma conectado a la línea telefónica,

CONFORMIDAD CON LOS REGLAMENTOS

asegúrese de que la instalación de este teléfono no desconecte su sistema de alarma. Si tiene dudas sobre las circunstancias que pueden desconectar su sistema de alarma, consulte a su compañía telefónica o a un instalador calificado.

j) Este equipo telefónico es compatible con audífonos.

Teléfonos de monedas/Tarjetas de crédito propiedad del cliente

Para cumplir con las tarifas fijadas por el estado, se debe notificar a la compañía telefónica antes de realizar la conexión. En algunos estados, la comisión de servicios públicos estatales, la comisión de servicios públicos o la comisión de corporaciones deben autorizar la conexión.

Información sobre la Parte 15 de los reglamentos de la FCC

Este aparato cumple con la Parte 15 de los reglamentos de la FCC.

Su funcionamiento está sujeto a las dos condiciones siguientes: 1)

Este equipo no puede ocasionar interferencia perjudicial y 2) debe aceptar cualquier interferencia recibida, aunque ésta pudiera causar un funcionamiento no deseado. La aislamiento de comunicaciones no puede ser asegurada al usar este teléfono.

Para asegurar la seguridad de usuarios, la FCC ha establecido los criterios para la cantidad de energía de la radiofrecuencia que se puede absorber con seguridad por un usuario o una persona presente según el uso previsto del producto. Este producto se ha probado y se ha encontrado para conformarse con los criterios de la FCC. El microteléfono se puede sostener con seguridad contra el oído del usuario. La base del teléfono será instalada y utilizó tales que mantienen a las partes del cuerpo de usuario con excepción de las manos en una distancia de los aproximadamente 20cm (8 pulgadas) o más.

CONFORMIDAD CON LOS REGLAMENTOS

Su equipo ha sido probado y se comprobó que cumple con los límites para los dispositivos digitales de Clase B, en conformidad con la Parte 15 de los reglamentos de la FCC. Se fijaron estos límites para proveer una protección razonable contra la interferencia perjudicial en las instalaciones residenciales.

Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia. Si su instalación y uso no se realiza según las instrucciones, puede producirse una interferencia perjudicial en las comunicaciones de radio. Sin embargo, no existen garantías de que no ocurrirán interferencias en una instalación en particular; si este equipo causara interferencia perjudicial en la recepción de radio o televisión, lo cual se determinará apagando y encendiendo el equipo, puede tratar de corregirla mediante uno de los siguientes procedimientos:

1. Si puede hacerlo sin correr peligro, reoriente la antena receptora de radio o televisión.
2. En la medida de lo posible, reubique la televisión, la radio u otro receptor respecto del teléfono. (De este modo aumentará el espacio de separación entre el teléfono y el aparato receptor).
3. Conecte el teléfono a una toma o circuito diferente del que utiliza para enchufar la televisión, la radio u otros receptores.
4. Pida ayuda al distribuidor o a un técnico de radio y televisión con experiencia.

ADVERTENCIA: Los cambios o modificaciones no aprobados expresamente por el fabricante responsable de cumplir con las normas pertinentes podrían anular la autorización para que el usuario opere el equipo.

CONFORMIDAD CON LOS REGLAMENTOS

Especificaciones técnicas de Industry Canada

Este producto cumple con las especificaciones técnicas pertinentes de Industry Canada.

Este aparato digital de la clase B se conforma con ICES-3 (B)/NMB-3(B) canadiense.

Este equipo cumple también con Industry Canada RSS-102 con respecto al código 6 de la Salud de Canadá para la Exposición de humanos a los campos de RF.

Antes de instalar el equipo, los usuarios deben verificar que está permitido conectarlo a la red de la compañía telefónica local. Además, la instalación debe realizarse utilizando un método de conexión aceptable. En algunos casos, se puede extender el cableado interno de la compañía asociado a un servicio individual de línea única, por medio de una conexión certificada (extensión). El cliente debe ser consciente de que es posible que el cumplimiento de las condiciones mencionadas anteriormente no evite el deterioro del servicio en determinadas situaciones. Las reparaciones de los equipos certificados deben realizarlas un servicio de mantenimiento canadiense, designado por el proveedor. Ante cualquier reparación o modificación que realice el usuario, o el mal funcionamiento del equipo, la compañía de telecomunicaciones puede solicitar al usuario que desconecte el aparato.

Por su propia seguridad, los usuarios deben asegurarse de que las conexiones a tierra de la empresa de servicios públicos, las líneas telefónicas y el sistema metálico de cañerías de agua internas del edificio estén conectadas entre sí. Esta precaución es particularmente importante en las zonas rurales.

ADVERTENCIA: Los usuarios no deben intentar realizar dichas conexiones por sí mismos, sino ponerse en contacto con la autoridad de inspección eléctrica correspondiente o con un electricista, según

CONFORMIDAD CON LOS REGLAMENTOS

corresponda.

El Número de Equivalencia de Timbres es un indicador de la cantidad máxima de terminales que se permite conectar a una interfaz de telefonía. La terminación en una interfaz puede estar constituida por cualquier combinación de aparatos sujetos únicamente al requisito de que la suma de los Números de Equivalencia de Timbres de todos los aparatos no exceda de cinco.

Este aparato digital de Clase B cumple con la norma canadiense ICES-3 (B)/NMB-3(B).

(El término “IC:” antes del número de certificación/registro significa únicamente que cumple con las especificaciones técnicas de Industry Canada).

INFORMACIÓN SOBRE EL SERVICIO DE GARANTÍA

Daños imprevistos o derivados: Clarity, su distribuidor minorista o los distribuidores de venta no tienen ninguna responsabilidad por cualquier daño imprevisto o derivado que incluye, sin limitaciones: pérdida o ganancia comercial, gastos imprevistos, gastos, pérdida de tiempo o molestias. Algunos estados no permiten la exclusión o limitación de los daños imprevistos o derivados, de modo que la exclusión o limitación mencionada puede no ser aplicable en su caso.

Otros derechos legales: Esta garantía le otorga derechos legales específicos y es posible que cuente además con otros derechos, que varían de un estado a otro.

Para obtener el servicio de garantía, pague por adelantado el envío y el retorno de la unidad a la instalación correspondiente que se detalla abajo.

Clarity Service Center

6131 Preservation Drive

Chattanooga, TN 37416

Tel: 423-629-3500 ó 800-426-3738

Fax: 423-622-7646 ó 800-325-8871

Plantronics Service Centre

151 Hymus

Pointe Claire, Quebec H9R 1E9

Tel: 800-540-8363 ó 514-956-8363

Fax: 514-956-1825

INFORMACIÓN SOBRE EL SERVICIO DE GARANTÍA

Use la caja original o empaque la(s) unidad(es) en un cartón resistente, con suficiente material de embalaje para evitar daños. Incluya la siguiente información:

- Un comprobante de compra, indicando el número de modelo y la fecha de compra;
- Domicilio de facturación;
- Domicilio de envío;
- Número y descripción de las unidades enviadas;
- Nombre y número de teléfono de la persona con la que se debe contactar, en caso de que sea necesario;
- Motivo de la devolución y descripción del problema.

Los daños que pudieran ocurrir durante el transporte se consideran responsabilidad del transportista; los reclamos deberán efectuarse directamente a éste.

La garantía siguiente y la información sobre servicio se aplican únicamente a productos comprados y utilizados en los Estados Unidos y Canadá. Para obtener información sobre la garantía en otros países, contacte a su distribuidor o comerciante minorista local.

Garantía limitada: Clarity, una división de Plantronics, Inc. (“Clarity”) garantiza al comprador original que, con excepción de las exclusiones y limitaciones que se describen abajo, este producto no tendrá defectos de materiales ni mano de obra durante un período de un (1) año a partir de la fecha de compra original (“Período de garantía”). La obligación de Clarity bajo las condiciones de esta garantía se ejercerá, a opción de Clarity, sin cargo para cualquier pieza o unidad que se compruebe con defectos en el material o mano de obra durante el Período de garantía.

INFORMACIÓN SOBRE EL SERVICIO DE GARANTÍA

Exclusiones de la garantía: Esta garantía se aplica únicamente a defectos en los materiales o la mano de obra. Cualquier condición provocada por accidente, negligencia, uso incorrecto o inadecuado, incumplimiento de las instrucciones provistas por Clarity, destrucción o modificación, aplicación de corrientes o voltajes inadecuados, o maniobras de reparación o mantenimiento realizadas por otras personas que no pertenezcan a Clarity o a un centro de servicio autorizado, no será cubierta por esta garantía. Las compañías telefónicas fabrican diferentes tipos de aparatos y Clarity no garantiza que este equipo sea compatible con el de una compañía telefónica en particular.

Garantías implícitas: Según la ley estatal, usted puede tener derecho a beneficiarse con determinadas garantías implícitas. Estas garantías implícitas seguirán vigentes únicamente durante el período de garantía. Algunos estados permiten limitaciones sobre el período de vigencia de una garantía implícita, de modo que es posible que la limitación mencionada no se aplique en su caso.

