

# 2 The Parts of the System

 
## THE RECEIVER

### THE RECEIVER FRONT PANEL



#### CONTROL BUTTONS

The front panel buttons give you some control over the receiver. These buttons work the same way as the matching remote control buttons, described in *Chapter 3 - Using the Satellite System* and *Chapter 4 - Using the DVD Player*.



#### MODE INDICATORS

A green light over the SAT label lights up when the receiver is turned

 
- ON and is in satellite receiver mode, and goes out when the receiver is turned OFF. A red light over the DISC label lights up when the receiver is in DVD mode and changes to orange when in audio CD mode.



#### FRONT CARD SLOT

The card slot behind the left access door requires a special e-commerce card. *Do not* insert the DISH Network smart card in to this slot. *You do not need a card inserted in this card slot.*

### THE RECEIVER BACK PANEL



The back panel of the receiver provides the connections that you use to wire the receiver to all the other electronic devices that you use. It also provides the receiver power cord and telephone jack. Depending on the wiring setup that you use, you may not use some of these connections, but they are provided to support any desired setup. The DVD Player does *not* require any special wiring. See *Chapter 3 - Reference*, or the *Installation Instructions* for more information.

#### SMART CARD SLOT



The DISH Network Smart Card should already be inserted in the receiver back panel slot.

### THE REMOTE CONTROL

For information on using the remote control, see *Chapter 3 - Using the Satellite System* and *Chapter 4 - Using the DVD Player*.

**Note:** If you lose or damage the remote control you will *not* be fully able to control the receiver. If this happens, call the Service Center at 1-800-333-DISH (3474) to order a replacement. You will be charged the sale price of the remote control, plus shipping and handling.

UHF remote controls (with the UHF symbol on the front side) can operate the receiver through the walls of your building. To use such a remote,

## Satellite System User Guide

you must attach a UHF antenna to the receiver back panel UHF Remote Antenna connection.

IR remote controls (with "INFRARED REMOTE" on the back side) must be pointed directly at the receiver, with no objects blocking the line of sight. You can use such a remote only within 40 feet of the receiver.

### INSTALLING BATTERIES IN THE REMOTE

The remote control is shipped with AAA batteries, packaged separately. When you replace old batteries, you should replace all of the batteries. Use batteries of the same grade, for example, alkaline or carbon zinc, and do not mix batteries of different grades. Alkaline batteries provide longer battery life.



1. Press down on the slot in the battery cover (on the back of the remote control) and slide the cover off.
2. Insert the new batteries, making sure to match the plus ("+") ends with the plus markings on the battery case.
3. Replace the battery cover by sliding the cover back up into place.

### THE REMOTE CONTROL BUTTONS



MODE BUTTONS

The SAT (satellite receiver), TV, VCR, and AUX (auxiliary) mode buttons indicate which device the remote will control. To change modes, press the appropriate button. The corresponding button background light turns on. For DVD

operation, make sure the remote is in the SAT mode.

### TV/VIDEO TV/VIDEO



If you connect the receiver using only the RF or VHF connections, use this button, in SAT mode, to switch between the receiver and an alternate video source such as cable or broadcast TV antenna input. It will switch to the device routed into the TV Antenna Cable In connection.

In TV mode, this button will switch between video inputs on some TVs (check your television owner's manual for more details).

### MENU MENU



In SAT mode, press the Menu button to open the Main Menu. When using the DVD Player, this button will bring up the DVD disc menu.

### POWER POWER



In SAT mode, press the Power button to turn the receiver ON or OFF. The green Power light over the SAT label on the receiver front panel lights up to indicate the receiver is ON. For each mode, the Power button will turn that device ON and OFF, if the remote has been programmed for that device. See *Programming the Digital Remote to Control Other Devices* on page 3-7. Note: If you program the TV mode to control a television and do not program the AUX mode, the AUX mode button will turn the television ON and OFF. This allows you to turn the television ON or OFF without leaving SAT mode.



### PAGE UP AND PAGE DOWN

In SAT mode, press the Page Up or Page Down arrow button to scan, by page, through the listing of channels when you have open the Program Guide or, if the receiver supports Themes, the Theme Categories menu.

 
## The Parts of the System The Remote Control

2


In VCR mode, these buttons scan up or down through the television channels.




In any mode, press the **Mute** button to temporarily turn off the sound. Press it again to restore the sound. The **Mute** button works only if you have programmed the remote. See *Programming the Digital Remote to Control Other Devices* on page 3-7.



 In any mode, press the plus (+) side of the **Volume** button to increase the sound volume. Press the minus (-) side of the **Volume** button to reduce the sound volume. This button works only if you have programmed the remote. See *Programming the Digital Remote to Control Other Devices* on page 3-7.



 In **SAT** mode, press the **Guide** button to open the **Program Guide**. When the **Program Guide** is open, press the **Guide** button to switch among **Favorites Lists**.



In **SAT** mode, press the **Select** button to switch to **DVD** mode or press the **Select** button to select the highlighted option in a menu and perform the function.

In **VCR** mode, this button functions as the **Play** button. Press this button to play the video tape.

In **TV** or **AUX** mode, this button functions as an **Enter** button.

Press the **Select** button to go to **DVD** mode

or to select an option from a DVD disc menu



UP/DOWN/LEFT/RIGHT

In **SAT** mode:

- When using a menu, press these buttons to move the highlight to the desired option.
- When watching a program, press the **Right** button to open the **Browse Banner** or the **Up** or **Down** button to change channels.
- When the **Browse Banner** is open, press the **Up** or **Down** button to view the **Browse Banner** for the next channel.
- When a menu offers a list of choices, press the **Up** or **Down** button to bring more choices into view.
- When the **Program Guide** is open, press the **Up** or **Down** button to move the highlight through the channels.
- When a number must be entered in a menu, press the **Up** or **Down** button to increase or decrease the highlighted number.
- When the **Browse Banner** or **Program Guide** is open, press the **Left** or **Right** button to display programs in different time periods (but not a time period earlier than the present).
- If the receiver supports **Theme Categories**, when watching a program press the **Left** button to open the **Theme Categories** menu.

In **VCR** mode:

- The **Up** button functions as the **Stop** button. Press this button to stop the video tape.
- The **Down** button functions as the **Pause** button. Press this button to temporarily stop the video tape during recording or play. Press this button or the **Select** button (**Play**) to restart the tape.
- The **Left** button functions as the **Rewind** button. Press this button to rewind the video tape. During tape play, press this button to rapidly view the video tape as a reverse

## Satellite System User Guide

visual search.

- The **Right** button functions as the **Fast Forward** button. Press this button to rapidly advance the video tape. During tape play, press this button to rapidly view the video as a forward visual search.

In **TV** or **AUX** mode:

Use the **Up** or **Down** button to change channels up or down.

In **DVD** mode:

- When using a menu, press these buttons to move the highlight to the desired option.



### RECALL

In **SAT**, **TV**, or **AUX** mode (for cable TV boxes only), press the **Recall** button to go back to the last channel you were watching. Press repeatedly to alternate between the last two channels that you viewed.

**Note:** You must first program the remote to control the device. See *Programming the Digital Remote to Control Other Devices* on page 3-7.



### INFORMATION

In **SAT** mode:

- Press this button for more information when the **Program Guide**, **Browse Banner**, or **Theme Categories** menu is open, or you are watching a program.
- When a menu is open that includes a **Help** option, press this button to see help information for that menu.
- If the receiver supports **Theme Categories**, highlight a program in a **Theme Categories** list and then press this button for more information on that program.
- When the receiver is **OFF**, press this button to display the **Important System Information** menu.



### VIEW

In **SAT** mode:

- Press this button to return to watching a program.
- If already watching a program, press this button to briefly display the **Program Banner**.
- From any menu, press this button to cancel the procedure and immediately go back to watching the program.

In **DVD** mode:

Press this button to return to Satellite TV viewing.



### CANCEL

In **Sat** mode:

Press the **Cancel** button to cancel the current procedure and to return to the previous menu or to watching a program.

In **DVD** mode:

If the **View** banner is on, press the **Cancel** button to return to watching a program.



### SYSTEM INFORMATION

In **SAT** mode, press this button to display the **Important System Information** menu.




### RECORD

In **VCR** mode, press this button to start recording on the **VCR**.

## The Parts of the System The Remote Control

2

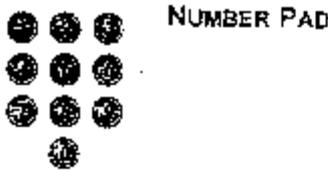

NUMBER PAD

### In any mode:

- When watching a program or with the Program Guide open, enter the 3-digit channel number to change immediately to that channel.
- Use the number pad buttons to enter menu option numbers.
- Use these buttons to enter a number such as a ZIP code or password in a menu.
- When the Program Guide is open, enter a number of hours using the number pad buttons, and then press the Left or Right arrow to display programs in the time period offset by that number of hours. The receiver cannot display a time period earlier than the present.

### In DVD mode:

- The 2 button functions as the Title button. Press this button to cycle through the available DVD disc titles.
- The 4 button functions as the Audio button. Press this button to cycle through the available DVD audio options.
- The 5 button functions as the Angle button. Press this button to cycle through the available angles on a DVD disc.
- The 5 button functions as the Subtitle button. Press this button to cycle through the available DVD subtitles.
- The 8 button functions as the Chapter button. Press this button to skip ahead one chapter on the DVD disc.

SKIP  STAR (\*) / SKIP BACK

**Note:** When you are in the Disc menu, these buttons function as standard number buttons.

### In AUX mode:

Use this button to program the remote control.

### In DVD mode:

Press this button when midway through a chapter/track, and play will return to the start of that chapter/track. Press it again to skip back to a previous chapter/track.

 SKIP POUND (#) / SKIP AHEAD

### In SAT mode:

Use this button to set and to check the remote control address.

### In DVD mode:

Press this button to skip ahead to the next chapter/track.

 PLAY

### In DVD mode:

Press this button to begin playback of a disc.

 STOP

### In DVD mode:

Press this button to stop playback of a disc.

 PAUSE

### In DVD mode:

- Press this button to freeze/still a picture or pause a chapter/track.
- Press this button repeatedly to advance still pictures frame by frame.
- Press Forward or Reverse when in Pause.

## *Satellite System User Guide*

mode for Slow Forward or Slow Reverse.



**FAST FORWARD**

**In DVD mode:**

- Press this button to fast forward search through a disc.

## The Parts of the System The Remote Control

2

- Press the button repeatedly and the Rewind button will come on.



REWIND

In DVD mode:

- Press this button to rewind search through a disc.
- Press the button repeatedly and the rewind speed will increase to Step 4, the maximum.

### CHANGING THE DIGITAL REMOTE ADDRESS

Do not change the address of the remote unless absolutely necessary.

**Note:** If you start this procedure and at any time do not press a button within 20 seconds, the remote will end the procedure automatically. Simply start over again.

1. Press the **Menu** button. 
2. Select the **System Setup** option. 
3. Select the **Installation** option. 
4. Select the **System Info** option. This displays the **Important System Information** menu.   
**Note:** the **Remote Address** shown on this menu.
5. Press and hold the **SAT** mode button about three seconds, until all the mode button backlights come on, then release the **SAT** button.
6. Use the number pad buttons to enter a number from 1 to 15. The **SAT** mode button backlight will blink off after you enter each digit, and then come on again.
7. Press the **Pound (#)** button. If the address you entered is valid for the remote control, the **SAT** mode button backlight flashes three times. 
8. Press the **Record** button. The number in the **Remote Address** field on the **Important System Information** menu should match the one you entered.
9. To verify the code, press and hold the **SAT** mode button for three seconds. Then, press the **Pound**

(#) button twice. The **SAT** mode button backlight flashes the same number of times as the address.

10. Select the **Cancel** option repeatedly to exit the menus.

### INSTALLING AN ATTENUATOR (UHF REMOTE ONLY)

Other UHF signals may block signals sent from a UHF remote control to the receiver. To prevent such interference, you can install a 10 dB attenuator. This will reduce the sensitivity of the receiver to other UHF signals but also substantially reduce the operating range of the remote control.

1. Remove the UHF antenna from the UHF Remote Antenna connection on the receiver back panel.
2. Attach a 10 dB attenuator to the UHF Remote Antenna connection.
3. Attach the UHF antenna to the attenuator.

### PROGRAMMING THE DIGITAL REMOTE TO CONTROL OTHER DEVICES

**Note:** If you want to program the **AUX** mode, program it *before* you program the **TV** mode. If you already have programmed the **TV** mode, do the following: (a) write down the **TV** code, (b) reprogram the **TV** mode using code 222, (c) program the **AUX** mode, and (d) reprogram the **TV** mode using the code that you wrote down.

1. Turn **ON** the device you want the remote to control. You must turn **ON** the device using its buttons or the remote control that came with it.
2. Find the brand name of the device in the device code tables starting on page 5-13. If the brand is not listed, see the *Doing the Remote Control Device Code Scan* procedure on page 3-8.
3. Press and hold the mode button for the device that you want the remote to control, for about three seconds. When all the other mode button backlights come on, release the mode button.
4. Use the number pad buttons to enter the code for the device. If you are programming in the **AUX** mode, you must enter a 4-digit code. The first digit is the code for the device, as follows: 0 is for a second TV, 1 is for a second VCR, and 2 is for an amplifier or cable TV box.

## Satellite System User Guide

5. Press and release the Pound (#) button. If the code is valid, the mode button backlight blinks three times.
6. Test if the code works for the device by pressing the Power button. If the code works, the device should turn OFF.
7. Turn the device back ON and try some other functions to make sure they work. Occasionally, the Power button may work when other buttons do not. If the code works for other functions, stop here.
8. If the code you entered does not work, repeat steps 3 through 7 using another code from the tables.
9. If you have tried all of the codes listed for the device without success, or if you can not find the device brand name in the tables, use the *Device Code Scan* procedure as follows.

### DOING THE REMOTE CONTROL

#### DEVICE CODE SCAN

If a device brand is not listed in the code tables or if the listed codes do not work, you can scan through all the codes, testing each one. The remote may not control some brands or models of devices.

1. Press and hold the mode button for the device that you want the remote to control, for about three seconds. When all the other mode button backlights come on, release the button. It will flash to indicate it is in the address programming format.

For AUX mode only, use the number pad buttons to enter the number of the device. Then, press the Star (\*) button. This defines the device for which you are scanning: 0 is for a second TV, 1 is for a second VCR, and 2 is for an amplifier or cable TV box.

2. Press the Power button.
3. Press the Up or Down arrow button to set the remote to the next code. The Down arrow button scans backward, and the Up arrow button scans forward. Press the arrow button repeatedly to continue scanning.  
  
When the correct code is reached, the device turns OFF. If this happens, press the Pound (#) button to store the code in the remote. If the code is valid, the appropriate mode light blinks three times.
4. Press the Power button to turn the device back ON.
5. Try some other remote control buttons to make sure that you have the correct code.

### DETERMINING THE REMOTE CONTROL

#### DEVICE CODES

You can find out what device code is currently set for each remote control mode. Do the following:

1. Press and hold the mode button for the device that you want the remote to control, for about three seconds. When all the other mode button backlights come on, release the mode button.
2. Press the Pound (#) button twice. The mode light flashes the number of times to indicate each digit of the current mode, with a pause between the flash sequences. For example, for an AUX code of 0136, the mode light flashes once quickly (for zero), then once, three times, and six times.

# Reference Device Codes for Programming the Digital Remote Control

(5)

## DEVICE CODES FOR PROGRAMMING THE DIGITAL REMOTE CONTROL

These tables contain the device codes for programming the remote to control other devices. Every attempt has been made to include all device codes. If a device is not listed or the codes do not work, the remote may not control the device. **Note:** For some receivers, use code 222 in the *Programming the Remote to Control Other Devices* procedure in SAT, TV, or VCR mode to program the remote to control the receiver sound volume.

### TELEVISIONS

A&A	525, 570, 575
Alba	615
A-Mark	620
Amstrad	535
Asahi	509, 521, 541, 620, 631, 691, 698
AOC	505, 526, 519, 530, 620, 695, 712
Aurifer	620
Audiovox	620
Bauer	611
Baycraft	526
Bebeconic	562, 691
Candle	506, 522, 535, 525, 536, 691, 695, 708
Capelan	519, 695
Circuit City	695
Citizens	506, 516, 522, 537, 544, 551, 525, 691, 708
Colonyline	573, 695
Concerta	523
Carter	527, 535, 541, 591, 691
Craig	521, 536, 527, 691, 695
Crown	526, 536
Curis Mathes	506, 516, 525, 535, 705, 708
CXC	541, 691
Dawson	505, 524, 526, 538, 550, 551, 532, 698, 712, 719
Dayton	526, 695
Dizi	532, 588, 620
Duncan	695
Electrohome	526, 573, 695, 709, 713
Eiko	532
Emerson	526, 527, 528, 533, 534, 535, 526, 537, 538, 539, 540, 541, 573, 622, 691, 692, 695, 696, 699, 720
Evanscan	506, 573, 712
Etron	522
Fisher	542, 590
Formosa	611
Forestar	573, 503
Fujitsu	534, 694
Funai	534, 543, 691, 694
Futabaeca	541, 691, 694
General Electric (GE)	505, 506, 509, 512, 540, 543, 544, 630, 691, 693, 698, 701, 714, 715, 716
Genesca	515
Golostar	505, 523, 526, 545, 546, 575, 588, 695, 695, 712
Gracoda	695, 711
Gradi	695
Grundig	547
Haitmark	695
Hinay	534

Hitachi	523, 526, 548, 549, 550, 551, 572, 583, 554, 555, 585, 597, 626, 702, 713, 718
Infinity	566
JBL	566
JC Penney	505, 505, 506, 514, 535, 526, 531, 542, 596, 701, 712, 714
Jensen	538, 573
JVC	537, 558, 559, 560
Kanashic	543, 551, 712
Kelwood	506, 573, 712
Koss	523, 561, 510, 698
KTV	526, 559, 540, 541, 691, 696, 712
Liebert	695
Lieberton	526
Lohrer	588
Logik	518
Luxman	533
EXI	505, 562, 566, 590, 593, 51, 421, 701
Magnason	533
Magnavox	506, 520, 525, 536, 564, 565, 566, 567, 568, 569, 575, 576, 610, 710, 718
Magnatec	506, 566, 573, 588, 712
Mexico	522, 605
Megatron	695
Memorex	518, 532, 590, 695, 720
MGA	504, 505, 506, 591, 575, 695
Mitsubishi	504, 505, 570, 571, 572, 597, 625, 695, 705, 707, 752
MTC	505, 506, 516, 525, 531, 695, 715
NAD	505, 617, 695
National	509, 521, 697, 598
National Quinnes	697
NEC	503, 508, 507, 517, 523, 575, 627, 712
Nisoku	613, 613, 618
Nisoco	695
Normatec	551, 712
Norvabcam	698
Nyco	701
Orava	541, 691
Opanics	605, 607
Orion	694
Oshih	612
Osborne	541
Panasonic	508, 509, 510, 511, 512, 566, 574, 575, 697, 698, 700, 706, 714, 716
Philea	505, 506, 525, 536, 564, 565, 568, 573, 610, 712
Philips	566, 588
Pioneer	502, 548, 551, 576, 698, 708
Portland	505, 526, 712
Proscan	503

Proson	512, 518, 525, 536, 573, 685, 624, 695
Pulpar	50
Quasar	508, 509, 577, 700
Radio Shack	514, 526, 547, 607, 612, 691, 698
RCA	505, 505, 515, 548, 579, 580, 581, 582, 585, 584, 583, 586, 587, 625, 625, 624, 691, 698, 701, 708, 714, 715, 716
Realistic	590
Saco	531
Saisho	535, 535, 609
Samsco	506, 519, 698, 712
Samsung	505, 506, 516, 523, 526, 532, 588, 612, 693, 704, 712, 721
Sanyo	542, 589, 590, 591, 592, 604
SBR	588
Schneider	588
Secon	526, 531, 537, 541, 593, 600, 691, 696, 701
Sears	505, 522, 534, 540, 583, 589, 590, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 617, 695, 703
Seimens	697
Sharp	526, 585, 591, 605, 606, 607, 608, 628, 629
Siemens	591
Signatone	518
Silver	573
Sinpson	575
Solovox	512
Sony	500, 609, 619, 622
Sonocigno	525, 536, 541, 691, 695
Spearmoon	520, 620
Superview	694
SSS	505, 541, 573, 691, 712
Supra	523
Supra-Mace	522
Sylvania	506, 529, 536, 564, 563, 564, 568, 573, 575, 600, 610, 611, 632, 712
Symphonic	632, 692, 694
Tandy	603, 515
Tecson	505, 598
Teknics	508
Tedkwood	523, 573
Teknika	504, 505, 516, 518, 527, 523, 524, 525, 526, 524, 524, 541, 614, 615, 691, 712
Telefun	551
Telefunken	551
Teleuco	532
Tera	513
Thomas	693
Thompson	509
Tosmon	551, 516
TMR	523, 573, 695

## Satellite System User Guide

Ashibe	318, 380, 396, 617, 618, 631
Astac	378
Aviation	328
Avionics	693
Avionics	343
Star Research	306
Star	337
Video Concepts	370, 691
Zeech	305, 697, 712
Zing	323
Zora	304, 306, 315, 318, 334, 336, 343, 364, 365, 367, 368, 603, 619, 312, 314, 315
Zuma	363, 368, 370
Zyx	693
Zytech	301, 313, 691
Zynda	630

### CRs

Ad	368, 394, 623, 625, 626
Ad	313, 314, 315, 330, 317, 318, 319, 320, 363
Ad	346
Ad	328
Ad	363
Ad Dynamics	384, 600
Adco	309, 330
Ad	389
Ad	380, 392, 393
Ad	342, 353, 334
Ad	343, 346
Ad	391, 392, 393
Ad	391, 608
Ad	333
Ad Mathis	334, 391, 603
Ad	354, 346, 347, 393, 626, 627
Ad	346
Ad	394, 600
Ad	349
Ad	348
Ad Electronic	350, 351, 352, 354, 312, 391, 603
Ad	330, 333, 392, 612, 613
Ad	383, 389
Ad	350, 620
Ad	349, 381
Ad	365
Ad Karion	330, 369
Ad	389
Ad	336, 337, 338, 339, 340, 341, 353, 388, 396, 397
Ad Replay	355
Ad	318
Ad	330, 334, 380, 391, 394, 600, 601
Ad	361, 362, 363, 364, 392, 394, 600, 601
Ad	362, 381, 392, 394, 600, 601
Ad	338
Ad	339
Ad	313
Ad	337, 333, 334, 336, 363, 611

Ad	330, 334, 363, 383, 392, 394, 600, 601, 603
Ad	334
Ad	333, 349, 354, 366, 381, 383, 388, 608
Ad	367, 368, 609
Ad	362, 367, 368, 369, 370, 371, 609
Ad	344, 380, 388
Ad	386, 389, 391
Ad	373
Ad	370, 371, 372, 362, 393, 394, 399, 600, 603, 602, 603, 604
Ad	333
Ad	383
Ad	306, 307, 635
Ad	323, 322, 323, 324, 326, 330, 334, 398, 614, 628
Ad	337, 392
Ad	385
Ad	333, 334, 611
Ad	333, 334, 363, 383
Ad	333, 362, 373, 374, 375, 376, 600
Ad	346, 393
Ad	337, 303
Ad	333
Ad	381
Ad	339, 334, 377, 378
Ad	607, 608, 609, 610
Ad	325, 328, 327, 328, 329, 331, 331, 333, 334, 391, 603, 606, 613, 620, 621
Ad	339, 341, 340, 381, 384, 385, 338
Ad	302
Ad	306, 307
Ad	367, 381
Ad	317, 324, 330, 379, 380, 391
Ad	333, 334, 362, 600, 601
Ad	349, 381, 382, 383, 399, 608
Ad	363
Ad	388
Ad	308, 339, 390
Ad	343, 349, 381, 384, 608, 610
Ad	346
Ad	383, 607, 609, 625
Ad	389
Ad	300, 301, 302, 303, 304
Ad	333, 333, 334, 336, 367, 388, 611
Ad	358, 388, 390
Ad	383
Ad	383
Ad	386, 334, 601
Ad	388, 394, 607
Ad	333, 334
Ad	334, 367, 383
Ad	306
Ad	334, 335, 367, 390
Ad	380, 391
Ad	380
Ad	330, 600
Ad	361, 362, 600
Ad	368, 600
Ad	391
Ad	327, 334, 380, 383, 388, 389, 390, 391, 607, 608, 609
Ad	330, 392, 394, 600, 601
Ad	301, 302, 333

### TUNERS/AMPLIFIERS

Ad	2636, 2668, 2680, 2684
Ad	2667
Ad	2633, 2672
Ad	2674
Ad	2653, 2673
Ad	2665
Ad	2677
Ad	2637, 2683
Ad	2676
Ad	2681
Ad	2683
Ad	2631
Ad	2673
Ad	2669
Ad	2677
Ad	2660, 2662, 2678
Ad	2684
Ad	2632
Ad	2358, 2675, 2679
Ad	2654
Ad	2652
Ad	2653
Ad	2683, 2680
Ad	2659
Ad	2670
Ad	2673, 2680
Ad	2666
Ad	2358, 2637
Ad	2657
Ad	2663, 2682

### CABLE TV BOXES

Ad	2649
Ad	2630
Ad	2635, 2638
Ad	2637
Ad	2646
Ad	2637, 2644, 2643
Ad	2637
Ad	2642, 2643
Ad	2649
Ad	2638, 2639, 2647, 2648, 0130
Ad	2641