

Division Systèmes d'Accès
42, rue Le Corbusier
Europarc
94042 Créteil Cedex - France
Tél. +33 (0)1 56 71 53 00
Fax +33 (0)1 56 71 53 71

User's guide for a RKE RF SYSTEM

Type designation: 0602A1-A

Trade mark : VALEO

Car Manufacturer : HONDA

Introduction

The system called RKE (Remote Keyless Entry) has two separate units: a transmitter and a receiver.

Its function consists in enabling the remote control of the door lock and unlock of a car by operating on the controls of a central unit.

The transmitter electronic circuit is introduced in a key which is attached to the ignition key.

Door lock

To lock the doors, press and release the lock button on the key

Door unlock

To unlock the doors, press and release the unlock button on the key

Other function of the buttons (trunk, windows, others.....)

Others optionally functions can be used for example for unlocking the trunk or opening and closing the windows or triggering the alarm (panic function).